
INDESIT company

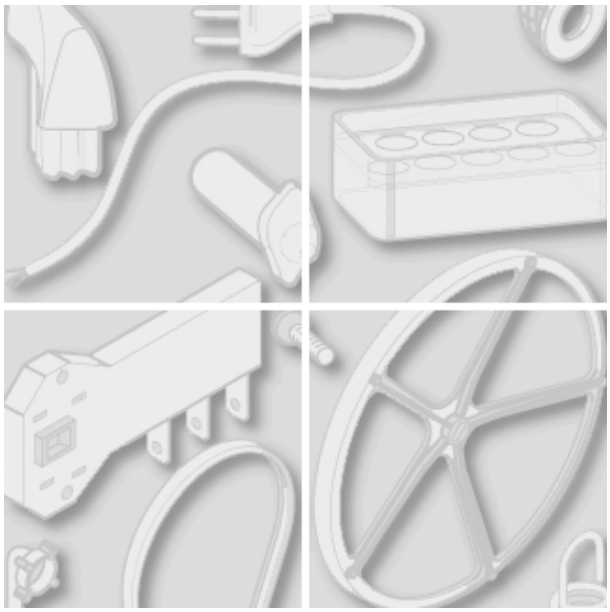

Model type:
DK20SGH/HA

Commercial code:
F078215

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

18734681 Exploded views

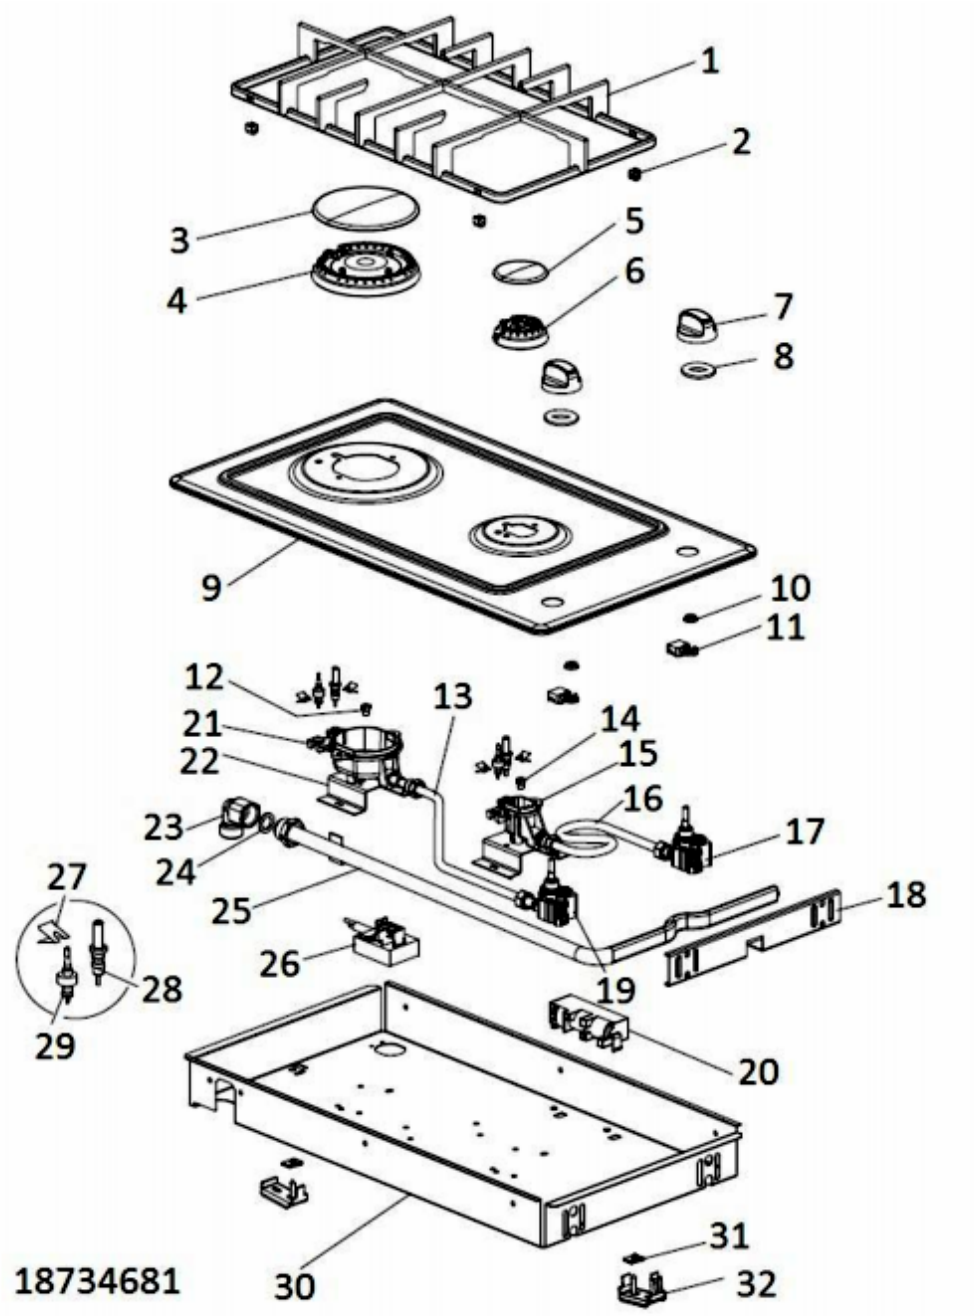

18734681 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00267669				burner grid iron (2 burner)		
002	C00267665				rubber buffer - pan grid		
003	C00267667				fast burner cap		
004	C00267236				burner ring/flame splitter - large		
005	C00267666				auxiliary burner cap		
006	C00267235				burner base/flame splitter - small		
007	C00291165				knob nichel		
008	C00277039				knob disc gas burners		
009	C00291169				working table pld 2f exp.ix ha def		
010	C00277038				reducer spacer micro domino		
011	C00279603				ignition microswitch 2 domino		
012	C00267216				d= 129 nozzle gn		
012	C00267218				d= 87 nozzle lpg		
013	C00267207				rear burner supply pipe domino		
014	C00267215				d= 77 nozzle gn		
014	C00267219				d=50 nozzle lpg		
015	C00267233				burner cup - small burner		
016	C00267206				semi-rapid burner supply pipe		
017	C00280269				burner tap by-pass 0,43		
018	C00113521				tap fixing plate domino		
019	C00279610				burner tap by-pass 0,43		
020	C00081715				spark ignition transformer		
021	C00267234				burner cup - large burner		
022	C00267204				flask domino		
023	C00057210				gas pipe elbow 1/2" gas		
024	C00057243				sealing washer-gas elbow/pipe		
025	C00113523				main gas pipe mg32s		
026	C00275544				terminal block		
027	C00267205				spring		
028	C00267221				ignition electrode l=500		
029	C00267240				thermocouple l = 600 mm		
030	C00267226				base cover tray		
031	C00045235				spring nut		
032	C00113469				fixing bracket		