
INDESIT company

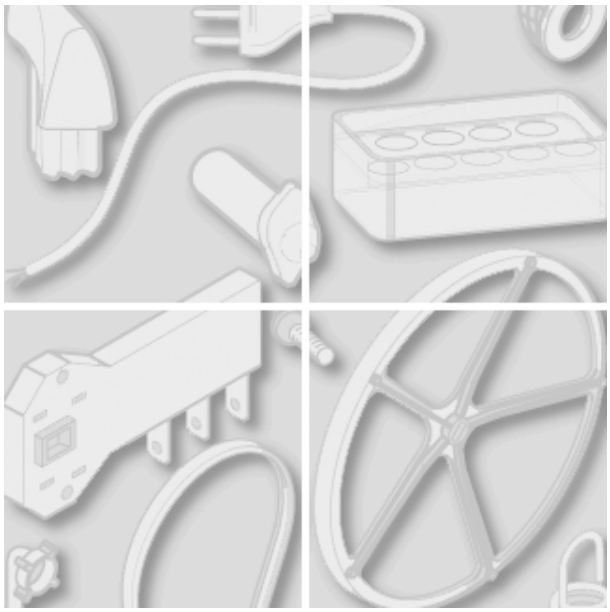

Model type:
HB6IX/HA

Commercial code:
F049081

ARISTON INDESIT Scholtès

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:

REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics


INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

ekhb_s1l2el Exploded views

51205.0001

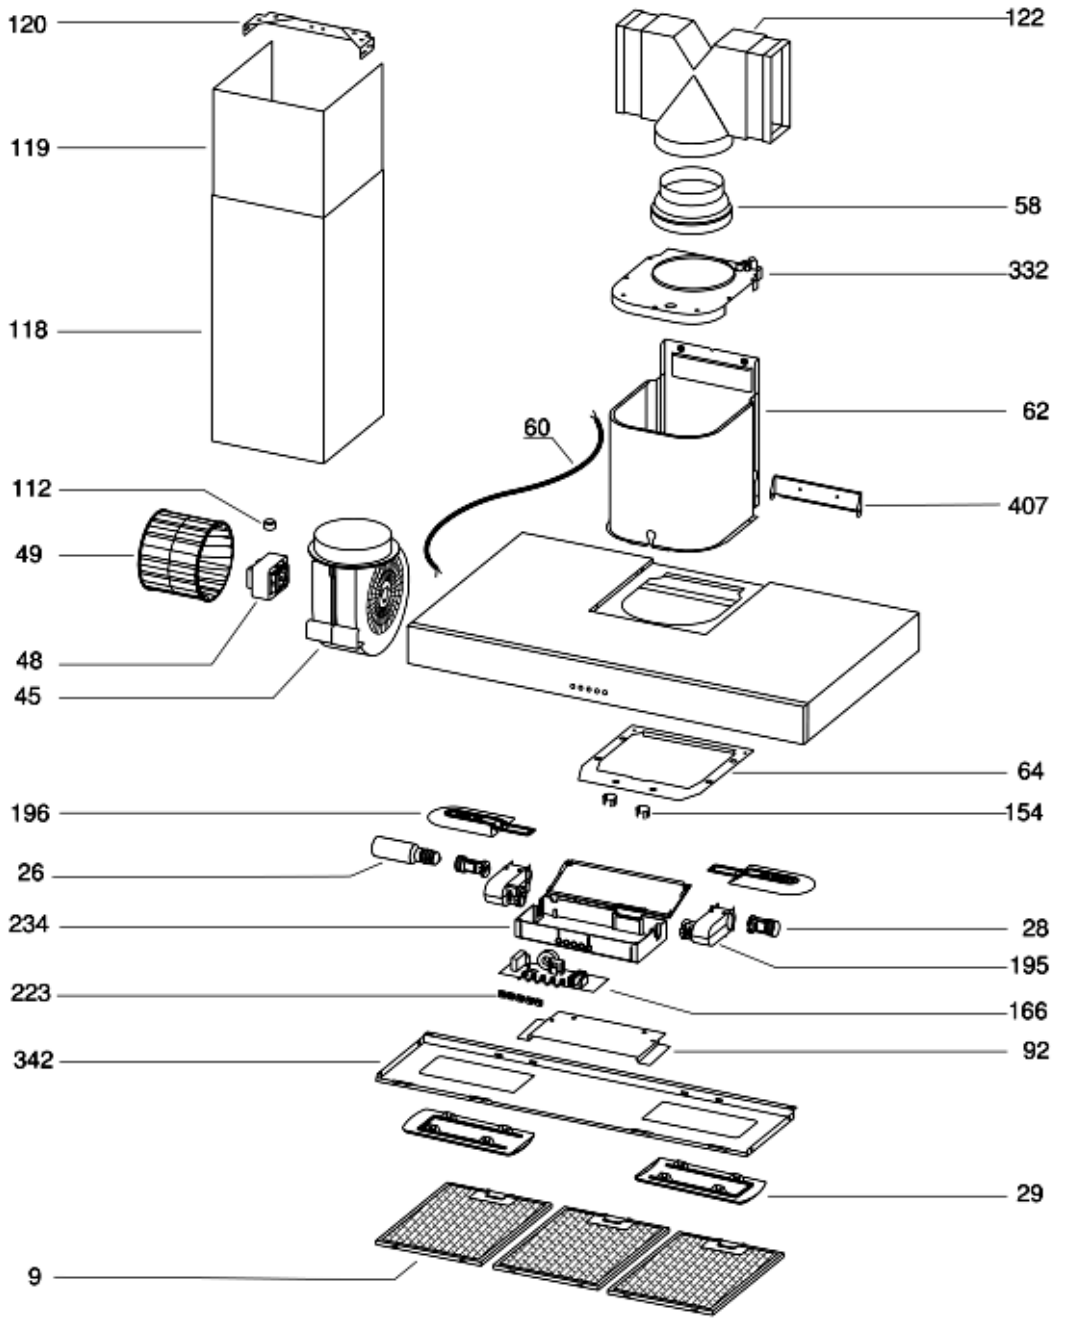


ekhb_s1l2el

Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00143282				user instruct.bookl hb		
009	C00145143				grease filter		
026	C00126387			1 x C00042985	lamp		
028	C00034834				lamp-socket 39n - t190		
029	C00142305				ceiling lamp		
045	C00098047				conveyor		
048	C00256823				motor		
048	C00260757				wiring motor		
049	C00098050				motor propeller k24 best		
058	C00076066				reducer (150-125mm)		
060	C00142307				supply cable 1,5 mt		
062	C00076043				conveyor support		
064	C00142308				lower support		
112	C00136019				protecting nut motor		
118	C00256587				lower chimney section inox		
119	C00142311				upper chimney		
120	C00076065				upper telescopic pipe support		
122	C00142312				filter pipe plate		
152	C00136031				cable clamp		
154	C00137090				cable clamp		
166	C00142313				control board (ck)		
195	C00142314				support		
196	C00142315				lamp reflector socket		
223	C00142410				button		
234	C00145152		70228...		control box		
234	C00260410	70301...			control box		
332	C00076044				cap		
342	C00145153				upper panel		
407	C00076071				conveyor support plate		
999	C00077377			1 x C00094527	carbon filter		
999	C00142321				fixing assembly		
999	C00259734				body 60 cm.inox		

Electric schemes and links

Cod. se8966

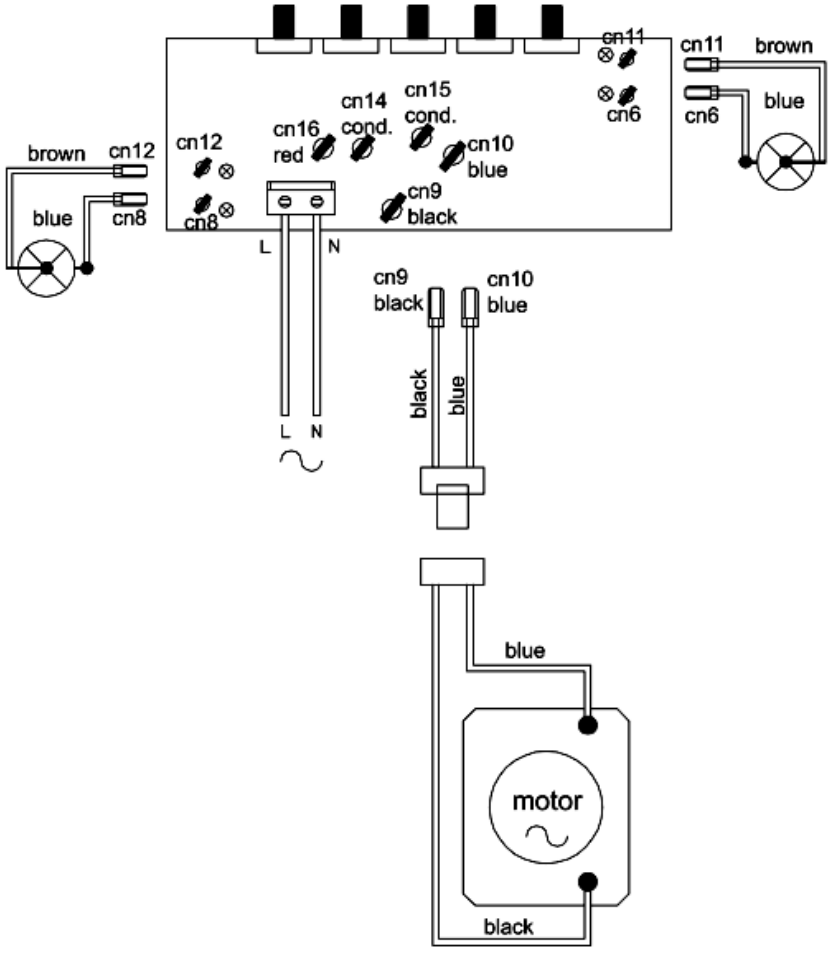

Legend

Legend: se8966

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element