
INDESIT company

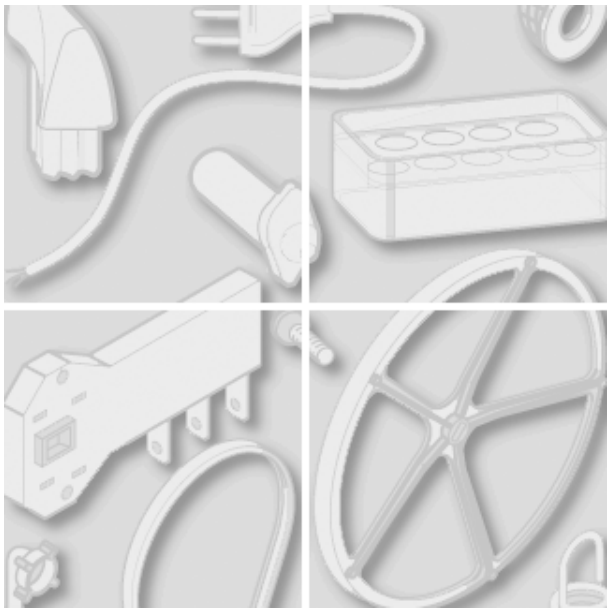

Model type:
HO9IX/1

Commercial code:
F028223

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1394B Exploded views

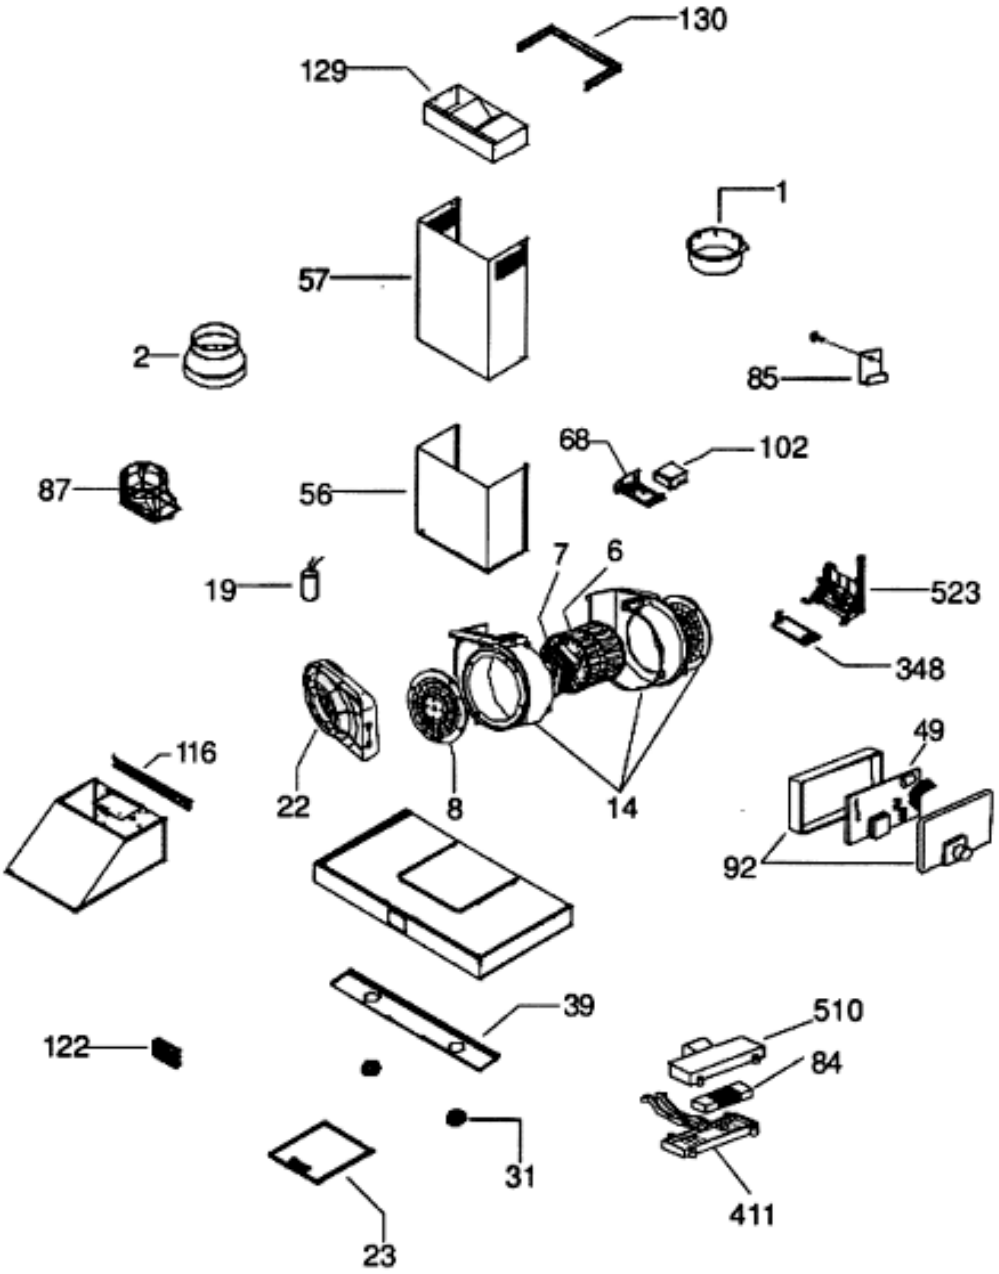


1394B

Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00174842				user instruction booklet ho9 in		
001	C00134877			1 x C00136381	nozzle, diam.150 without valve		
002	C00137578			1 x C00242863	pipe reduction (ix) 150/120mm		
006	C00090119				motor propeller		
007	C00090165			1 x C00274312	motor s80-40anp		
008	C00138711			1 x C00242762	motor support		
014	C00134811			1 x C00242824	conveyor		
019	C00090176			1 x C00255895	condenser 5mf		
022	C00098725			1 x C00090710	carbon filter 15920		
023	C00136541			1 x C00280008	grease filter		
031	C00138617			1 x C00242926	complete halogen lamp		
039	C00087299				lighting diffuser support ho9x		
049	C00087300				electronic variator		
056	C00087301				fixed part		
057	C00087302				sliding part		
068	C00090179			1 x C00195758	connection block		
084	C00138627				transformer		
085	C00138719			1 x C00242931	fixing hook		
087	C00135115				drain coupling		
092	C00132256			1 x C00242792	terminal board box		
102	C00090189				cover connection block		
116	C00139691			1 x C00117280	bracket		
122	C00087303				control panel		
129	C00087304				filtering connection		
130	C00087305				fixing bracket chimney		
348	C00136900				cover		
510	C00135597				electr. box		
523	C00136896				electrical equipment box		
999	C00092296				fixing assembly		
999	C00268460				wirring harness controls		

Electric schemes and links

Cod. se074a

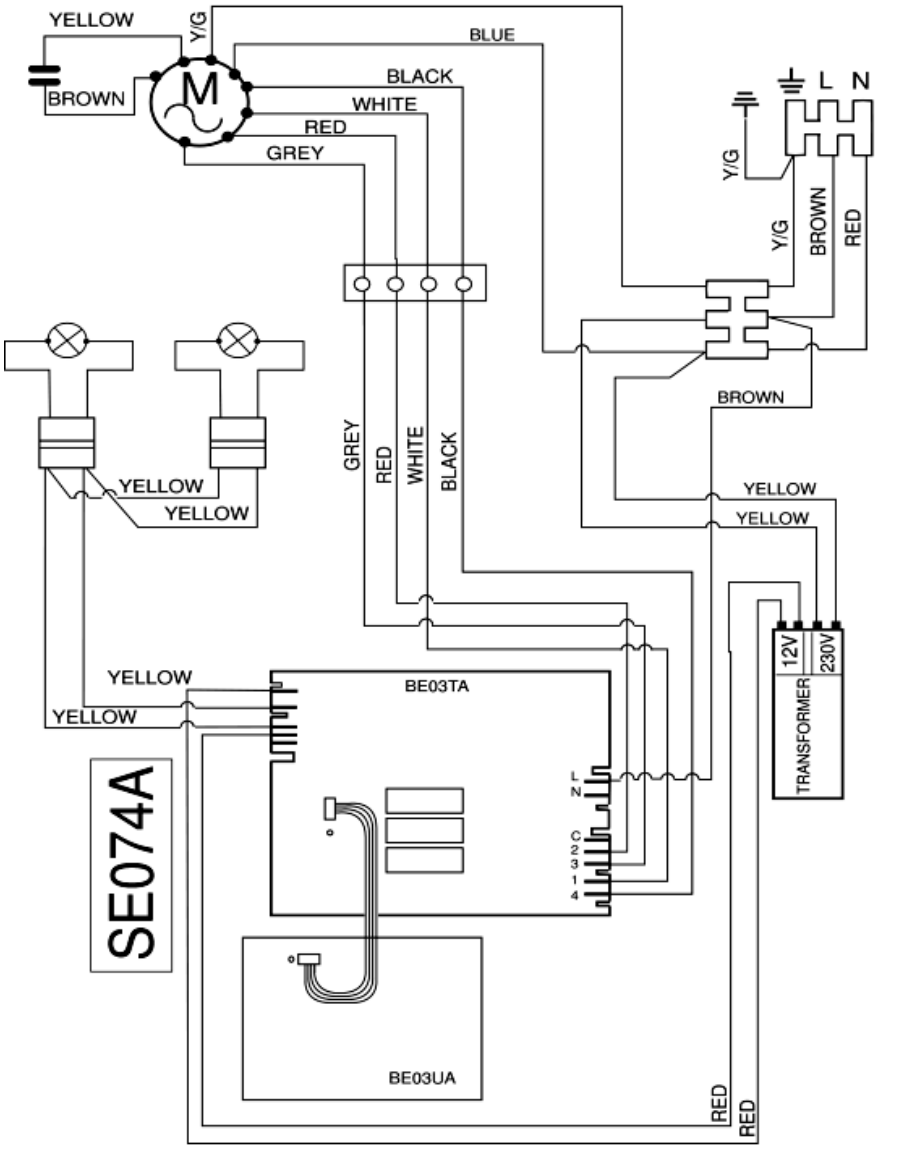

se074a

Legend

Legend: se074a

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element