
INDESIT company

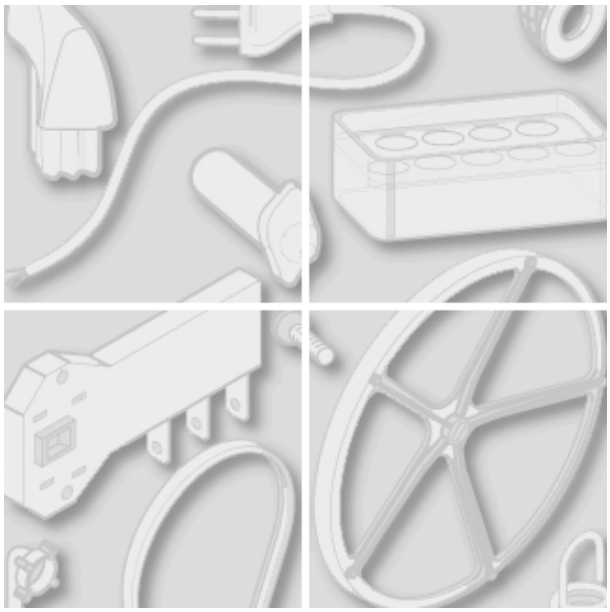

Model type:
HZT9IX

Commercial code:
F038804

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1924 Exploded views

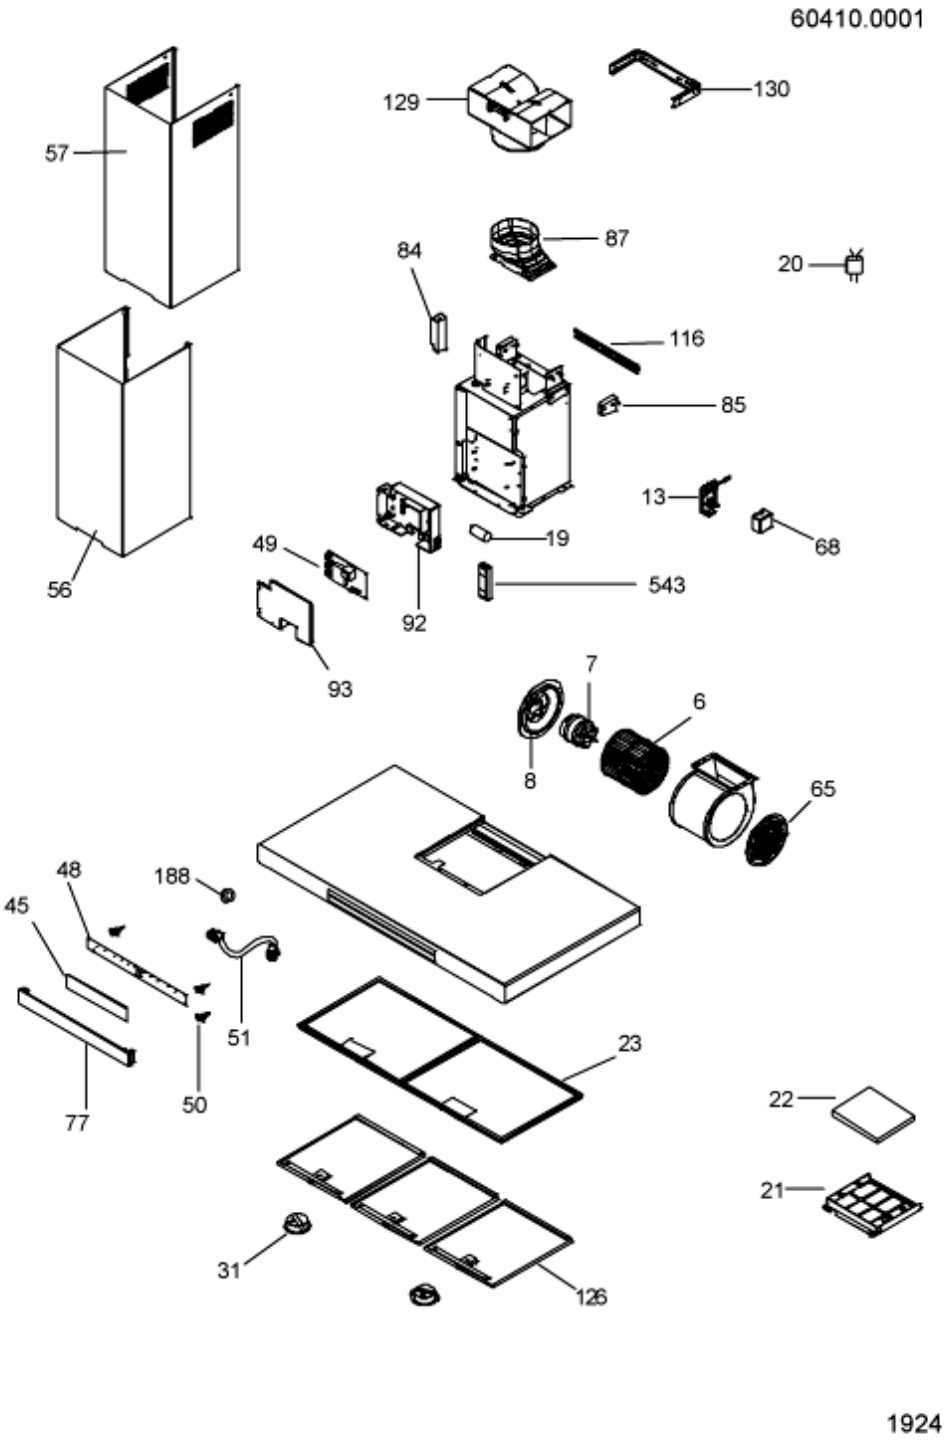


1924 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00145169				instruction book		
006	C00090119				motor propeller		
007	C00090165			1 x C00274312	motor s80-40anp		
008	C00139285			1 x C00278471	motor support		
013	C00143656				terminal cover		
019	C00090176			1 x C00255895	condenser 5mf		
020	C00143636				anti-parasite filter		
021	C00090190				carbon filter support		
022	C00138742				washable carbon filter		
023	C00112112				grease filter		
031	C00138617			1 x C00242926	complete halogen lamp		
045	C00144526				control board film		
048	C00144527				control board##		
049	C00144528				electronic converter##		
050	C00118264				variator support		
051	C00144529				flat cable		
056	C00109872		40914...		chimney lower inox		
056	C00145766	40915...		1 x C00257244	chimney lower inox		
057	C00109541		40914...		chimney upper ix		
057	C00117218	40915...			chimney upper		
065	C00138717				suction compressor		
068	C00142184				connection block		
077	C00144530				front panel		
084	C00096898			1 x C00264365	transformer		
085	C00138719			1 x C00242931	fixing hook		
087	C00090198			1 x C00242755	drain coupling		
092	C00096872				electric plant box		
093	C00096874				electric system box cover		
116	C00117280				hanger		
126	C00112116				parete rectifire		
129	C00091129			1 x C00273130	deflector tube		
130	C00119489				hanger		
188	C00132304			1 x C00242902	suppression ring		
543	C00143660				electronic kit dimmer		

Electric schemes and links

Cod. se1L2A

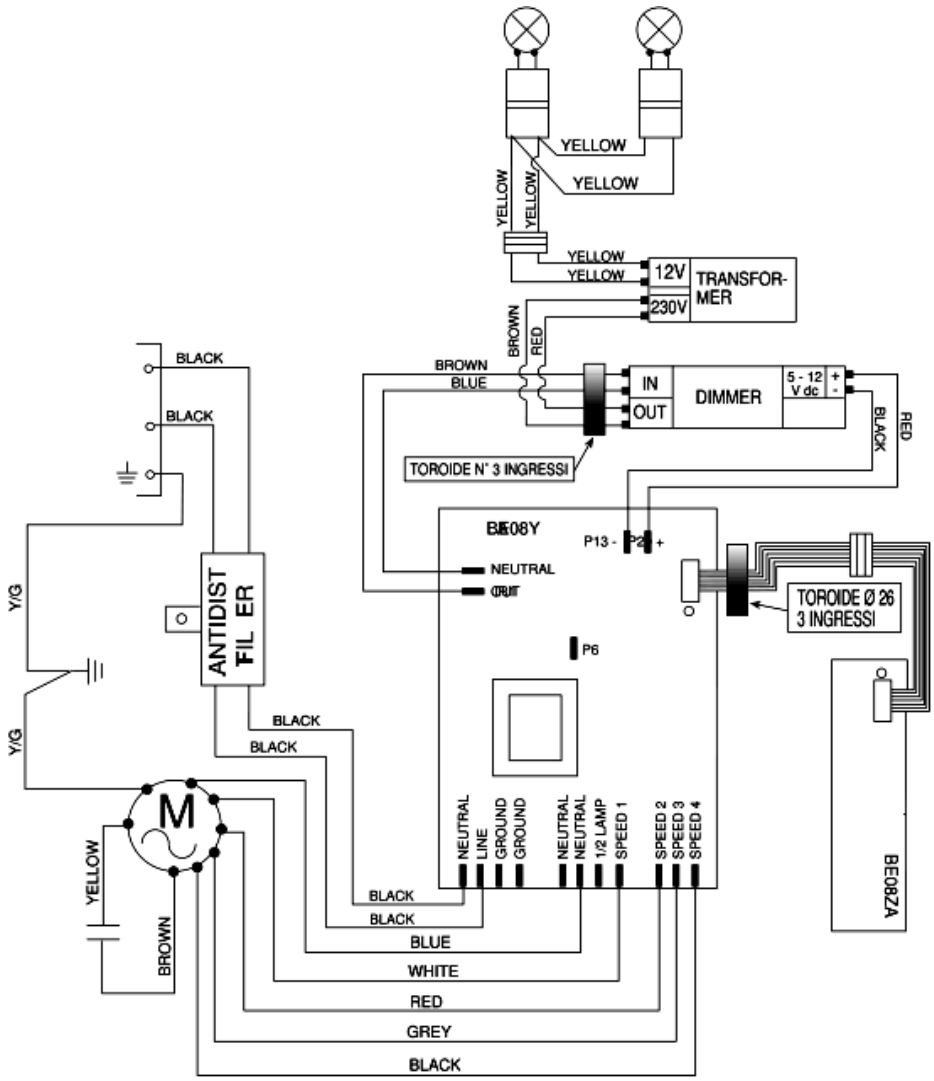

se1L2A

Legend

Legend: se1L2A

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element