
INDESIT company

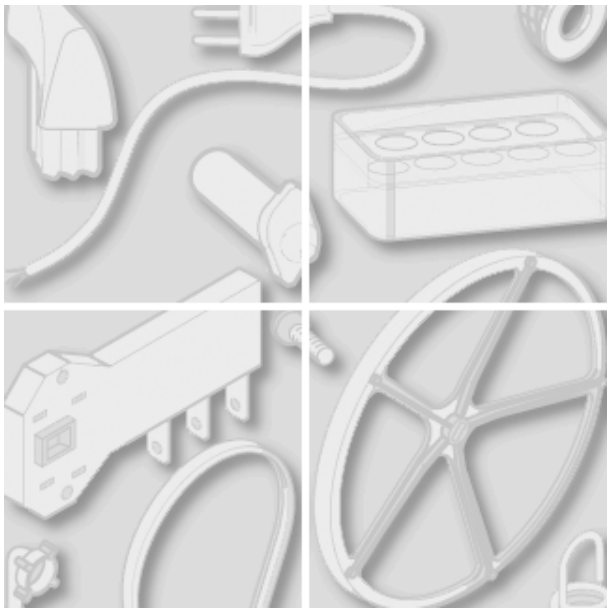

Model type:
BS1400IT

Commercial code:
F033583

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:

REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics


INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1280110 Exploded views

Matr. 50125.0001

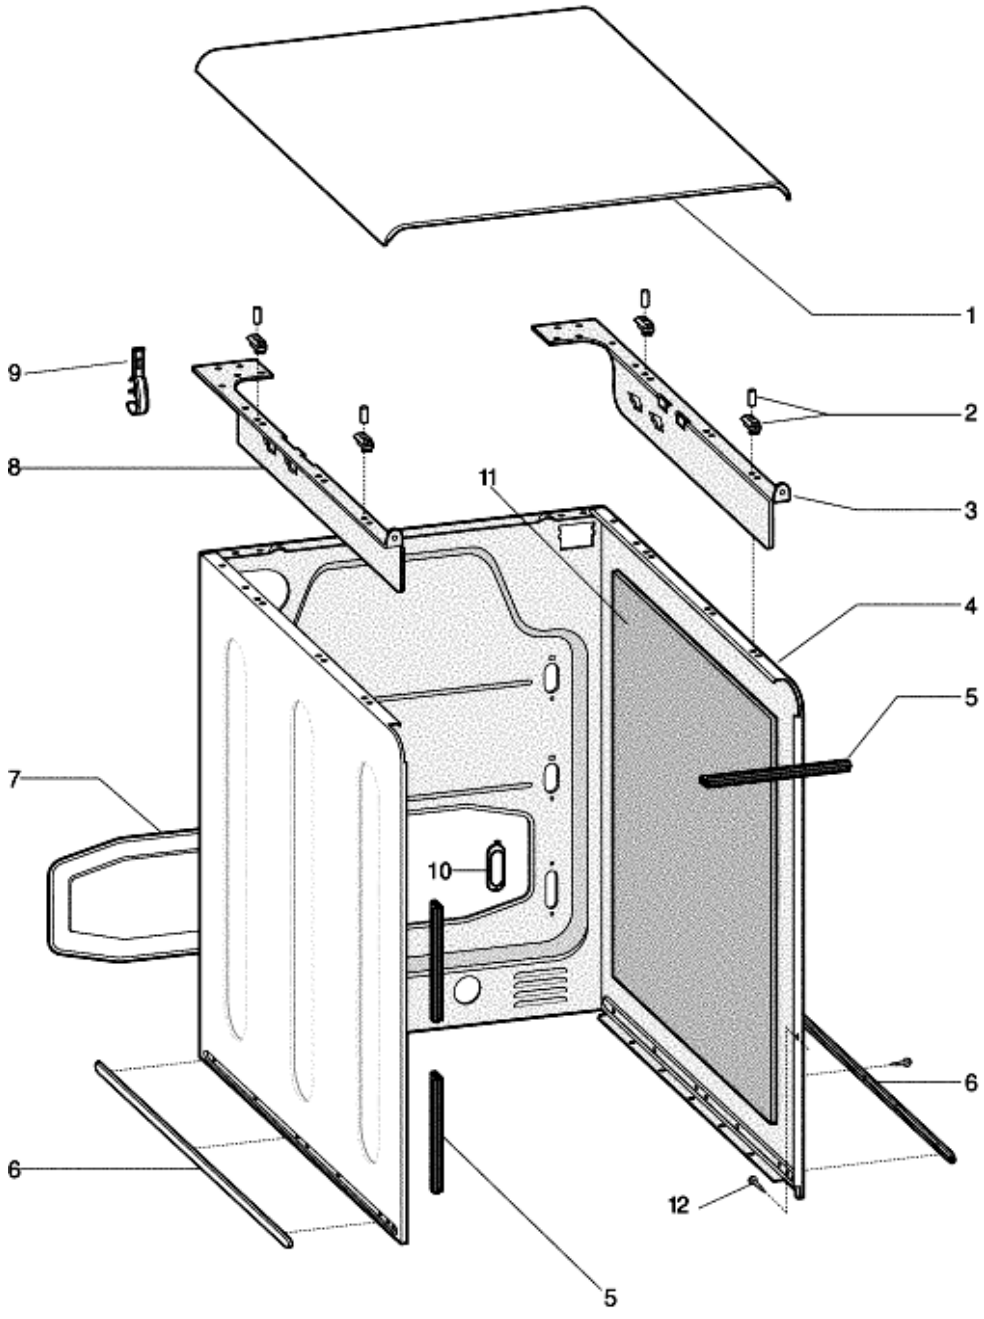


1280110 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00114998				user instructions booklet it		
000	C00117898				quick reference big size it		
001	C00111988				worktop - white		
002	C00111989				worktop retainer		
004	C00111972				cabinet white big-size		
005	C00111976				lateral profile 185mm dx sx on		
005	C00114908				lateral profile 160mm dx sx on		
006	C00111977				lower profile l=615 mm		
007	C00111975				rear cover - white		
009	C00046667				wiring stop		
009	C00064550				drain hose holder		
010	C00083909				blanking plate-rear(test plug) tl		
011	C00117432				insulation mat side big size		
012	C00118941				torx 2,9 x 6,5 tc it10		
013	C00141387				cable clamp hose		

1280210 Exploded views

Matr. 50125.0001

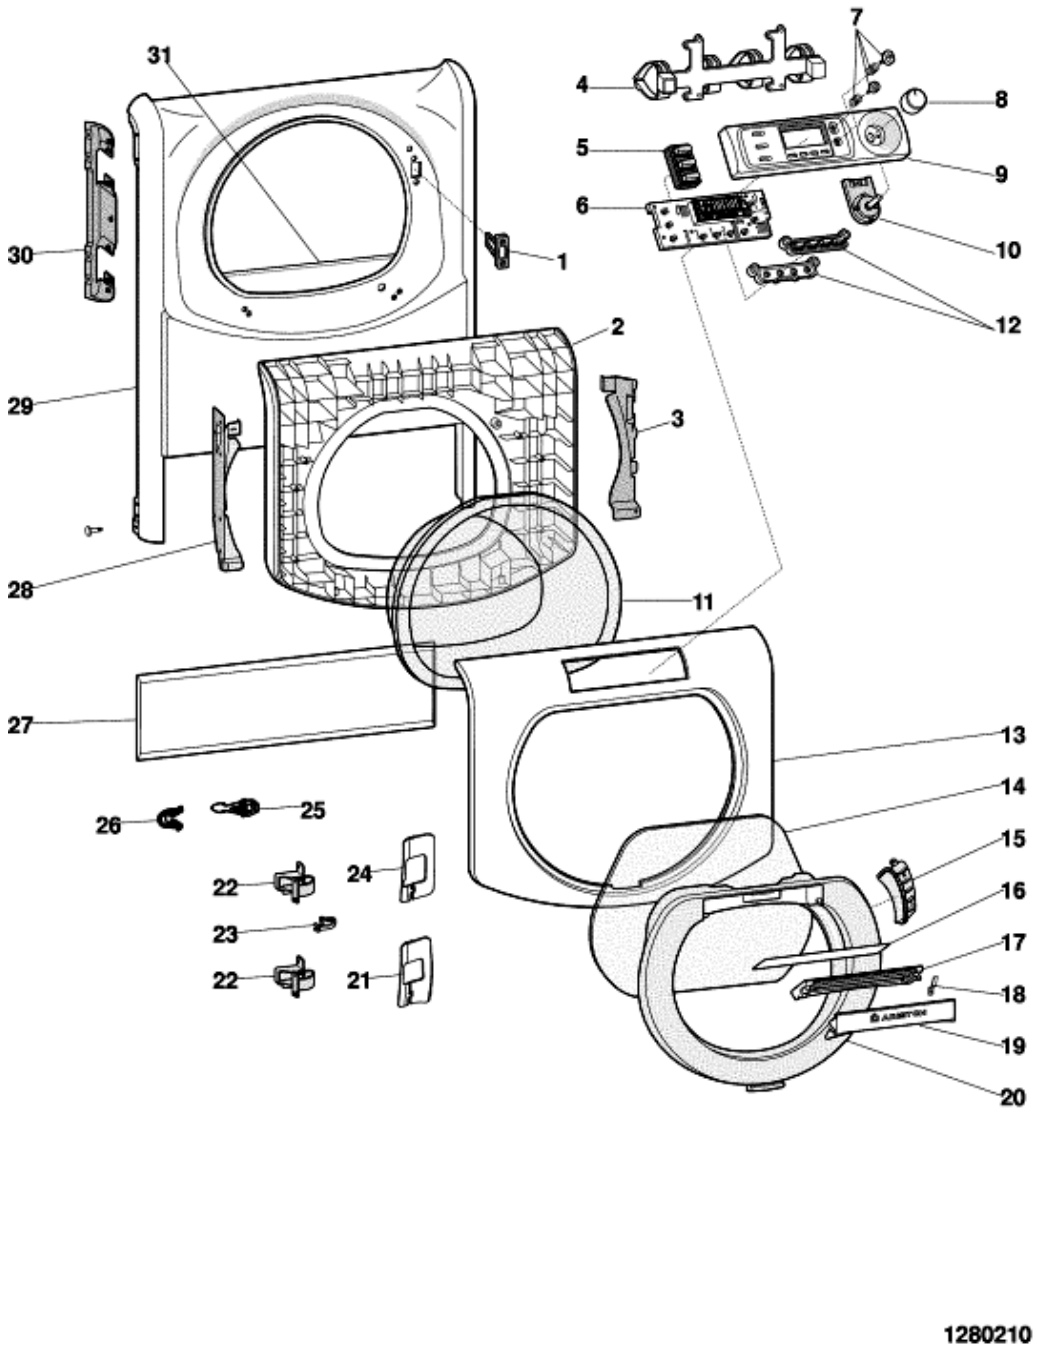


1280210

1280210 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00112244				lid catch		
002	C00115054				door frame inner		
003	C00115047				door glass bracket right		
004	C00111991				bracket for module		
005	C00111997				button pad		
006	C00118903			1 x C00143089	control digit big-size		
007	C00115061				white pushbutton on-off/reset kit		
008	C00112241				wash timer knob silver		
009	C00111992				control panel bs1400it silver		
010	C00087067		60228...	1 x C00143095	programme select bitron 16		
010	C00143095	60301...			programme selector potentiometer		
011	C00115048				door glass		
012	C00115178				push buttons display all.		
013	C00115044				door white		
014	C00112257				plastic door screen		
015	C00112243				door handle silver big size		
016	C00112245				reading desk 14802969503 it		
017	C00112252				support - programme guide silver		
018	C00115062				auger helix reading desk		
019	C00115162				support - programme guide silver		
020	C00115056				outer door frame silver		
021	C00114917				low hinge plate		
022	C00112254				hinge assy-outer case/door big size		
023	C00112266				hinge guide		
024	C00114916				upper hinge plate		
026	C00140681				clip kit big size + news		
027	C00111990				plinth white		
028	C00112239				door glass bracket left		
029	C00111986				front panel white		
030	C00115103				supporter hinge		
031	C00094018				insulation pad (front panel)		
032	C00140569				rubber buffer door bs1400		
033	C00143401				adhesive sponge seal l=385 x 8 x		
034	C00255628				hinge plate door		


1280310 Exploded views

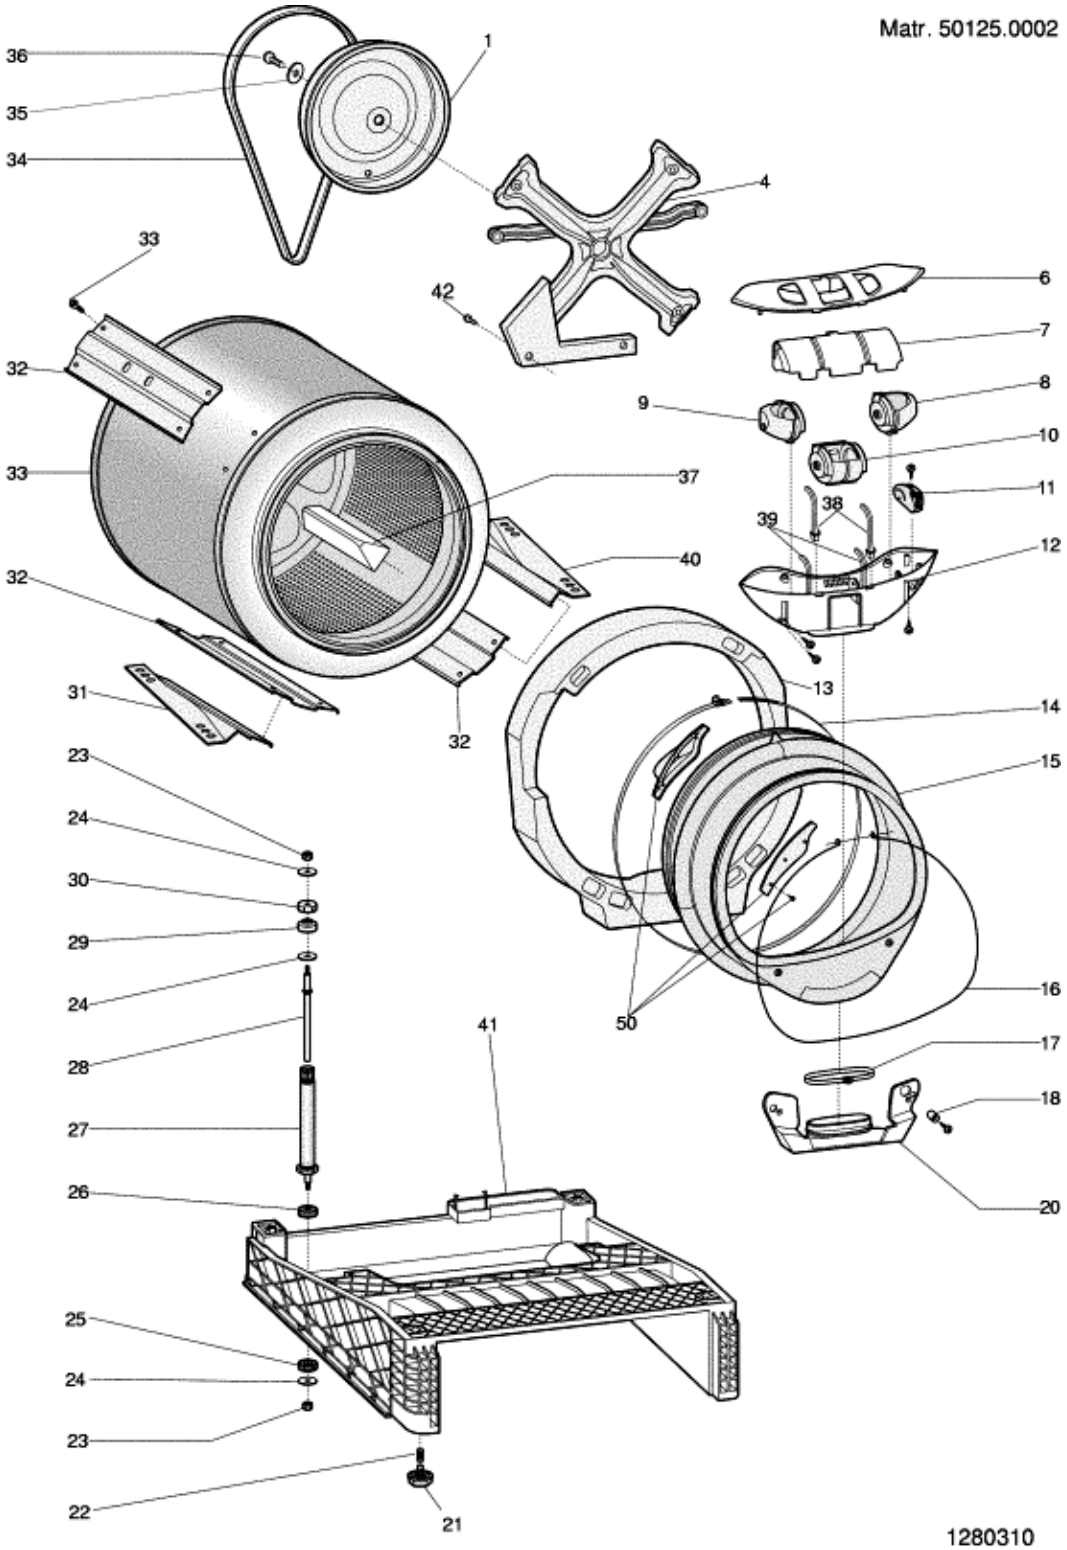

1280310 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00115074				drum pulley cone d=306 d=37 mm		
004	C00115085				bearing spider assembly##		
006	C00141215				dispenser assembled big-size		
013	C00115073				front counterweight		
014	C00115099				bellows clamp (tank front)		
015	C00115100				door bellows seal with support		
016	C00115098				clamping ring - bellows seal front		
018	C00115095				spring latch pivot kit		
018	C00271004				rubber valve		
021	C00083789				foot top ph2001 m8 h= 29 mm		
022	C00059869				spring for foot d =11 mm h = 21		
023	C00111984				self locking nut m8 x 10,6		
024	C00111983				washer		
024	C00114912				washer d=8,5mm		
025	C00111982				cabinet shouldered rubber male		
026	C00111981				cabinet shouldered rubber bush		
027	C00303586				kit shock absorber l=233,5		
028	C00114911				shock absorber bolt l195 x 9,9		
029	C00114910				cabinet shouldered rubber male		
030	C00114909				cabinet shouldered rubber bush		
031	C00115084				lower left support		
032	C00115080				tank cradle		
033	C00115078				tub complete##		
034	C00115068				belt l=1046 - 1314 j7		
035	C00115075				washer 46 x 10.5 x 5		
036	C00115076				bolt m10 x 80		
037	C00115170				removable washing paddles		
040	C00115082				lower right support		
041	C00083788				nut foot		
041	C00111978			1 x C00145315 1 x C00275852	base big size		
042	C00115253			1 x C00051581	bolt m6x30 m8x35 te ch13		
050	C00117440				clothes shifter kit		

1280410 Exploded views

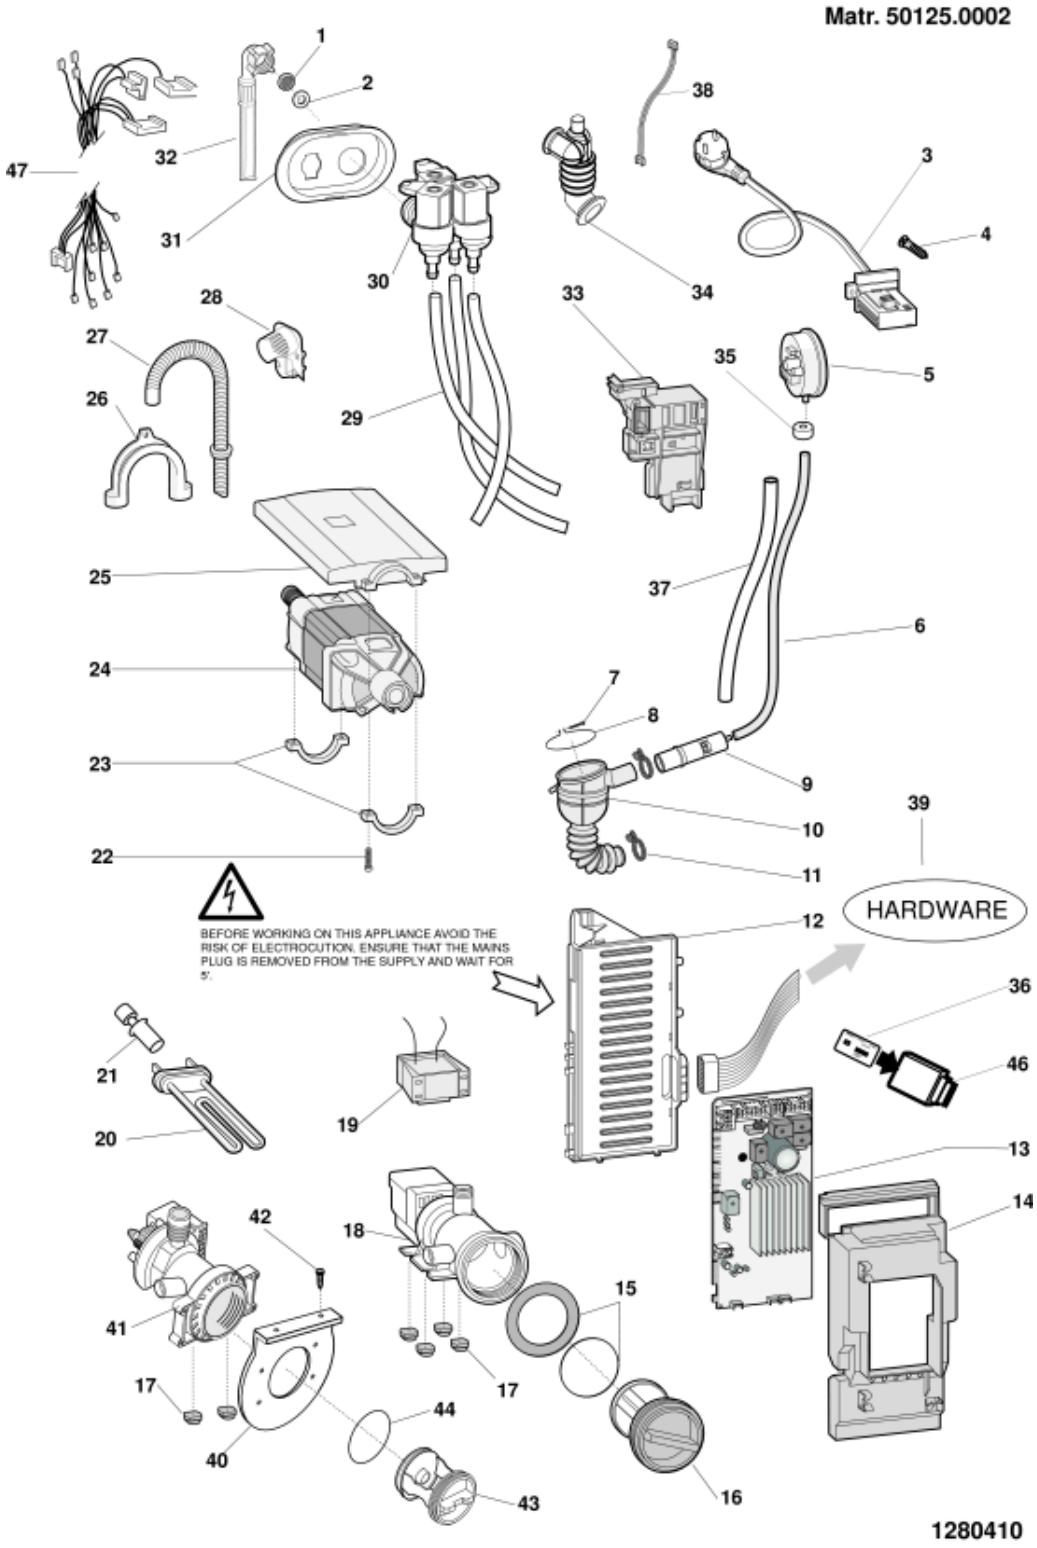

1280410 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00005781				inlet hose filter		
002	C00005572				sealing washer-mains inlet hose		
003	C00115166			1 x C00119128	supply cable 3 x 1.0 1,5mt shuko		
004	C00092348				self-scraping screw 3,5x8		
005	C00090200				pressure switch 1l 90-65		
006	C00115091				air trap hose		
009	C00092173				air trap x oko		
010	C00115092				hose tank to filter oko		
011	C00008612				tube clamp 34,6-36,4		
012	C00115070				bracket for module 3 f		
013	C00254531				module + eeprom big size rohs	n4008c01	
014	C00115069				support cover 3 f		
015	C00032844			1 x C00255433	seal - condenser / tank	n1040393	
015	C00115222				drain pump gasket	n1040393	
016	C00115224				assembly plug drain pumpe	n1040393	
017	C00115220				rubber support		
018	C00115093				drain pump	n1040393	
019	C00115167				radio interference suppressor		
020	C00115072				heating elem.thermal cut-out		
020	C00271533				heating element support		
021	C00083915				thermistor ntc		
022	C00115252				bolt m6x30 tc itorx20		
023	C00115169				motor colla		
024	C00115174				motor three phase		
024	C00115310				tacho generator for motor ceset		
025	C00115173				motor cover		
026	C00019902				plastic -u- to make drain hose		
027	C00115175				drain hose - to sink l= 2m d=	n1040393	
027	C00142287			1 x C00142206	drain hose - to sink 2,15 m		
028	C00083944				grate steam exhaust hose		
029	C00115094				hose - valve/dispenser l=1800		
030	C00115096				electrovalve 3 way		
032	C00039684				inlet hose with safety-hydroblock		
033	C00115071				door interlock		
034	C00115106				steam exhaust hose		


1280410 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
035	C00019755				anti-vibration bush (foam)		
036	C00252471				card bs1400it evoii sw	n4008c01	
037	C00098754				anti-vibration hose (foam) l= 330		
038	C00115589				wiring console card		
039	C00066292				insulated tweezers		
039	C00095669			1 x C00145046	hardware key mk1	n1040317	
039	C00099862				serial cable lb2000 evoii - pc		
040	C00142288				drain pump interface	n1040393	
041	C00142285				drain pump		
042	C00002201				self-tapping screw 4p x 16 tc-tc		
043	C00045027				pump filter kit		
044	C00045025				filter seal		
046	C00252539			1 x C00263927	smart reader for card 8kb		


1280910 Exploded views

Matr. 50125.0001


The new wiring when fitted, must be securely attached to the machine wiring with Insulating Tape.

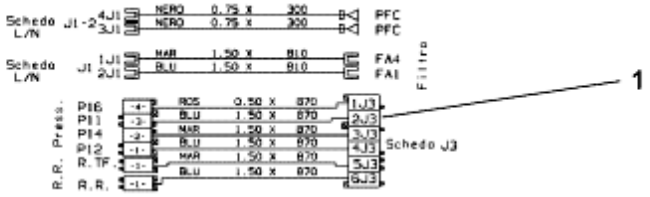


WIRING ASSEMBLY A = COD. C00115592




WIRING ASSEMBLY B1 = MAIN-DISPLAY CONNECTION COD. C00115596

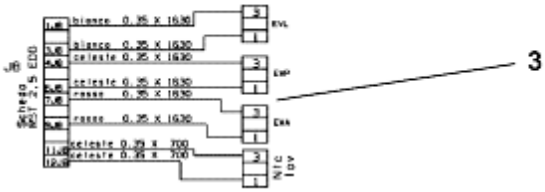


WIRING ASSEMBLY C = EVL + EVP + EVA COD. C00115597

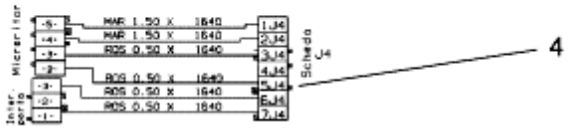

WIRING ASSEMBLY D = INTERLOCK. + MICRO SWITCH COD. C00115598

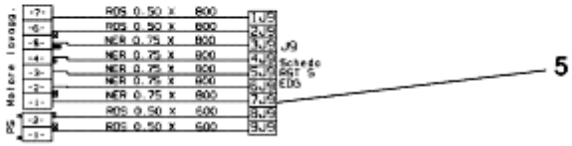

WIRING ASSEMBLY L = MOTOR + PUMP COD. C00115600



WIRING ASSEMBLY Y = EARTH TRI-PHASE MACHINE COD. C00115602

1280910

1280910 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00115592				wiring filter-pressure switch-		
002	C00115596				wiring display		
003	C00115597				wiring module-electrovalve		
004	C00115598				wiring door lock-door switch		
005	C00115600				wiring motor/module		
006	C00115602				wiring heart conection triphase		
007	C00115589				wiring console card		

Notices

n1040242: Power card with welded eeprom.

From serial number 20304.0001, IDC power card with welded eeprom is used to ensure the perfect connection of all parts, in the Comunanza, Teverola and Brembate factories.
To replace the module with welded eeprom, it will be necessary to use the eeprom indicated in the SAT document of the model concerned.
To replace the module on a unit with welded eeprom both the SAT module and the eeprom are required, because the latter cannot be reused.

n1040296: List of EVOII FAULTS and troubleshooting.

In case of washing-machine fault in carrying out the self-test function, the machine reproposes the fault previously signalled and the same fault is shown on the display of the new hardware key.
The type of fault can be signalled in different ways:
- on AVD models the fault is shown directly on the machine display.
- on AVL models the fault is signalled by LEDs.

Reading of Faults signalled by LEDs
When the machine has a fault:
1. The window is locked
2. The door lock light flashes fast (> 1 Hz)
3. The control panel LEDs light up, to signal the fault, according to the table (fig. 01).
The example shown in fig. 02 (Example Fault F03) below indicates which LEDs are flashing if the machine has Fault F03

List of faults, malfunctions and Warnings:

F01: Triac Motor short circuit
- Check for water leaks that may affect connector J9 causing the relevant contacts to short
- Check the motor terminal block (possible problems due to chemical effects of work residuals on the contacts which may cause short-circuiting)
- Replace Card

F02: Motor blocked, Tachometrics in Short Circuit/Open
- Check motor if blocked

- Check efficiency of J9 connector on card
- Check the tachometric winding verifying an ohmic resistance reading of 115 - 170 ohm between pins
1 and 2 on wiring connector J9. In case of short circuit/open circuit check the wiring between pins 1 and 2 of J9 relevant to the tachometrics. With three-phase motor, make sure there is ohmic continuity between J9 pins 6 and 7.
- Replace motor
- Replace card

F03: NTC Open or in Short Circuit or washing heater relay stuck (signalled in presence of full load)
- Check efficiency of J8 connector contacts on card
- Check NTC verifying that the ohmic resistance value at room temperature 20°C is approx. 20Kohm on J8 wiring connector pin 11 and 12.
- If the measurement is incorrect check J8/NTC wiring continuity
Check the same parameter directly on NTC
- Replace NTC
- Replace Card

F04: Simultaneous empty and overflow (pressure switch stuck on empty).
If the pressure switch contact is stuck on empty the washing-machine loads water until reaching the overflow. The drain pump is automatically started by the contact on the overflow pressure switch.
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring of connector J3/pressure switch
- Replace pressure switch
- Replace card.

F05: Pump Blocked or pressure switch empty not reached
- Check efficiency of J9 connector on card, verifying a voltage of 220V between pins 8 and 9
- Check that pump if being fed
- Check Pump Filter + wall drain
- Change Pump
- Replace Card

F06: No on AVD and AVL

F07: No Wash Heating Element Absorption (the fault is only signalled with the pressure switch on empty)
- Check efficiency of J3 connector contacts on card
- Check continuity of the wash heating element on J3 connector pins 5 and 6. The 1800W 230V heating element has a resistance of 25 ohm.
- Check connection of pressure switch J3 connector pins 2 and 3: there must not be ohmic continuity (shared with full load).
Check connection of pressure switch J3 connector pins 2 and 4: there must be ohmic continuity
- Replace Heating Element
- Replace Pressure Switch
- Replace Card

F08: Wash Heater Relay Stuck (signalled in presence of empty) or pressure switch stuck on Full (simultaneously empty and full)
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and
pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring J3/pressure switch
- Check connection of heating element J3 connector pins 5 and 6.
- Replace pressure switch
- Replace Card

F09: Machine Setup Error (Eeprom error)

- In case of production card with Eeprom soldered: replace the card and Eeprom
- In case of replacement of Eeprom and card, check correct housing of Eeprom on card socket

F10: No full and empty signal
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and
pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring of connector J3/Pressure switch
- Replace Pressure Switch
- Replace Card

F11: No Pump Feedback (Drain pump disconnected or winding broken)
- Check efficiency of J9 connector on card
- Check continuity of the Pump on J15 connector pins 1 and 2 (in case of washing-machine with Easy Door door lock) or on J9 connector pins 8 and 9 (in case of conventional door lock), checking a resistive value equal to 170 ohm.
- Check wiring of connector J15 (or J9)/Pump
- Replace Pump
- Replace Card

F12: No Communication Display/LED Card-Main Board
- Check efficiency of contacts on card of J11 connector
- Check the continuity of J11 connector-display card 5-pin connector
- Replace Main Board
- Replace Display Card/LED

F13: Drying NTC sensor open / Drying system NTC wiring disconnected
Check efficiency of J10 connector on card
Check NTC on J10 connector pins 7 and 8 verifying that the ohmic value of the sensor at room temperature 20°C is approx. 20Kohm
Check continuity of NTC/J10 connectors wiring
Replace NTC
Replace card

F14: Drying heater open or not connected
Check efficiency of J2 connector contacts on card
Check continuity of drying heater on J2 wiring connector pins 1 and 2, verifying that the ohmic value of the 1300W 230V heating element is approx. 40Kohm
Check wiring of connector J10/drying heater
Replace heating element
Replace card

F15: Drying heater always on (drying relay contact stuck or drying Triac short circuit)
Check efficiency of J2 connector contacts on card of
Check wiring of connector J2/drying heater
Check wiring of connector J3/pressure switch
Replace card

F16: Drum locking (top-loading only)

F17: Door lock unfed/open (with Easy Door)
- Check presence of 230V mains power on J4 wiring connector inserted on card between pins 3 and 4,
(not present with machine on standby) and presence of power from 230V door lock between pins 3 and 5
- Check ohmic continuity of the door microswitch on J4 connector inserted on card between pins 1 and 2 (with door closed/on open/off)
- Check continuity of J4/door lock wiring
- Check door hooking

- Replace door lock
- Replace card

F17: Door lock unfed/open (conventional door lock, not Easy Door)
- Check presence of 230V mains power on J4 wiring connector inserted on card between pins 2 and 3,
(not present with machine on standby) and presence of power from 230V door lock between pins 3 and 1
- Check door hooking
- Replace door lock
- Replace card

F18 --> Communication error microprocessor / DSP (Digital Signal Processor)
- Replace card

COMBINAZIONE LED


SIMBOLOGIA:
= LED ACCESO = LED SPENTO

FAULT	LED Fasi	TASTI FUNZIONI			
F01	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F02	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F03	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F04	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F05	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F06	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F07	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F08	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F09	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F10	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F11	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F12	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F13	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F14	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F15	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F16	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F17	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F18	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4



ARISTON INDESIT


FIG. 01

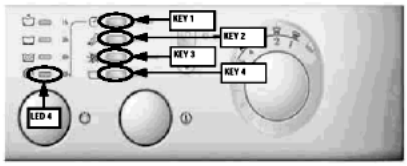

Fault	Key 1	Key 2	Key 3	Key 4	Led 4
01	Off	Off	Off	Flash	Off
02	Off	Off	Flash	Off	Off
03	Off	Off	Flash	Flash	Off
04	Off	Flash	Off	Off	Off
05	Off	Flash	Off	Flash	Off
06	Off	Flash	Flash	Off	Off
07	Off	Flash	Flash	Flash	Off
08	Flash	Off	Off	Off	Off
09	Flash	Off	Off	Flash	Off
10	Flash	Off	Flash	Off	Off
11	Flash	Off	Flash	Flash	Off
12	Flash	Flash	Off	Off	Off
13	Flash	Flash	Off	Flash	Off
14	Flash	Flash	Flash	Off	Off
15	Flash	Flash	Flash	Flash	Off
16	Off	Off	Off	Off	Flash
17	Off	Off	Off	Flash	Flash

Table Fault LED

FIG. 02

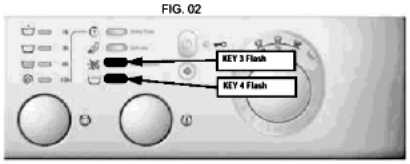

Example Fault F03

Tabla de averías para lavadora EVO II



FAULT	CAUSA	COMBINACIÓN LED: LED Fase	TECLAS FUNCIONES			
F01	Triac control motor en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F02	Motor bloqueado, taquímetro motor abierto / en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F03	Sonda NTC lavado abierta / en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F04	Vacío + sobrenivel presostato simultaneamente	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F05	No se logra vacío presostato bomba desagua bloqueada	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F06	Error de selector (no encuentra código)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F07	Falta absorción en la resistencia de lavado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F08	Relé resistencia de lavado con el contacto NA/NC pegado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F09	Error umap file (EEPROM no programada o correcta)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F10	Presostato en Rotor+Vacio o sin salial de vacio ni lleno	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F11	Falta alimentación a la bomba de desague	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F12	Falta comunicación entre módulo display y modulo de control	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F13	Sonda NTC secado abierta/corto. Ventilador secado bloqueado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F14	Falta alimentación a la resistencia de secado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F15	Contacto relé resistencia de secado pegado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F16	Bloqueo de cesto (sobe carga superior)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F17	Bloqueo puerto desalineado /abierto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F18	Error de comunicación Micro/DSP (MODULO)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4


– LED

SIMBOLOGIA:

– led encendido

– led apagado


ABB. 01

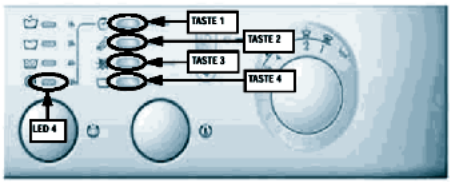

Fault	Taste 1	Taste 2	Taste 3	Taste 4	Led 4
01	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet
02	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet
03	Ausgeschaltet	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet
04	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
05	Ausgeschaltet	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet
06	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet
07	Ausgeschaltet	Blinkt	Blinkt	Blinkt	Ausgeschaltet
08	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
09	Blinkt	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet
10	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet
11	Blinkt	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet
12	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
13	Blinkt	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet
14	Blinkt	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet
15	Blinkt	Blinkt	Blinkt	Blinkt	Ausgeschaltet
16	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt
17	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt	Blinkt


Tab. Störung Led

ABB. 02

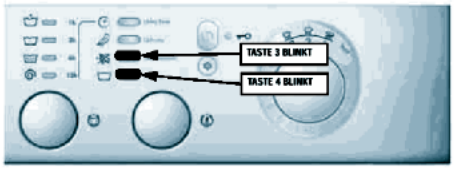

Beispiel Störung F03


FIG. 01

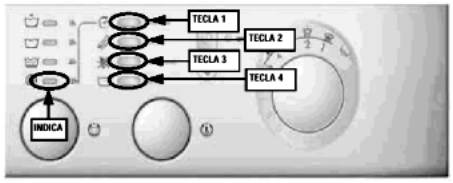

Fault	Tecla 1	Tecla 2	Tecla 3	Tecla 4	Indicador luminoso 4
01	Apagado	Apagado	Apagado	Pisca	Apagado
02	Apagado	Apagado	Pisca	Apagado	Apagado
03	Apagado	Apagado	Pisca	Pisca	Apagado
04	Apagado	Pisca	Apagado	Apagado	Apagado
05	Apagado	Pisca	Apagado	Pisca	Apagado
06	Apagado	Pisca	Pisca	Apagado	Apagado
07	Apagado	Pisca	Pisca	Pisca	Apagado
08	Pisca	Apagado	Apagado	Apagado	Apagado
09	Pisca	Apagado	Apagado	Pisca	Apagado
10	Pisca	Apagado	Pisca	Apagado	Apagado
11	Pisca	Apagado	Pisca	Pisca	Apagado
12	Pisca	Pisca	Apagado	Apagado	Apagado
13	Pisca	Pisca	Apagado	Pisca	Apagado
14	Pisca	Pisca	Pisca	Apagado	Apagado
15	Pisca	Pisca	Pisca	Pisca	Apagado
16	Apagado	Apagado	Apagado	Apagado	Pisca
17	Apagado	Apagado	Apagado	Pisca	Pisca

Tab. Fault indicador luminoso

FIG. 02

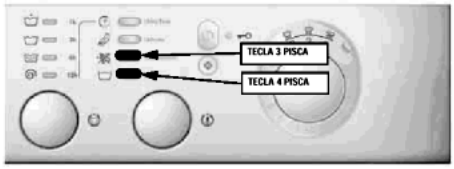

Exemplo Fault F03

n1040390: New motor bracket on Extendia range.

From serial no. 51014.0001, the motor and motor cylinder head have been modified on Extendia washing machines.



Cruscotto - Tableau de borde - Belde - Control panel
Painel frontal - Quadro Mandos - Kontrol paneli

The items affected by this modification and already updated are:
C00115174 - THREE PHASE MOTORE;
C00115173 - MOTOR cylinder head.
These parts have already been fitted in the modified version.

The modified cylinder head has two small teeth at the points resting against the motor (see Fig.001).
Two notches have been made on the modified motor to engage with the small teeth on the cylinder head when assembled.

In the event one of the two parts mentioned above on premodification models needs to be replaced, replace both of them.


n1040393: New Extendia drain pump.

From serial no. 51129.0001, all Extendia models have been fitted with a new drain pump.

New parts:
C00142285 - PUMP WITH EXTENDIA FILTER.
C00142287 -2.15M L.BEND 29 STRAIGHT 18MM DRAIN PIPE.
C00142288 - EXTENDIA PUMP INTERFACE.
C00008612 - 34.6-36.4 HOSE CLIP.
C00002201 - SELF-TAPPING SCREW 4P X 16 TC -TC.
C00045027 - ASKOLL/PLASET PUMP FILTER KIT.
C00045025 - ASKOLL / PLASET FILTER GASKET.

Premodification parts:
C00115093 - PUMP WITH EXTENDIA FILTER.
C00115222 - DRAIN PUMP GASKET - BIG SIZE.
C00115175 - SPIR. DRAIN PIPE AD L L = 2M D = 26MM.

Fig. 001

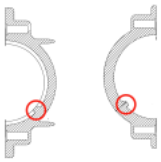

C00115224 -DRAIN PUMP PLUG SET.
C00115222 - DRAIN PUMP GASKET.
C00032844 - CONDENSER GASKET.

The new items are not interchangeable with the premodification ones.
When the pre-modification items are no longer available, all parts will have to be ordered and replaced.

n4008c01: Smart Card - LVB/DRYERS

Beginning April 2008 spare parts warehouse started to manage the EVOII modules with eeprom fixed, these can only be programmed with smart card/palmare/pc.

Attention!! The premodification with eeprom socket can be programmed with smart card/palmare/pc using a blank eeprom or with pre programmed eeprom.

Spare parts of modules with eeprom fixed/eeprom socket:

C00265676 with eeprom fixed - C00143068 with eeprom socket - for models with conducibility sensor
C00254298 with eeprom fixed - C00143068 with eeprom socket - for models without conducibility sensor
C00254297 with eeprom fixed - C00259941 with eeprom socket
C00254531 with eeprom fixed - C00143058 with eeprom socket
C00254297 with eeprom fixed - C00143057 with eeprom socket - for models without blocking drum
C00265697 with eeprom fixed - C00143057 with eeprom socket - for models with blocking drum
C00254297 with eeprom fixed - C00143056 with eeprom socket
C00254530 with eeprom fixed - C00259738 with eeprom socket
C00254533 with eeprom fixed - C00143060 with eeprom socket


C00254535 with eeprom fixed - C00145013 with eeprom socket
C00254530 with eeprom fixed - C00145551 with eeprom socket
C00254529 with eeprom fixed - C00142293 with eeprom socket
C00257406 with eeprom fixed - C00143989 with eeprom socket
C00257409 with eeprom fixed - C00144151 with eeprom fixed
C00254530 with eeprom fixed - C00143069 with eeprom fixed

DRYERS
C00255835 with eeprom fixed - C00258789 with eeprom socket
C00255835 with eeprom fixed - C00194077 with eeprom socket

This notice has a "reference list" specific for each product where you can find the link between smart card and the eeprom code with the same software.

Electric schemes and links


Cod. 16001870000

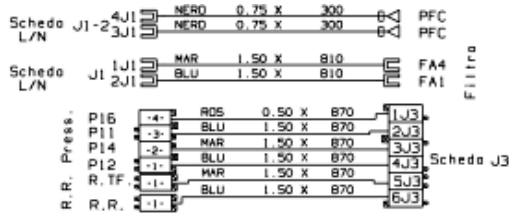


36 NASTRATURE COMPLESSIVO A




COMPLESSIVO D = Microrit+IP




COMPLESSIVO B1 = COMUNICAZIONE DISPLAY

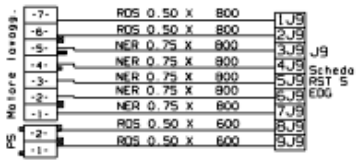

COMPLESSIVO L = Motore+pompo

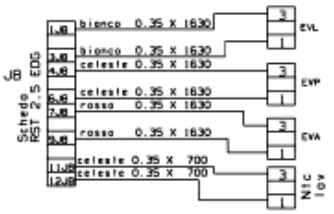


COMPLESSIVO C = EVL+EVP+EVA



COMPLESSIVO Y = TERRA MACC.TRIFAESE

CABLAGGIO PULSANTI PER ASSIEME CRUSCOTTO

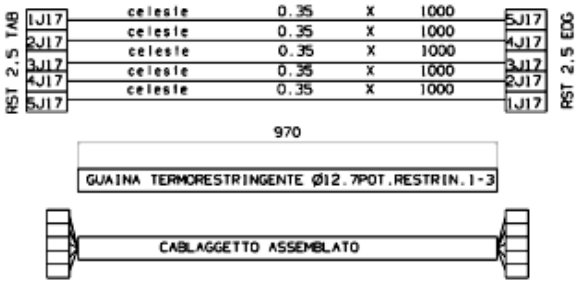

COMPLESSIVO D - CRUSCOTTO-MAIN PER BIG SIZE


16001870000

Legend

Legend: 16001870000

Electric schemes and links

Cod. 21500845700

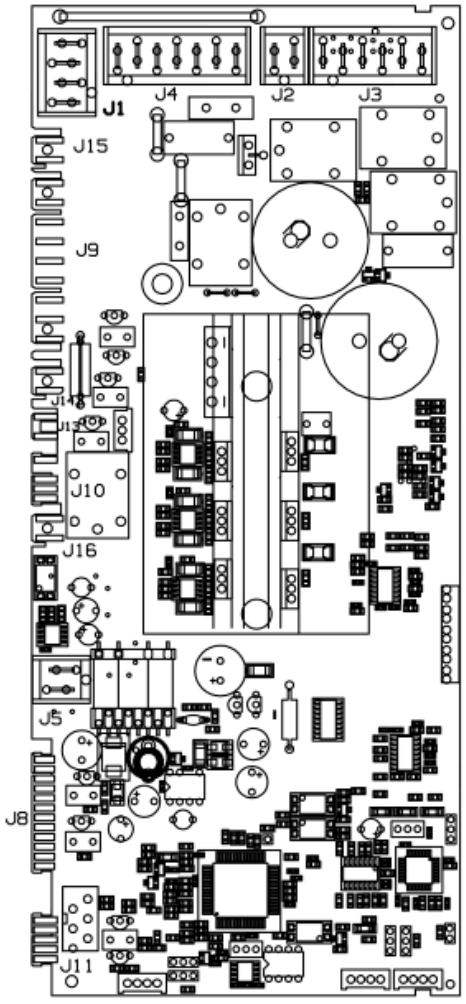


21500845700

Legend

Legend: 21500845700

Electric schemes and links

Cod. 21500845700B

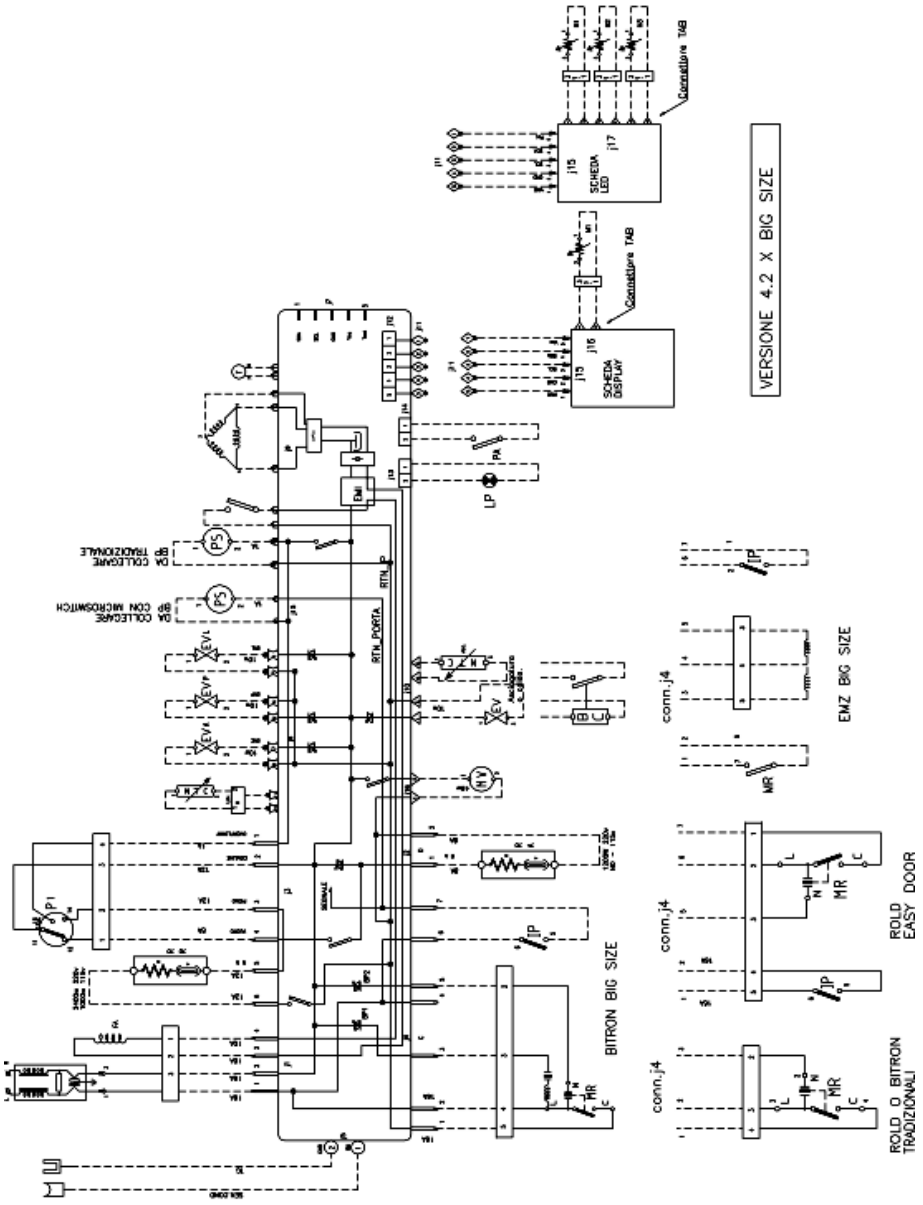

Legend

Legend: 21500845700B