
Exploded View


Position numbers begins with A
unless indicated with another number.

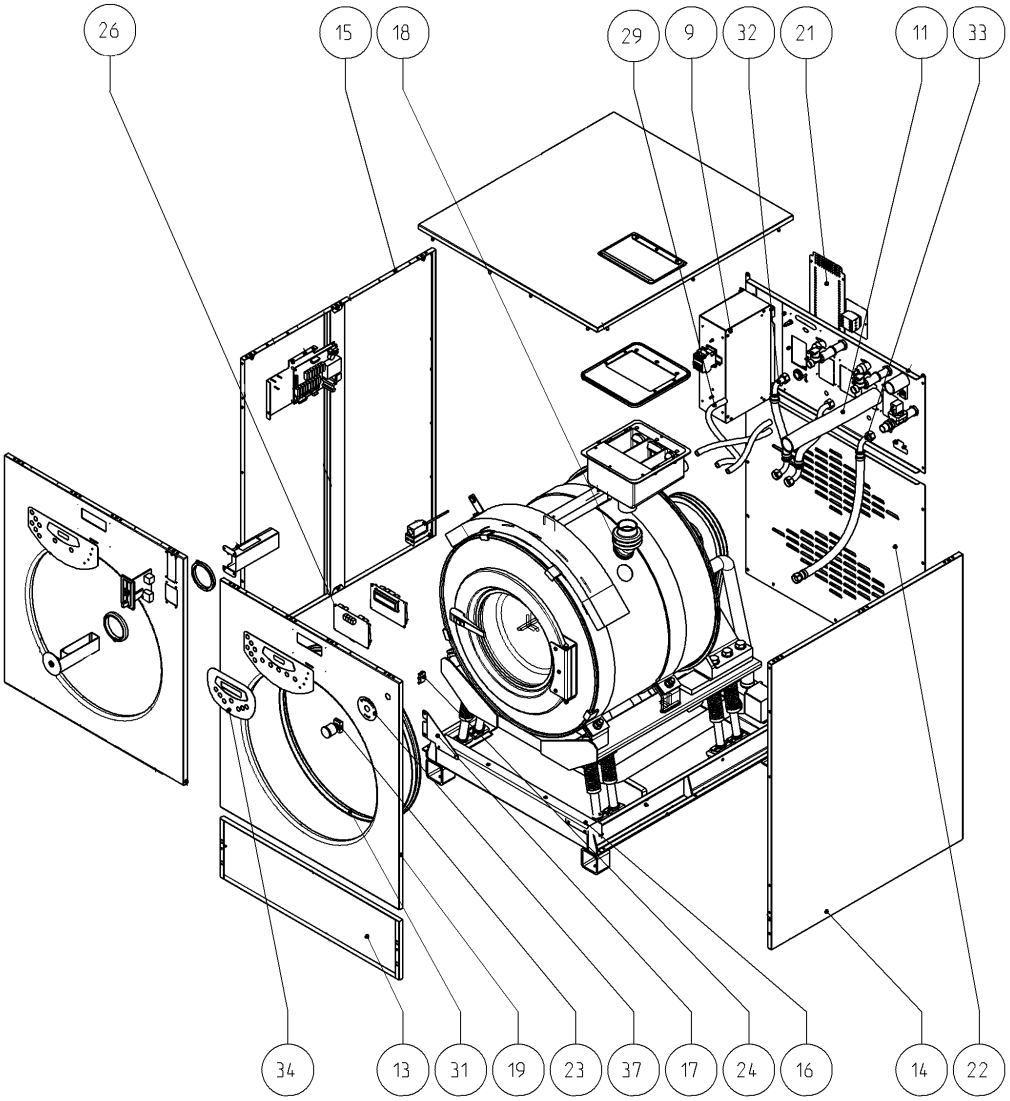

AGB234A

Exploded View


Position numbers begins with B
unless indicated with another number.

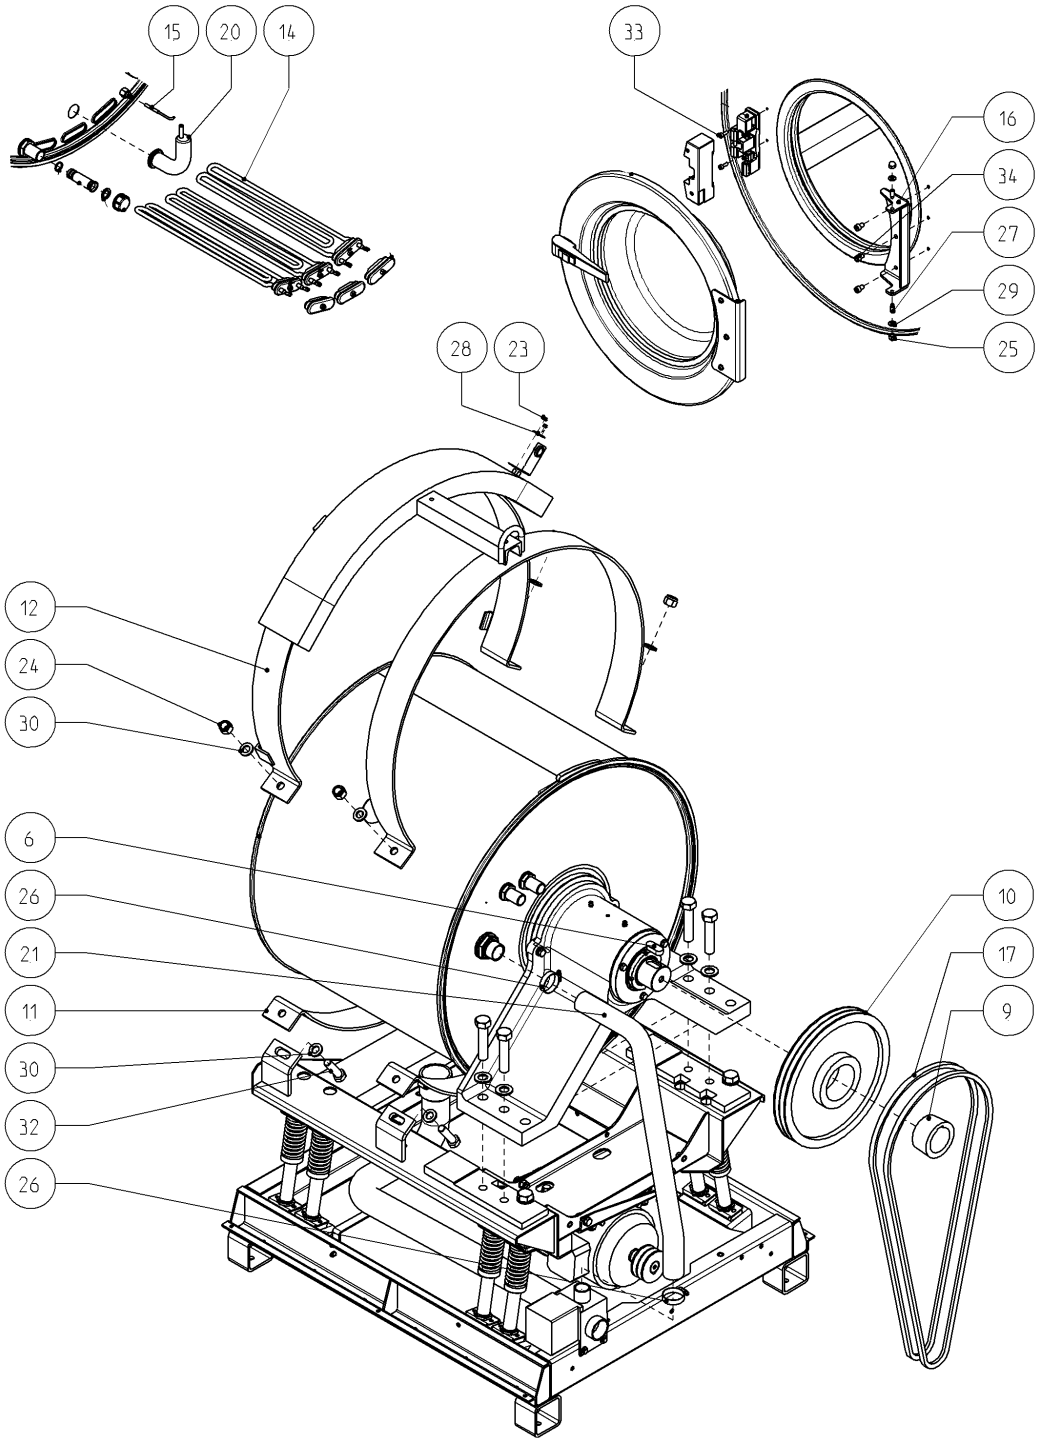

AGB234B

Exploded View


Position numbers begins with C
unless indicated with another number.

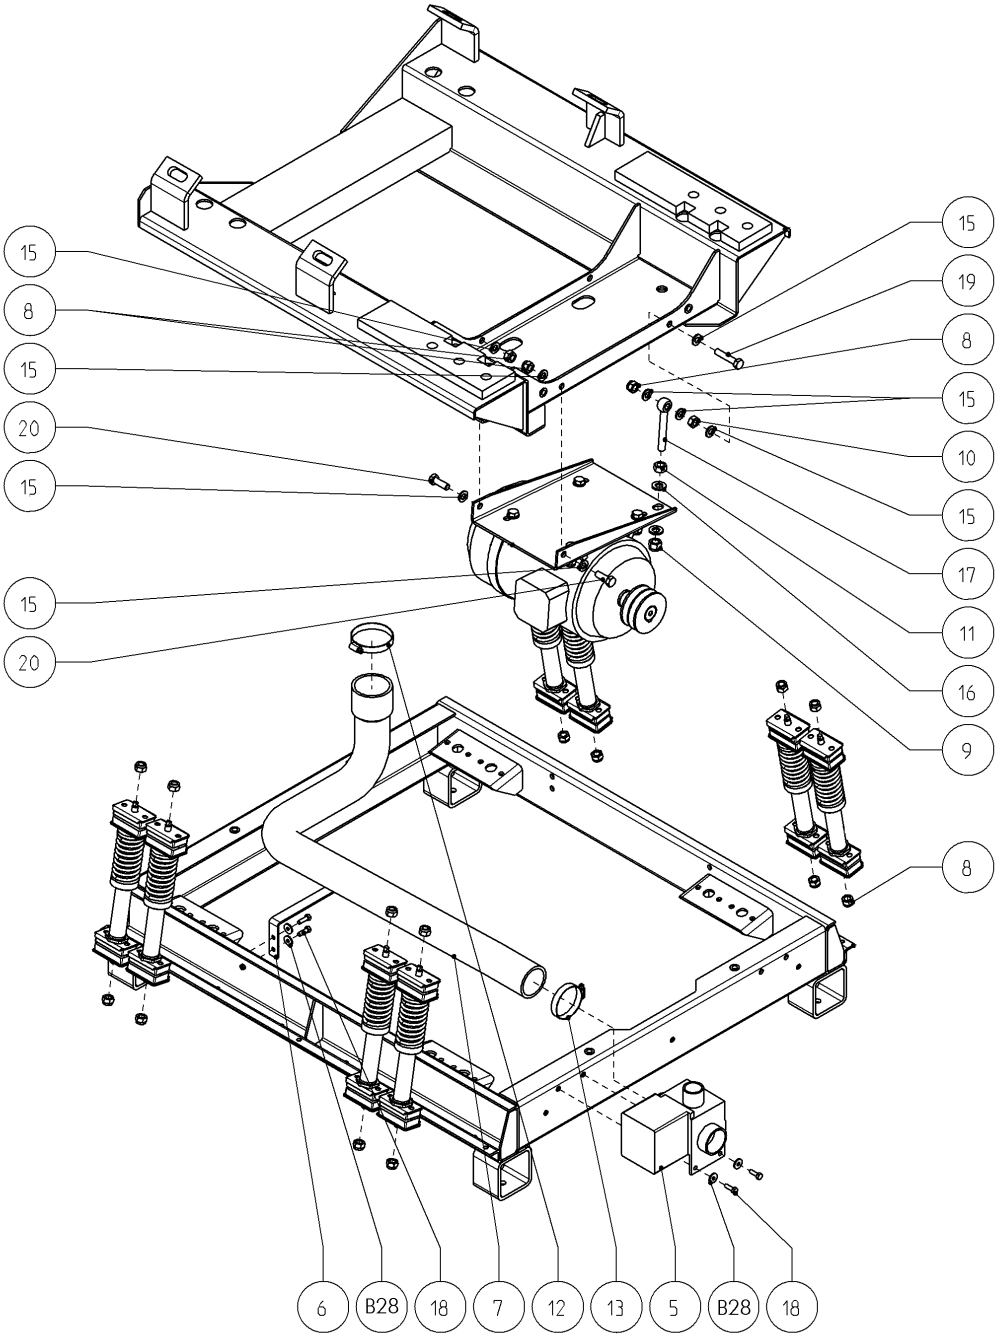

AGB234C

Exploded View


Position numbers begins with D
unless indicated with another number.

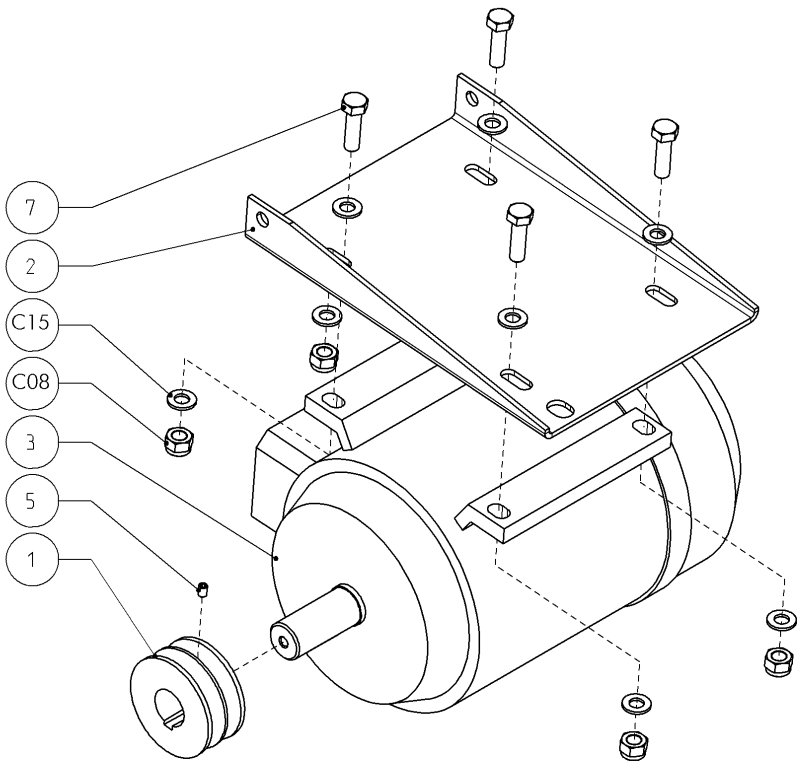

AGB234D

Exploded View


Position numbers begins with E
unless indicated with another number.

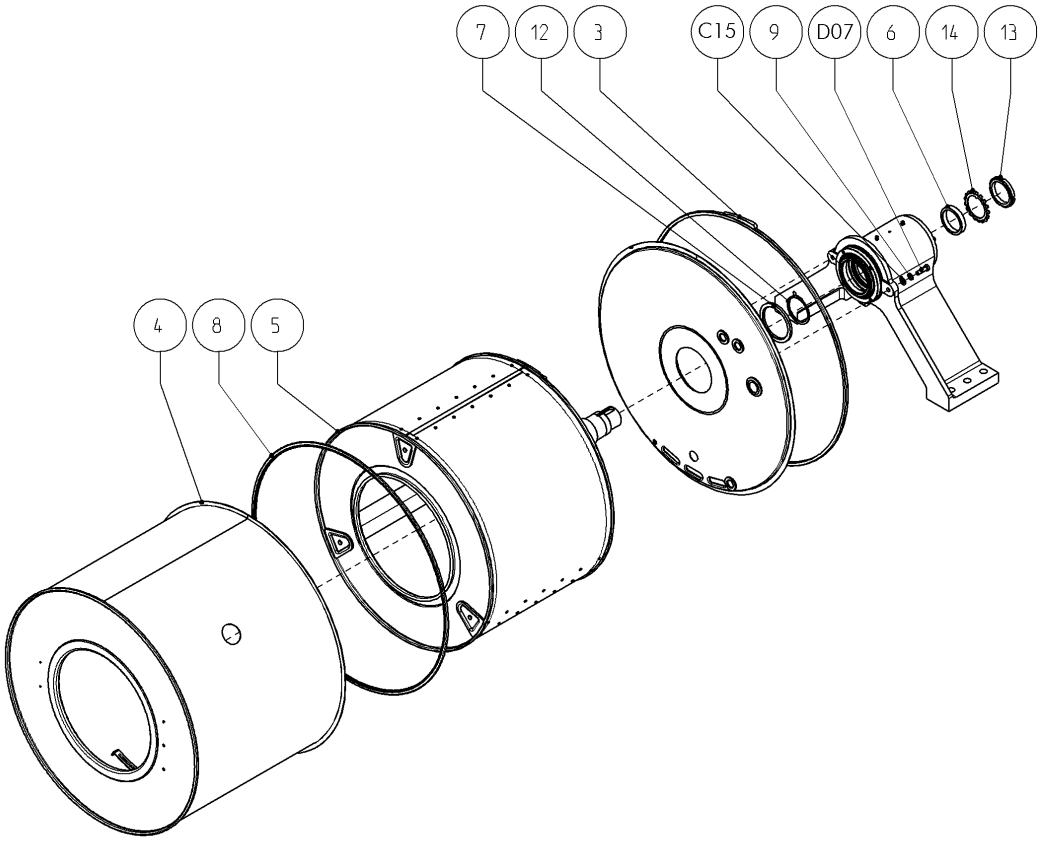

AGB234E

Exploded View


Position numbers begins with F
unless indicated with another number.

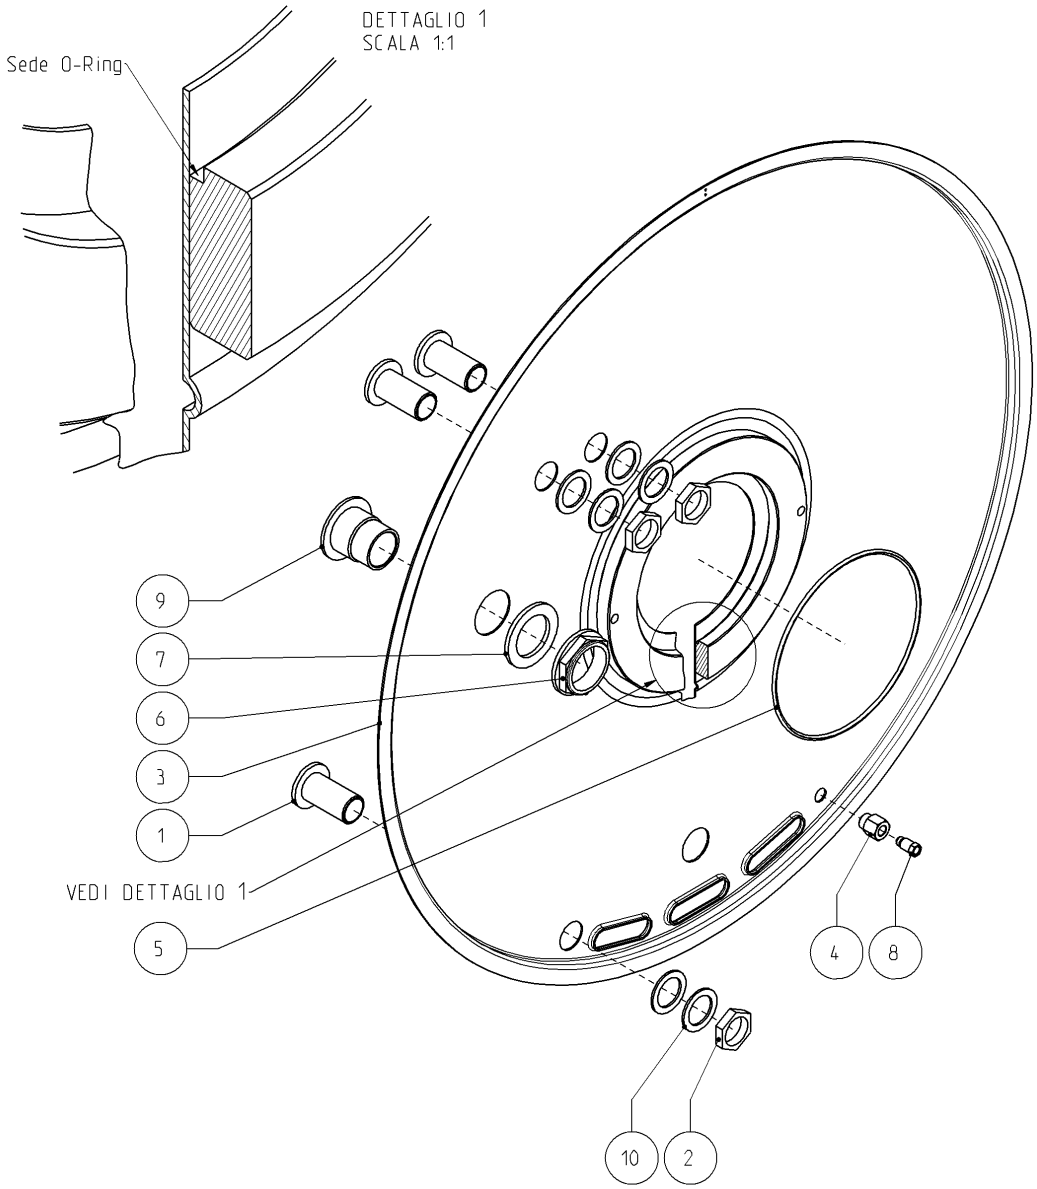

AGB234F

Exploded View


Position numbers begins with G
unless indicated with another number.

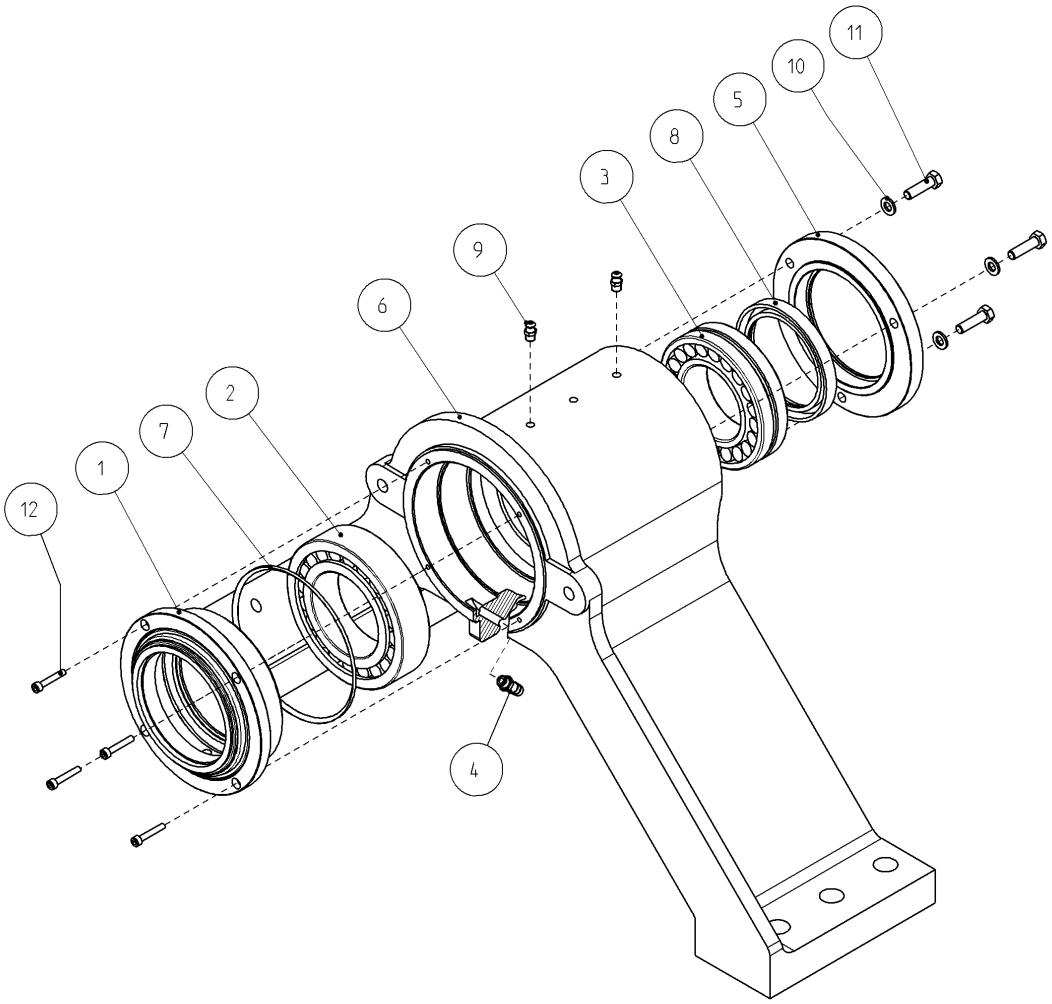

AGB234G

Exploded View


Position numbers begins with H
unless indicated with another number.

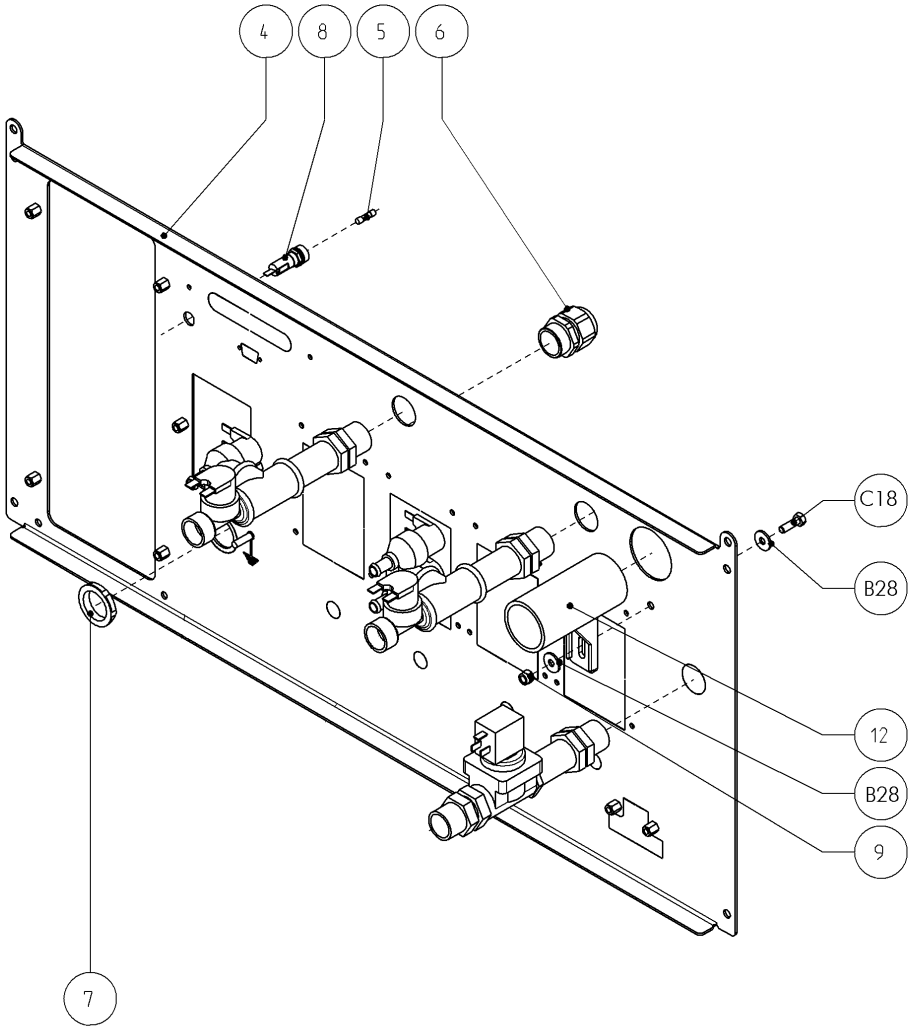

AGB234H

Exploded View


Position numbers begins with I
unless indicated with another number.

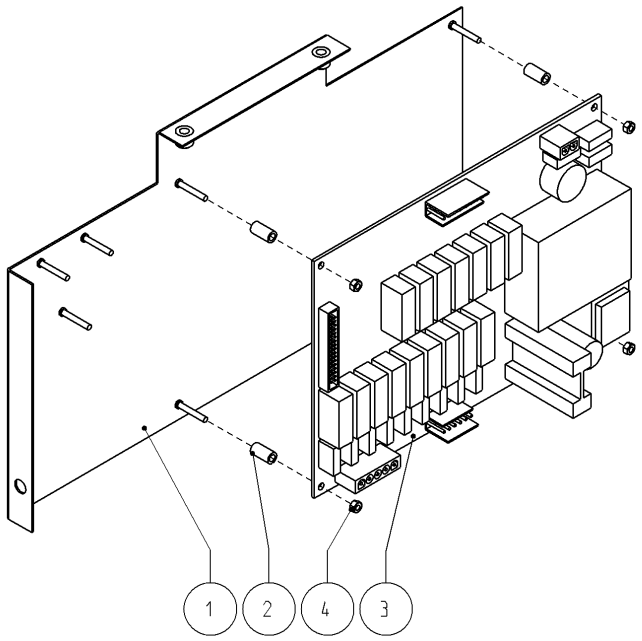

AGB234I

Exploded View


Position numbers begins with J
unless indicated with another number.

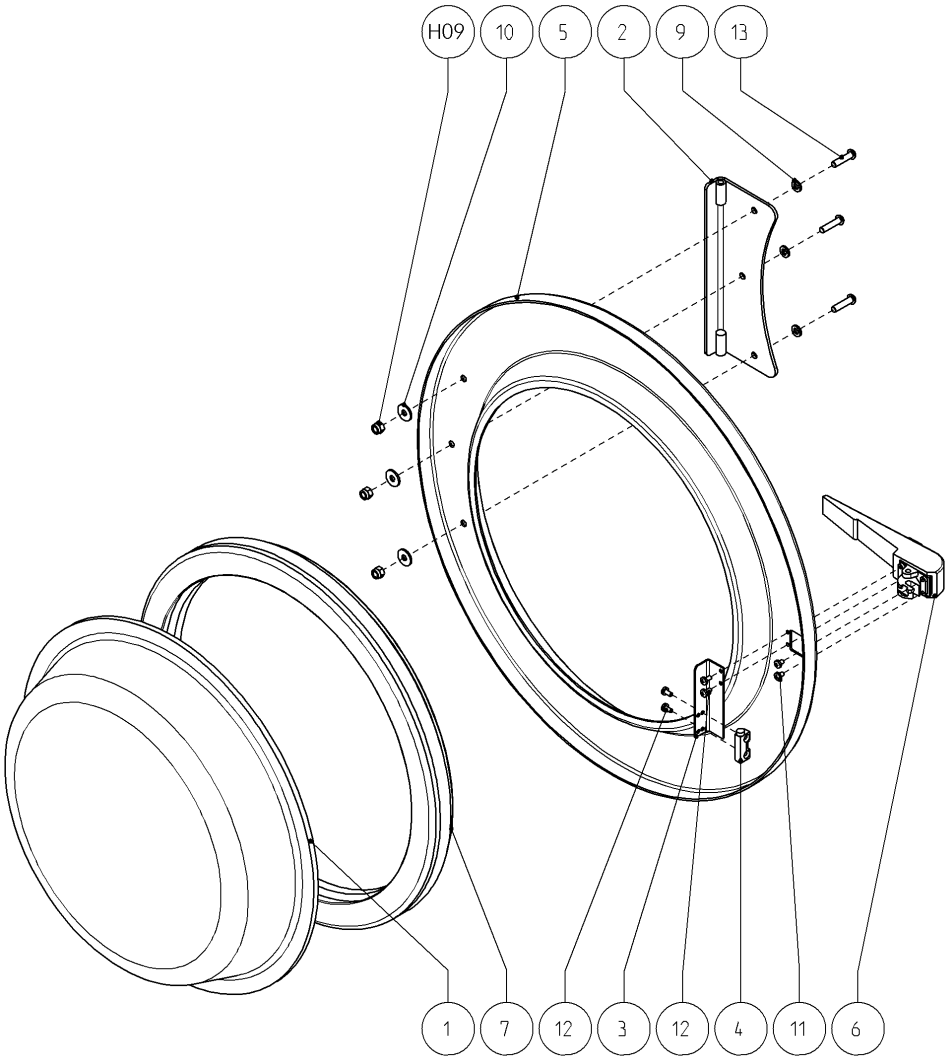

AGB234J

Exploded View


Position numbers begins with K
unless indicated with another number.

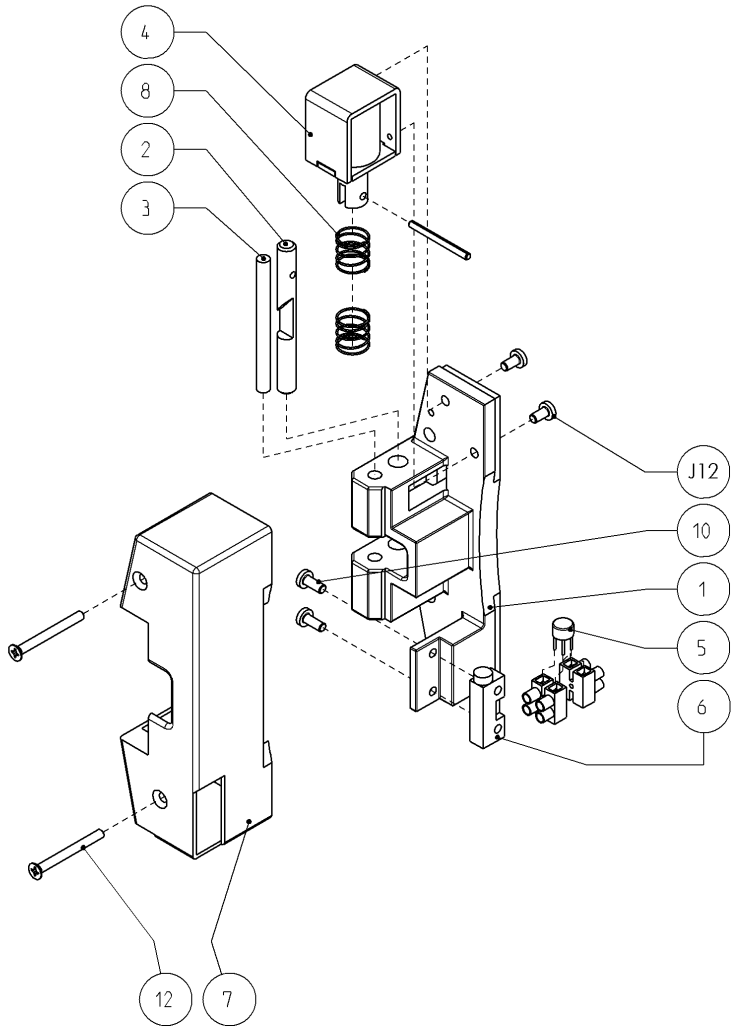

AGB234K

Exploded View


Position numbers begins with L
unless indicated with another number.

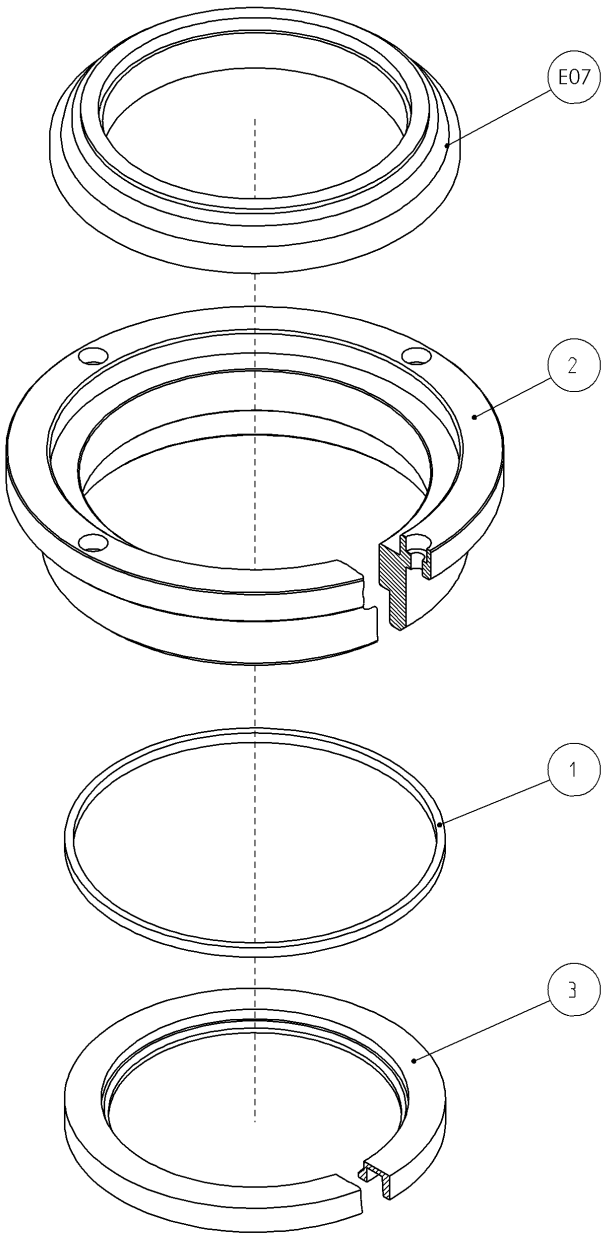

AGB234L

Exploded View


Position numbers begins with M
unless indicated with another number.

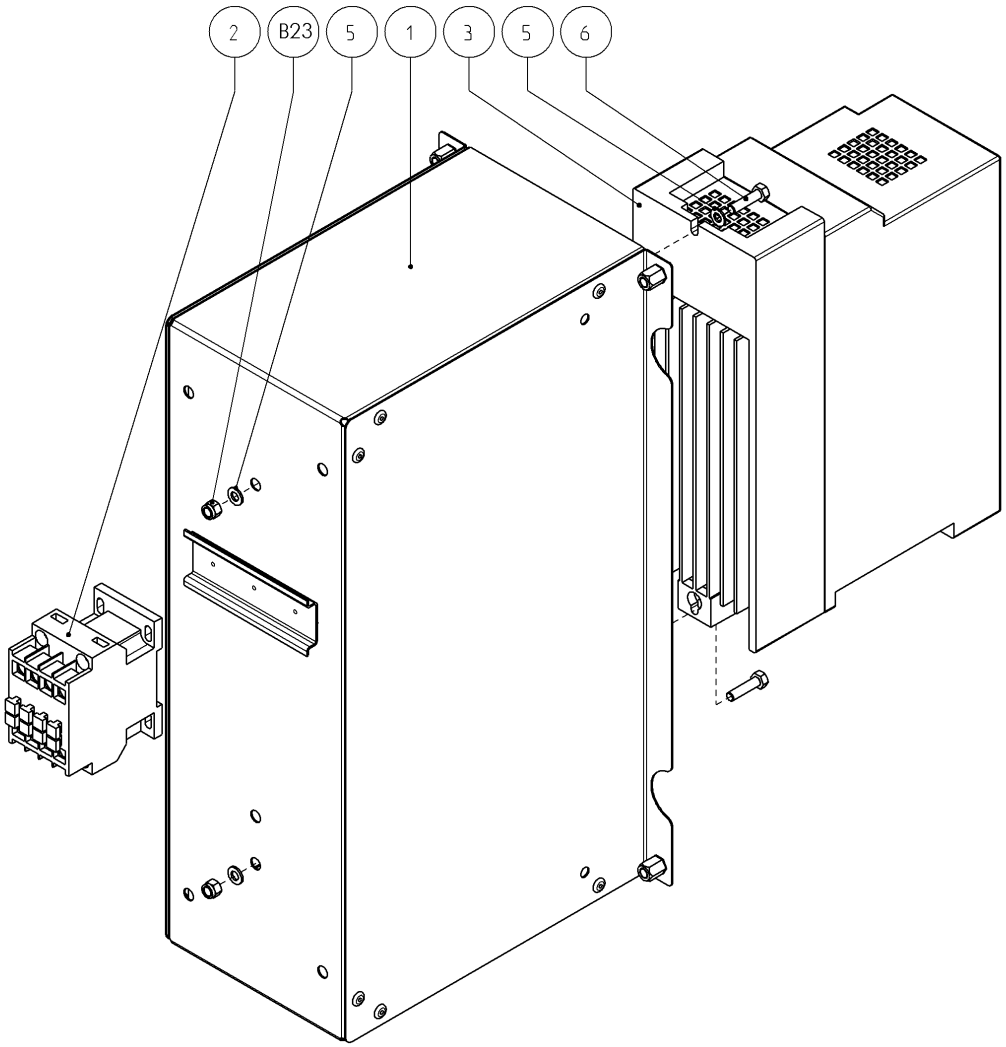

AGB234M

Exploded View


Position numbers begins with N
unless indicated with another number.

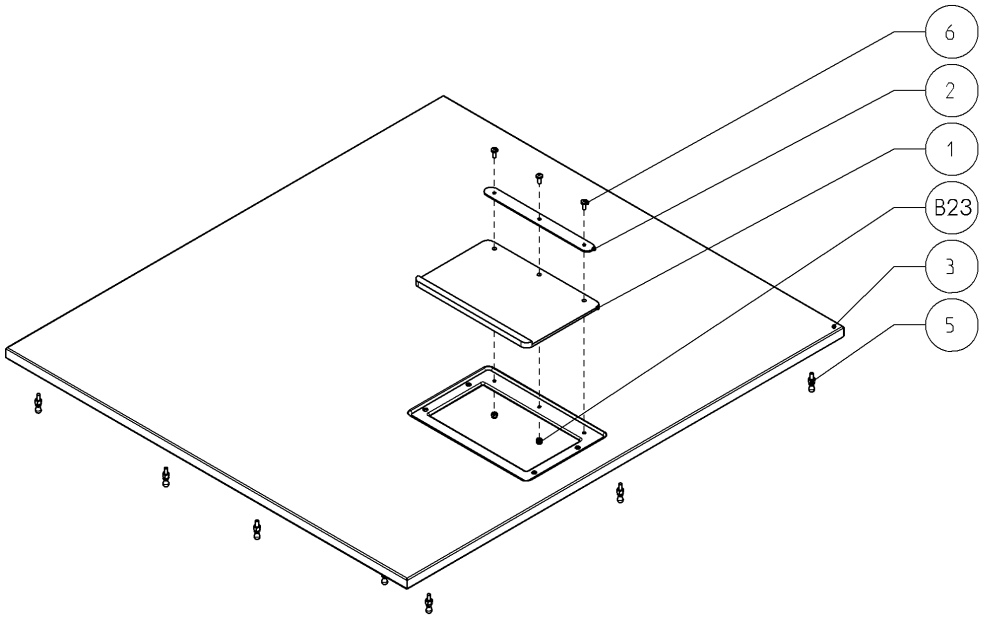

AGB234N

Exploded View


Position numbers begins with O
unless indicated with another number.

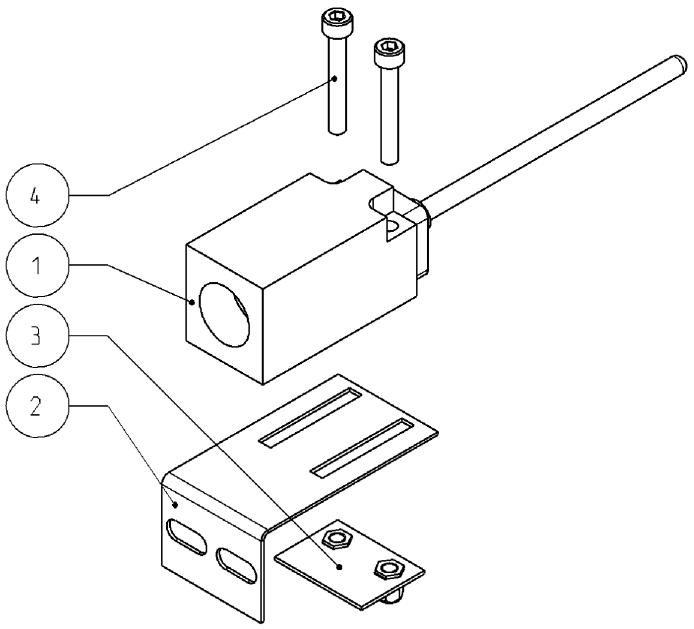

AGB234O

Exploded View


Position numbers begins with P
unless indicated with another number.

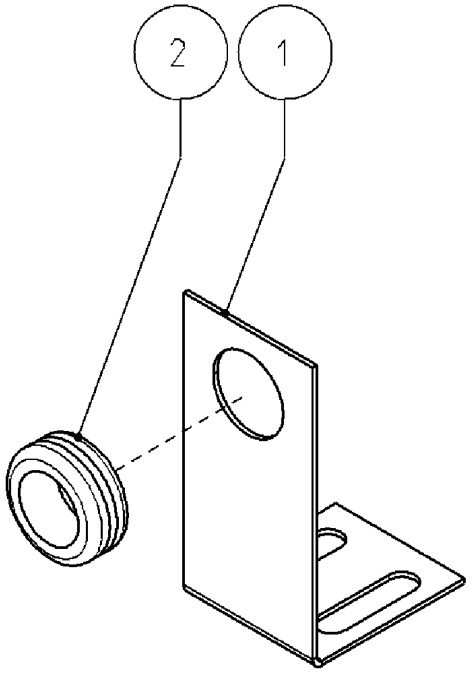

AGB234P

Exploded View


Position numbers begins with Q
unless indicated with another number.

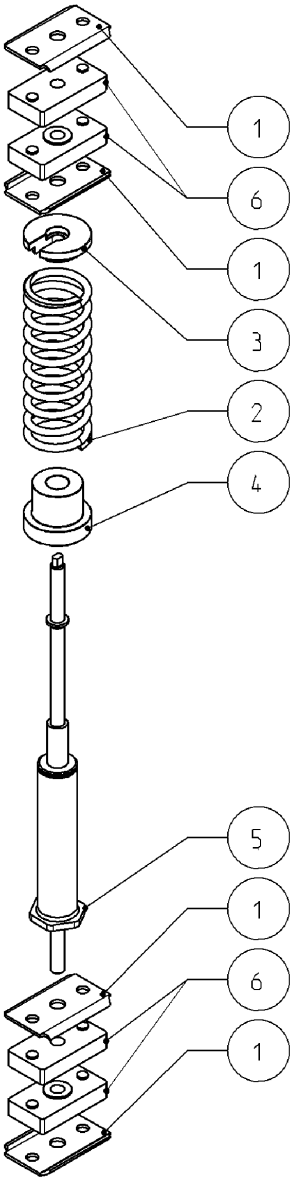

AGB234Q

Exploded View


Position numbers begins with R
unless indicated with another number.

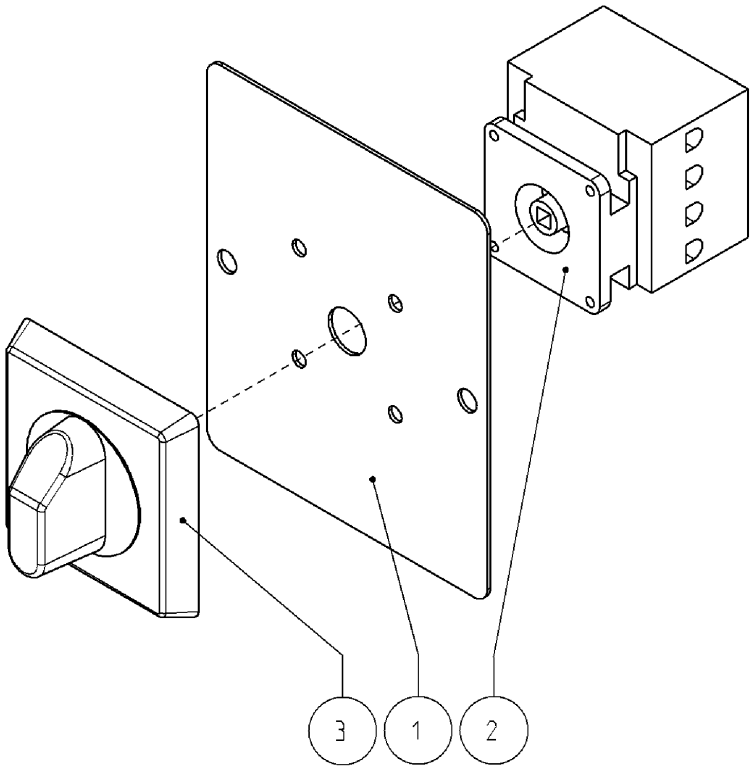

AGB234R

Exploded View


Position numbers begins with S
unless indicated with another number.

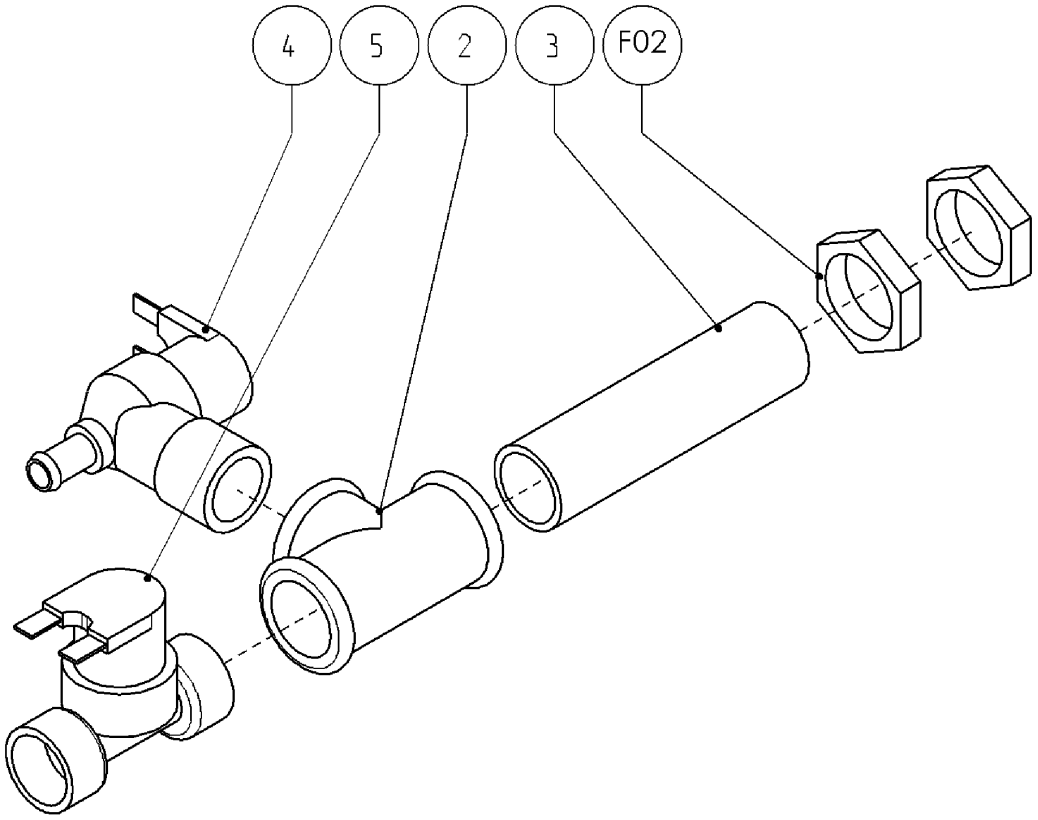

AGB234S

Exploded View

Position numbers begins with T
unless indicated with another number.

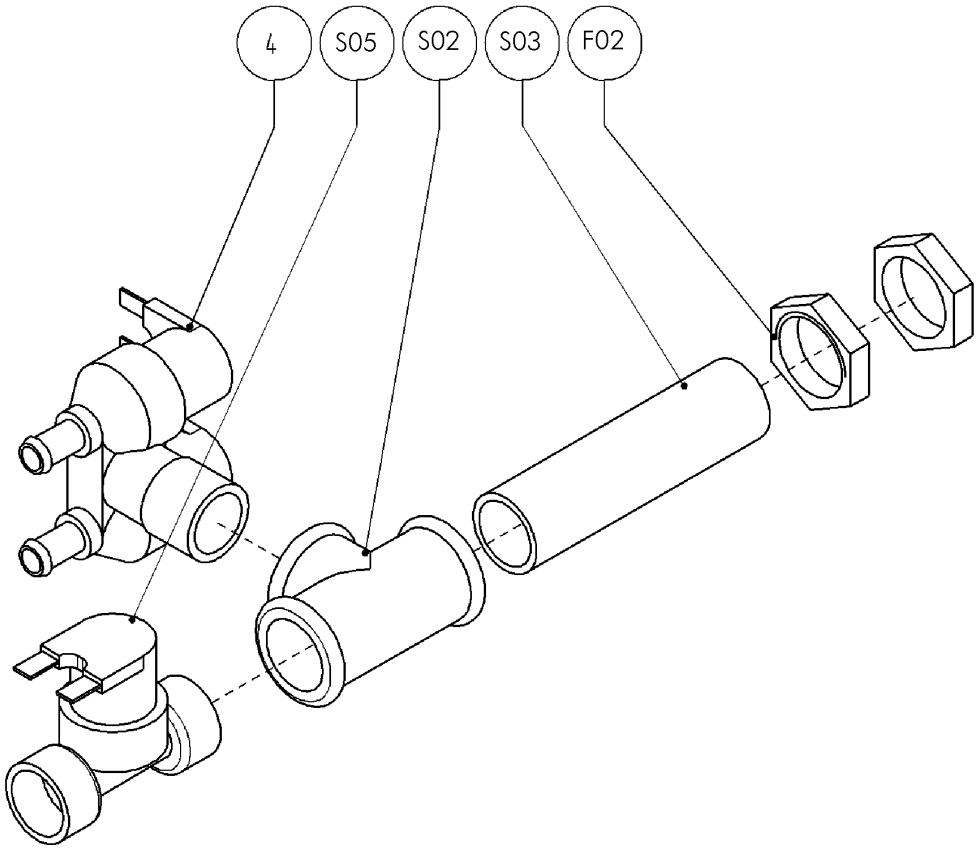

AGB234T