
INDESIT company

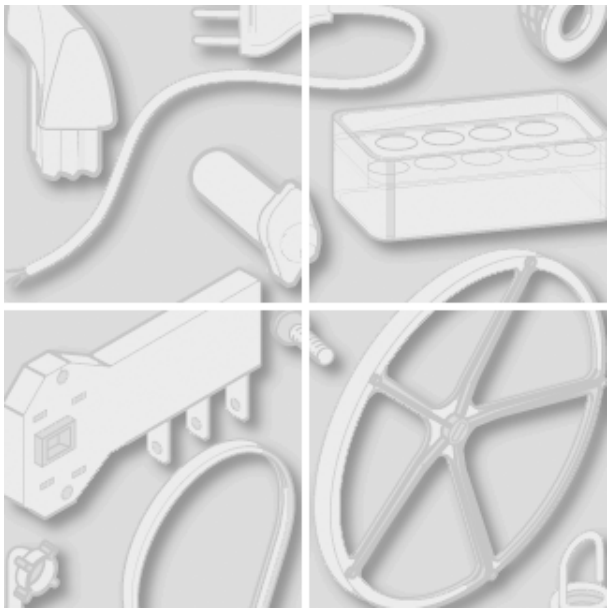

Model type:
HE60(IX)

Commercial code:
F027238

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes


6065250 Exploded views

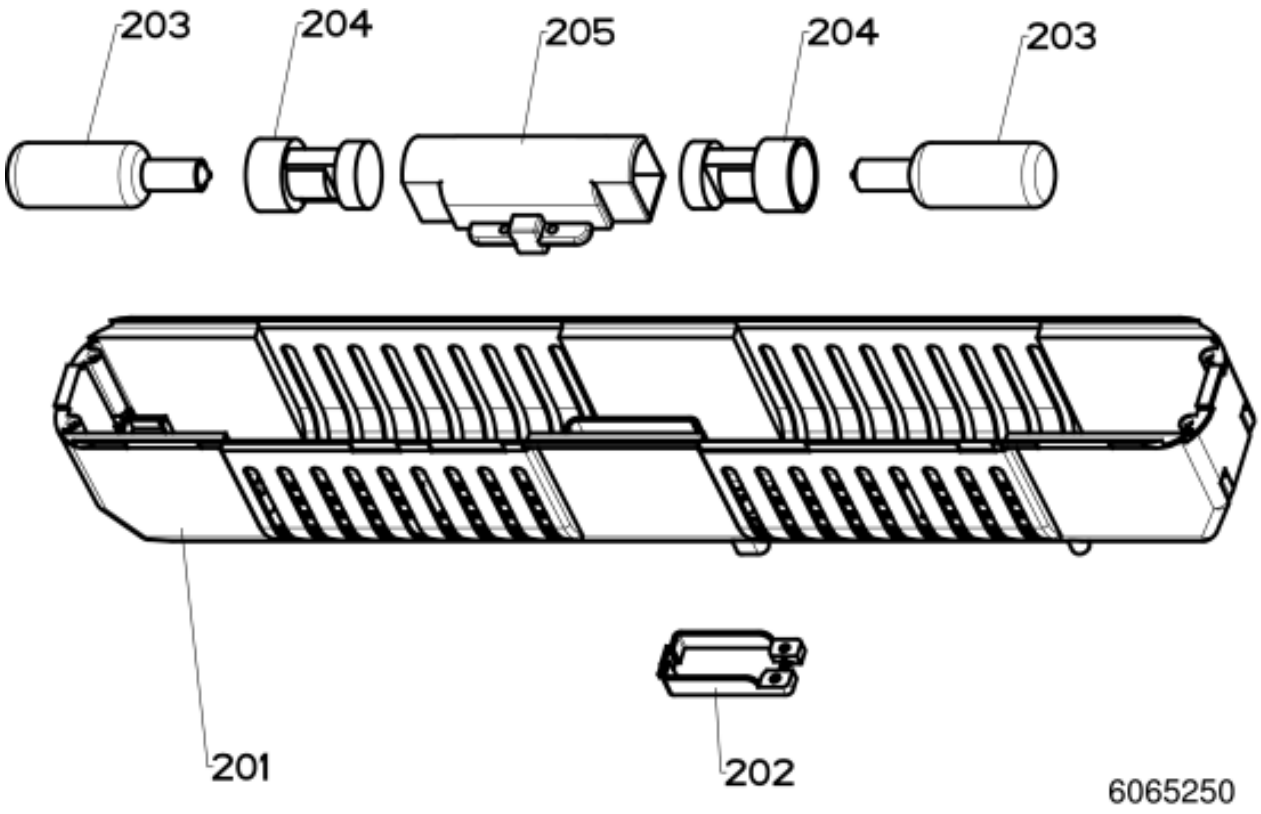

6065250 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
201	C00050518				lighting support		
202	C00050519				lighting cable holder		
203	C00042985				lamp 40w		
204	C00026910				lampholder		
205	C00031737				lamp holder supprt d212-035		


6066060 Exploded views

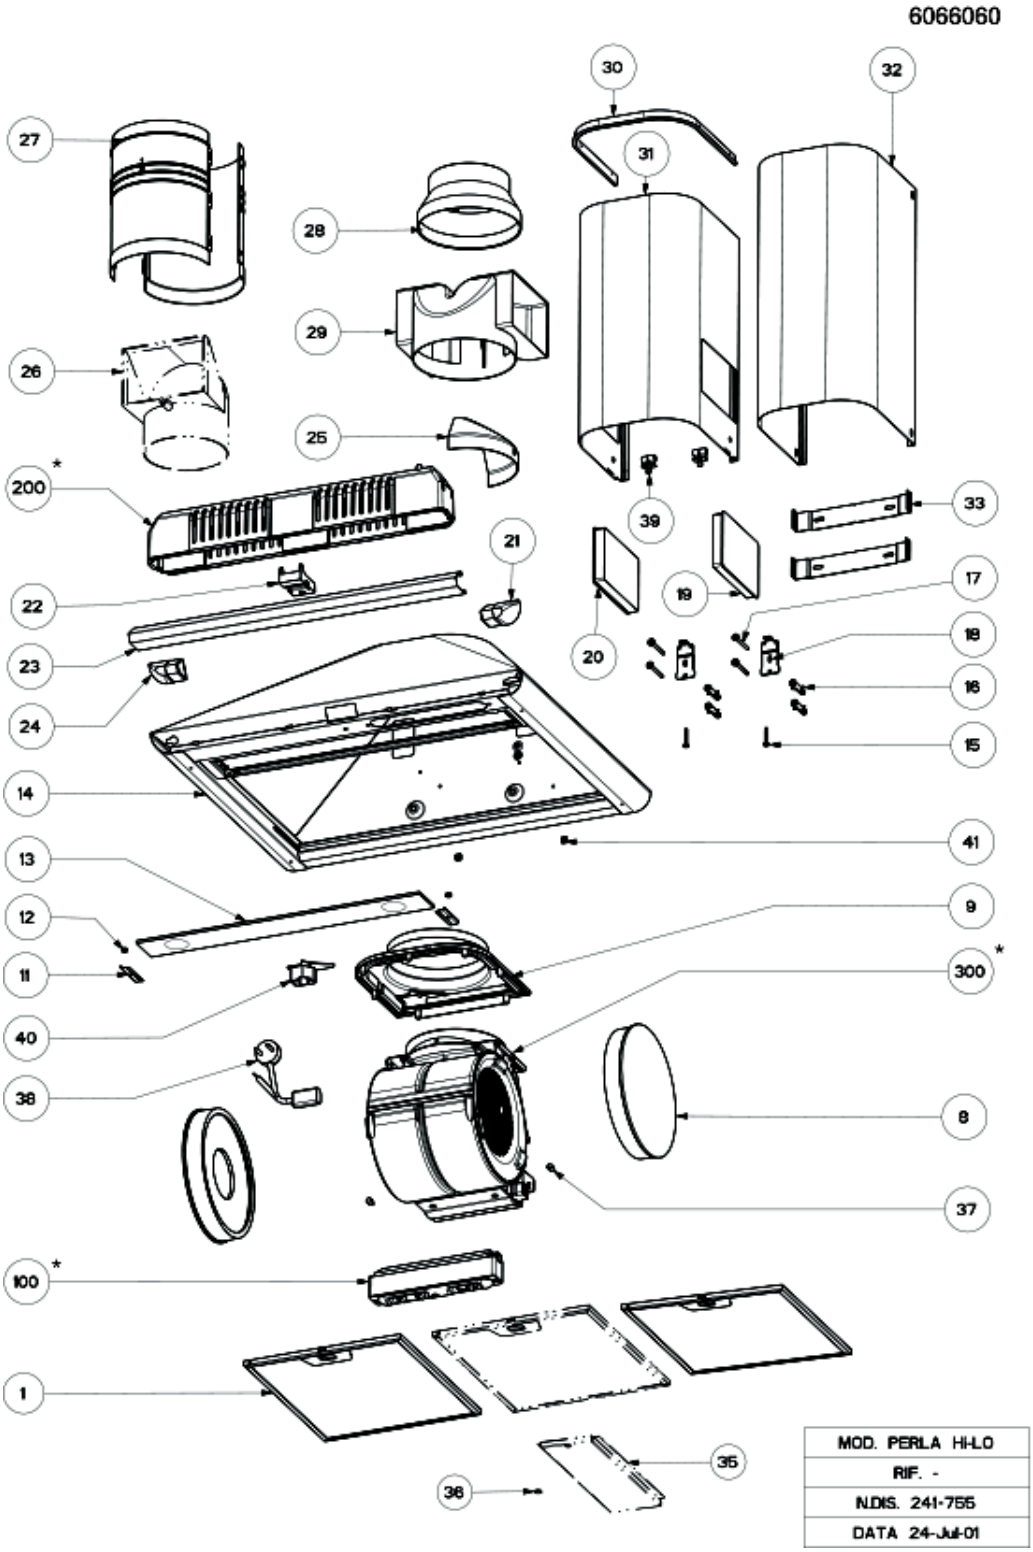

6066060 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00085173				user instruction book		
000	C00174838				instruction booklet tk he60		
001	C00059594				metal grease filter		
009	C00085174				flange		
011	C00048233				ceiling lamp head x		
012	C00050498				lighting heading spacer		
013	C00043029				ceiling lamp in hardened glass		
014	C00050529				casing assembly 60 inox##		
015	C00135756				screw m4x25		
016	C00135762				rawlplug		
017	C00135757				screw 4,2x44,4		
018	C00051436				hood securing brachet hd6-9		
019	C00050473				right directional grid		
020	C00050474				left directional grid		
021	C00085201				heading front cr rh		
022	C00085176				front fissing braket		
023	C00085177				front part inox 60 ariston		
024	C00085178				front heading cr lh		
028	C00051049				spigot adapter 150-120mm		
029	C00085179				filtering connection		
031	C00051051				lower chimney inox with		
032	C00050525				chimney		
033	C00051437				fixing bracket chimney hood		
037	C00135763				screw m4x8		
038	C00085153				supply cable 2x0,75x2100		
039	C00063924				bush		
040	C00085180				wire guide		
041	C00050412				captivated nut 5004-a 4m		
099	C00050989			2 x C00090697	carbon filters (2 parts)		

6066070 Exploded views

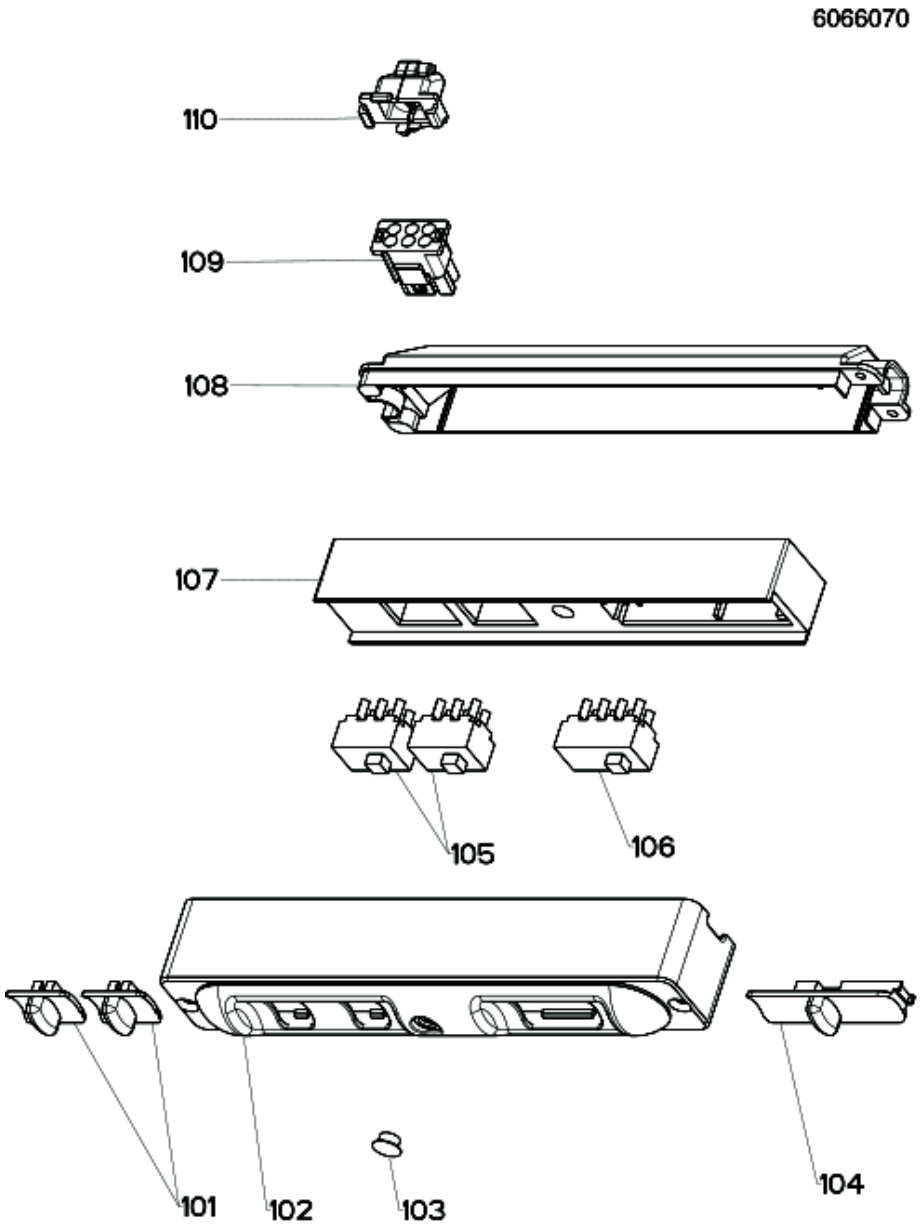


MOD. GRUPPO COMANDI 6
RIF. 100
N.DIS. 241715
DATA 20-Apr-94

6066070 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
100	C00085313				control bracket		
101	C00050513				button 0-1		
102	C00085181				control box		
103	C00031743				gem		
104	C00050515				speed button		
105	C00023672				light switch 1 pole		
106	C00079421				potenz.pl40 apl 220 kohm		
107	C00050516				sliders support		
108	C00050517				control box cover		
109	C00085089				male fast connection		

60660f0 Exploded views

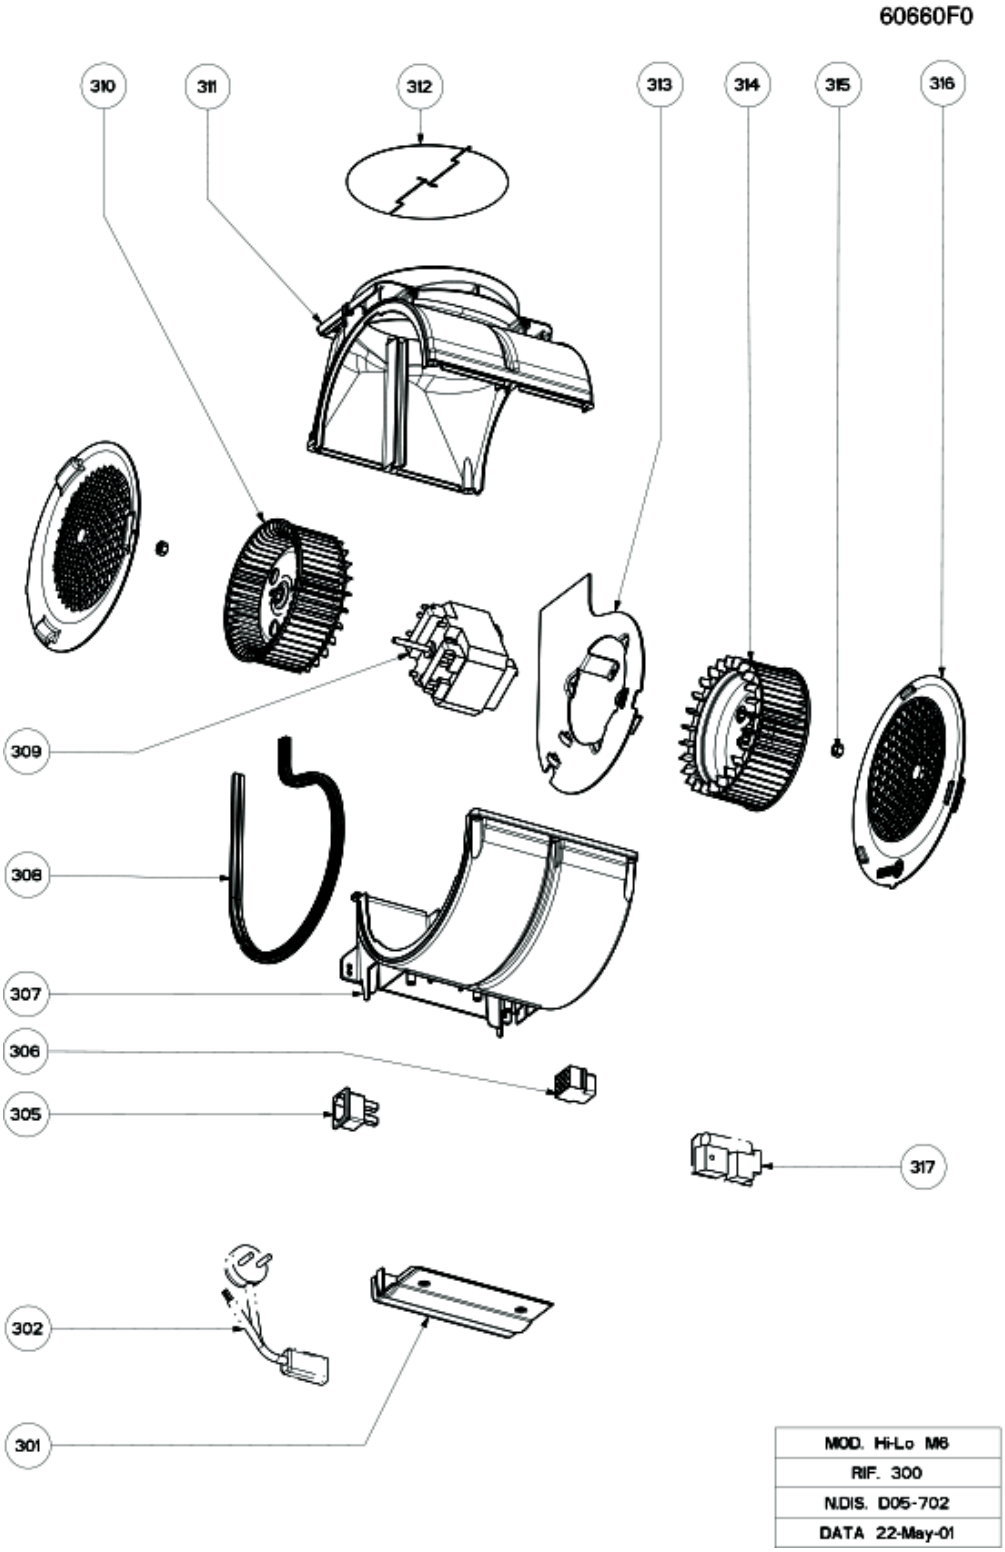


60660f0 Spare parts list


Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
300	C00085196				assembly motor##		
301	C00085091				cover		
305	C00085144				connection sts 240 a1		
306	C00085095				female connect.		
307	C00085096				motor ducting		
308	C00085145				gasket		
309	C00077476				motore 6/40ka 220-240 v61 cl.f		
310	C00058238				impellor sx		
311	C00085099				motor ducting		
313	C00085146				motor support		
314	C00058237				impellor dx		
315	C00014076				impellor fastening nut		
316	C00085101				spigot		
317	C00079422				subassieme gr6		

Electric schemes and links

Cod. se093200

SE093200

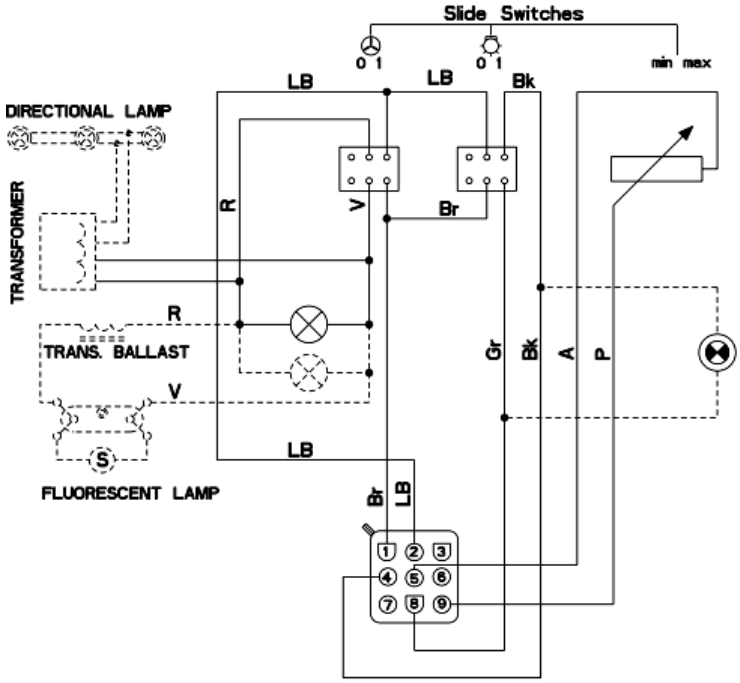

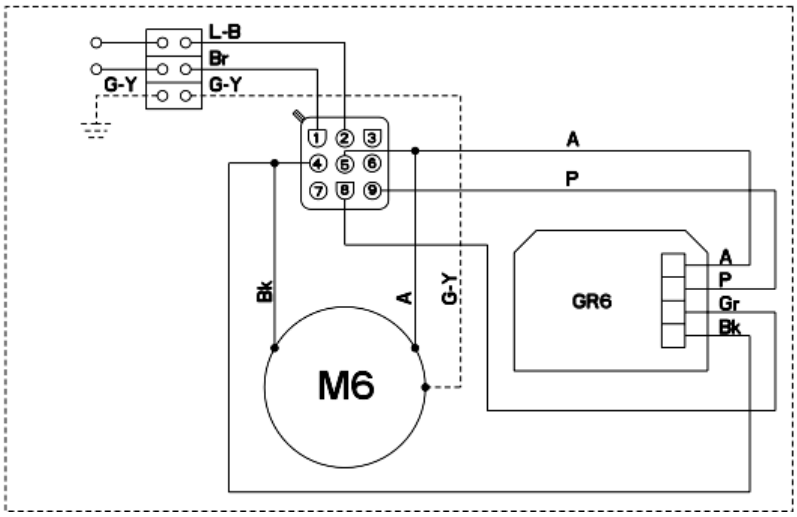

Legend

Legend: se093200

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element