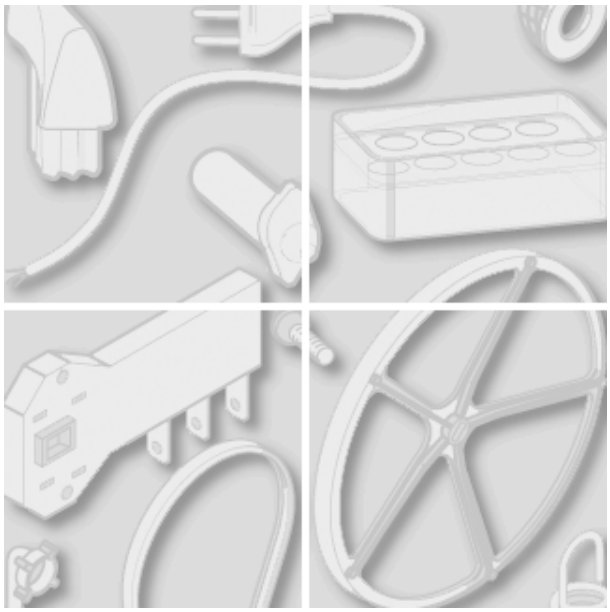


Model type:
WL36A/HA

Commercial code:
F078418

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes


52110Q8 Exploded views

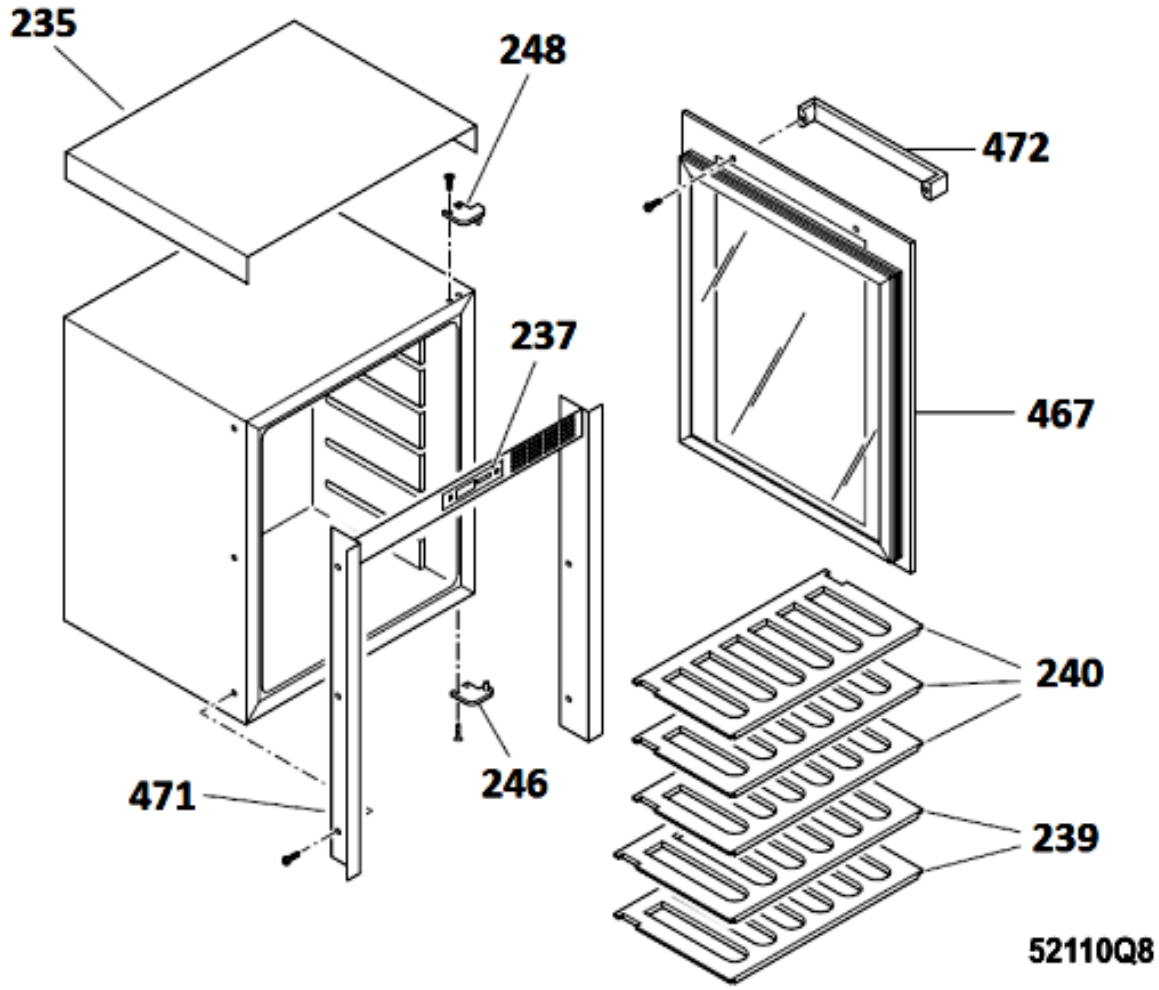

52110Q8 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
235	C00140871				table top		
237	C00140858				template commandos display		
239	C00140852				lower shelf		
240	C00140853				upper shelf		
246	C00140862				lower hinge		
248	C00140864				upper hinge		
467	C00288914				door glass hotpoint/ariston luce		
471	C00289045				side support - lateral		
472	C00285212				door handle ix luce 2010		
999	C00277511				stop door		

52112U2 Exploded views

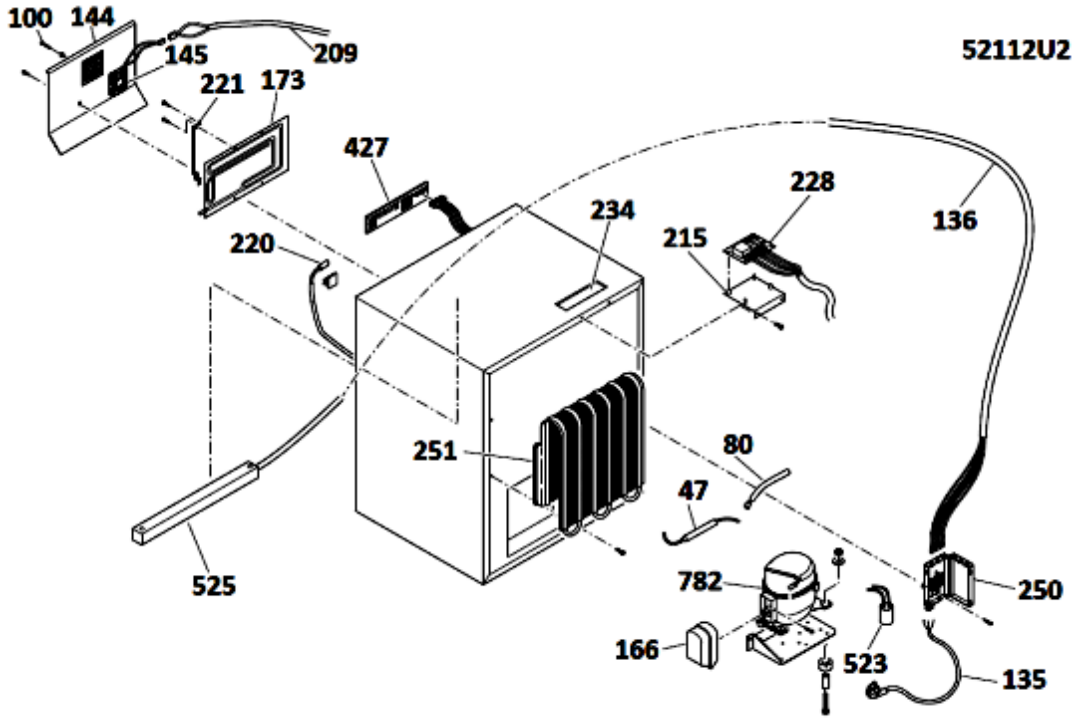


52112U2 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
047	C00295400				filter		
100	C00141065				rivetto 22x5		
135	C00008598				mains supply cable 3x0,75		
136	C00140856				wiring		
144	C00140847				panel evaporator		
145	C00140848				inner fan		
166	C00141053				starter compressortl35g 220-		
173	C00141054				evaporator		
209	C00140849				wiring fan		
215	C00140857				flange card electronics		
220	C00141058				temperature sensor		
221	C00141059				fitting flange		
228	C00295399			1 x C00280278	pcb main as 220v		
234	C00140850				outdoor fan		
250	C00140869				terminal block		
251	C00140870				condenser imat		
427	C00280277				pcb thermostat 1-sensor		
523	C00277785				run capacitor 2mf-p2		
525	C00295398				lamp cover		
782	C00295412				compressor dlx4kk.1 r600a 220-		

Electric schemes and links

Cod. END5219990

WIRING DIAGRAM WINE CELLAR
WZ36 - BC24XNA-WC24XNA Ariston
WE26 - Hotpoint
XV36 - ScholtŁs

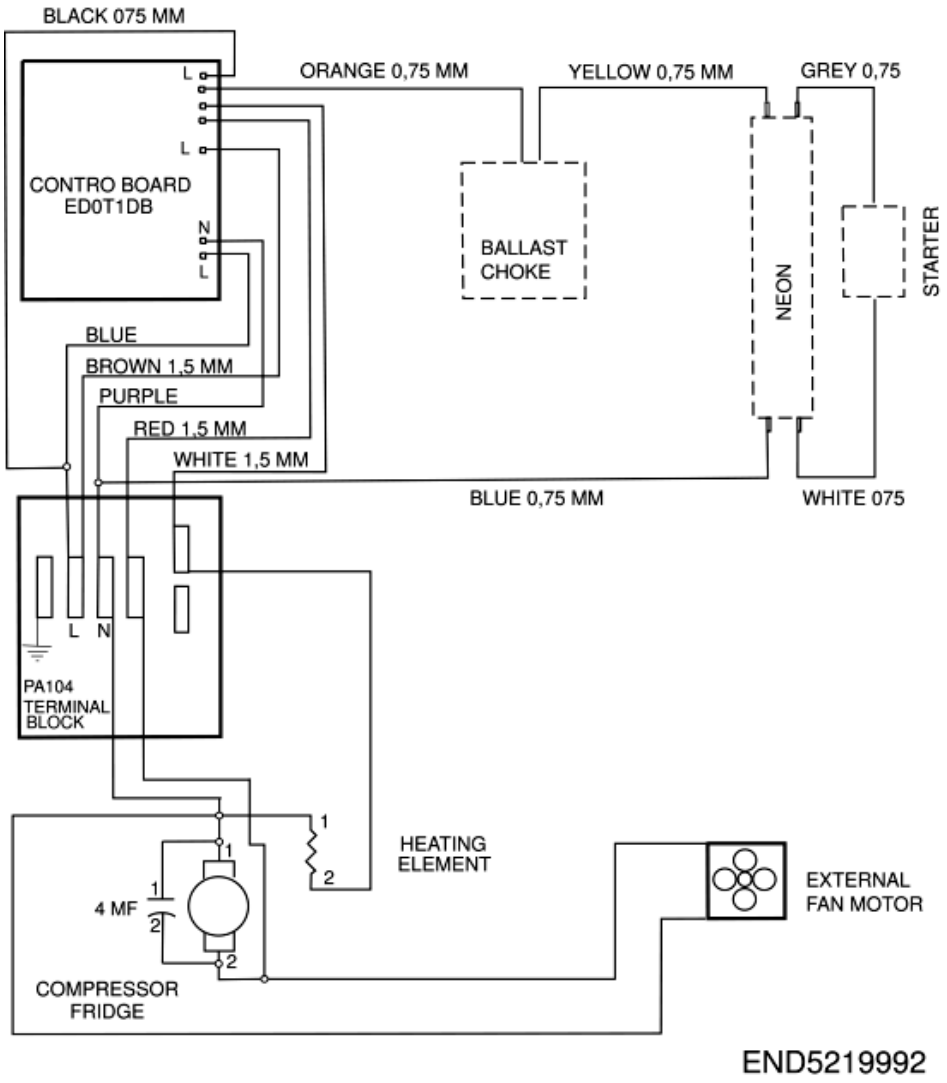

Legend

Legend: END5219990