
INDESIT company

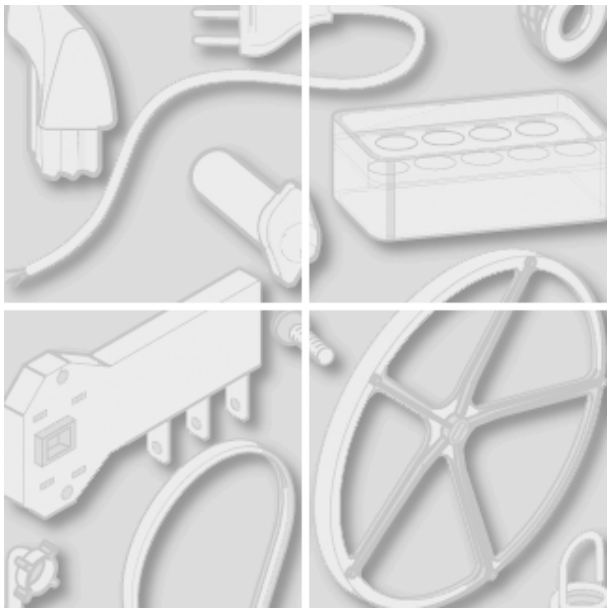

Model type:
HES90IX

Commercial code:
F038742

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1829 Exploded views

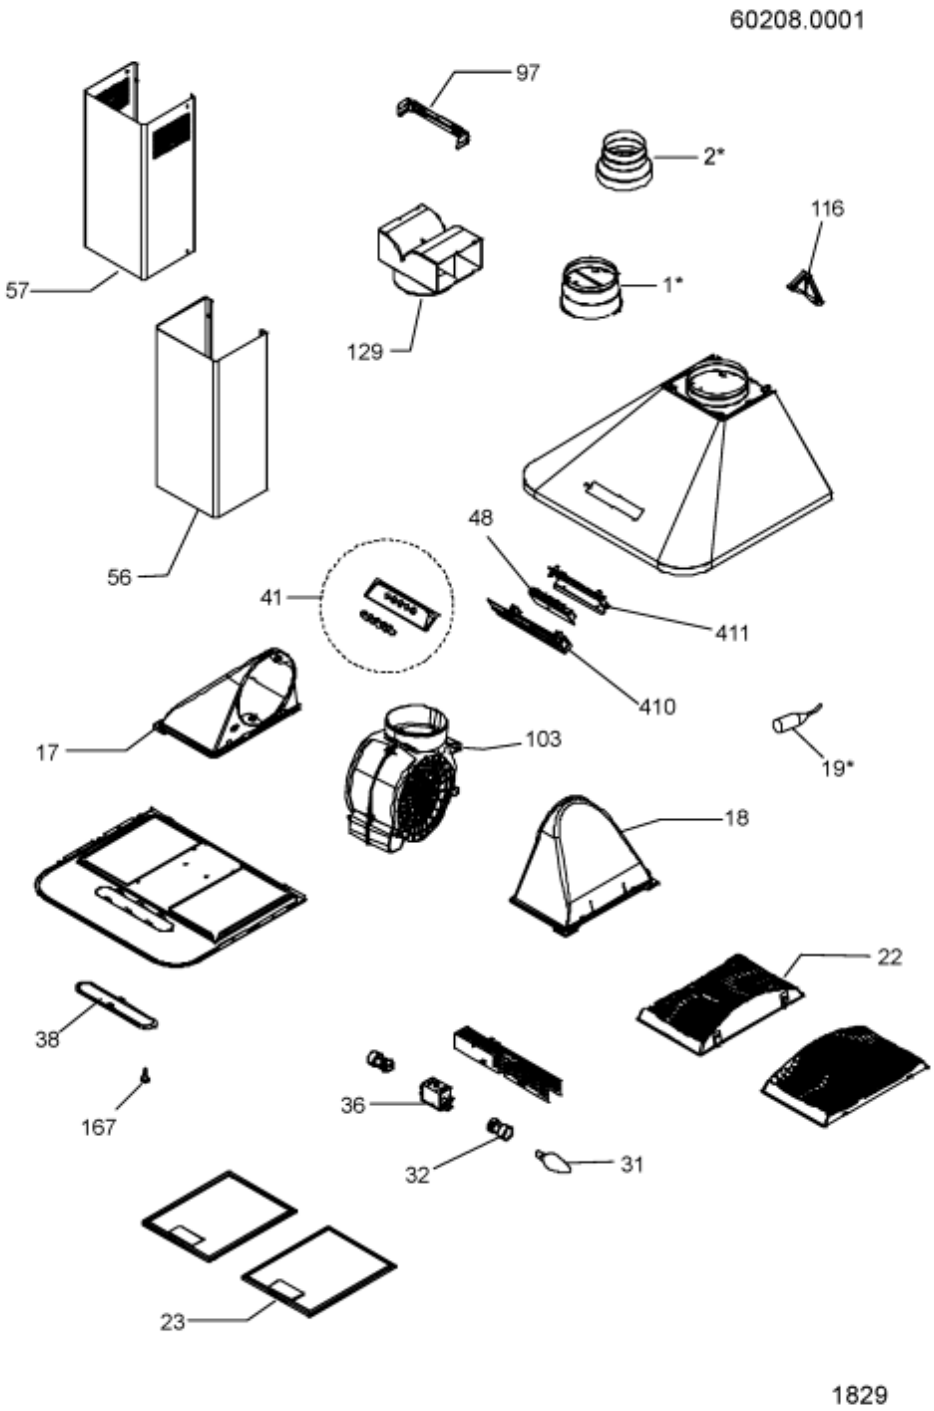


1829 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00143272				instruction book		
002	C00137578			1 x C00242863	pipe reduction (ix) 150/120mm		
017	C00143262				suction compressor left		
018	C00143261				suction compressor right		
019	C00090176			1 x C00255895	condenser 5mf		
022	C00142343			1 x C00094554	carbon filter qty 2		
023	C00136541			1 x C00280008	grease filter		
031	C00131593			1 x C00292492	lamp 40w 240v		
032	C00135455				lamp holder		
036	C00143263			1 x C00295808	support lamp socket		
038	C00143264				light diffuser 290x54		
041	C00143265				control box c/w buttons hes60		
048	C00097979				electronic board (ck)		
056	C00143266				fixed part ix		
057	C00143267				chimney upper ix		
097	C00119481				support chimney lower		
103	C00143393				assembly motor		
116	C00143269				hood securing brachet		
129	C00098448				filtering connection tamaya hp pp		
167	C00135447			1 x C00242489	clip		
410	C00143270				control box		
411	C00143271				cover box comand		

Electric schemes and links

Cod. se1JHA

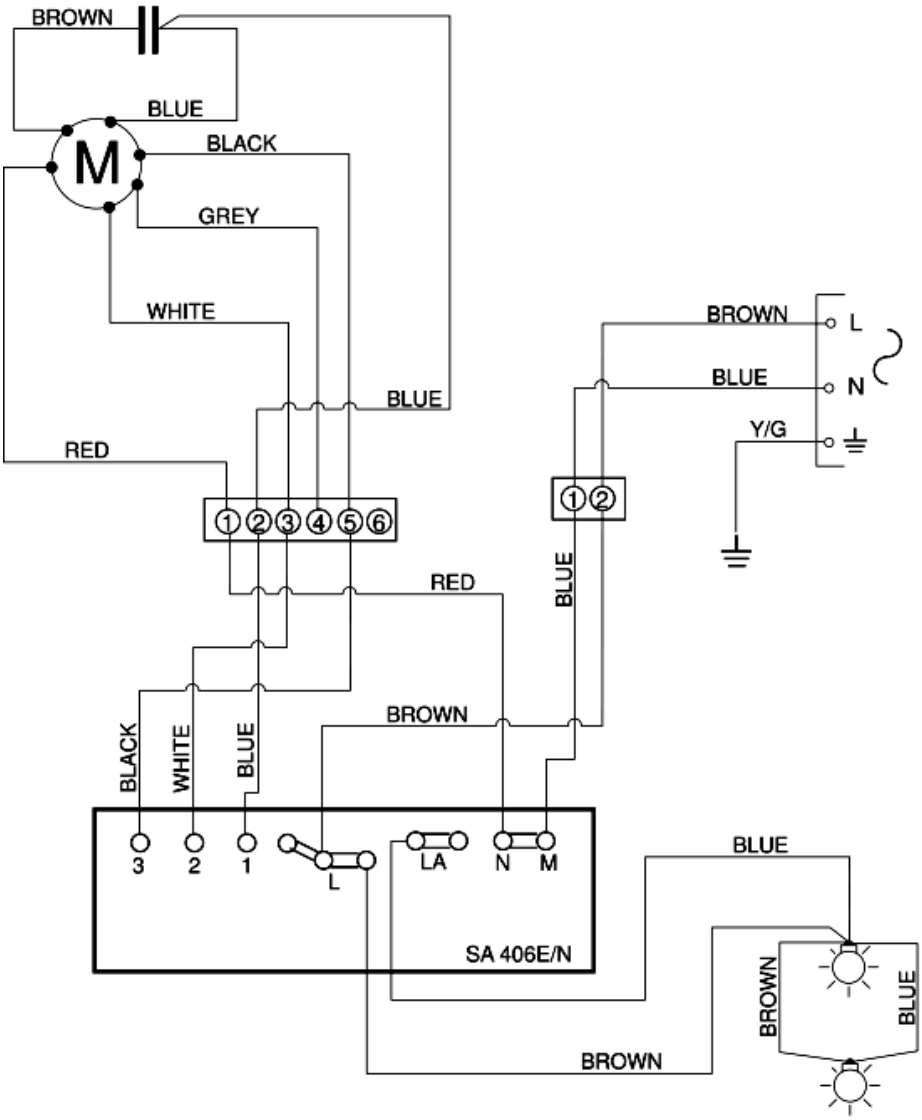

se1JHA

Legend

Legend: se1JHA

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element