
INDESIT company

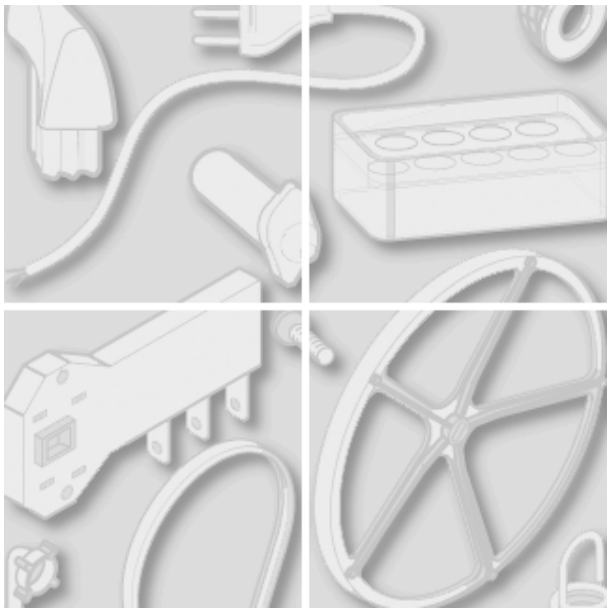

Model type:

TQ640S(BK)IX/HA

Commercial code:

F053228

# General notes

## Technical Documentation guidelines

---

---

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

4230530 Exploded views

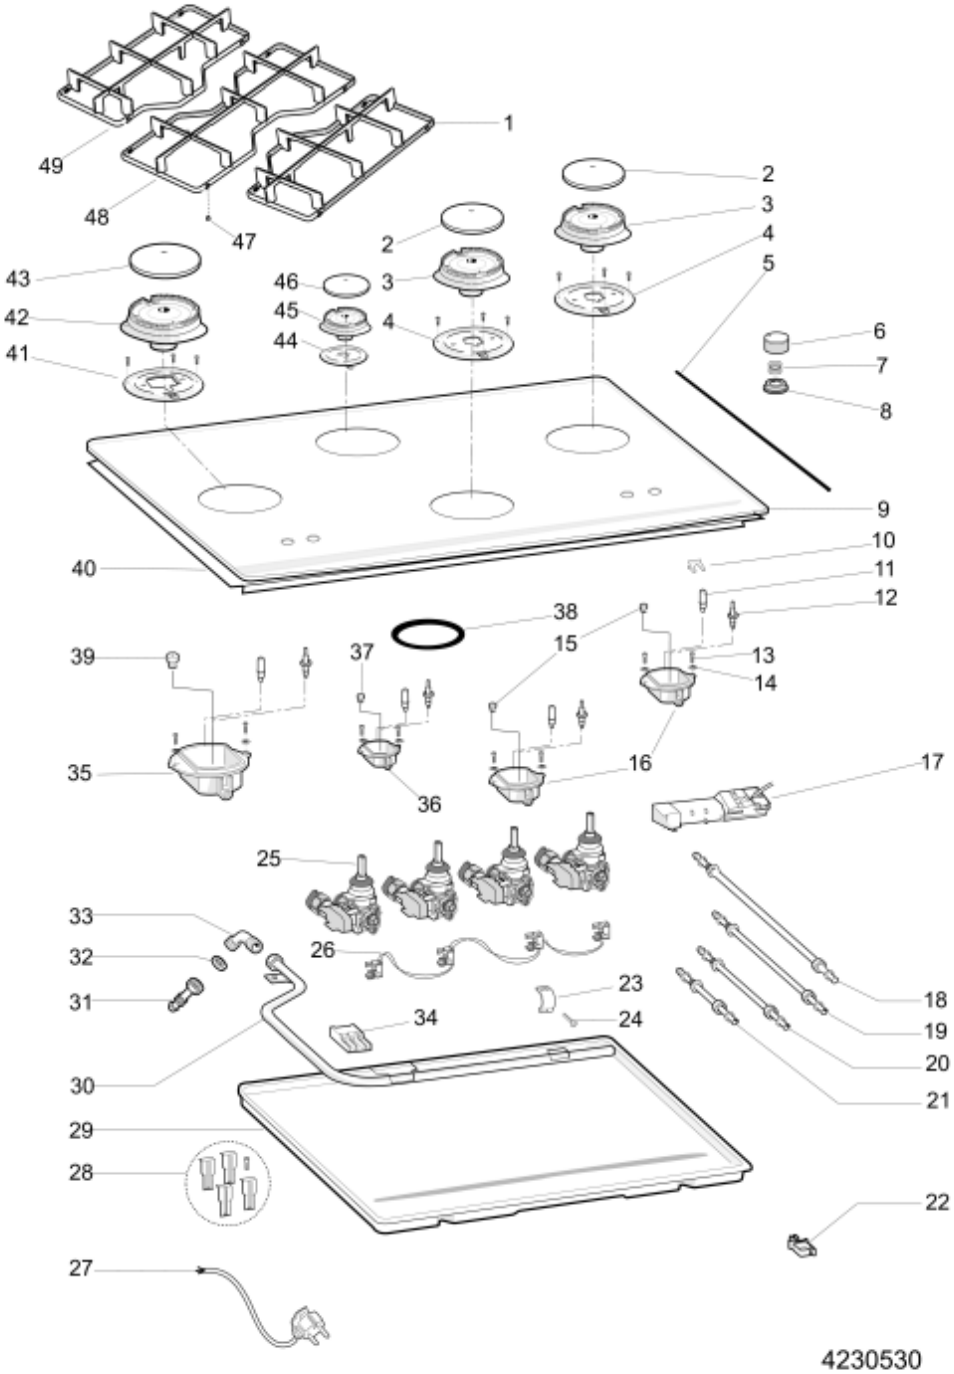

4230530 Spare parts list


| Ref. | Code | From | To S/N | Substitute | Description | Notice | Industrial |
|---|---|---|---|---|---|---|---|
| 000 | C00260572 | | | | user booklet it-gb-fr-nl-es | | |
| 000 | C00260573 | | | | user booklet pt-de | | |
| 001 | C00260747 | | | | grid for 2 burners right bk | | |
| 002 | C00052932 | | | | burner cap semi rapide | | |
| 003 | C00136244 | | | | flame splitter medium | | |
| 004 | C00260735 | | | | burner support semiifast bk exp | | |
| 005 | C00063701 | | | | seal-hob/worktop | | |
| 006 | C00260730 | | | | knob gas tq6-7 bk 6mm | | |
| 007 | C00016035 | | | | control knob disc spring | | |
| 008 | C00260732 | | | | knob disc bk | | |
| 009 | C00260744 | | | | working table glass tq640 (bk) | | |
| 010 | C00052934 | | | | electrode clip | | |
| 011 | C00118496 | | | 1 x C00052951 | electrode l=520 | | |
| 012 | C00052986 | | | | thermocouple ** not for triple | | |
| 012 | C00093834 | | | | screw nut m6 | | |
| 013 | C00052960 | | | | burner fixing screw (stainless | | |
| 014 | C00063709 | | | | washer | | |
| 015 | C00052938 | | | | gas jet 64 lpg - medium burner | | |
| 015 | C00052941 | | | | natural gas jet (96) | | |
| 016 | C00052926 | | | | burner cup - medium burner | | |
| 017 | C00095359 | | | | ignition transformer | | |
| 018 | C00141846 | | | | pipe semifast rh - tap | | |
| 019 | C00141757 | | | | pipe semifast- tap | | |
| 020 | C00141758 | | | | burner supply pipe aux | | |
| 021 | C00141756 | | | | front left burner supply pipe | | |
| 022 | C00280173 | | | | junction clamp richco | | |
| 023 | C00260792 | | | | tap fixing plate | | |
| 024 | C00064912 | | | | screw m4x18 tsp nikelata | | |
| 024 | C00111239 | | | | screw m4x17tsp zinc | | |
| 025 | C00111240 | | | | gas tap medium/auxiliary copreci | | |
| 025 | C00111241 | | | | gas tap large copreci | | |
| 026 | C00111235 | | | | microswitch ring | | |
| 026 | C00143913 | | | | ignition microswitch (4) copreci | | |
| 027 | C00035727 | | | 1 x C00276836 | mains supply cable 3x2,5 | | |
| 028 | C00052952 | | | | clamp kit - hob/worktop | | |

4230530 Spare parts list

| Ref. | Code | From | To S/N | Substitute | Description | Notice | Industrial |
|---|---|---|---|---|---|---|---|
| 029 | C00260566 | | | | base cover td-tq640 | | |
| 030 | C00141761 | | | | gas pipe pz640 | | |
| 032 | C00010506 | | | | sealing washer - gas elbow/pipe | | |
| 033 | C00024370 | | | | elbow connection (1/2 male x 2)- | | |
| 034 | C00297837 | | | | terminal block 5 f.+cavo 6a | | |
| 035 | C00052925 | | | | burner cup - large burner | | |
| 036 | C00052927 | | | | burner cup - small burner | | |
| 037 | C00052939 | | | | gas jet 50 lpg - small burner | | |
| 037 | C00066166 | | | | nat gas aux. burner nozzle rapido | | |
| 038 | C00260739 | | | 1 x C00096132 | gasket d=153,48 | | |
| 039 | C00052937 | | | | gas jet 86 lpg - large burner | | |
| 039 | C00052940 | | | | gas jet 116 ng large burner | | |
| 040 | C00260636 | | | | burners support | | |
| 041 | C00260737 | | | | burner support fast bk exp | | |
| 042 | C00136243 | | | | flame splitter - large | | |
| 043 | C00052931 | | | | burner cap rapide (large) black | | |
| 044 | C00260734 | | | | burner support auxiliary bk exp | | |
| 045 | C00063702 | | | | burner base - auxiliary | | |
| 046 | C00052933 | | | | burner cap auxiliary (small) black | | |
| 047 | C00039148 | | | | rubber buffer for pan support | | |
| 048 | C00260749 | | | | pan grid (centre) black | | |
| 049 | C00260748 | | | | grid for 2 burners left bk | | |
| 099 | C00142729 | | | 1 x C00142145 | self-tapping screw 8spx6,35t1/2tz | | |

Electric schemes and links

Cod. 16001636200

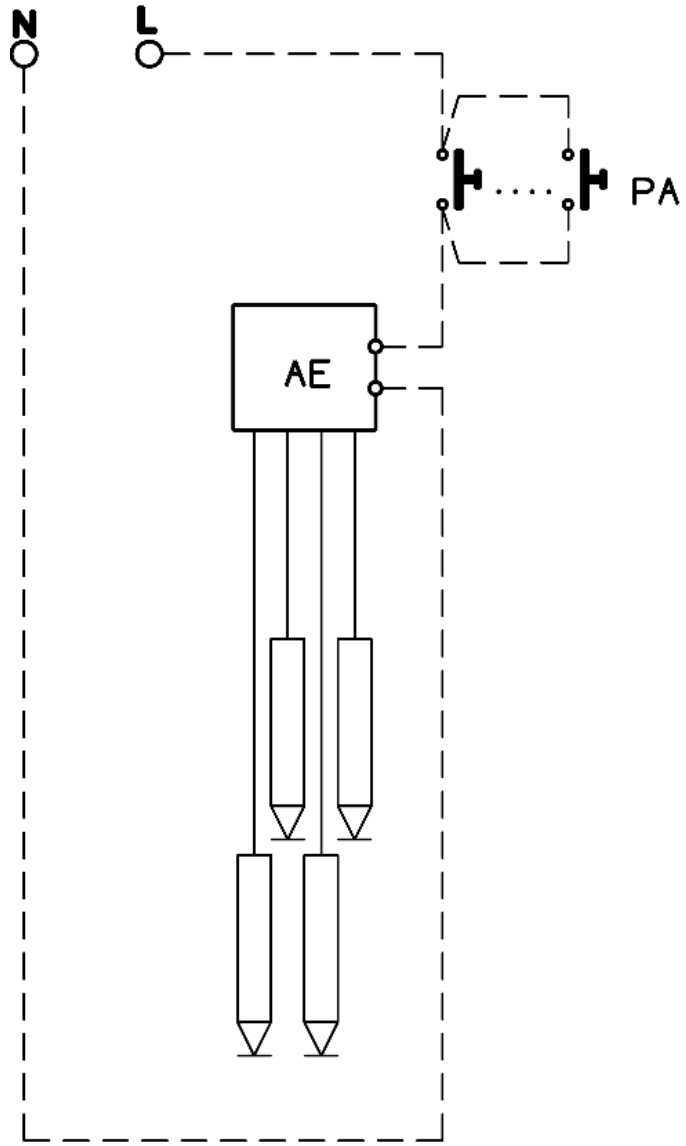


se16001636200

# Legend

Legend: 16001636200

| | | | |
|---|---|---|---|
| AE | Ignition transformer | PE | Plate electric (Normal and Rapid) |
| AT | Ignition transformer | PEL | Wall socket |
| CF | Oven commutator | PIF | Cooking programmer |
| CP | Plate commutator(Normal end Rapid) | POT | Thermostated potentiometer |
| CT | Plate commutator(Automatic) | PT | Termoprotector |
| DC DR | Double Knob double crown burner control card | PTC | Thermostated sensor |
| EV | Electro-Valve | RCE | Grill heating element ex- ternal |
| FC | End of cooking programmer | RCI | Grill heating element internal |
| FRONT | Daschboard | RE | Energy regulator |
| I/LF | OVEN LIGHT SWITCH | RF | Oven lower heating element |
| I/LF-MG | OVEN LIGHT SWITCH + ROTISSERIE | RG | Grill heating element |
| I/MG | TURNSPIT SWITCH | RG COM | Grill heating element un- ion |
| IL | Knobs' Lighting | RV | Heating element ventilated oven |
| ILG | Lamp switch turnspit | SA | Boiler operating led |
| IT | Thermostated switch | SB | Thermostated burner led |
| L | Line (Feed) | SF | Warning light working |
| LF | Oven light | SO | Probe temperature |
| LI | Oven light | SP | Operating Indicator Light for the Plate |
| M | Suction motor handle | ST | Warning light thermostat |
| MG | Turnspit motor | TH | Thermostat fixed |
| MO | Terminal board | TH2 | Thermostated burner cooling |
| MUFF | Oven | THR | Adjustable thermostat |
| MV | Fan motor | TP | Termoprotector |
| N | Neutral (Feed) | TRAV | Support terminal board |
| PA | Ignition push-button | TRM | Thermostated burner control card |