
INDESIT company

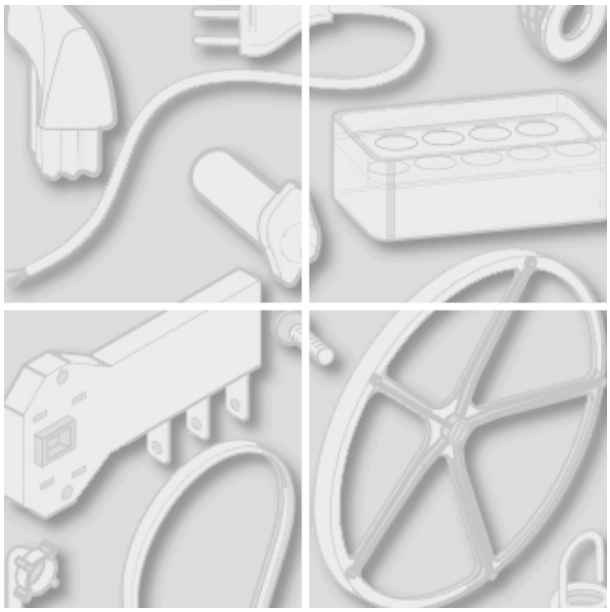

Model type:
AGMIX/HA

Commercial code:
F050141

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1604A Exploded views

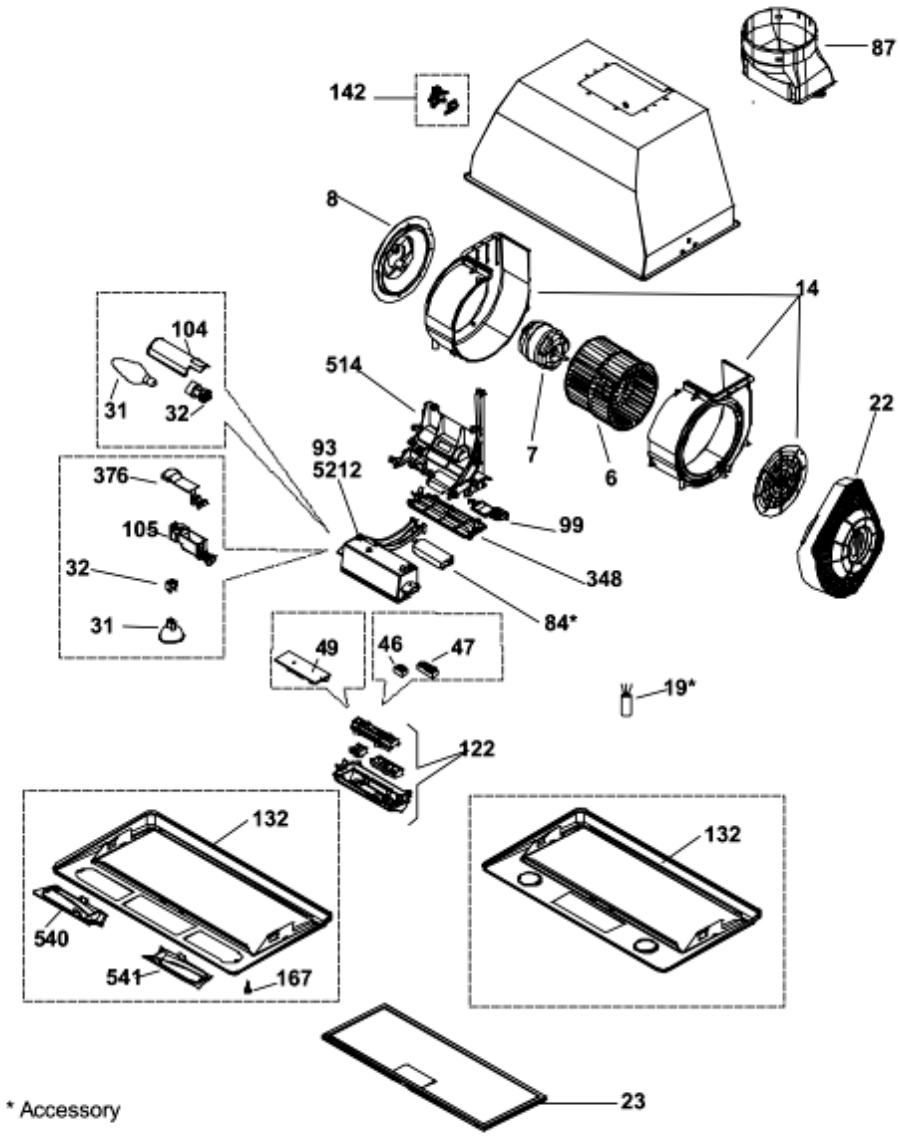


1604A Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00098917				user instruc. book it-gb-fr-es-pt-nl-		
006	C00134809			1 x C00242767	motor propeller		
007	C00136544				motor		
008	C00138711			1 x C00242762	motor support		
014	C00134811			1 x C00242824	conveyor		
019	C00126362				condenser		
022	C00098725			1 x C00090710	carbon filter 15920		
023	C00098726				grease filter		
031	C00135593			1 x C00126393	halogen lamp 20w / 12v		
032	C00135594				lamp bushing		
046	C00135642				lamp switch		
047	C00135643				fan motor speed - switch		
084	C00096871				transformer		
087	C00135115				drain coupling		
093	C00098727				controls supporting cr		
099	C00098728				power supply protection		
105	C00098729				bushing support		
122	C00256810				control panel ag2m ha		
132	C00098733				frame ix		
142	C00098915				hook frame		
348	C00098735				top cover electrical equipment box		
376	C00098736				cover support lamp holder		
514	C00142193				capacitor box		

Electric schemes and links

Cod. se1EVA

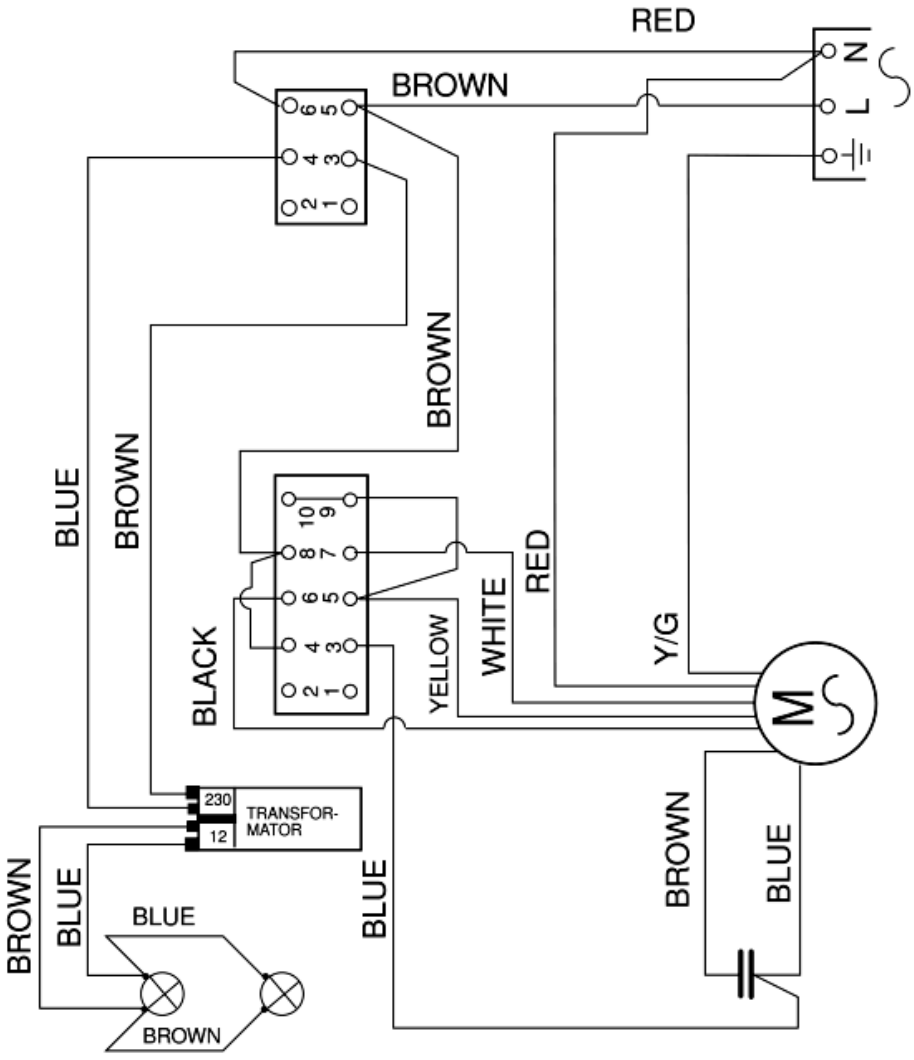

se1EVA

Legend

Legend: se1EVA

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element