
INDESIT company

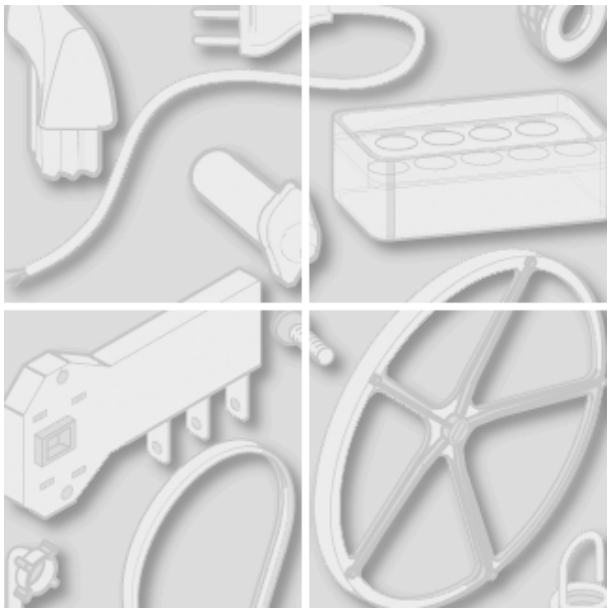

Model type:
FM10(BK)

Commercial code:
F023831

# General notes

## Technical Documentation guidelines

---

---

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes


4141010 Exploded views

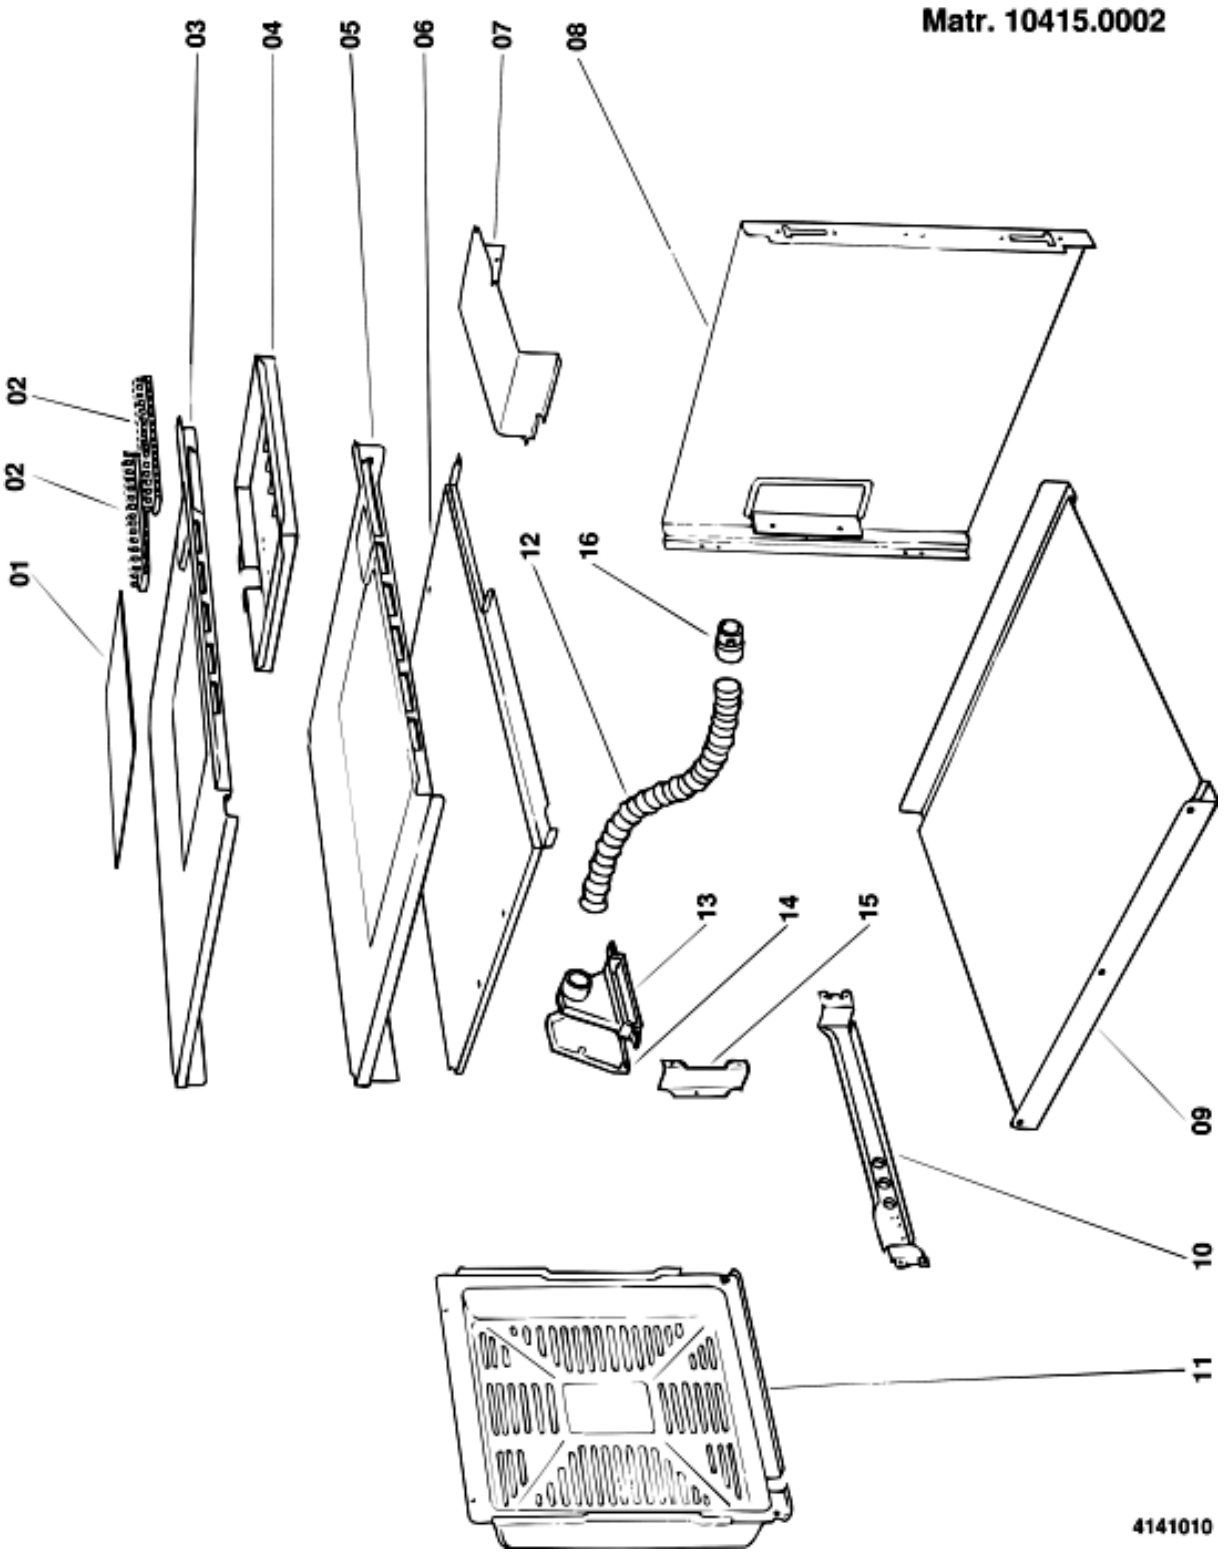

4141010 Spare parts list

| Ref. | Code | From | To S/N | Substitute | Description | Notice | Industrial |
|---|---|---|---|---|---|---|---|
| 000 | C00049374 | | | | user instruction book fm1 giugiaro | | |
| 005 | C00028025 (482000063866) | | | | oven top cover | | |
| 008 | C00022146 | | | | access cover - side panel | | |
| 008 | C00048091 | | | | oven side panel lh (fixed pivot) | | |
| 008 | C00048092 | | | | oven side panel rh (fixed pivot) | | |
| 009 | C00022148 | | | | oven bottom cover | | |
| 011 | C00048011 (482000074375) | | | | outer back oven cover | | |

4141110 Exploded views

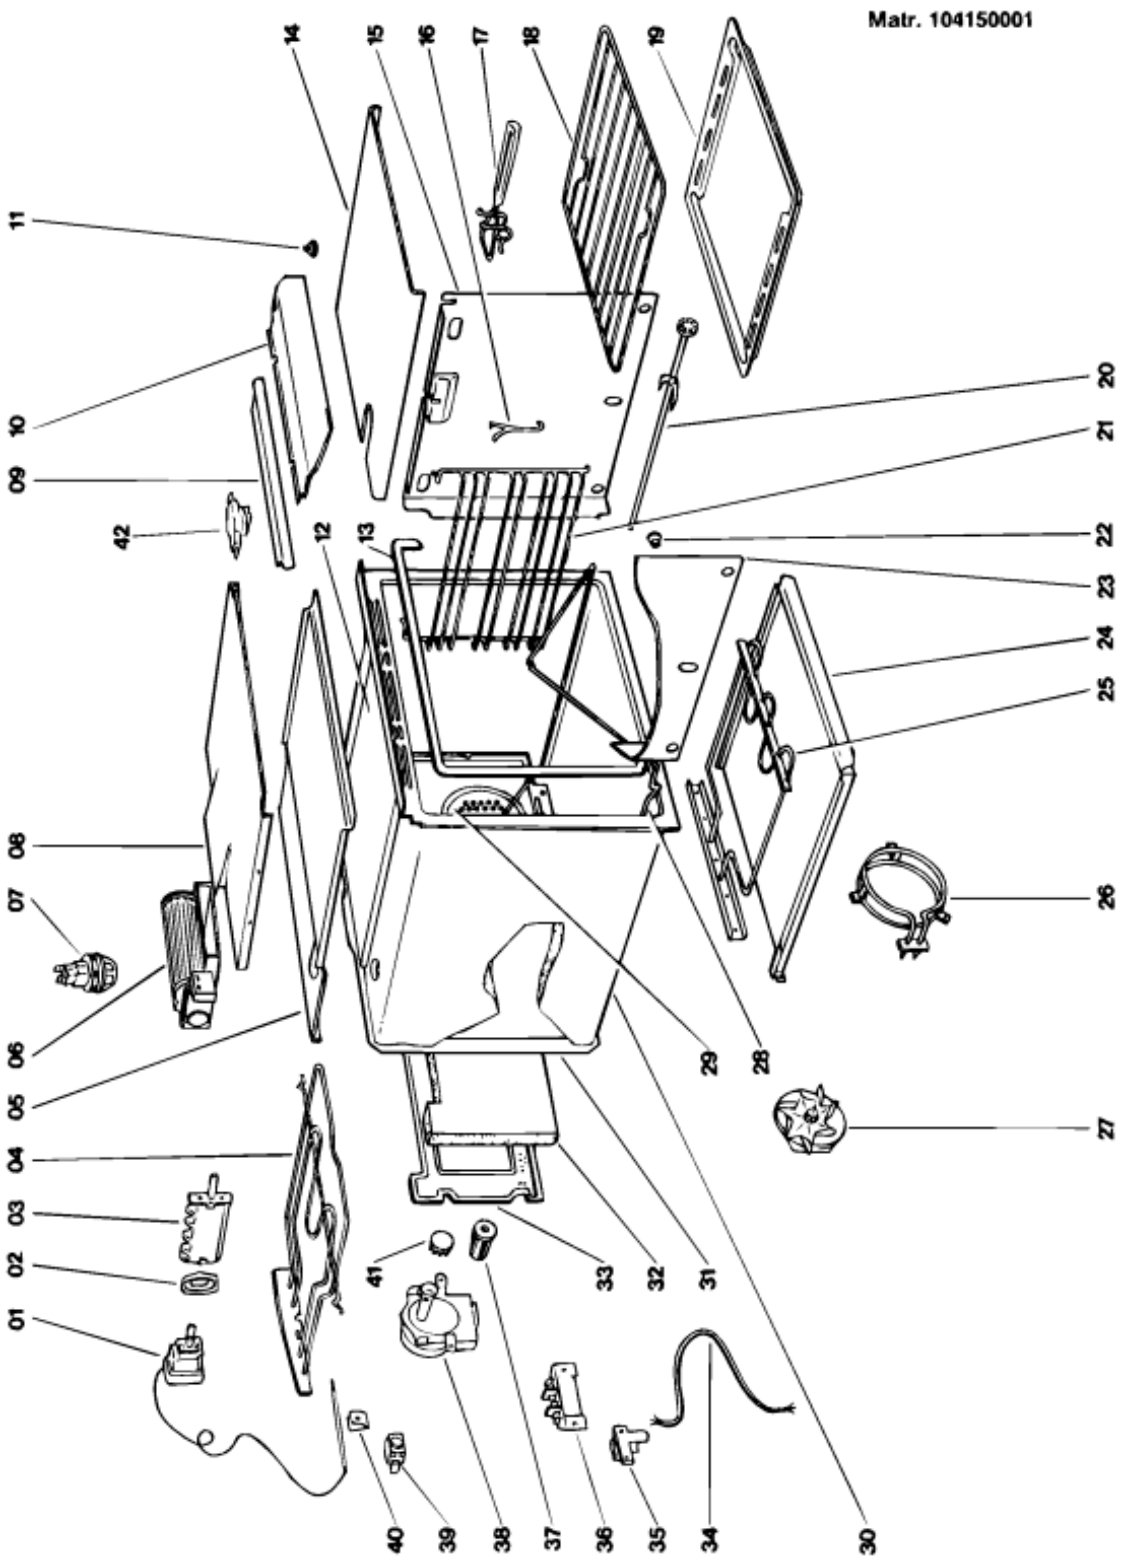


4141110 Spare parts list

| Ref. | Code | From | To S/N | Substitute | Description | Notice | Industrial |
|---|---|---|---|---|---|---|---|
| 001 | C00011573 (482000072653) | | | 1 x C00297891 (482000032134) | oven thermostat | | |
| 003 | C00033977 (482000026263) | | | | oven function switch (5 position) | | |
| 004 | C00039574 (482000022613) | | | 1 x C00525932 (488000525932) | upper element oven/grill 1+1,2kw | | |
| 007 | C00015910 (482000025965) | | | | oven lamp e14 220v 15w | | |
| 007 | C00038035 (482000026352) | | | | oven lamp assembly | | |
| 012 | C00017227 | | | | oven insulation mat - top | | |
| 013 | C00027982 (482000022590) | | | | oven door seal- 4 sides brown | | |
| 018 | C00030161 (482000026148) | | | | oven grate 30mm wires | | |
| 019 | C00031422 (482000052617) | | | | drip tray - black enamelled | | |
| 024 | C00016423 (482000025972) | | | | ducting - lower heating element | | |
| 025 | C00016435 (482000025973) | | | | heating element - oven bottom 1000w | | |
| 027 | C00016057 (482000025968) | | | | fan motor-(cooking) 220v/240v 50hz 25watt | | |
| 029 | C00033403 (482000063083) | | | | oven back panel (inner) enamelled | | |
| 030 | C00033953 (482000073479) | | | | oven insulation - sides | | |
| 031 | C00049034 | | | | oven chamber mult.ful.fiss. | | |
| 032 | C00066621 | | | | back insulating material oven | | |
| 033 | C00016108 (482000063939) | | | | oven outer back panel | | |
| 034 | C00026767 (482000026096) | | | | supply cable 10a 3x1 | | |

| | | | |
|---|---|---|---|
| 036 | C00039460<br>(482000026383) | | terminal block 2.pole (fastex) |
| 039 | C00028264<br>(482000026124) | | safety thermostat |
| 040 | C00039578<br>(482000022614) | | spring for thermostat bulb |
| 044 | C00038914<br>(482000054451) | 1 x C00280851<br>(482000031488) | fixing plate for self-tapping screw 8p |
| 045 | C00011116<br>(482000072646) | | screw self-tapping black 8pt |

4141210 Exploded views

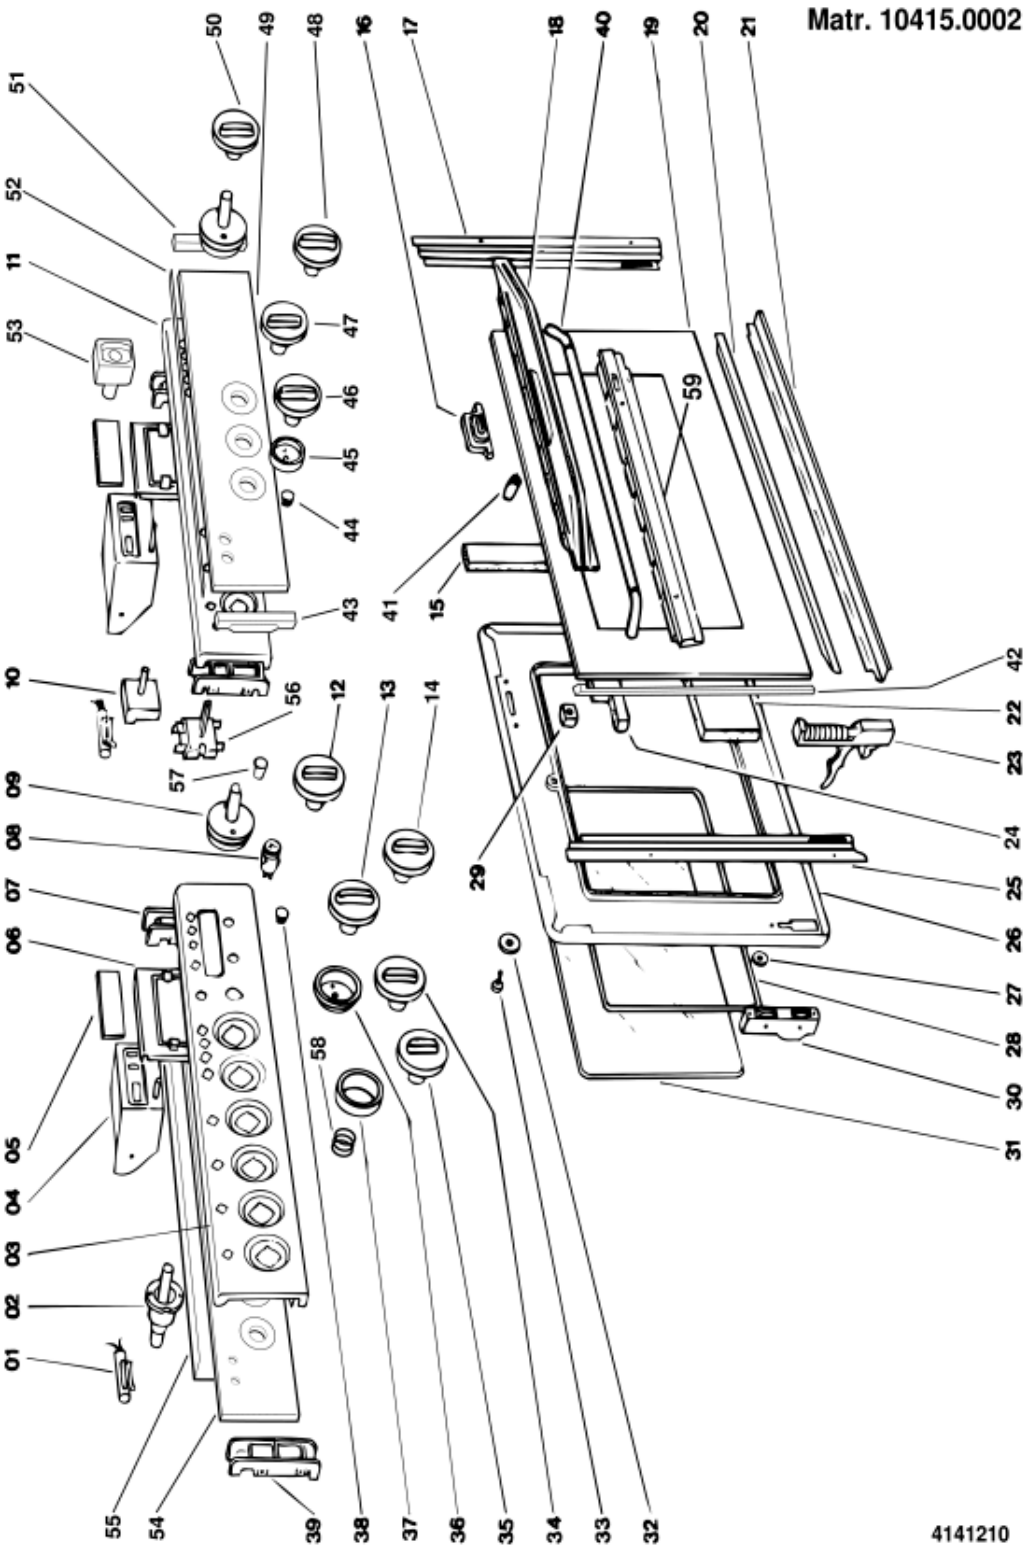

4141210 Spare parts list

| Ref. | Code | From | To S/N | Substitute | Description | Notice | Industrial |
|---|---|---|---|---|---|---|---|
| 001 | C00028054 (482000026120) | | | | pilot light red cod everel sx27mr2e30137 | | |
| 003 | C00075059 | | | | black dashboard fm10 | | |
| 007 | C00048628 (482000074423) | | | | control panel support rhs giugiaro | | |
| 009 | C00052527 (482000026798) | | | | minute timer d = 6mm | | |
| 013 | C00075049 (482000027307) | | | | electric oven knob black 6mm indesit | | |
| 016 | C00075047 (482000076365) | | | | vent new indesit | | |
| 017 | C00048657 (482000057716) | | | 1 x C00049250 (482000064427) | rh front strut (fixed hinge pivot)-black | | |
| 018 | C00075026 (482000027300) | | | | oven door handle black giugiaro indesit | | |
| 019 | C00075025 (482000053987) | | | 1 x C00075701 (482000076412) | oven door glass black indesit | | |
| 019 | C00075701 (482000076412) | | | | oven door glass black indesit hgk 10 bk | | |
| 020 | C00048647 (482000074430) | | | | door lower trim (fixed hinge pivot)-black | | |
| 021 | C00048659 (482000074432) | | | | lower trim black (fixed hinge pivot) | | |
| 023 | C00048108 (482000026661) | | | | oven door hinge (fixed hinge pivot) | | |
| 025 | C00048658 (482000057717) | | | 1 x C00049250 (482000064427) | lh front strut (fixed hinge pivot) - blac | | |
| 026 | C00075046 (482000027306) | | | | oven inner-door giug.indesit+glass | | |
| 027 | C00033163 (482000026237) | | | | washer - black | | |
| 030 | C00048090 | | | | hinge support (fixed hinge pivot) | | |
| 038 | C00036428 (482000026324) | | | | pilot light lens - yellow | | |

| | | |
|---|---|---|
| 039 | C00048629<br>(482000074424) | control panel support lhs giugiaro |
| 099 | C00017240<br>(482000025977) | self-tapping screw 8px9,52 t1/2t-<br>black |
| 099 | C00033431<br>(482000026247) | screw m5 x 20 tsp black |

# Notices

## n1015015: Method to remove the external glass of the oven door.

---

On all built-in cooker and oven models, when it is necessary to remove the glass from the oven door handle (to avoid breaking the handle) the glass is not removed upwards, but should be oscillated towards the right and left until the two silicone points, that unite the glass to the handle, detach.

## n1015029: Elimination of built-in oven spacer


---

With regard to all Indesit built-in ovens from serial number 20422.0001, knob spacer code 139381 has been removed in order to improve fixing. Because of this modification, new knobs designed to be fitted without spacer have been introduced. Pre-modification knobs will continue to be stocked by the spare parts warehouse and must be fitted only with the relative spacer.
The following is a list of the various knobs identified by colour:
-076286 (brown - to be used with spacer) / 088883 new brown
-075049 (black - to be used with spacer) / 075064 new black
-075043 (white - to be used with spacer) / 075075 new white
-075060 (stainless steel - to be used with spacer) / 089440 new stainless steel

## Electric schemes and links

Cod. 414018b

| POS. | 7A/7 P2/4 | 1A/1 P3/5 | 4A/5 P1/1 | 4A/3 P1/3 | 4A/4 P1/2 | 2A/2 P4/6 | --- --- | |
|---|---|---|---|---|---|---|---|---|
| 0 | | | | | | | | 0 |
| 1 | ■ | | | | | | | |
| 2 | ■ | ■ | ■ | ■ | | | | |
| 3 | ■ | ■ | ■ | ■ | | ■ | | |
| 4 | ■ | ■ | | | ■ | | | |
| 5 | ■ | ■ | | ■ | ■ | | | |
| 6 | ■ | ■ | | ■ | ■ | ■ | | 309° 34' |

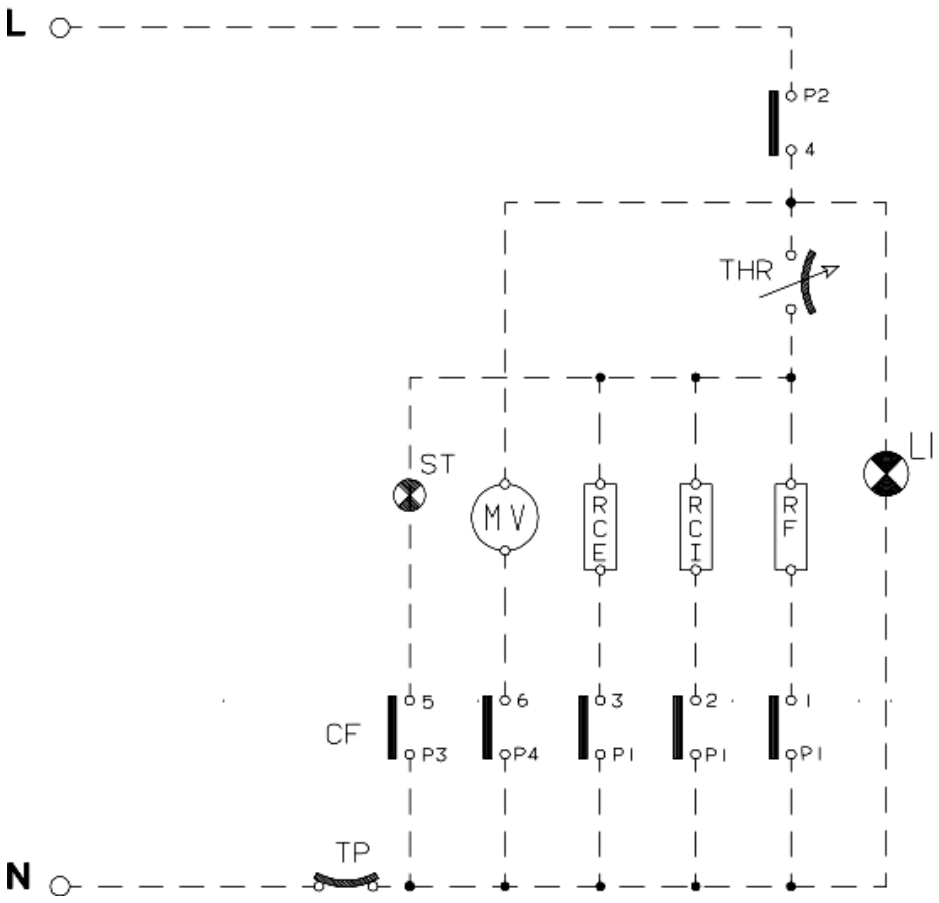

# Legend

Legend: 414018b

| | | | |
|---|---|---|---|
| AE | Ignition transformer | PE | Plate electric (Normal and Rapid) |
| AT | Ignition transformer | PEL | Wall socket |
| CF | Oven commutator | PIF | Cooking programmer |
| CP | Plate commutator(Normal end Rapid) | POT | Thermostated potentiometer |
| CT | Plate commutator(Automatic) | PT | Termoprotector |
| DC DR | Double Knob double crown burner control card | PTC | Thermostated sensor |
| EV | Electro-Valve | RCE | Grill heating element ex- ternal |
| FC | End of cooking programmer | RCI | Grill heating element internal |
| FRONT | Daschboard | RE | Energy regulator |
| I/LF | OVEN LIGHT SWITCH | RF | Oven lower heating element |
| I/LF-MG | OVEN LIGHT SWITCH + ROTISSERIE | RG | Grill heating element |
| I/MG | TURNSPIT SWITCH | RG COM | Grill heating element un- ion |
| IL | Knobs' Lighting | RV | Heating element ventilated oven |
| ILG | Lamp switch turnspit | SA | Boiler operating led |
| IT | Thermostated switch | SB | Thermostated burner led |
| L | Line (Feed) | SF | Warning light working |
| LF | Oven light | SO | Probe temperature |
| LI | Oven light | SP | Operating Indicator Light for the Plate |
| M | Suction motor handle | ST | Warning light thermostat |
| MG | Turnspit motor | TH | Thermostat fixed |
| MO | Terminal board | TH2 | Thermostated burner cooling |
| MUFF | Oven | THR | Adjustable thermostat |
| MV | Fan motor | TP | Termoprotector |
| N | Neutral (Feed) | TRAV | Support terminal board |
| PA | Ignition push-button | TRM | Thermostated burner control card |