
Exploded View


Position numbers begins with A
unless indicated with another number.

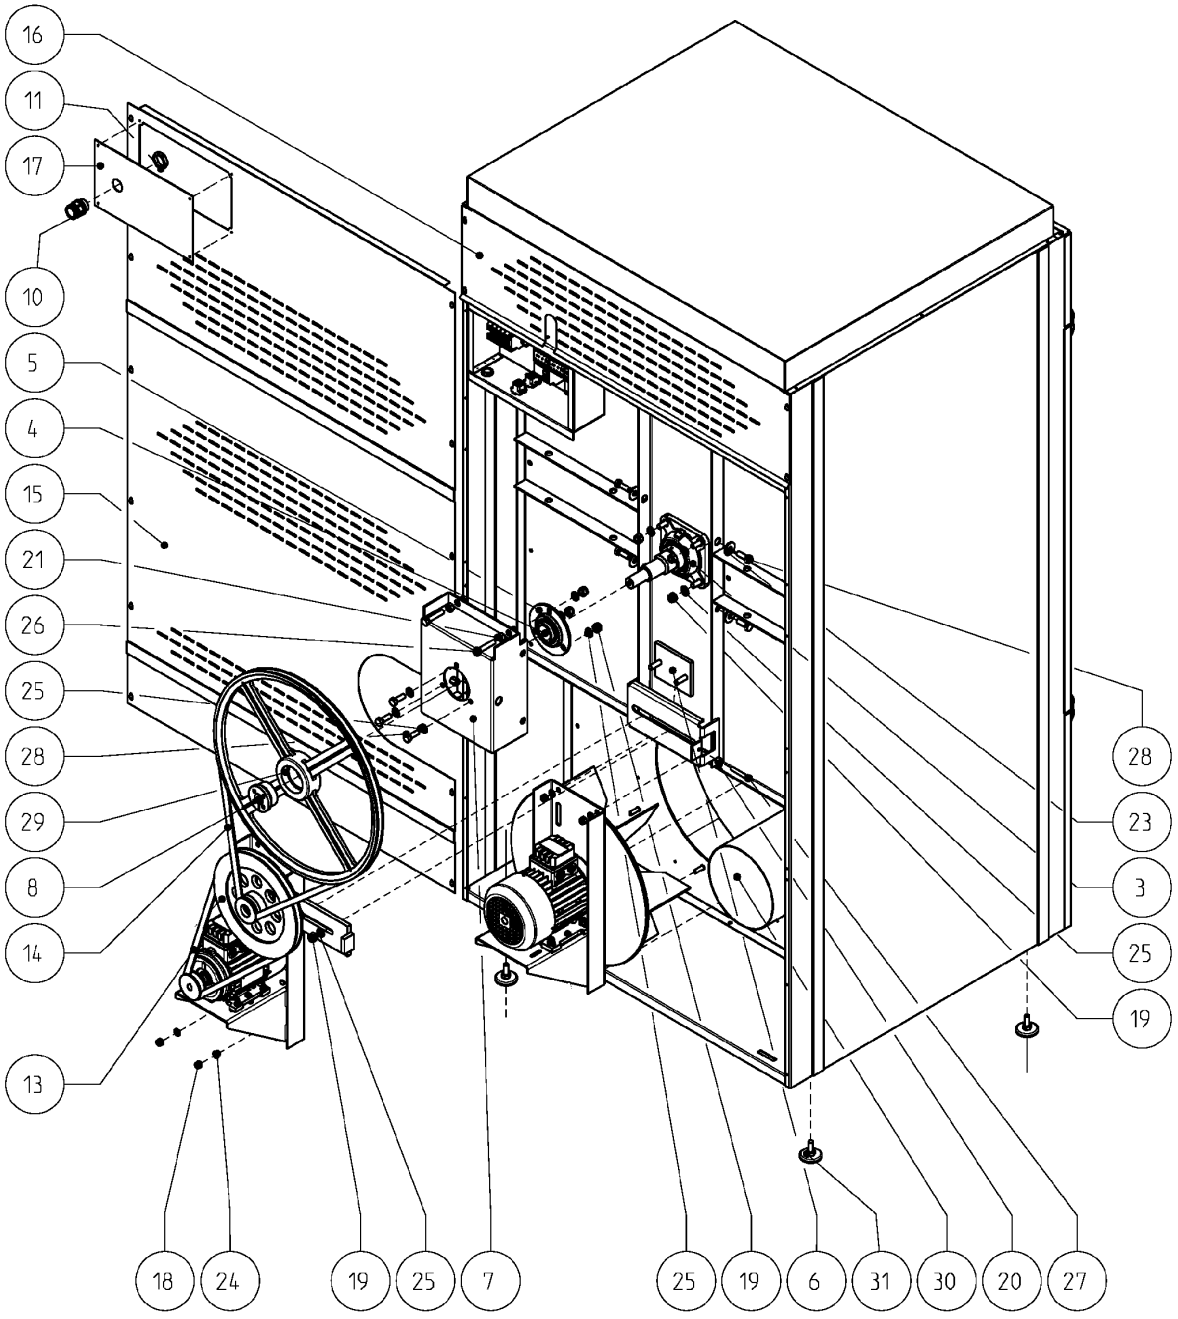

AGB264A1

Exploded View


Position numbers begins with A
unless indicated with another number.

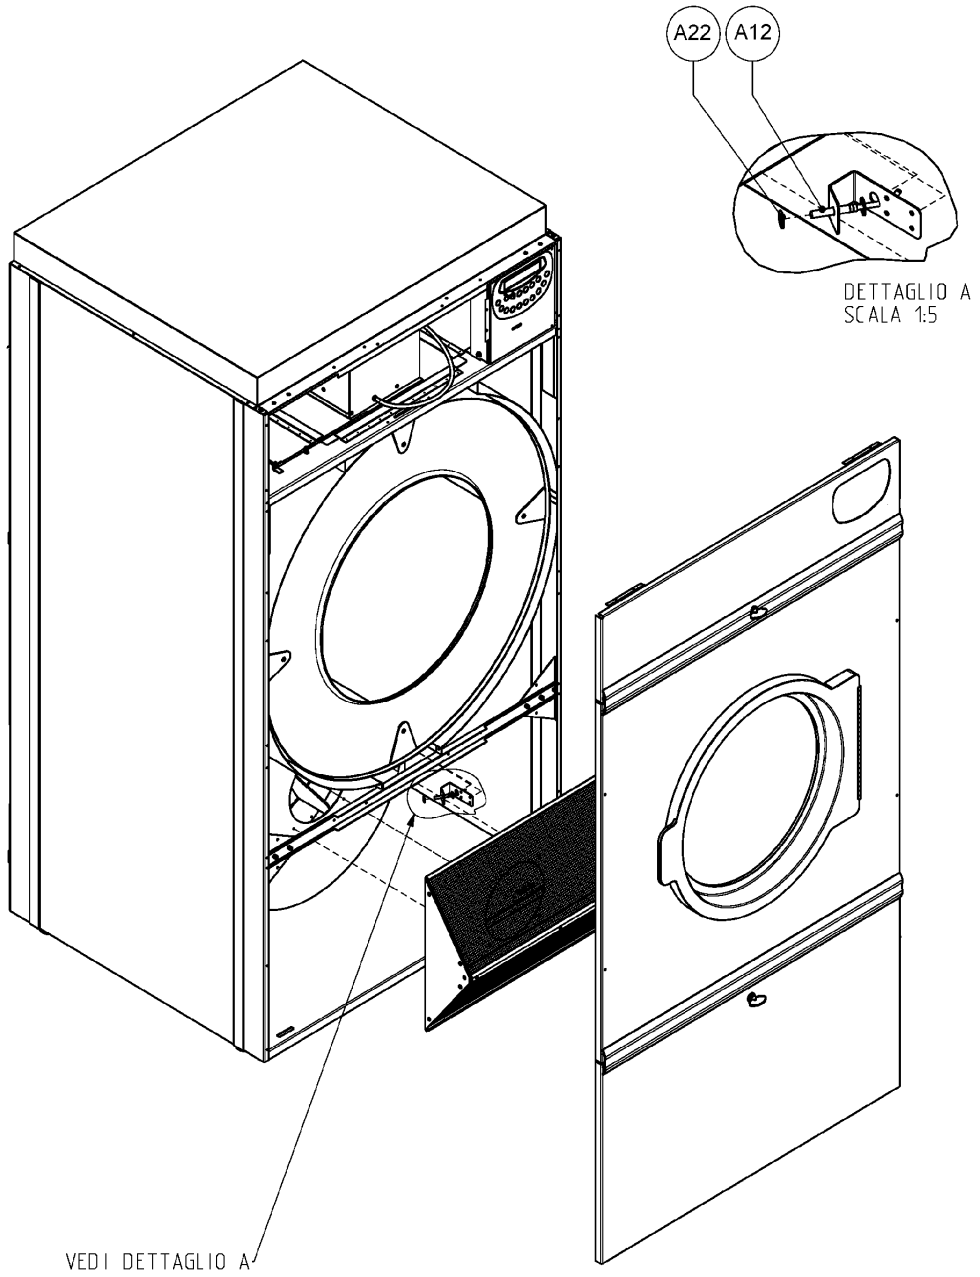

AGB264A2

Exploded View


Position numbers begins with B
unless indicated with another number.

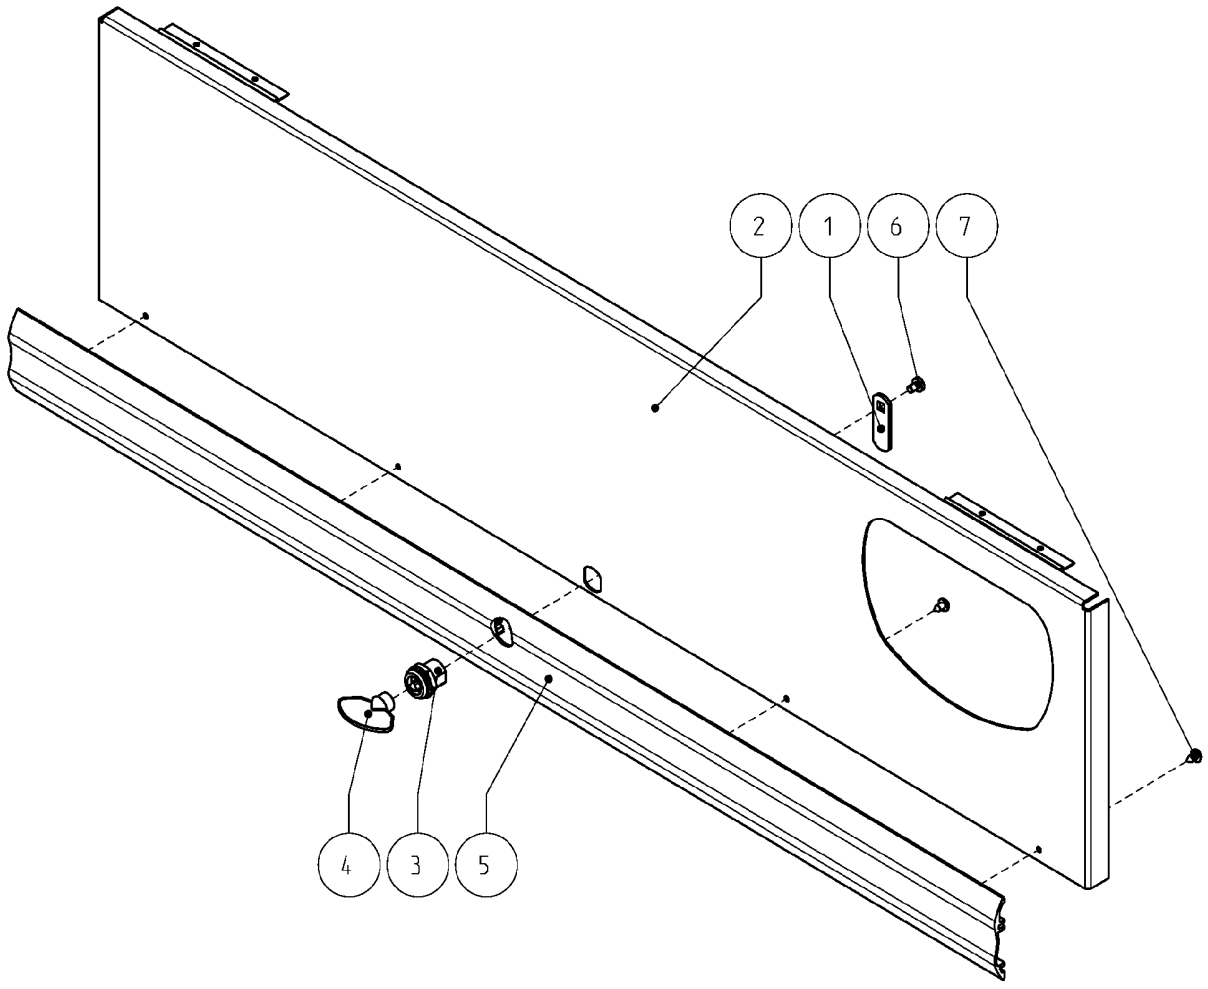

AGB264B

Exploded View


Position numbers begins with C
unless indicated with another number.

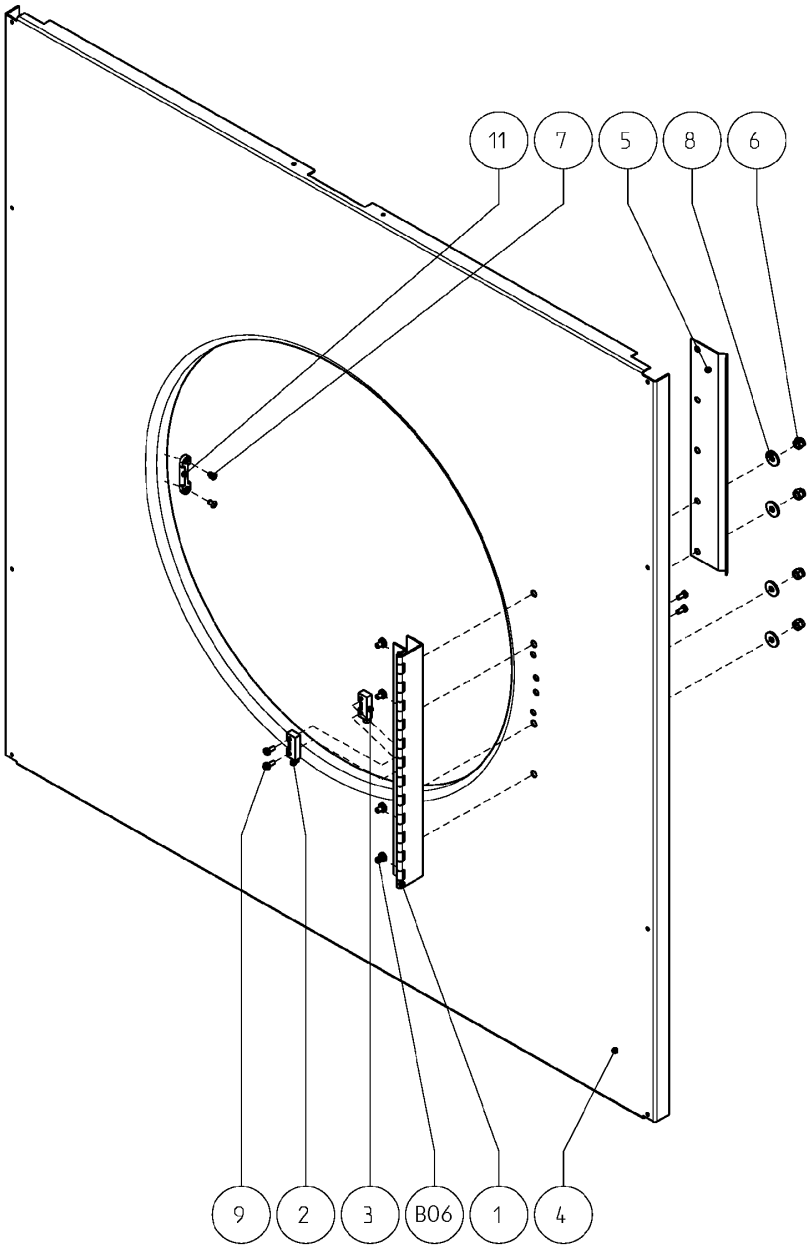

AGB264C


Exploded View

Position numbers begins with D
unless indicated with another number.

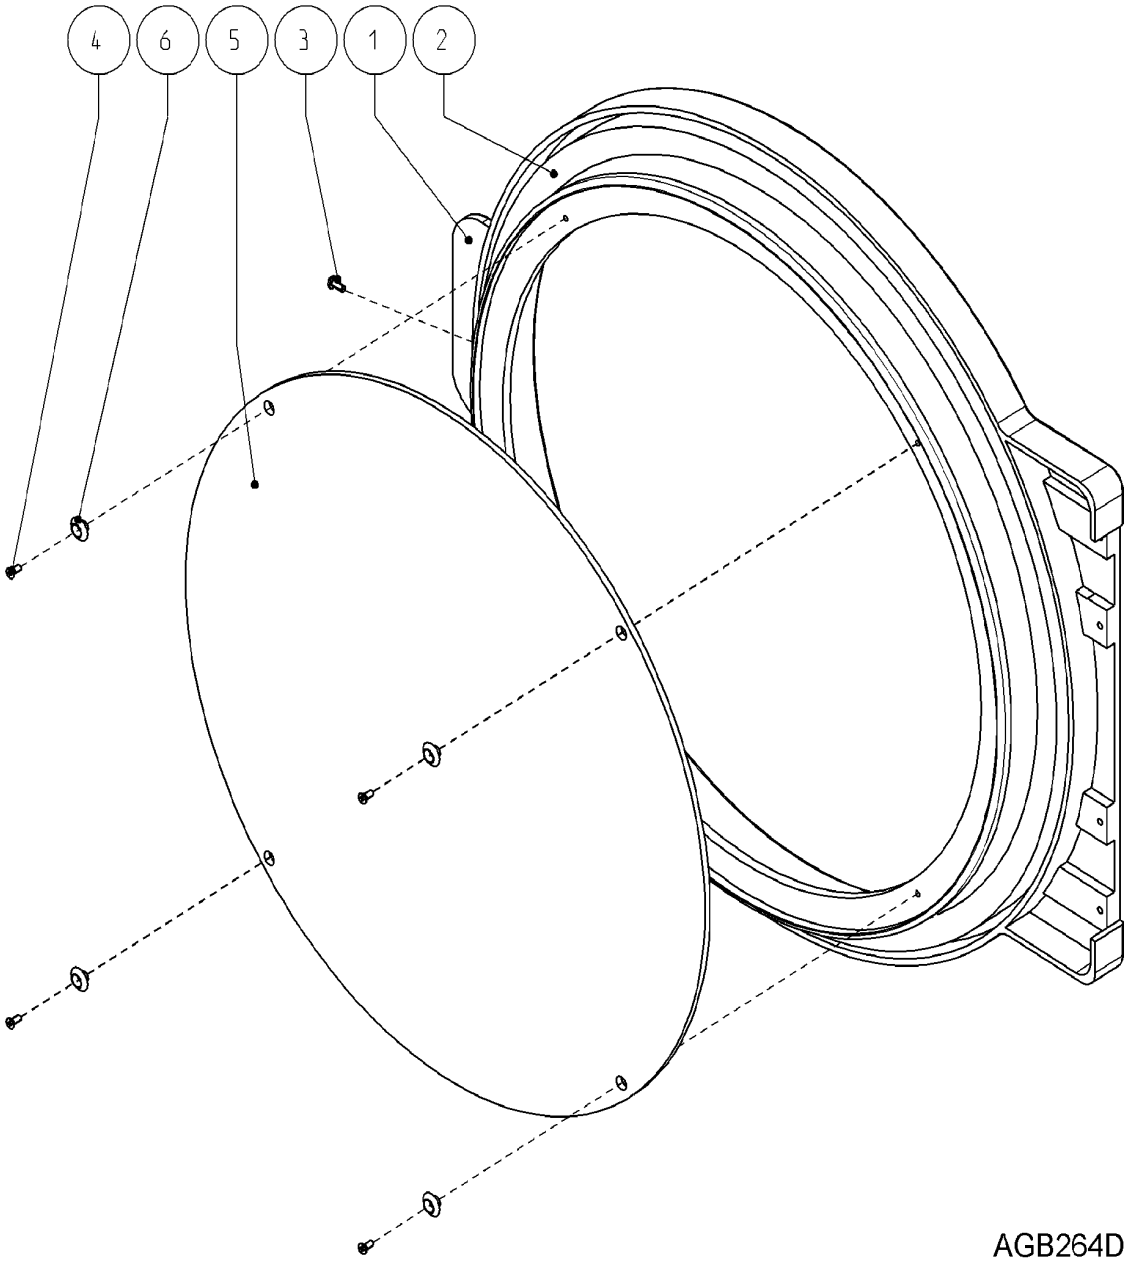

Exploded View


Position numbers begins with E
unless indicated with another number.

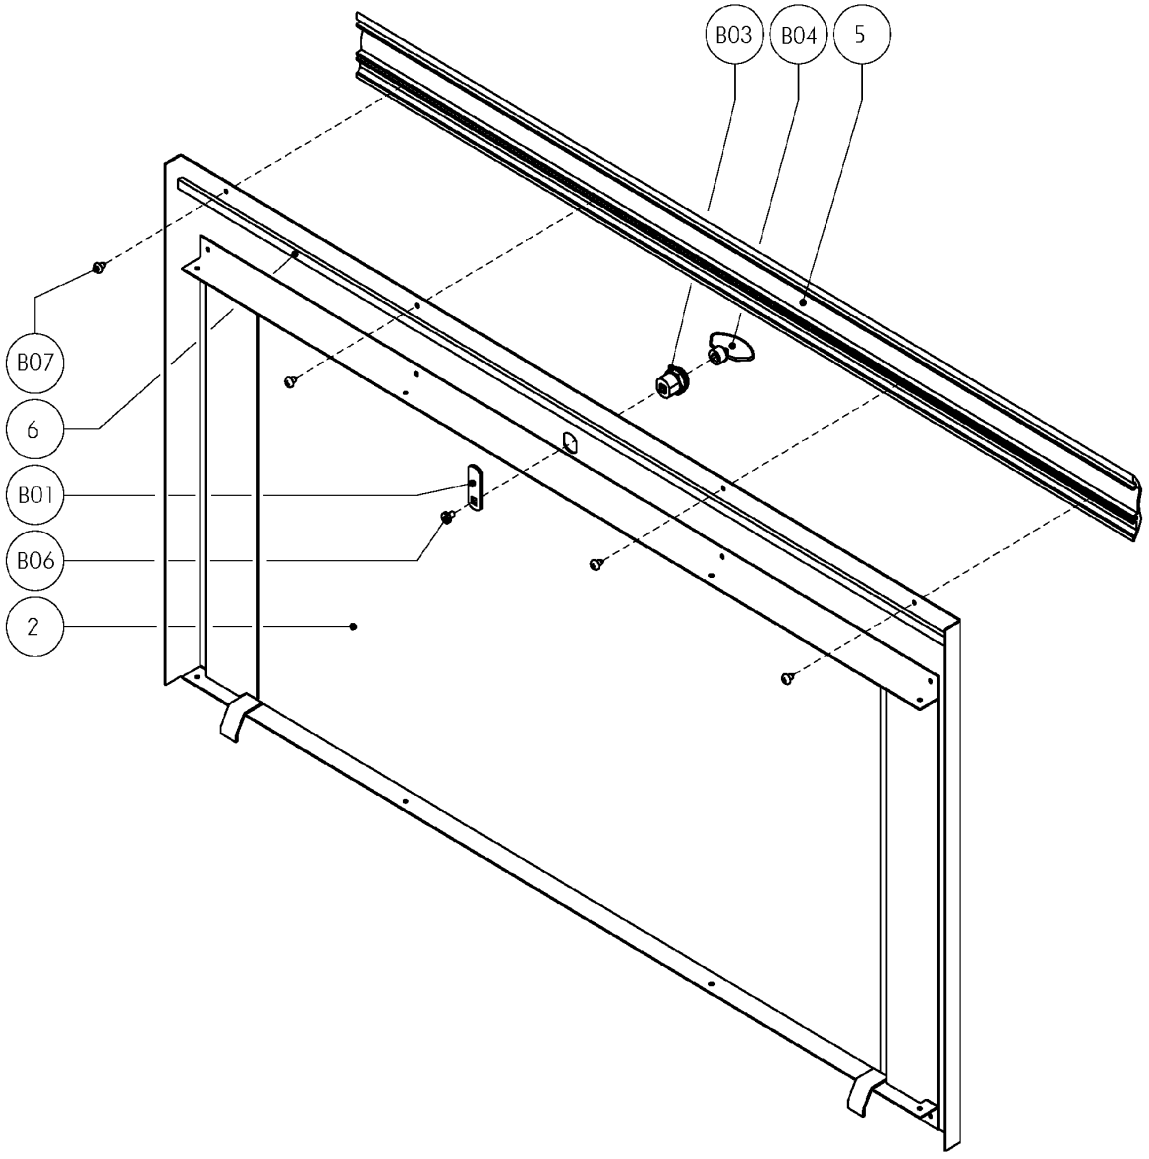

AGB264E

Exploded View


Position numbers begins with F
unless indicated with another number.

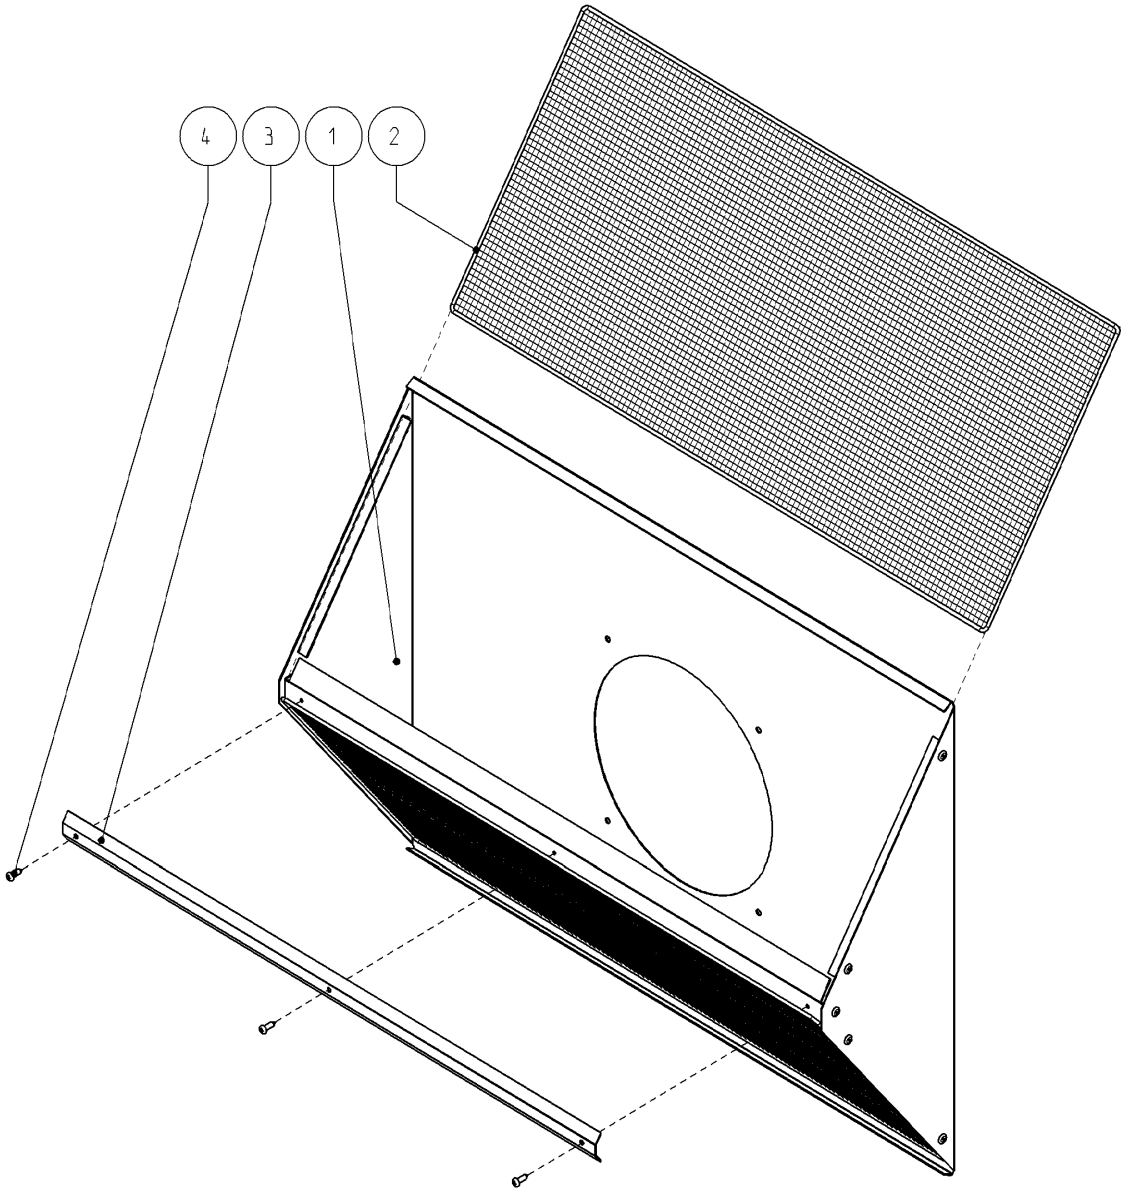

AGB264F

Exploded View


Position numbers begins with G
unless indicated with another number.

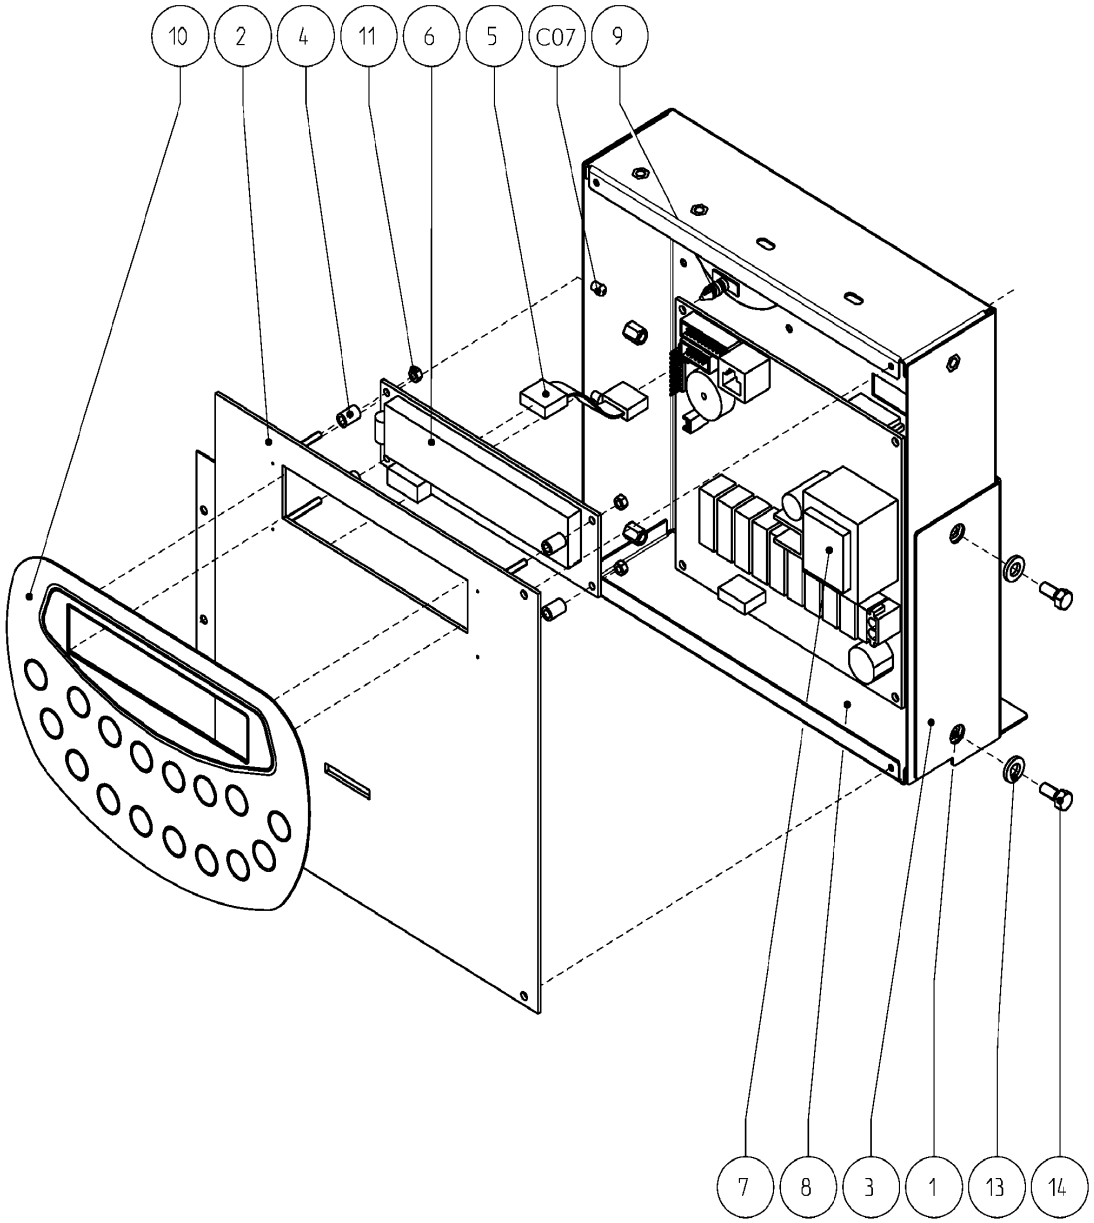

AGB264G

Exploded View


Position numbers begins with H
unless indicated with another number.

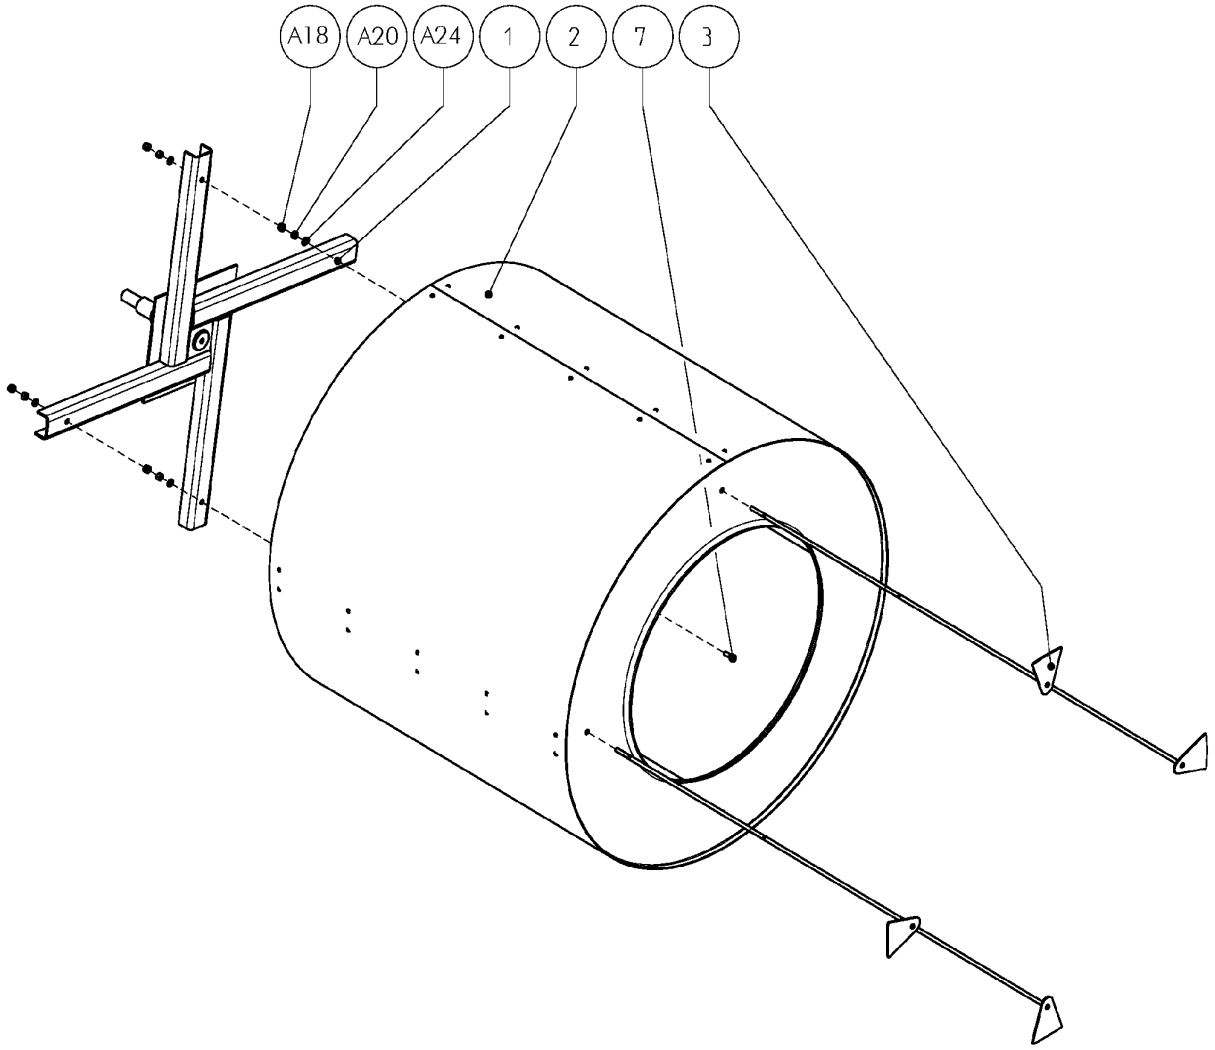

AGB264H

Exploded View


Position numbers begins with I
unless indicated with another number.

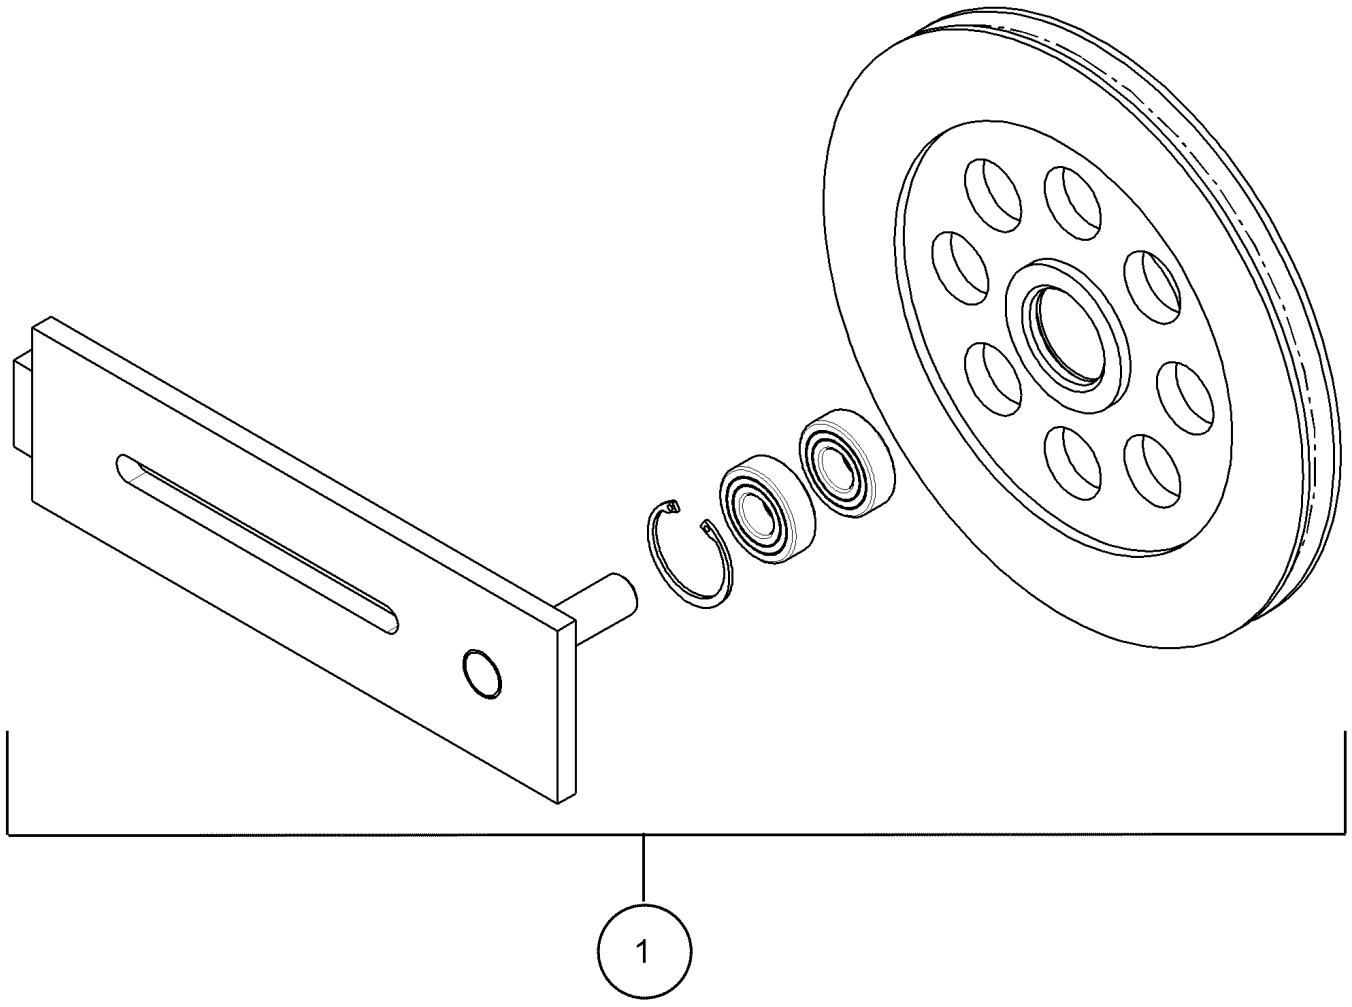

AGB264I

Exploded View


Position numbers begins with K
unless indicated with another number.

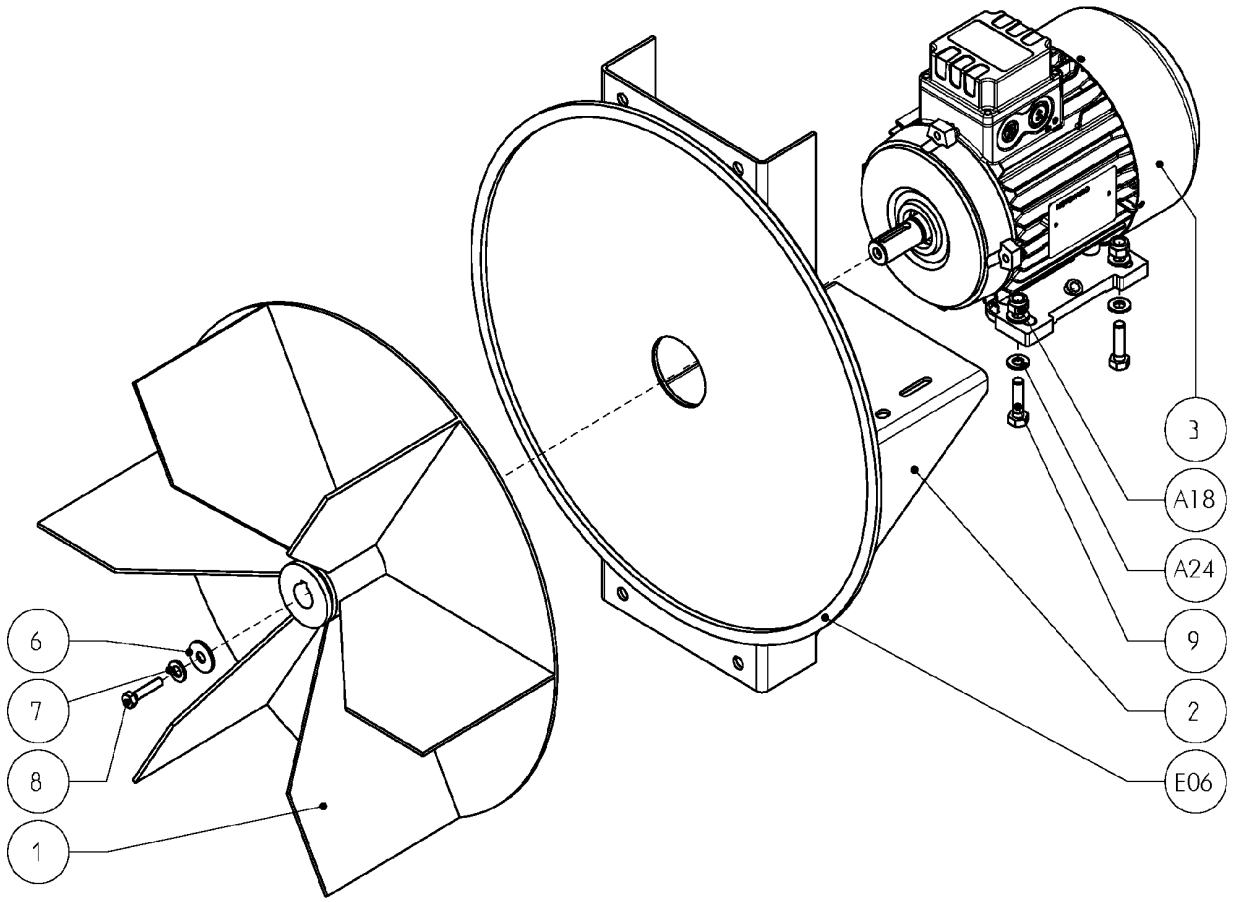

AGB264K

Exploded View


Position numbers begins with L
unless indicated with another number.

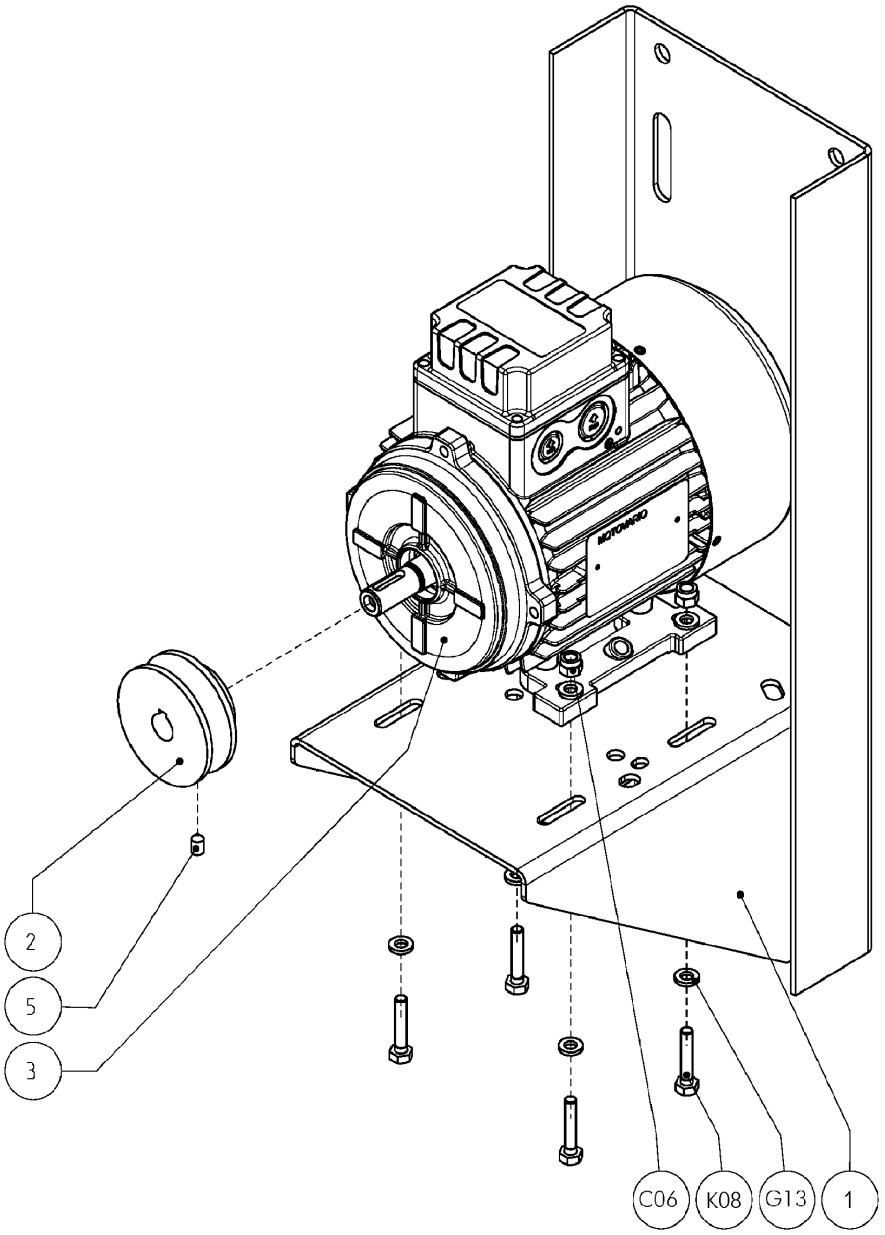

AGB264L

Exploded View


Position numbers begins with M
unless indicated with another number.

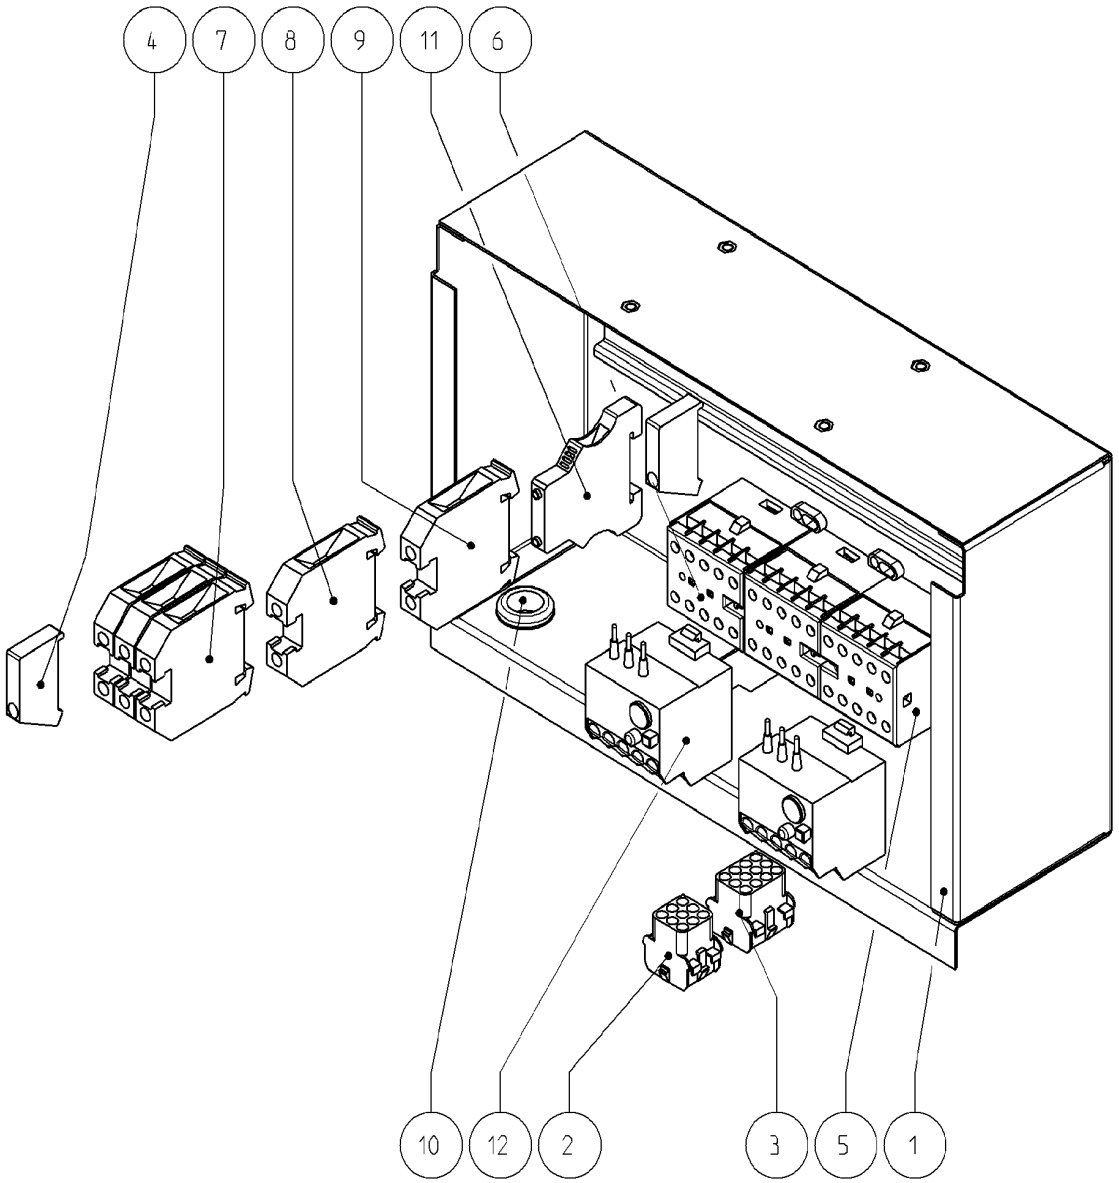

AGB264M

Exploded View

Position numbers begins with 0
unless indicated with another number.

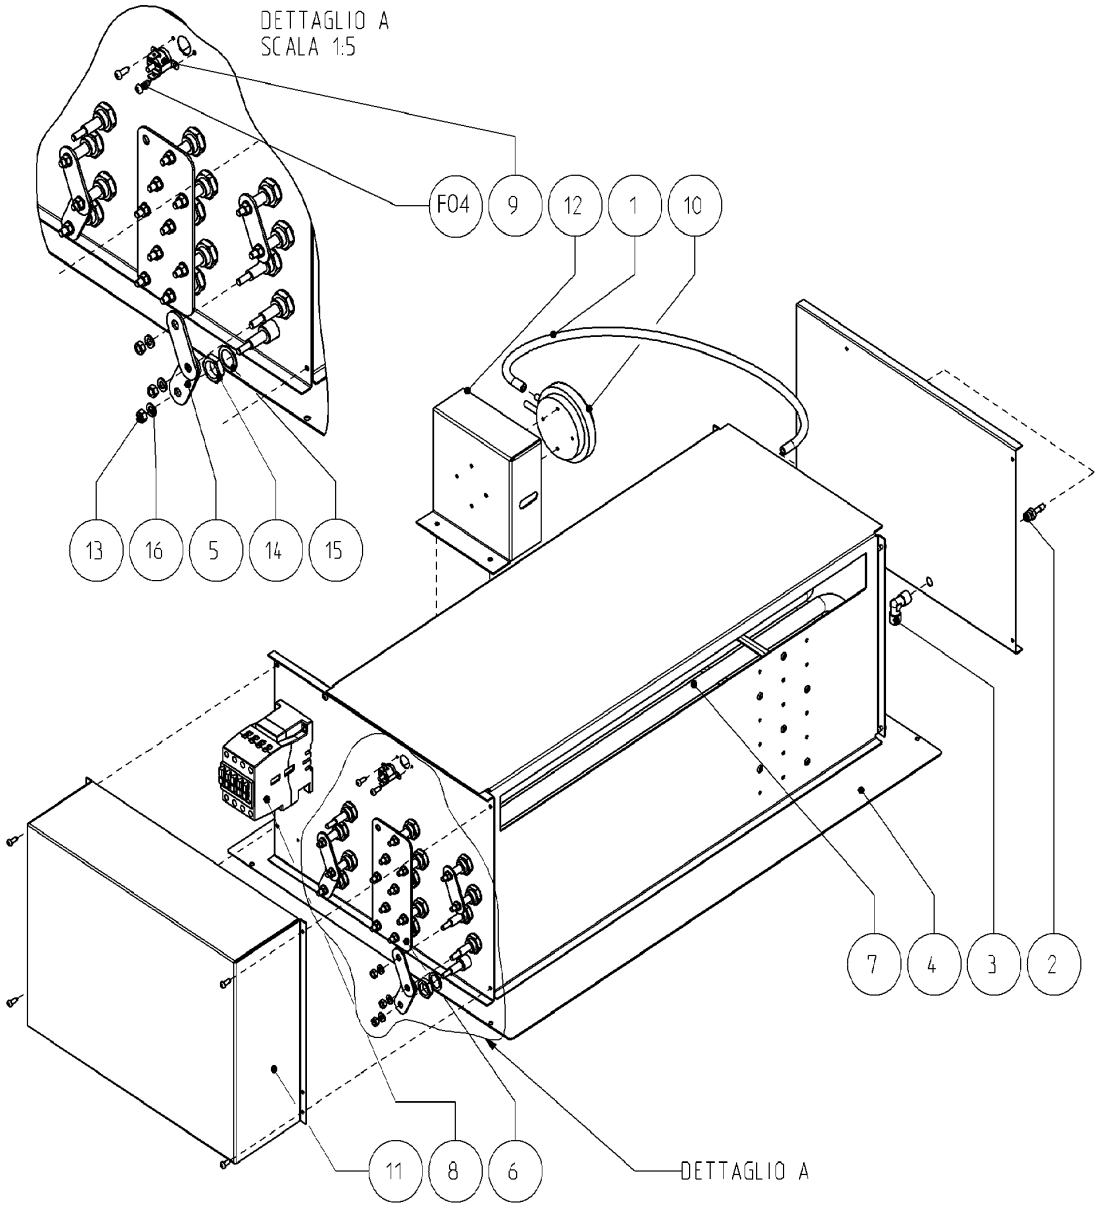

AGB2640