
INDESIT company

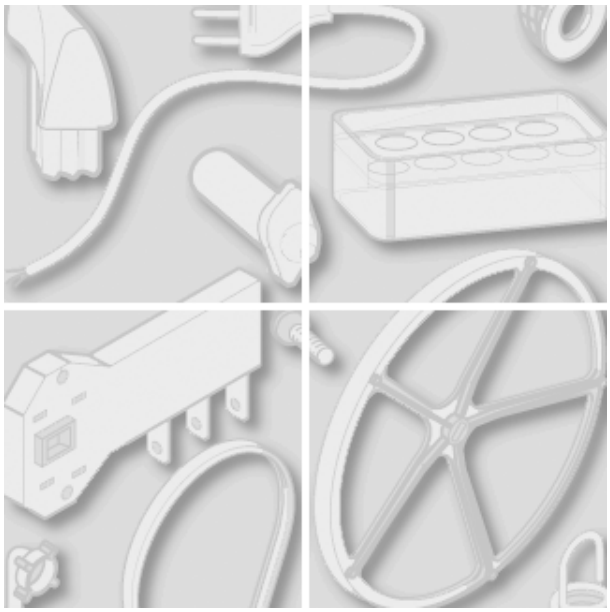

Model type:

WITL62EU

Commercial code:

F076408

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes


1260110 Exploded views

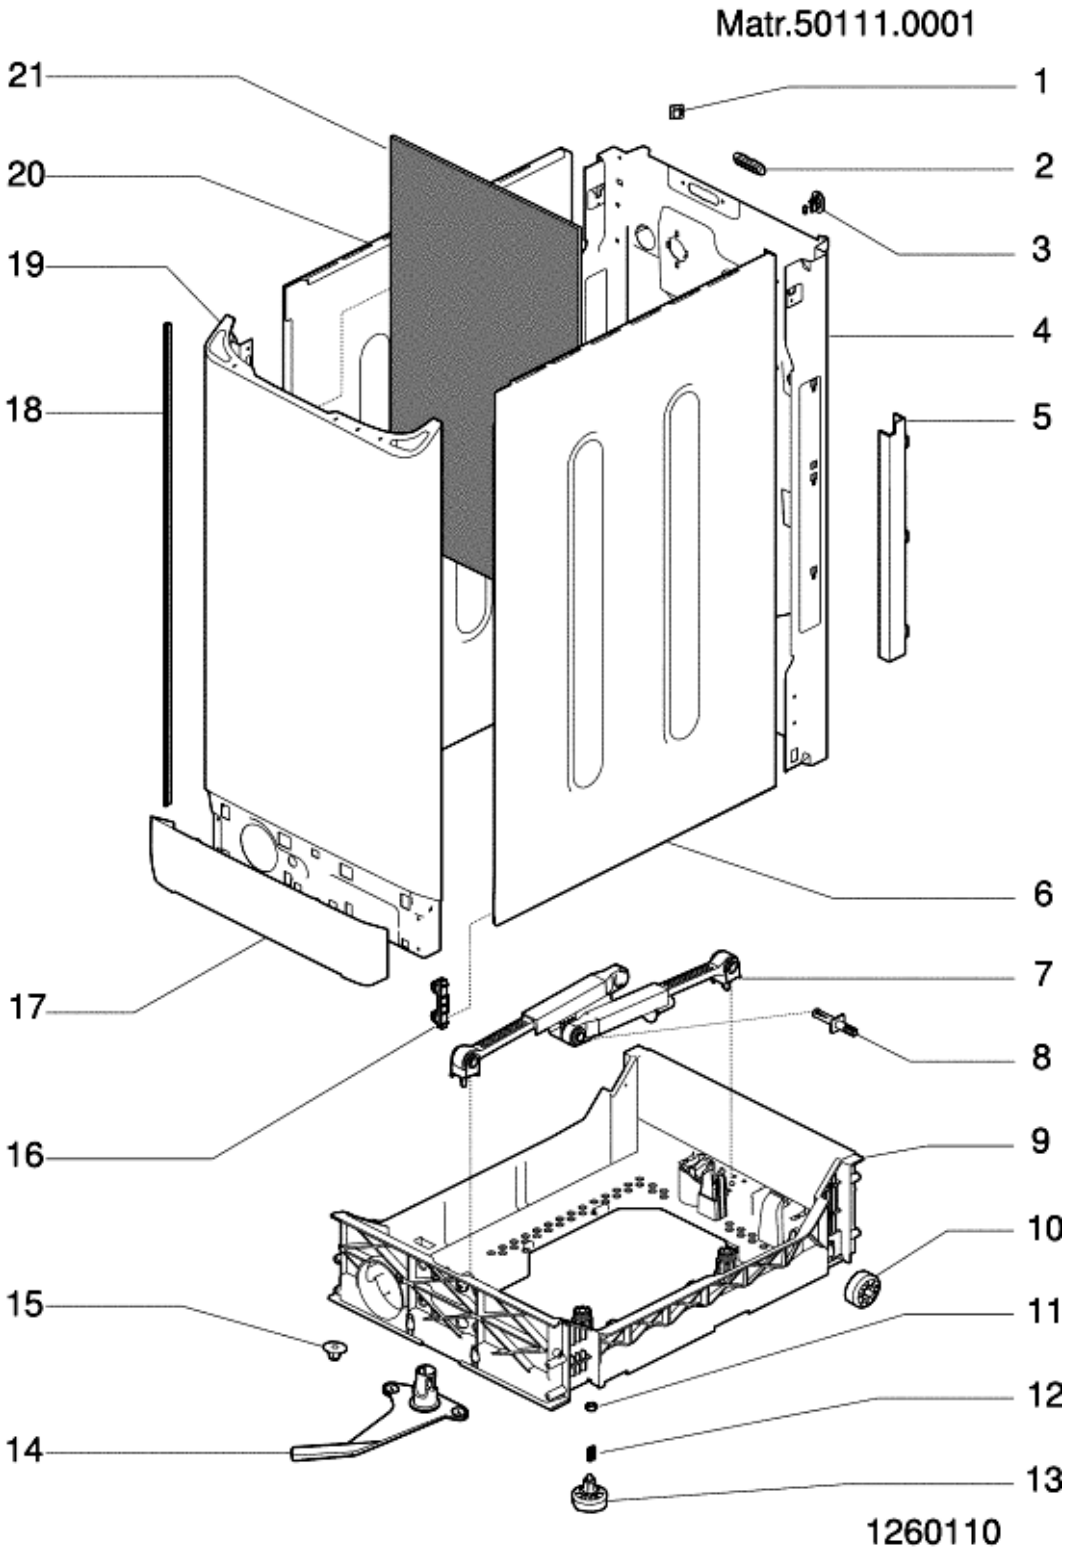

1260110 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00041575				adhesive hook		
002	C00083909				blanking plate-rear(test plug) tl		
004	C00281816				back panel tl new		
005	C00083901				wire protection		
006	C00117340			1 x C00117342	side panel right tl white(pw)		
007	C00303587				kit shock absorber 120n top		
008	C00280757				plastic expansion peg new		
009	C00093539				moving support top		
010	C00091071				rear wheel	n4013j00	
011	C00083788				nut foot		
013	C00264322				foot h32.5 mm		
014	C00083793				cam lever+truck	n4013j00	
015	C00083786				nut ro-mob m6 d.28 1.5 top		
016	C00083780				block side panel cabinet		
017	C00116852				white(pw) base tl evoii		
018	C00065071				side panel trim (90701)		
019	C00117345				front panel tl white(pw)		
020	C00117341			1 x C00117342	side panel left tl white(pw)		
021	C00117432				insulation mat side big size		
099	C00064550				drain hose holder		
099	C00065871				blanking plug		


1260230 Exploded views

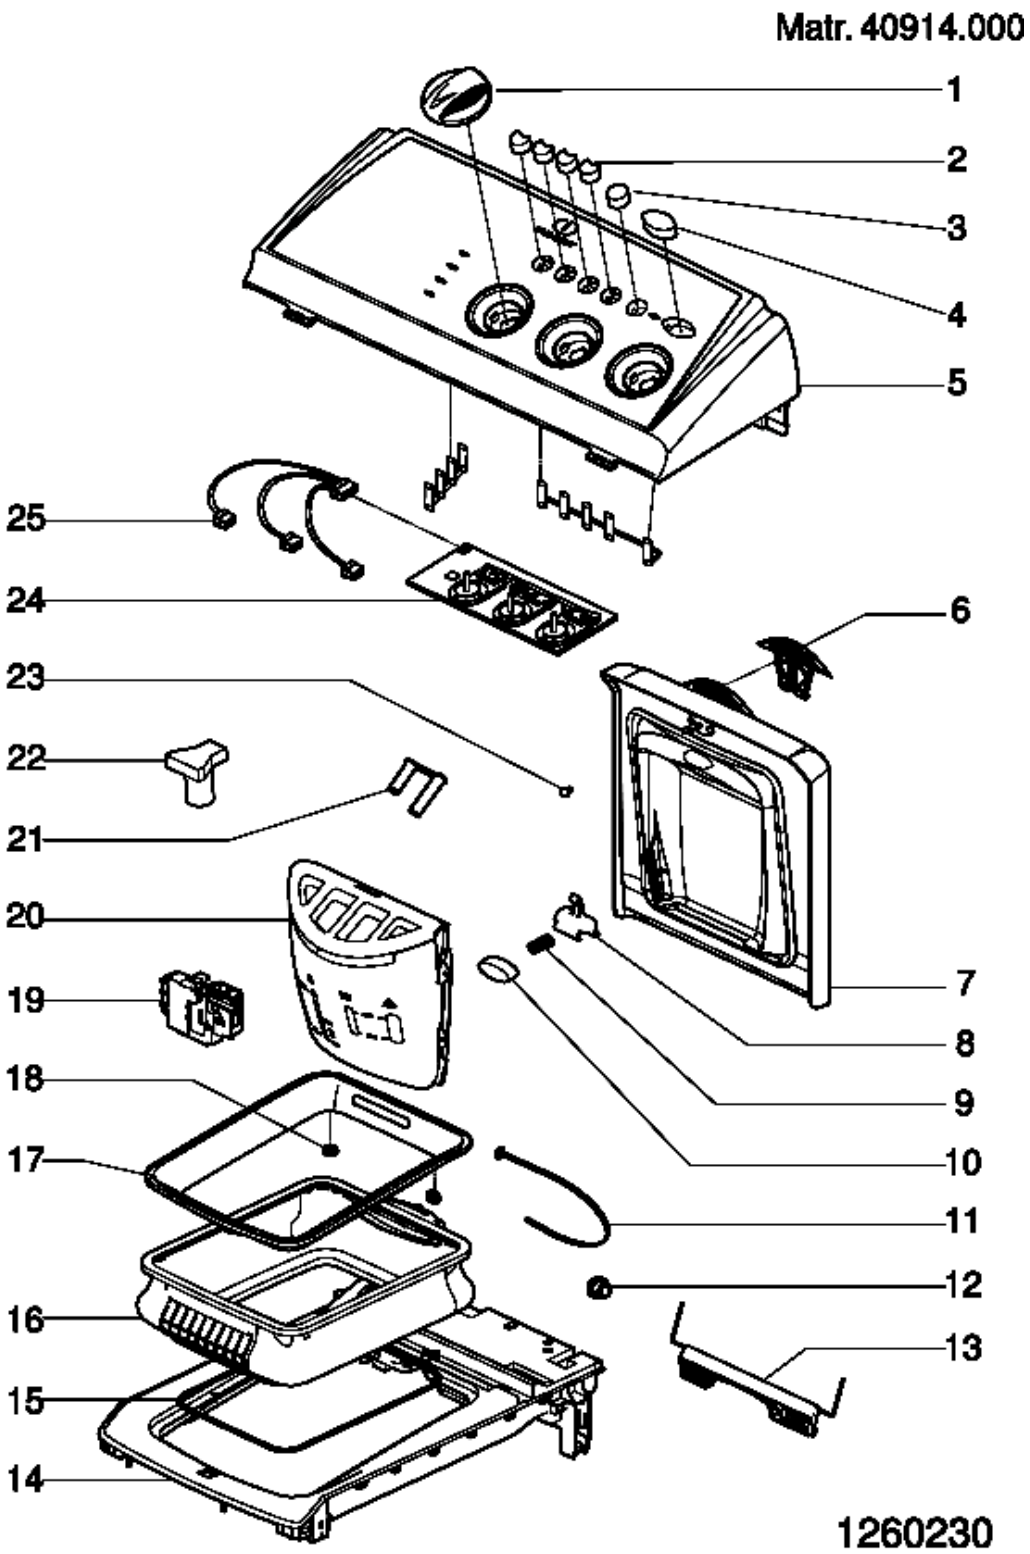

1260230 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00115924				knob white		
002	C00116244				pushbutton white pw ind.evoii		
003	C00116245				push button white		
004	C00116243				pushbutton b pw on/off		
005	C00116895				white(pw) dashboard witl62eu		
006	C00116861				handle cover white(pw) indesit tl		
007	C00116873				white(pw) cover indesit tl evoii		
008	C00083918				blocking stem dispenser		
009	C00083922				spring dispensertl ph2001		
010	C00116868				push-button dispenser white(pw) tl		
011	C00031331			1 x C00033210	clamp		
013	C00087073				spring support		
014	C00116865			1 x C00143124	white(pw) lower cover tl evoii		
015	C00057933				bellows clamp (tank front)		
016	C00111495				diaphragm tl evoii		
017	C00116866				white(pw) protection diaphragm tl		
018	C00111496				rubber buffer tl evoii		
019	C00111494				door interlock tl evoii		
020	C00116869				dispenser white(pw) tl ph2001		
021	C00084359				cover siphon tl ph2001		
024	C00280967			1 x C00283369	control card led 2 knobs ar.st.by		


1260310 Exploded views

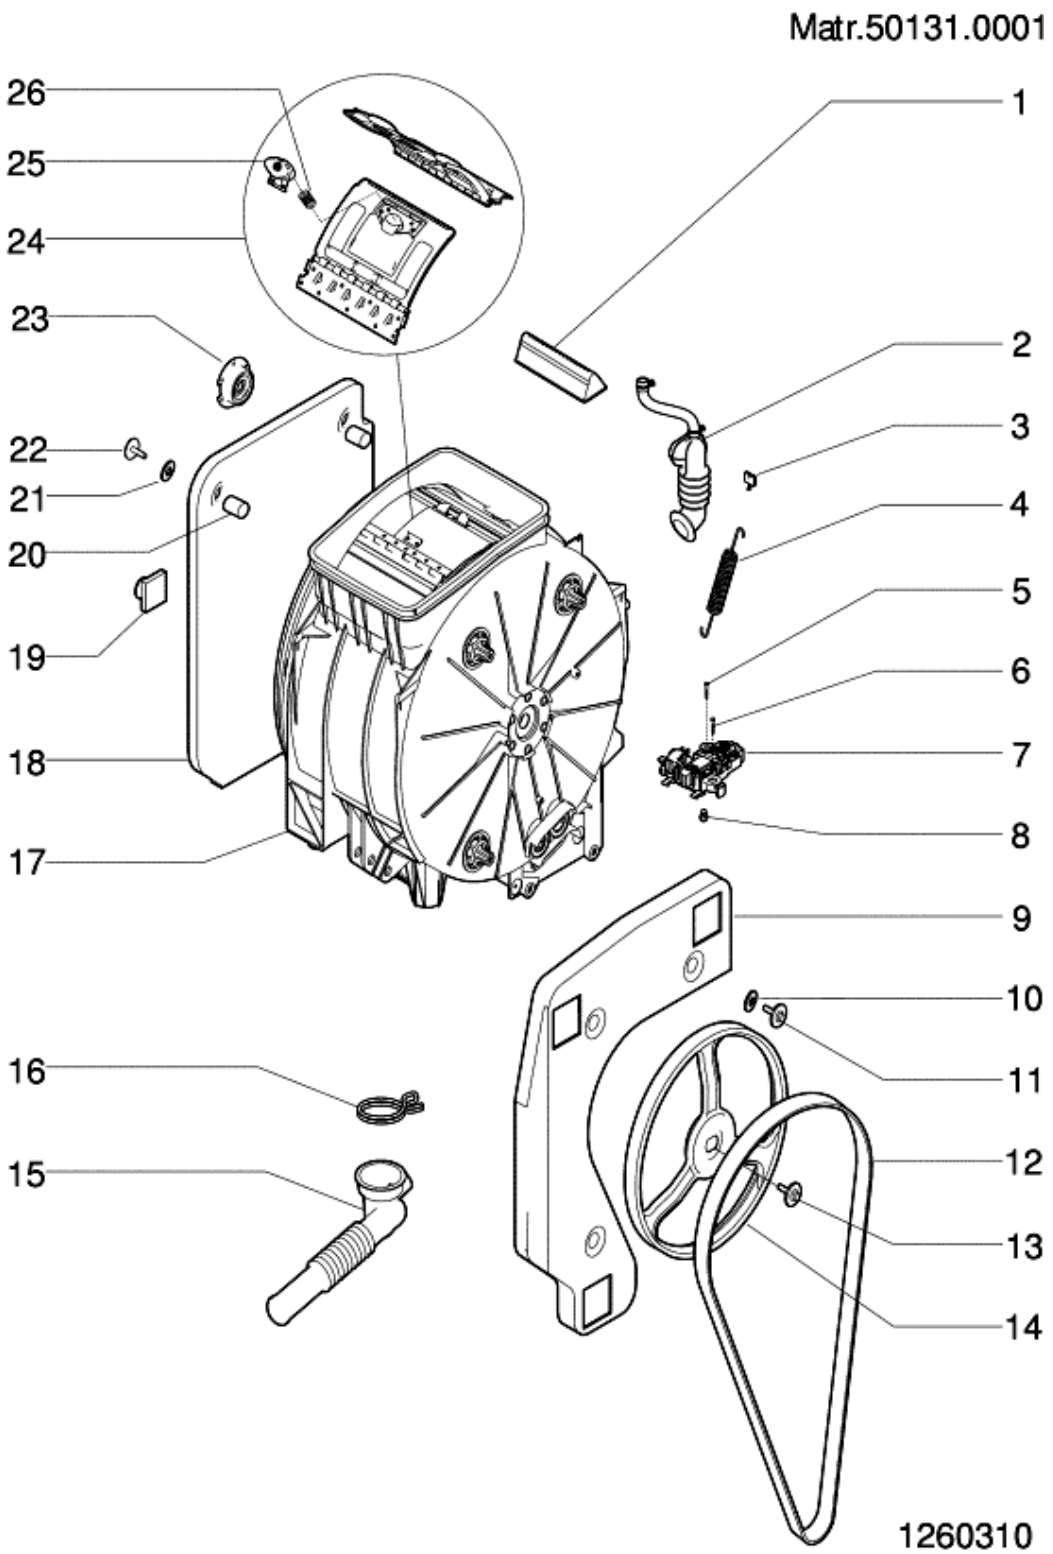

1260310 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00083894				lifter with weight		
002	C00281835				steam exhaust hose tl rec.st.by		
003	C00065320				anchorage pad - suspension		
004	C00083798				suspension spring - tank tl ph2001		
004	C00085463				front suspension spring - tank tl		
009	C00083794				counterweight dx tl ph2001		
010	C00041605				conic washer		
011	C00083797				screw sw. 8x27 tc-t30		
012	C00083910		11116...		belt pvel 1213h8 tl ph2001		73764080000
013	C00143260				drum pulley bolt m8x23 torx tefl		
014	C00142832				drum pulley d280 24,2 tl ph2001		
015	C00111502				hose tank to filter oko tl evoii		
017	C00282093				plastic tank 600/1000 tl ##		
018	C00083896			1 x C00195213	counterweight sx tl ph2001		
019	C00055303				insulation panel		
021	C00041605				conic washer		
022	C00083797				screw sw. 8x27 tc-t30		
023	C00087966				support		
024	C00080691				kit boltz and nutz tl	n1040245	
024	C00252375				load orifice soft tl 1400 evoii	n1040245	
025	C00114990				blue push-button tlevoii	n1040345	
026	C00114989				button spring tl evoii	n1040345	
099	C00091902				kit package tl ph2002		

1260410A Exploded views

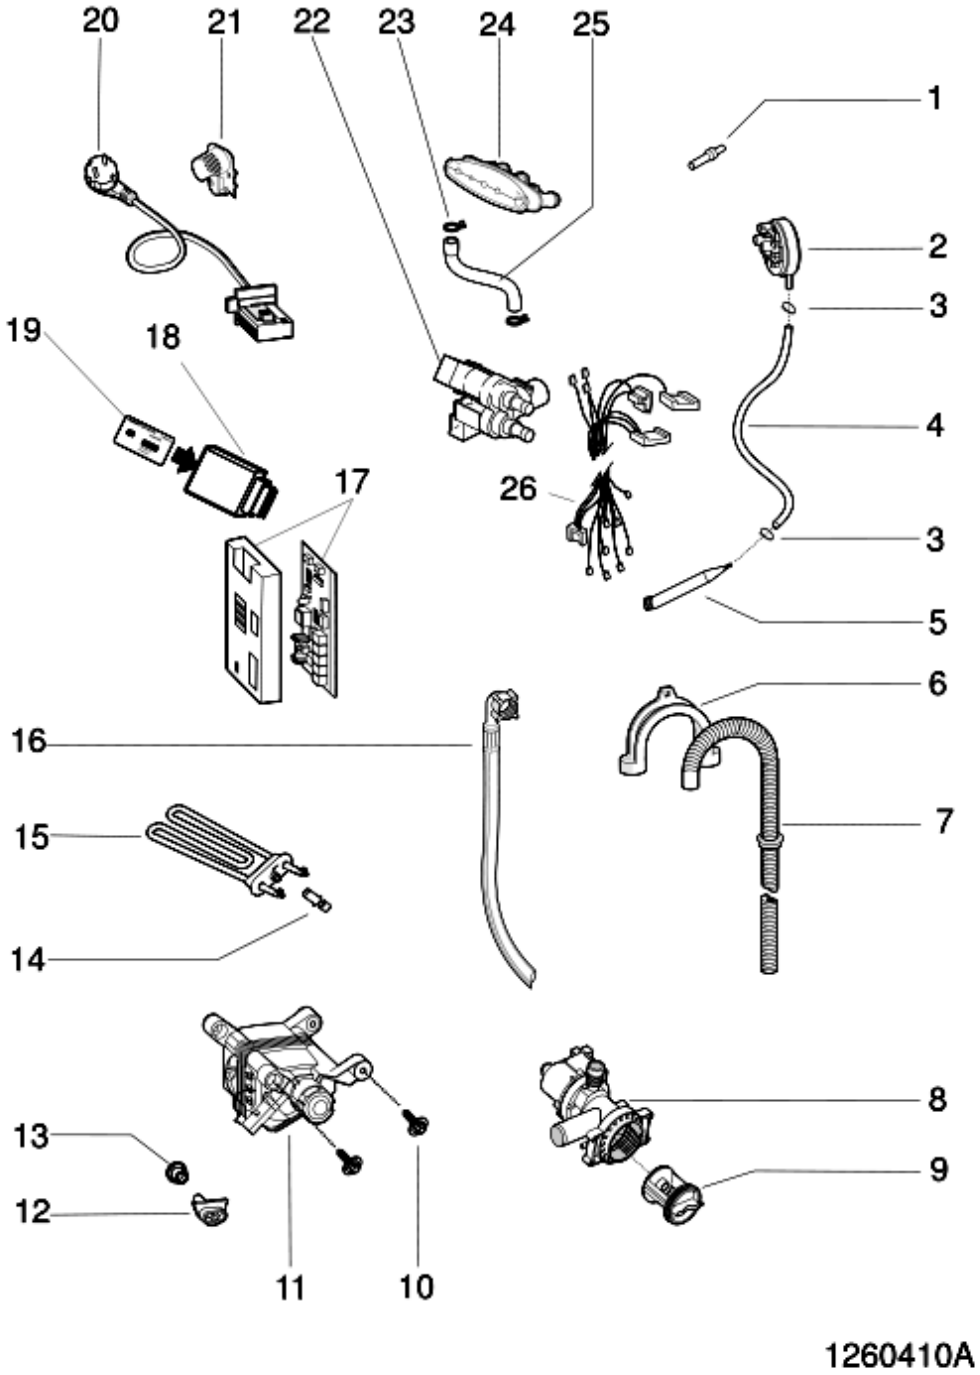

1260410A Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
002	C00264321		11116...		pressure switch 104-79 vpl arcadia		73764080000
003	C00092412				hose clamp		
004	C00083897				pipe pressostat tl ph2001		
005	C00092173				air trap x oko		
006	C00019902				plastic -u- to make drain hose		
007	C00051563				drain hose - to sink		
008	C00141862		30310...	1 x C00281986 1 x C00302918	self cleaning pump tl evoii		
008	C00302918	30311...			self cleaning pump top loading		
009	C00045027				pump filter kit		
009	C00141034				filter element kit		
009	C00297161				filter element kit copreci		
010	C00268497				screw m8x35 tc-t30		
011	C00115310				tacho generator for motor ceset		
011	C00270734				brush ceset 6170 a3627		
011	C00273911				tacho generator for motor welling		
011	C00275875		11116...		motor collet.p30 tl evoii		73764080000
012	C00083911				fixing nut		
013	C00083914				motor rubber bush		
014	C00083915				thermistor ntc		
015	C00110148				heater 1700w-230v tl		
016	C00003070				mains inlet hose cold 25c 10bar		
016	C00005572				sealing washer-mains inlet hose		
017	C00270972		11116...		module arcadia (hl) 9 ways st.by	n4012a10	73764080000
018	C00252539			1 x C00263927	smart reader for card 8kb		
019	C00287182		11116...		card witl62(eu)sb 8kb sw		73764080000
020	C00259297				supply cable 3 x 1.5 1,5mt shuko		
021	C00281831				grate steam exhaust hose tl/s-by		
022	C00116159				electrovalve 1e2u p.2.5		
022	C00116161				protection electrovalve tl		
023	C00013562				tube clamp 15,1-15,9		
023	C00054734				binding		
024	C00083941				distribution assembly tl		
025	C00097841				hose fill valve l=145		
026	C00196179			1 x C00274610	wiring wash motor-module j9		


1260410A Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
026	C00196180		11116...		wiring pressure switch-sensor-		73764080000
026	C00264505				wiring heating element-filter		
026	C00264511				wiring comunic. display -j010		
026	C00264513				wiring evp evl ntc (module j005)		
026	C00264514				harness door switch-drain pumpe-		
026	C00264521				wiring earth		

Notices

n4012a10: USE 5-WAYS HARNESS FOR CONNECTION MAIN MODULE /UNIT INTERFACE

When replacing main module on machines with serial number AFTER 10914.0001 it must be used the 5-way harness (between main module and unit interface) spare part code C00264511, removing the 4-way harness present in the machine (see attached picture of the connection).
The use of the 5-way harness is mandatory for a correct compatibility between main module (actually managed as spare part) and unit interface on the product.
If the intervention is not done using the 5-way harness the washing machine, after first stand-by, will never turn on again.

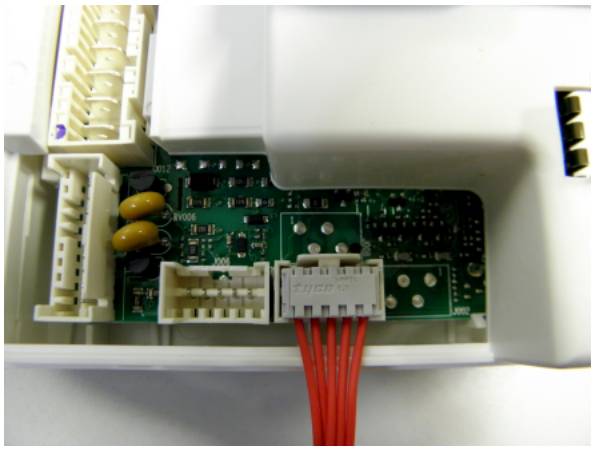


n4013j00: REMOVED THE SPECIAL SET OF RETRACTABLE WHEELS

Starting from November 2012 the “special set of retractable wheels” has been removed on all WASHING MACHINES TOP LOADING equipped.

Electric schemes and links

Cod. 21500958500BASE

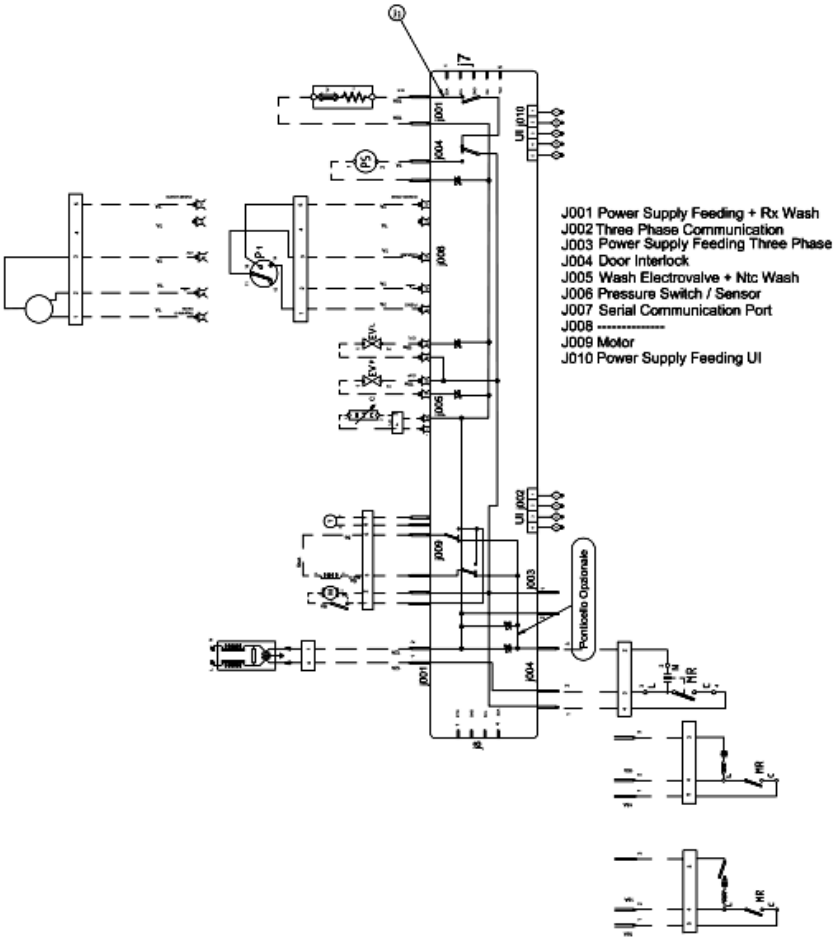

C00252878 - 21500958500 - 24000117400 ARCADIA

Legend

Legend: 21500958500BASE

AQS	Aquastop electrovalve	Mzbn/MTA	zbn timer motor
B	Buzzer	N	Neutral or Terminal Board
BC	Blocco Cesto	NC	Spin cycle exclusion
BF	Terminal board contact, motor fan and dryer	P	Pressure switch
BP	Buzzer	P1	1st level pressure cut-off switch
C	Condensator	P2	2nd level pressure cut-off switch
CA	Condensator	PA	High speed potentiometer
DV	Switching device	PB	Low speed potentiometer
EF/CL	Electro-Valve Cold Water / Bleach	PL	Pure Wool
EF/L	Electro-Valve Cold Water / Wash	PM	Motor Thermoprotector
EF/P	Electro-Valve Cold Water / Prewash	PR	Timer programmer or Pressure switch
ER	Exclude Heating Element	PS	Drain pump
ET	Thermostat disactivation	R	Heating element
EV	Electrovalve	RE	Relay
EVA	Dryer electrovalve	RR	Heating element
EVC	Hot water electrovalve	RV	Speed regulator
EVF	Elettrovalvola acqua fredda	Ras/RA	Dryer heating element
EVL	Wash electrovalve	S	LED
EVP	Pre Wash electrovalve	SL	Line LED
FA	Antijamming filter	SO	Door LED
FD	Delicate drying cycle thermostat	SR	Heating LED
FE	Strong drying cycle thermostat	ST	Temperature selector
FRT	Thermofusible Heating Element	SV	Speed Selector for Spin
I	Inverter	T	Timer contacts
I1..2..3..	Switches/switching devices	TA	Drying timer contacts
IA	Switch On/Off	TB	Low Temperature Thermostat
IC	Switch N.C. - 1/2 Load	TC	Spider wheel earth
ID	Switch display	TFL	Flange earth
IE	Water Saving Device	TG	Main earth
IF	Switch - Spin Reduction	TH	Thermostat
IP	Door switch	TH1	1st temperature thermostat
IR	Line switch	TH2	2nd temperature thermostat
IS	Water-stop	TH3	3rd temperature thermostat

L	Line or Lamp	THF	Operating thermostat
LB	Low Level	THR	Adjustable thermostat
LN	Normal Level	TM	Motor earth
LS	Pilot lamp	TMB	Main cabinet earth
M	Earth-symbol	TMP	Motor thermal protector
MC	Spin cycle motor	TMS	Thermostop
MI	MOTOR WITH PULLEY	TP	Thermal protector
ML	Wash cycle motor	TPS	Drain pump earth
MO	Terminal Board	TR	Heating element earth
MP	Door dip-switch	TS	Safety thermostat
MR	Thermal Lock	TT	Timer earthing connection
MT	Timer motor	TTH	Earthing Thermostat
MV	Motor fan	TV	Tank earth
MV -Ras	Dryer heating element	ZBN	Timer