IGNIS

Service Information

Freestanding Cooker
ACF 494/IG

8523 494 26000
Last Modification: 07/06/08
Creation Date: 07/06/08

Spare Part List 2

Technical Data 4

Exploded View 5

Wiring Diagram 7

This document is only intended for qualified technicans who are aware of the respective safety regulations.
Subject to modifications

© Whirlpool EMEA

Spare Part List

Pos	12NC	Description
002 0	**4819 440 59504**	Cover
002 1	**4819 417 19259**	Hinge left
002 2	**4819 417 19258**	Hinge right
002 3	**4819 462 58116**	Cover hinge left
002 4	**4819 462 58115**	Cover hinge right
002 5	**4819 462 79573**	Threaded cap left
002 6	**4819 462 79574**	Threaded cap right
002 9	**4819 462 79758**	Rubber for lid
011 0	**4819 462 58144**	Foot
022 0	**4819 442 38512**	Panel side left
022 1	**4819 440 59506**	Panel side right
022 2	**4819 462 79569**	Threaded cap left
022 3	**4819 462 79568**	Threaded cap right
031 0	**4819 442 38513**	Hob
031 1	**4819 417 19345**	Hinge f.hob left
031 2	**4819 417 19344**	Hinge f. hob right
031 3	**4819 417 19256**	BOTTOM DOOR HINGE
031 4	**4819 417 19257**	Hinge lower right
031 5	**4819 532 58233**	Spacer
041 0	**4819 417 19441**	Hinge
051 0	**4819 442 38515**	Plinth
053 0	**4819 442 38514**	Front panel
053 1	**4819 404 78522**	Panel rear
053 2	**4819 417 19255**	Hinge left
053 2	**4819 417 19254**	Hinge right
111 0	**4819 498 78051**	Handle door
111 1	**4819 532 68761**	Spacer
141 0	**4819 450 69919**	Oven glass
142 0	**4819 450 69503**	Inner glass
142 1	**4819 502 18415**	Screw
142 2	**4819 404 78666**	Bracket
191 0	**4819 466 69978**	Gasket oven
245 0	**4819 458 19892**	Grid
247 0	**4819 418 38369**	Fat pan
251 0	**4819 450 69999**	Cover lamp
256 0	**4819 466 89074**	Knob protection
256 1	**4819 532 58252**	Spacer
320 0	**4819 453 58371**	Control panel
324 0	**4819 460 78107**	Trim lower
334 0	**4819 413 59025**	Knob
334 9	**4819 532 48005**	Indication disc
354 0	**4819 134 48236**	LAMPJE ROOD
354 1	**4819 134 48235**	Pilot lamp yellow
452 0	**4819 259 28787**	Heating element upper/grill
454 0	**4819 259 28785**	Heating element lower
461 0	**4819 259 98306**	Cooking plate d.145mm
461 1	**4819 259 98307**	Cooking plate d 180
464 0	**4819 259 98263**	Cooking plate d 180 rapid
491 0	**4819 290 68308**	Terminal block
554 0	**4819 271 28863**	OVEN THERMOSTAT

© Whirlpool EMEA

Pos	12NC	Description
554 9	**4819 401 18786**	Clamping piece
562 0	**4819 276 18307**	Switch,thermal
620 0	**4819 276 18228**	LIGHT SWITCH
622 0	**4819 273 28353**	Switch hot plate
651 0	**4819 134 88138**	Lamp,oven
652 0	**4819 255 18162**	Holder lamp
901 0	**4819 401 18765**	Clamp cable

© Whirlpool EMEA

Technical Data

Dimensions + Weight

Product dimensions ..... 850 x 550 x 550 mm

Range dimensions

Cavity dimensions ..... 330 x 430 x 410 mm
Volume ..... 58,1 dm 3

Electrical base data

Voltage ..... 230/400 V
Frequency ..... 50 Hz

Power Consumption


Oven power
Upper heating element ..... 850 W
Lower heating element ..... 1200 W
Grill heating element ..... 1050 W
Fan heating element ..... - W

Cooking zones


Rear left
Diameter ..... ø 190 mm
Power ..... 1500 W
Rear right
Diameter ..... ø 150 mm
Power ..... 1000 W
Front left
Diameter ..... ø 150 mm
Power ..... 1000 W
Front right
Diameter ..... ø 190 mm
Power ..... 2000 W

© Whirlpool EMEA

Exploded View

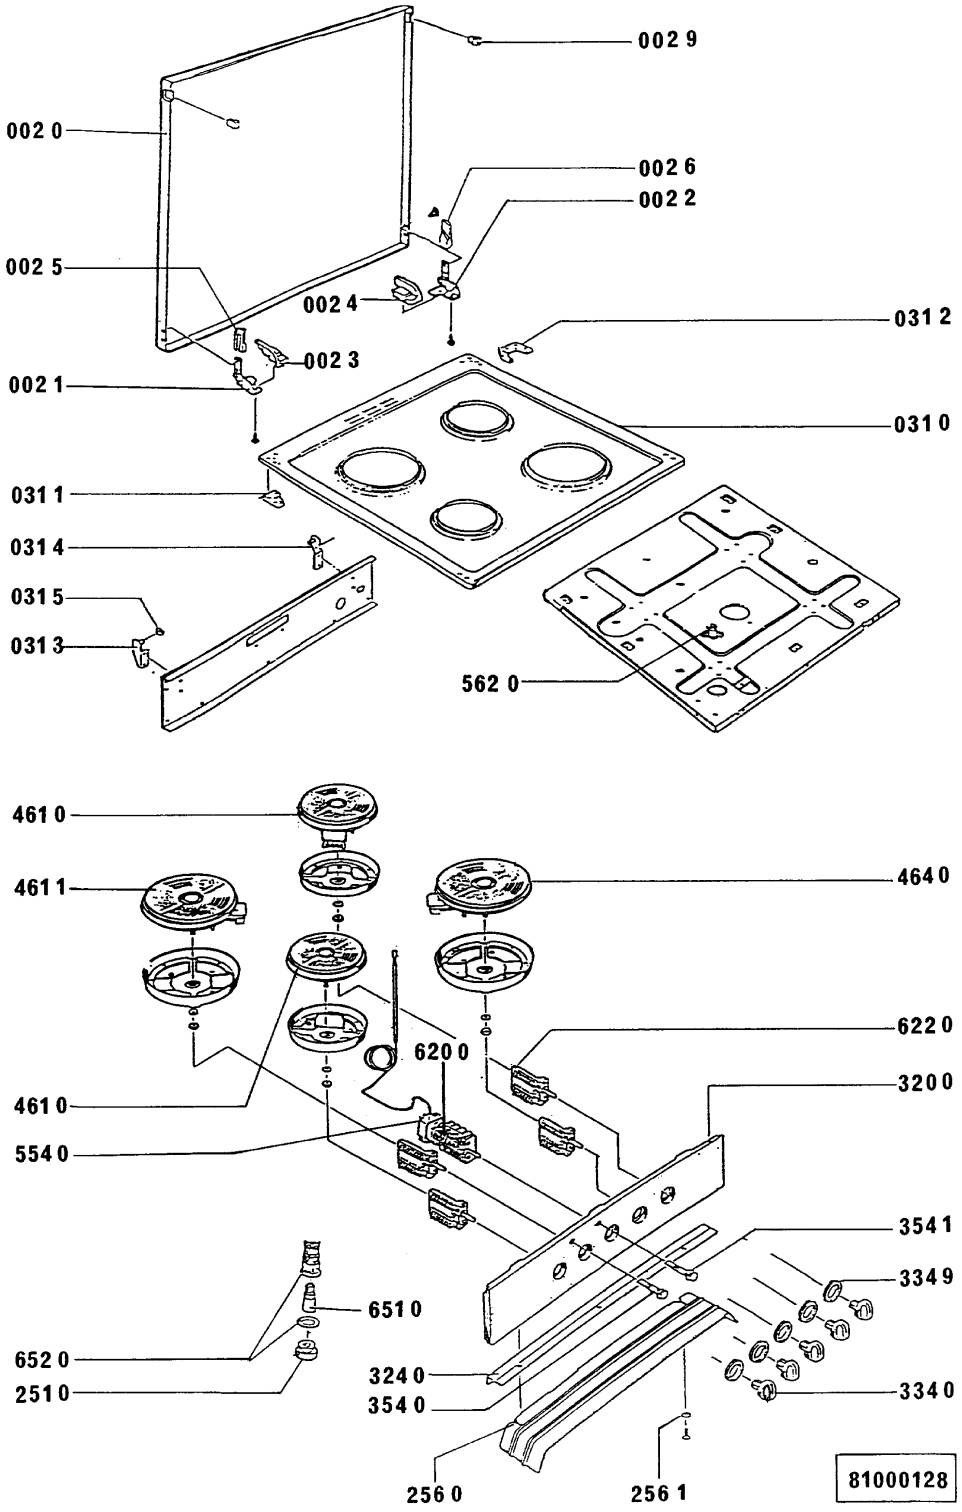

Exploded View

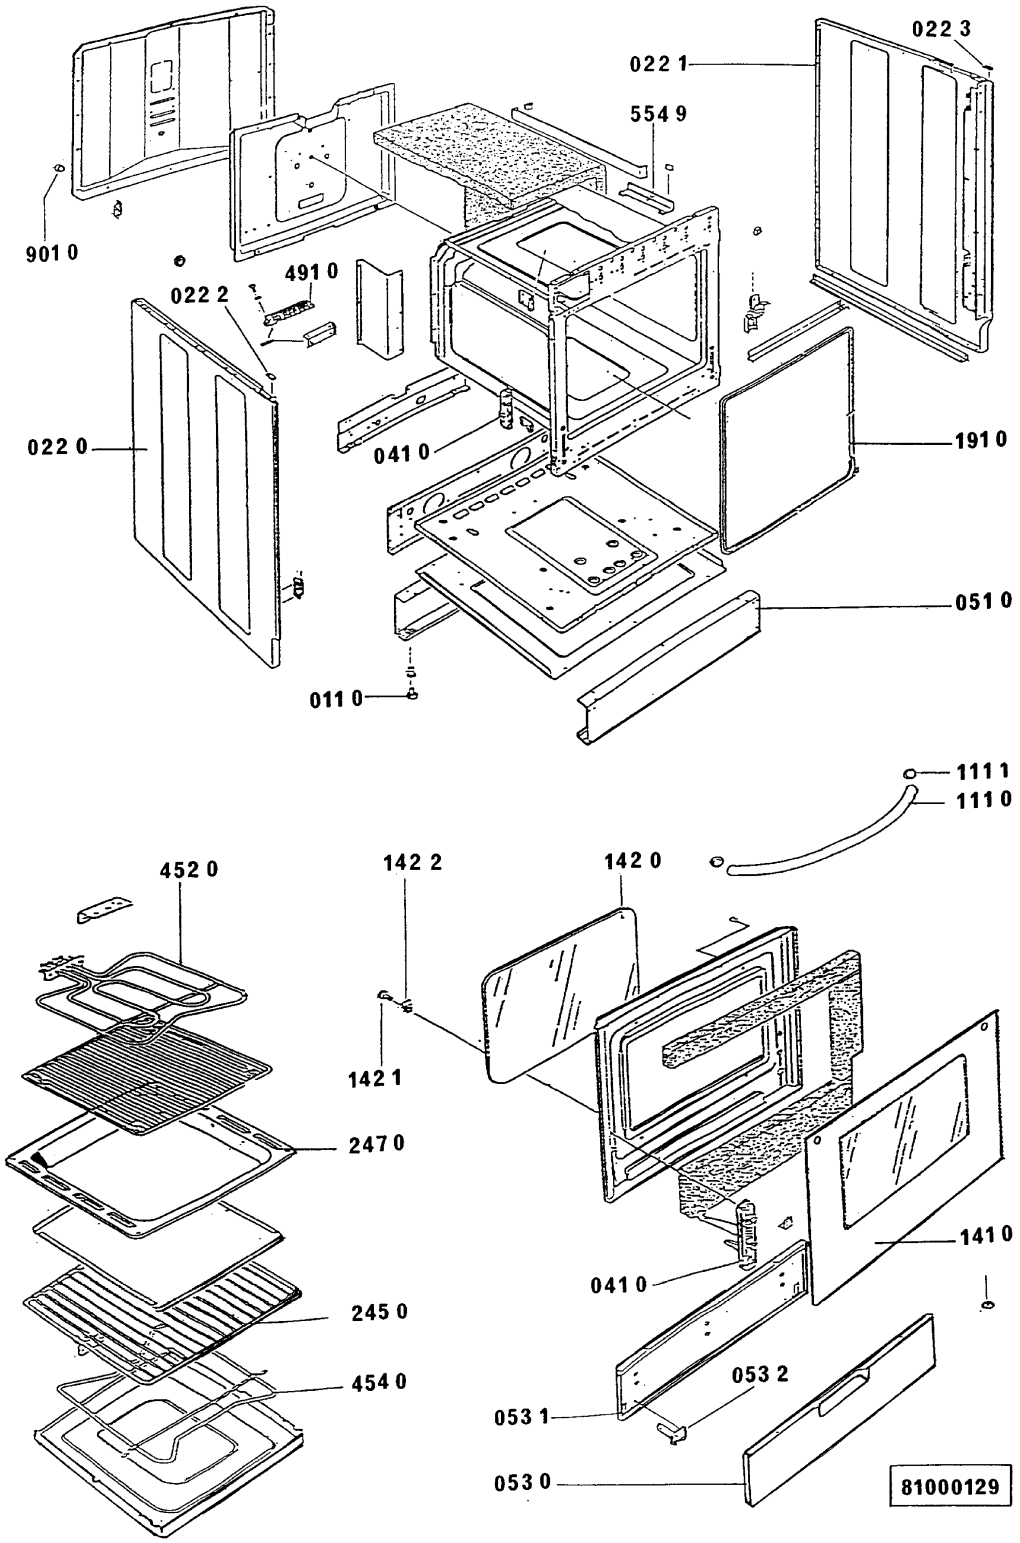

Wiring Diagram

