
INDESIT company

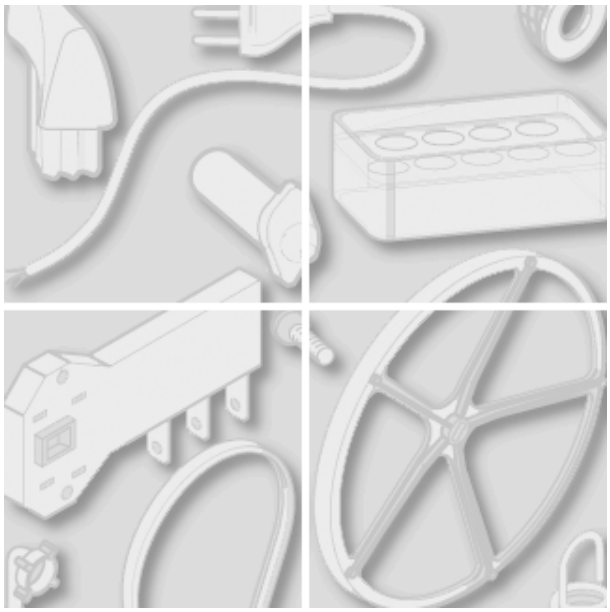

Model type:

HL90.1IX

Commercial code:

F030110

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:

REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics


INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1548 Exploded views

matr.40101.0001

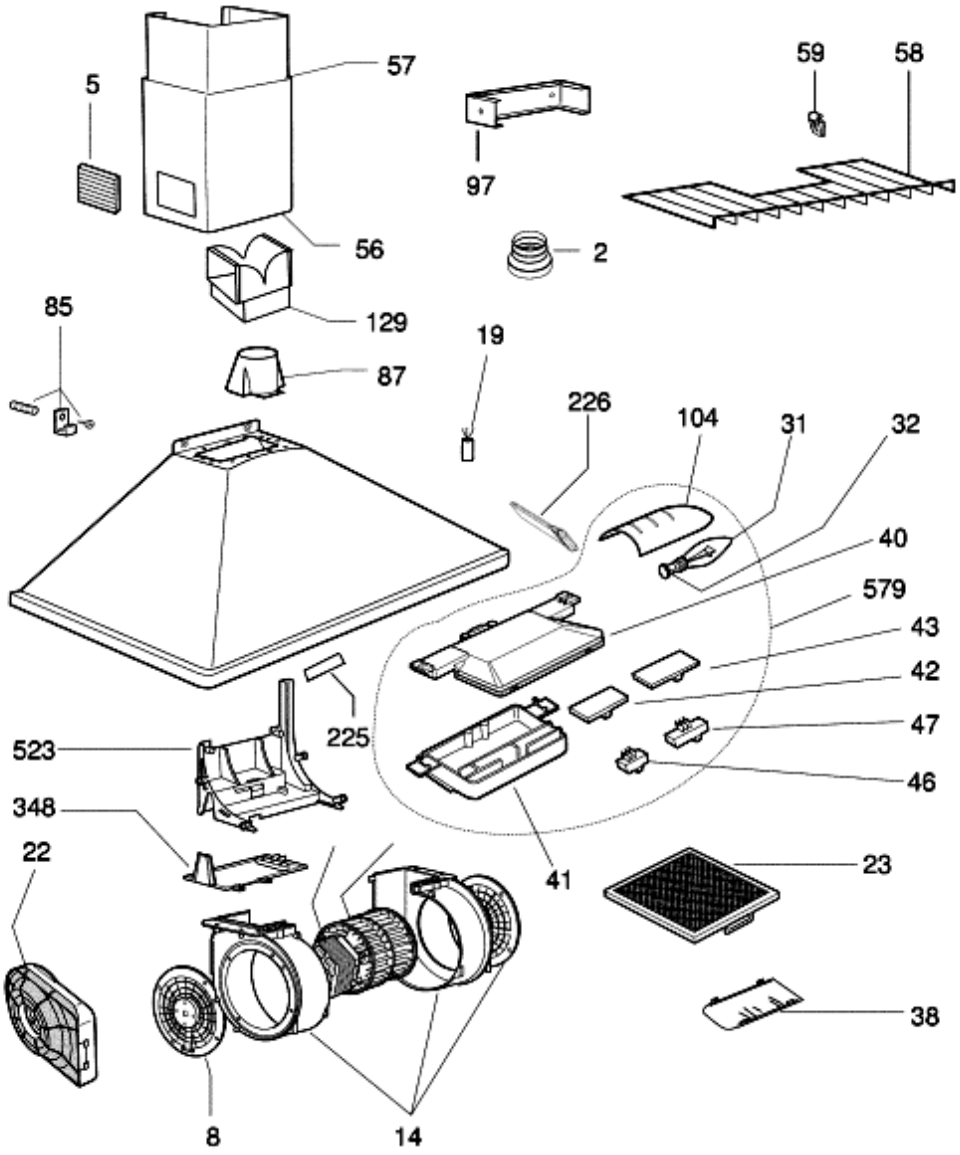


1548 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00098926			1 x C00112119	user instruction book		
005	C00136559			1 x C00242798	deflector an		
006	C00097966				motor propeller ra.		
007	C00098984				motor k42 ra 4+3		
008	C00097968			1 x C00242761	motor support		
014	C00134811			1 x C00242824	conveyor		
022	C00053806			1 x C00090710	carbon filter		
023	C00136541			1 x C00280008	grease filter		
031	C00131593			1 x C00292492	lamp 40w 240v		
032	C00135455				lamp holder		
038	C00097969			1 x C00242736	lamp cover		
040	C00097970			1 x C00242746	switches support		
041	C00098985				dashboard bk hl60.1		
042	C00098986				light button bk		
043	C00098987			1 x C00097973	motor key bk		
046	C00135642				lamp switch		
047	C00135643				fan motor speed - switch		
056	C00098988			1 x C00117215	bottom section ix		
057	C00098989			1 x C00142642	upper section ix		
085	C00126666				complete hook (+ screws)		
087	C00097976			1 x C00242759	connection piece		
097	C00098925			1 x C00119481	fixing bracket chimney hood		
104	C00136902			1 x C00242813	reflector		
129	C00136904			1 x C00242758	filtering coupling		
226	C00098990				corner frame bk		
226	C00196620				corner frame ix		
348	C00136900				cover		
523	C00136896				electrical equipment box		

Electric schemes and links

Cod. se571

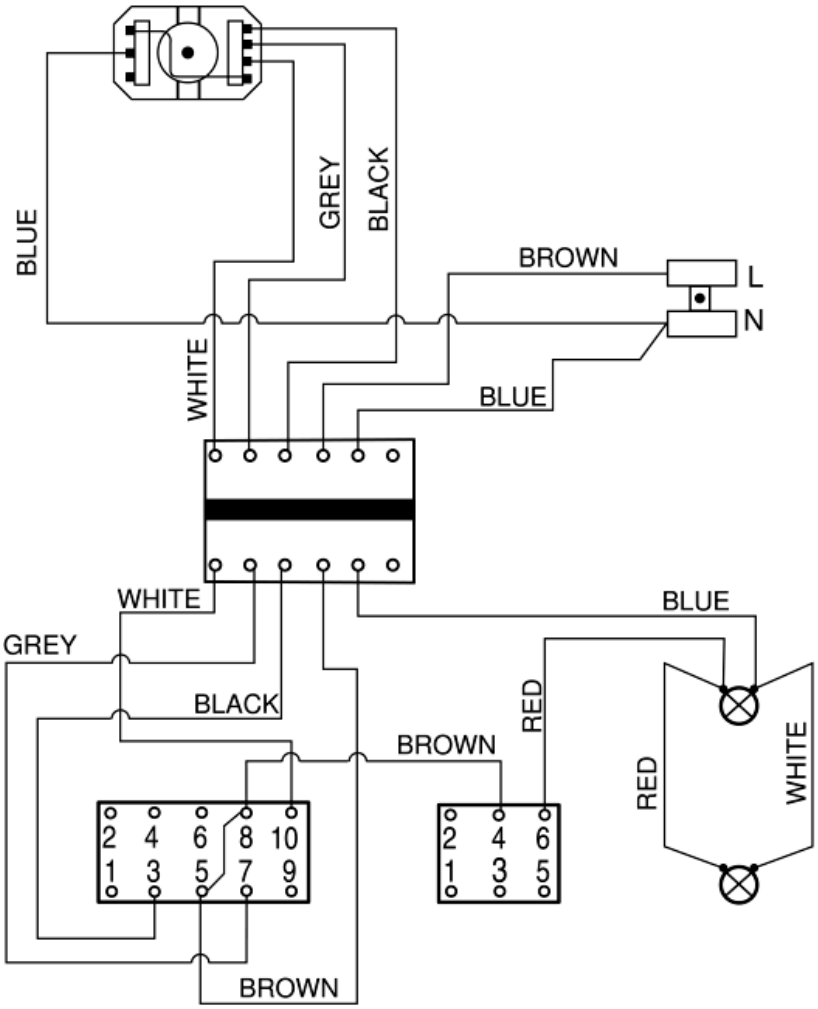

se571

Legend

Legend: se571

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element