Active Ironing Board

GC9080

Service
Service
Service



Philips Domestic Appliances and Personal Care

ServiceManual

PRODUCT INFORMATION

Features

- Double-sided ironing
- Heater temperature : 60 ± 5 °C
- Iron stand tray click-on system
- Large ironing surface : 1.10 m x 0.42 m
- Adjustable heights : 0.74 - 0.94 m
- Single leg construction
- Power cord length : 3m
- Cord storage compartment
- Wheels feature

Safety Information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements and legal regulations as officially laid down at this moment.

TECHNICAL INFORMATION

- Voltage	:	220 - 240 V
- Frequency	:	50 - 60 Hz
- Power Consumption	:	320 W - 380 W
- Dimension (F-box)	:	160 cm (L) x 54 cm (W) x (27 cm (H)
- Weight (Product)	:	17 kg

Double-sided Ironing

The surface is heated, allowing double-sided ironing, giving you faster and better result.
There are also on-board suction fan and blowing fan.
The suction fan can affix garments to the board for easier ironing. The blowing fan creates an air cushion on which delicate garment can be ironed without false creases.

Iron stand tray click-on system

The Philips Intellicare and the Provapor have a perfect fit on this new and strong support as a result of its shape and click-on system. This can accommodate both left and right handed.

Adjustable heights

The height of the ironing board can be set from 74 cm to 94 cm (6 positions) to suit different people.

Single leg construction

The single leg construction allows you to sit comfortably while ironing. The pivot joint of the legs is in the middle, making it well-suited for sitting on either side of the board.

Published by Philips Domestic Appliances and Personal Care Printed in the Netherlands © Copyright reserved Subject to modification

04/03

PHILIPS

IRONING BOARD TOP COVER 1

IRONING BOARD TOP 2


HEATING ELEMENT ASSY 4

FELT WITH ADHESIVE 5


THERMOSTAT 6

Remove IRONING BOARD COVER 1

Remove IRONING BOARD CLIP 3 (8x)

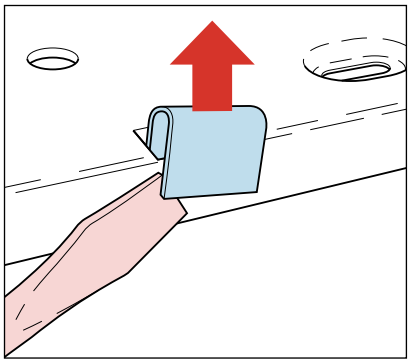

Open **Heating element clip** (6x)

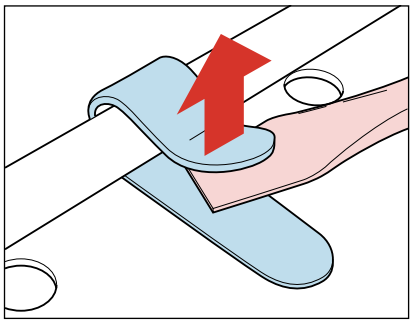

IRON TRAY ASSY 7

FAN BLADE 11

FAN MOTOR (SUCTION) 12

FAN MOTOR (BLOWING) 13

CONTROL PANEL ASSY 14

MAIN SWITCH 15

FAN SELECTOR SWITCH 16

POWER SOCKET 17

CORDSET ASSY 18

Turn the Ironing Board

Remove **Screw cover at tray** (2x)

Remove **Bolt A** (2x)

Remove **Leg from Ironing Board**

Remove **Screws B (Torx T20)** (2x)

Remove **IRON TRAY ASSY** 7

Remove **Screws C ('+')** (6x)

Remove **Screws D (Torx T20)** (5x)

Remove **Fan Housing**

Remove **Cord Storage Compartment**

Remove CONTROL PANEL ASSY 14

HINGE LEG ASSY 21

Remove SCREW COVER (grey) 20 (2x)

Remove **Bolt E**

WHEEL ASSY 22


Remove SCREW COVER (grey) 20 (2x)


Remove **Bolt F**

REPAIR INSTRUCTIONS

- You will need a Torx T20 screwdriver.
- **IRONING BOARD CLIP 3** must be replaced with new one once it is disassembled.
- **FAN CLIP 10** needs to be removed before disassembling **FAN BLADE 11**.
- Fan motor wiring : Black connector => Suction fan
  White connector => Blowing fan

Pos	Service code	Description
1	8899 001 75011	Ironing board cover (grey)
2	4239 022 54440	Ironing board top
3	4239 022 54450	Ironing board clip
4	4239 022 54460	Heating assy 230 V / 300 W
5	4239 022 54470	Felt with adhesive
6	4239 022 54480	Thermostat
7	4239 022 54490	Iron tray assy
8	4239 022 54500	Click-on slider
9	4239 022 54510	Rubber spacer
10	4239 022 54520	Fan clip
11	4239 022 54530	Fan blade
12	4239 022 54540	Fan motor (suction)
13	4239 022 54550	Fan motor (blowing)
14	4239 022 54560	Control panel assy
15	4239 022 54570	Main switch
16	4239 022 54580	Fan selector switch
17	4239 022 54590	Power socket (Belgium, France)
	4239 022 54690	Power socket (Gemany, Europe)
18	4239 022 54600	Cordset assy
19	4239 022 54610	Screw cover (white)
20	4239 022 54620	Screw cover (grey)
21	4239 022 54630	Hinge leg assy
22	4239 022 54640	Wheel assy
23	4239 022 54650	Rubber shoe

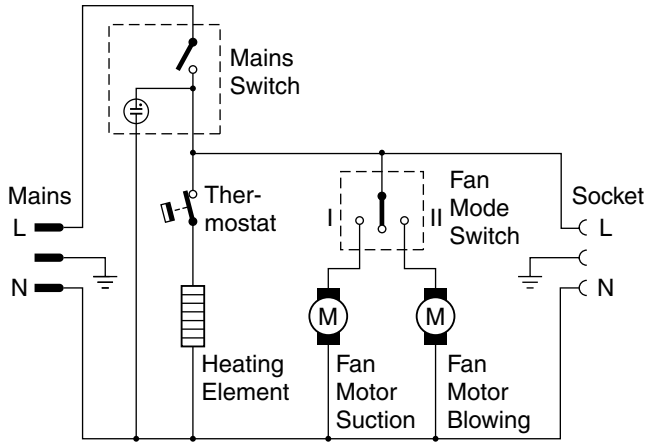

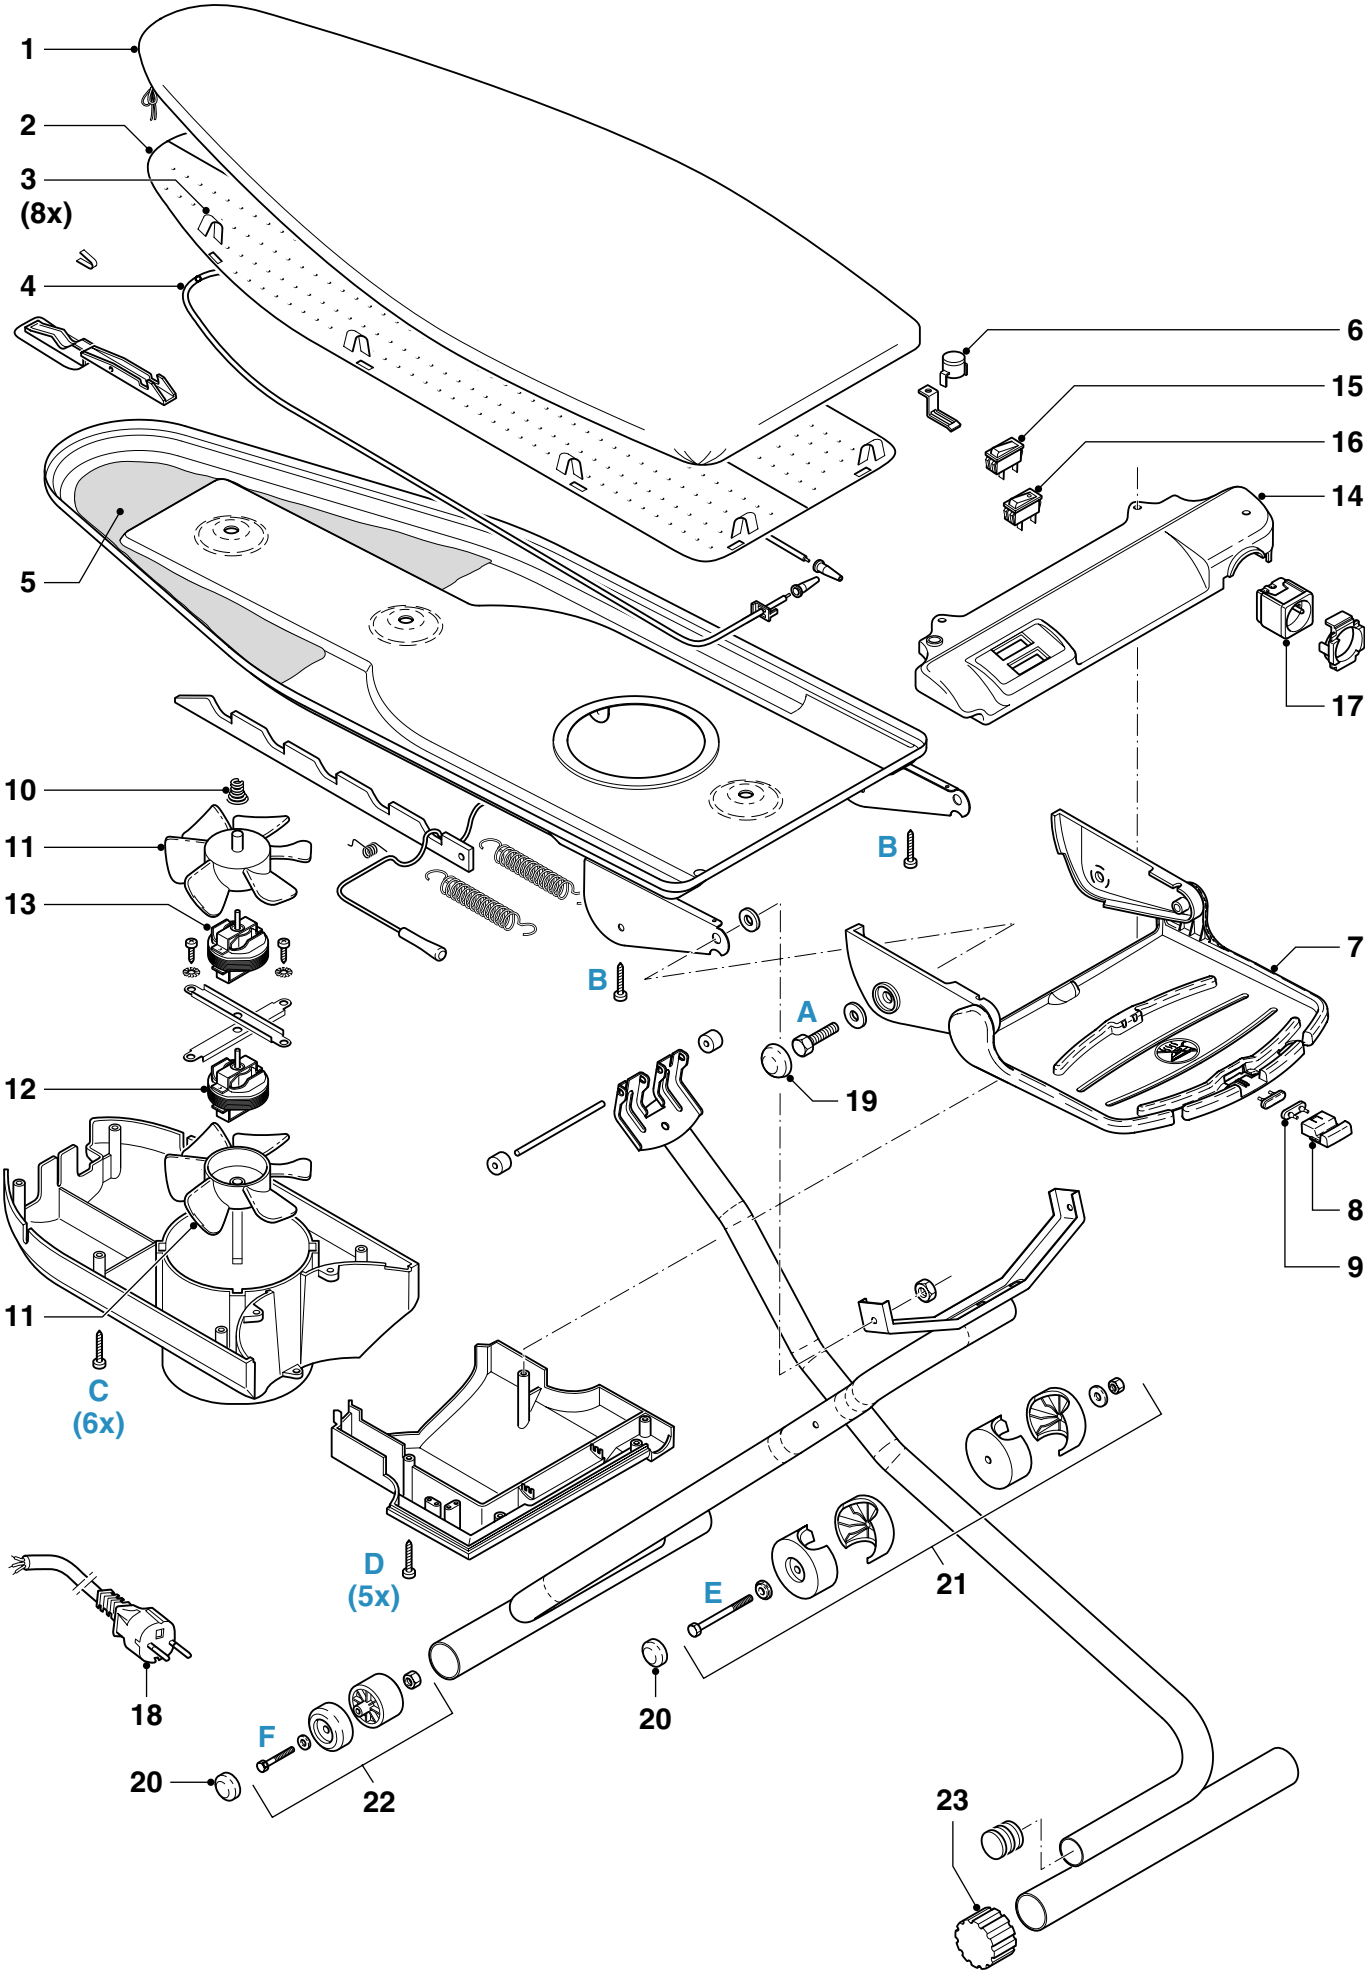
1
2
3
(8x)
4
5
6
15
16
14
17
10
11
13
12
11
C
(6x)
B
B
A
19
7
8
9
D
(5x)
E
21
18
20
F
20
22
20
23