
INDESIT company

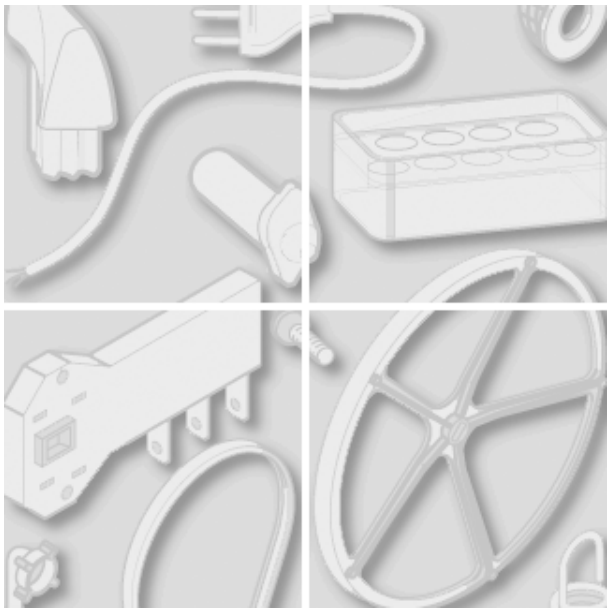

Model type:
HDM90.1IX

Commercial code:
F030681

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1625 Exploded views

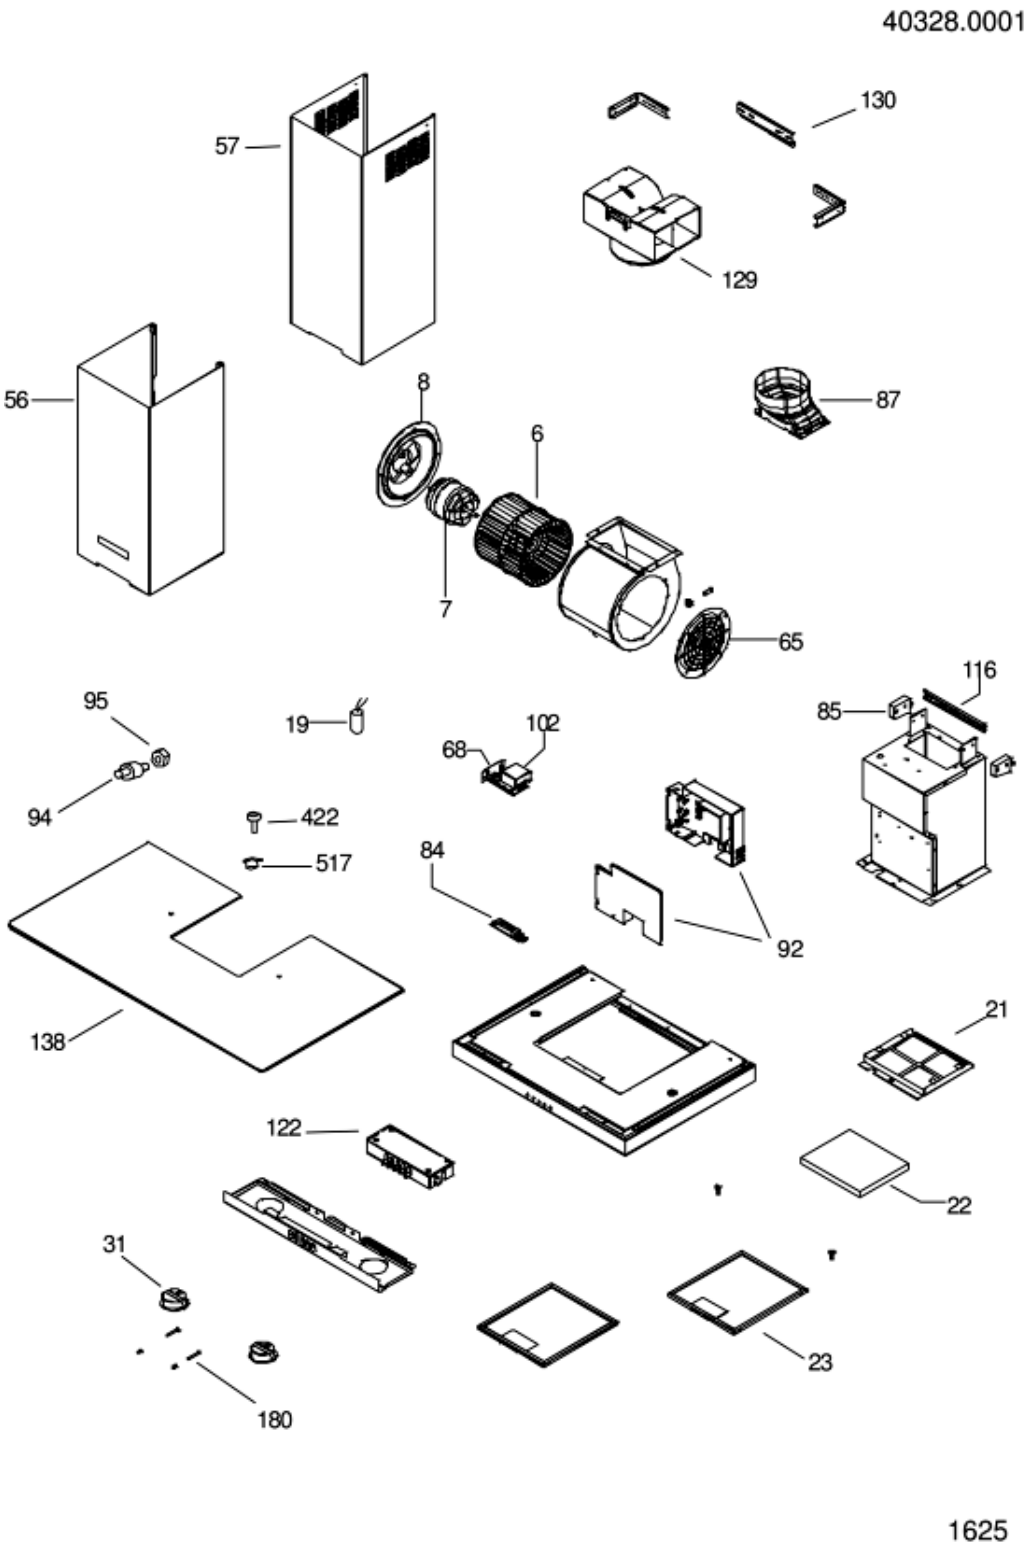


1625 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00109757				user instruction book hq90.1		
006	C00090119				motor propeller		
007	C00109747			1 x C00273127	motor		
008	C00134810				support motor		
019	C00126362				condenser		
021	C00090190				carbon filter support		
021	C00093799				fixing hook		
022	C00138742				washable carbon filter		
023	C00109752			1 x C00273128	grease filter		
031	C00138617			1 x C00242926	complete halogen lamp		
056	C00109872		40914...		chimney lower inox		
056	C00145766	40915...		1 x C00257244	chimney lower inox		
057	C00109541		40914...		chimney upper ix		
057	C00117218	40915...			chimney upper		
065	C00138717				suction compressor		
068	C00090189				cover connection block		
084	C00096871				transformer		
085	C00138719			1 x C00242931	fixing hook		
087	C00090198			1 x C00242755	drain coupling		
087	C00134793				drain coupling		
092	C00137585				electronic box (ix)		
094	C00126788				motor mounting		
095	C00130881				self-locking nut		
102	C00090179			1 x C00195758	connection block		
116	C00139691			1 x C00117280	bracket		
122	C00109876				control panel hdm90.1 ix		
129	C00091129			1 x C00273130	deflector tube		
130	C00092030				fastening upper chimney		
138	C00109877		40531...	1 x C00112160	glass h00ds hdm90.1 ix		
138	C00112160	40601...			glass h00ds hdm90.1 ix de##		
422	C00095204	40601...			screw fixing glass		
422	C00142665		40531...		screw, fixing glass		
517	C00095206	40601...			washer		

Electric schemes and links

Cod. se1FUA

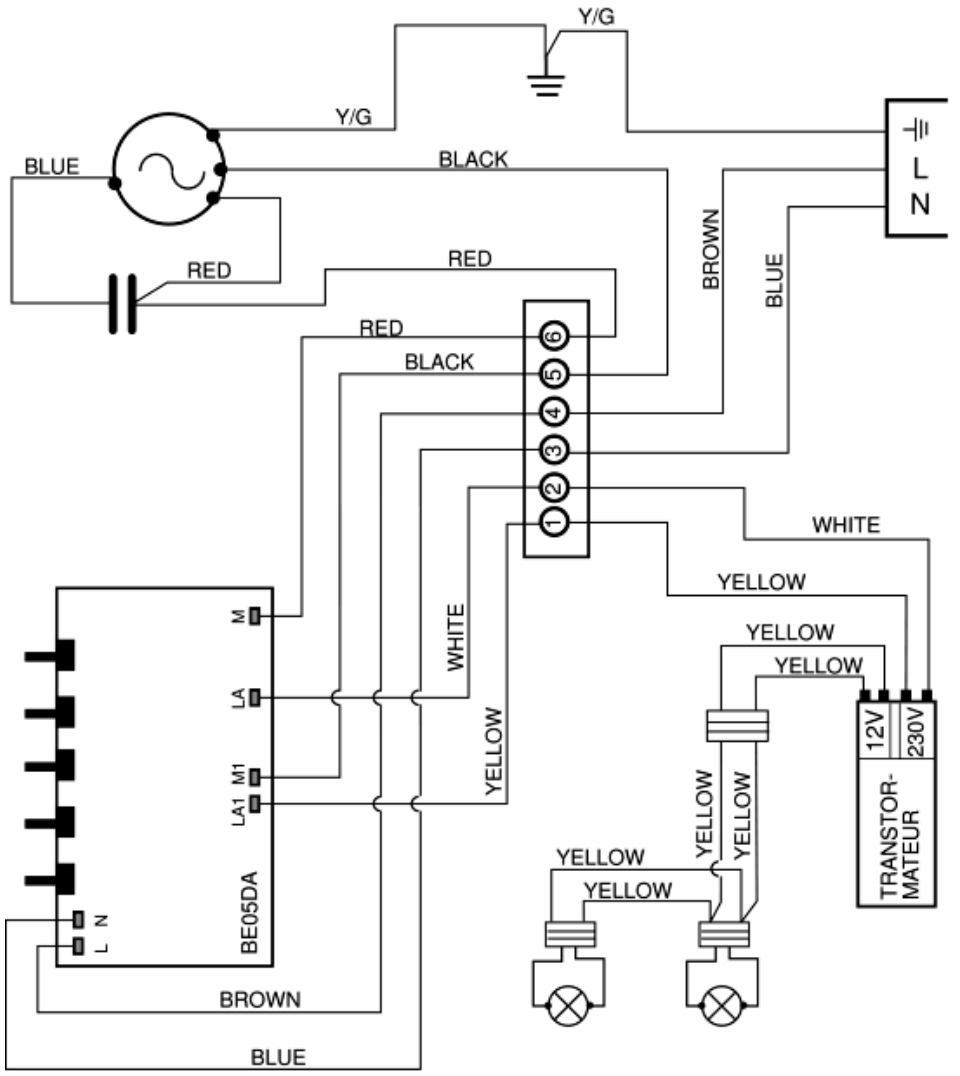

se1FUA

Legend

Legend: se1FUA

ARE	Off	J/V	Yellow / green
AUTO	Automatic	M	Motor
B	Blue	MA	On
BAST	Ballast	MANU	Manual
BCL	Light-blue	MN	Timer
BFO	Dark blue	MR	Brown
BR	Brown	N	Black
BRAL	Power terminal	NEU	Neutral
BRR	Connection terminal board	OR	Orange
C	Capacitor	OZ	Ozone lamp
CI	Printed circuit	PAB	Terminal strip
COM	Selector	PCDE	Control panel
CON	Connector	PEVI	Low speed
COPL	Control connector	PH	Phase
CORD	Supply cable	R	Red
ECL	Lighting	R / B	Red/blue
EL	Lighting lamp	R / W	Red/white
FER	Ferrite	RL	Relay
FILT	Filter	RO	Pink
FUS	Fuse	RST	Heating element
GDVI	High-speed	SVI	Speed selector
GR	Grey	TDER	Derivation plate
ILUM	Light switch	TR	Transformer
INT	Switch	TURB	Turbine
INTB	Two-pole switch	VARI	Speed variator
INVB	Two-pole inverter	VI	Violet
IT	Turbine switch	VOVT	Fan LED