
INDESIT company

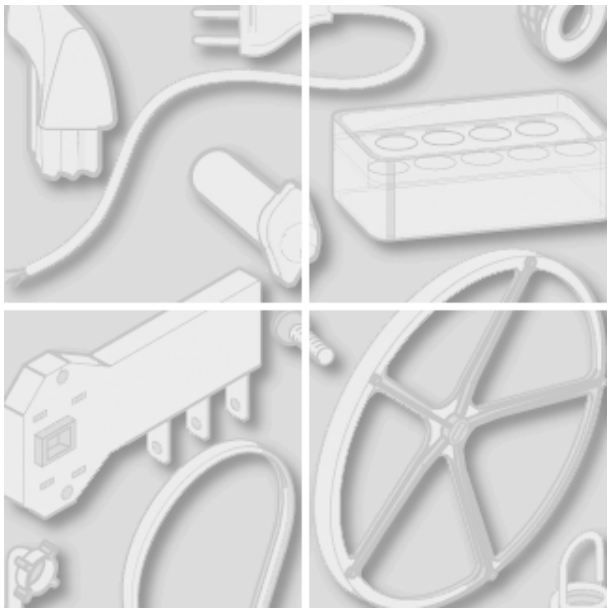

Model type:

PZ640T(IX)/HA

Commercial code:

F073149

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:

REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics


INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

4230350a Exploded views

51030.0001

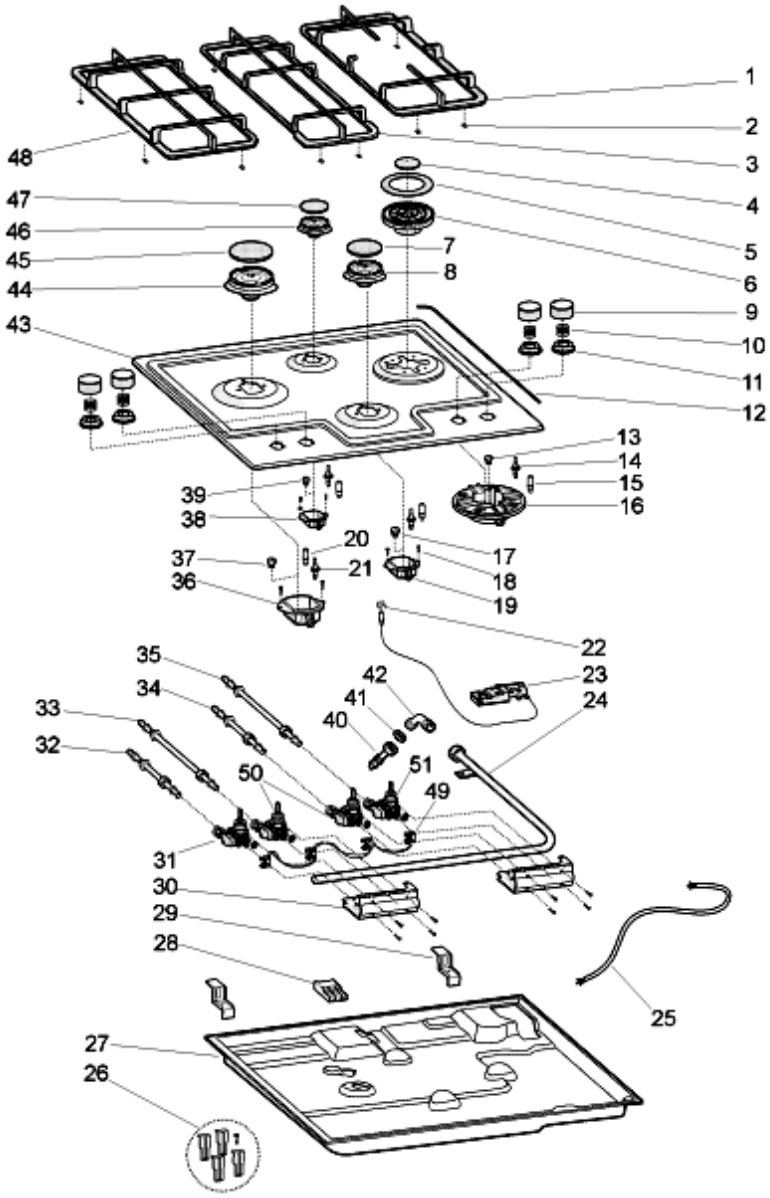

4230350a

4230350a

Spare parts list


Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00141845				pan grid (rh) - shiny black pz640t		
003	C00141844				pan grid (centre) shiny black		
004	C00283256				burner cap centre tc shiny black		
005	C00283257				burner cap outer tc black gloss		
006	C00283228				burner base/flame split. - triple		
007	C00052932				burner cap semi rapide		
008	C00052929				burner ring - medium		
009	C00263684				knob (gas tap) opaque chrome		
010	C00039156				knob disc - spring		
011	C00263685				knob disc chrome		
012	C00018723			1 x C00018819	sealing gasket - hob/worktop		
013	C00053176				gas jet 91 lpg - triple burner/wok		
013	C00283230				nozzle met. d145/100		
014	C00095765				screw nut thermo. tc		
014	C00113400				thermocouple tc l=600mm		
015	C00090374				spark plug seal		
015	C00282425				electrode tc + 3.6 kw o-ring l=600		
016	C00119172				burner cup - triple burner 3.8kw		
017	C00052938				gas jet 64 lpg - medium burner		
017	C00052941				natural gas jet (96)		
019	C00052926				burner cup - medium burner		
020	C00118496			1 x C00052951	electrode l=520		
021	C00052986				thermocouple ** not for triple		
021	C00093834				screw nut m6		
022	C00052934				electrode clip		
023	C00095359				ignition transformer		
024	C00141761				gas pipe pz640		
025	C00035727			1 x C00276836	mains supply cable 3x2,5		
025	C00280173				junction clamp richco		
026	C00052952				clamp kit - hob/worktop		
027	C00141764				base cover xp 640 mst		
028	C00297837				terminal block 5 f.+cavo 6a		
029	C00141763				tap bracket pz		
030	C00141760				fixing saddle - gas tap		
031	C00111241				gas tap large copreci		

4230350a Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
032	C00141756				front left burner supply pipe		
033	C00141758				burner supply pipe aux		
034	C00141757				pipe semifast- tap		
035	C00141759				pipe burner t.c.		
036	C00052925				burner cup - large burner		
037	C00056359				gas jet (80) lpg - large burner		
037	C00056360				gas jet 110 nat gas - large burner		
038	C00052927				burner cup - small burner		
039	C00052939				gas jet 50 lpg - small burner		
039	C00066166				nat gas aux. burner nozzle rapido		
041	C00010506				sealing washer - gas elbow/pipe		
042	C00024370				elbow connection (1/2 male x 2)-		
043	C00255986				working table pz 640 t ix ha		
044	C00052928				burner ring/flame splitter - large		
045	C00052931				burner cap rapide (large) black		
046	C00052930				burner base/flame splitter - small		
047	C00052933				burner cap auxiliary (small) black		
048	C00141843				pan grid (lh) shiny black pz640-		
049	C00111235				microswitch ring		
049	C00143913				ignition microswitch (4) copreci		
050	C00111240				gas tap medium/auxiliary copreci		
051	C00280014				gas tap - miniwok b.61		
099	C00064912				screw m4x18 tsp nikelata		

Electric schemes and links

Cod. 16001636200

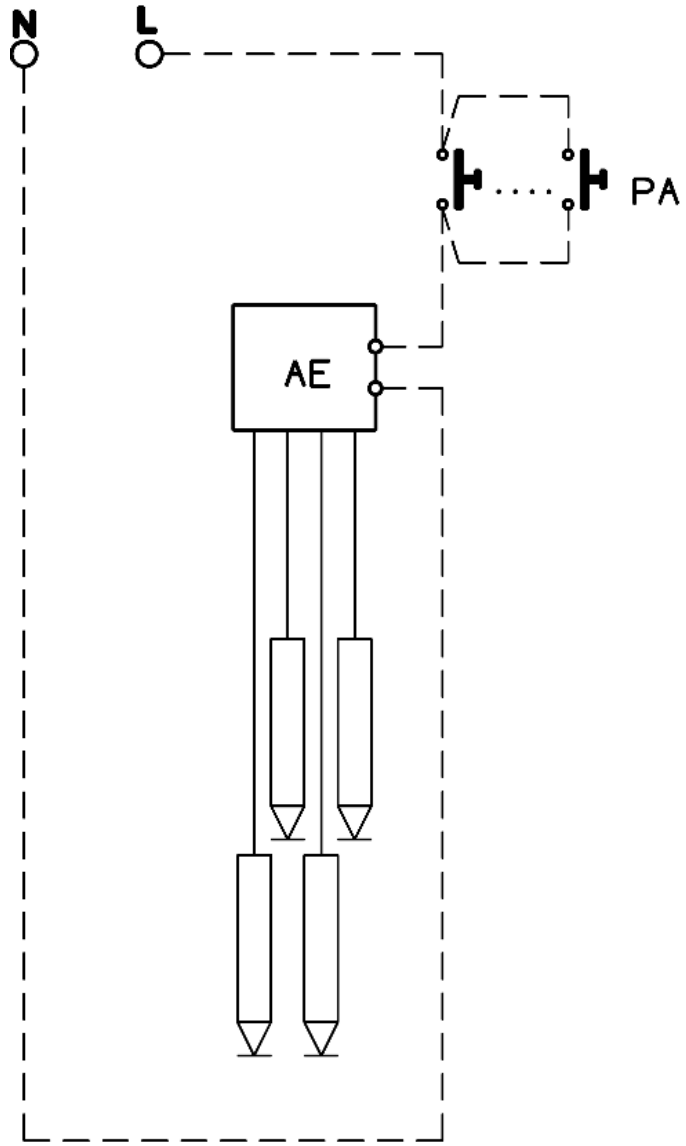

se16001636200

Legend

Legend: 16001636200

AE	Ignition transformer	PE	Plate electric (Normal and Rapid)
AT	Ignition transformer	PEL	Wall socket
CF	Oven commutator	PIF	Cooking programmer
CP	Plate commutator(Normal end Rapid)	POT	Thermostated potentiometer
CT	Plate commutator(Automatic)	PT	Termoprotector
DC DR	Double Knob double crown burner control card	PTC	Thermostated sensor
EV	Electro-Valve	RCE	Grill heating element ex- ternal
FC	End of cooking programmer	RCI	Grill heating element internal
FRONT	Daschboard	RE	Energy regulator
I/LF	OVEN LIGHT SWITCH	RF	Oven lower heating element
I/LF-MG	OVEN LIGHT SWITCH + ROTISSERIE	RG	Grill heating element
I/MG	TURNSPIT SWITCH	RG COM	Grill heating element un- ion
IL	Knobs' Lighting	RV	Heating element ventilated oven
ILG	Lamp switch turnspit	SA	Boiler operating led
IT	Thermostated switch	SB	Thermostated burner led
L	Line (Feed)	SF	Warning light working
LF	Oven light	SO	Probe temperature
LI	Oven light	SP	Operating Indicator Light for the Plate
M	Suction motor handle	ST	Warning light thermostat
MG	Turnspit motor	TH	Thermostat fixed
MO	Terminal board	TH2	Thermostated burner cooling
MUFF	Oven	THR	Adjustable thermostat
MV	Fan motor	TP	Termoprotector
N	Neutral (Feed)	TRAV	Support terminal board
PA	Ignition push-button	TRM	Thermostated burner control card