
Exploded View


Position numbers begins with A
unless indicated with another number.

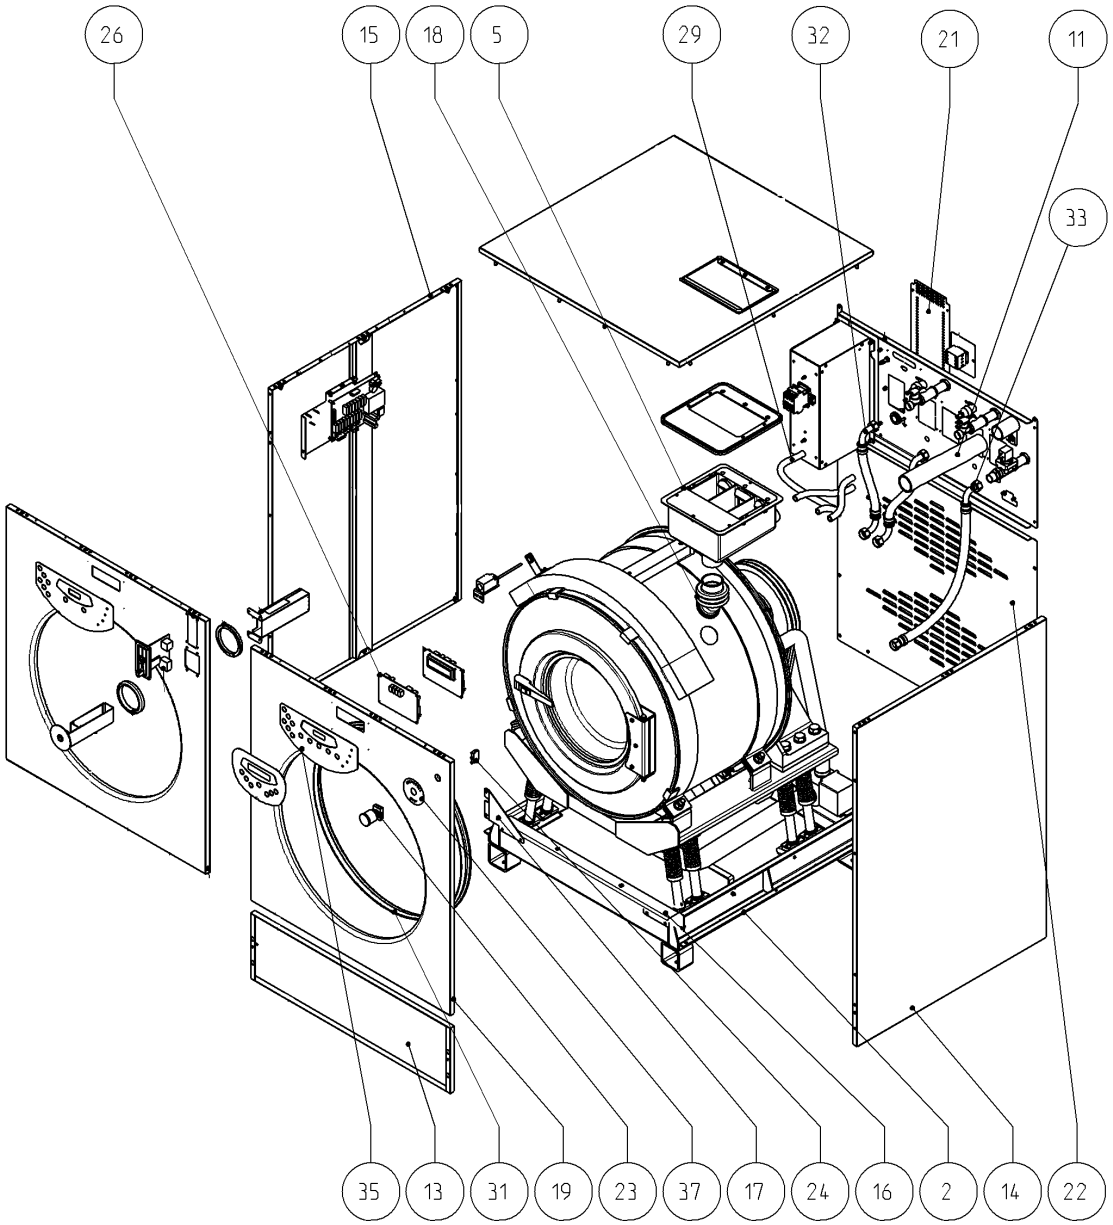

AGB233A

Exploded View


Position numbers begins with B
unless indicated with another number.

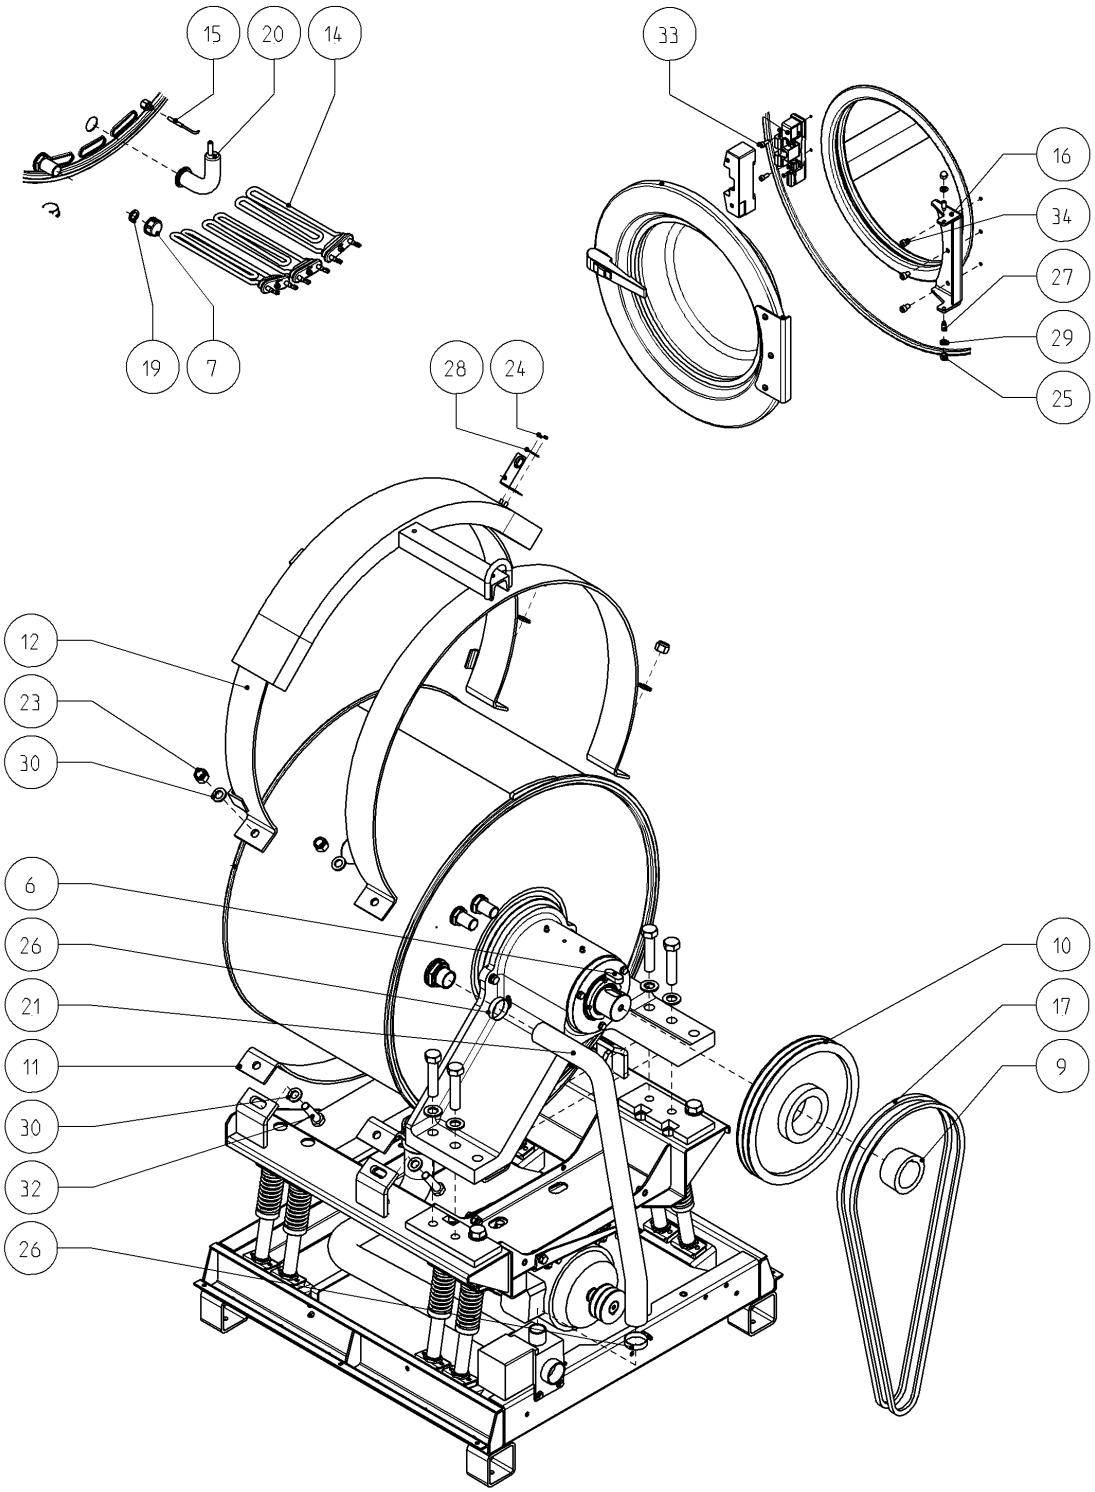

AGB233B

Exploded View


Position numbers begins with C
unless indicated with another number.

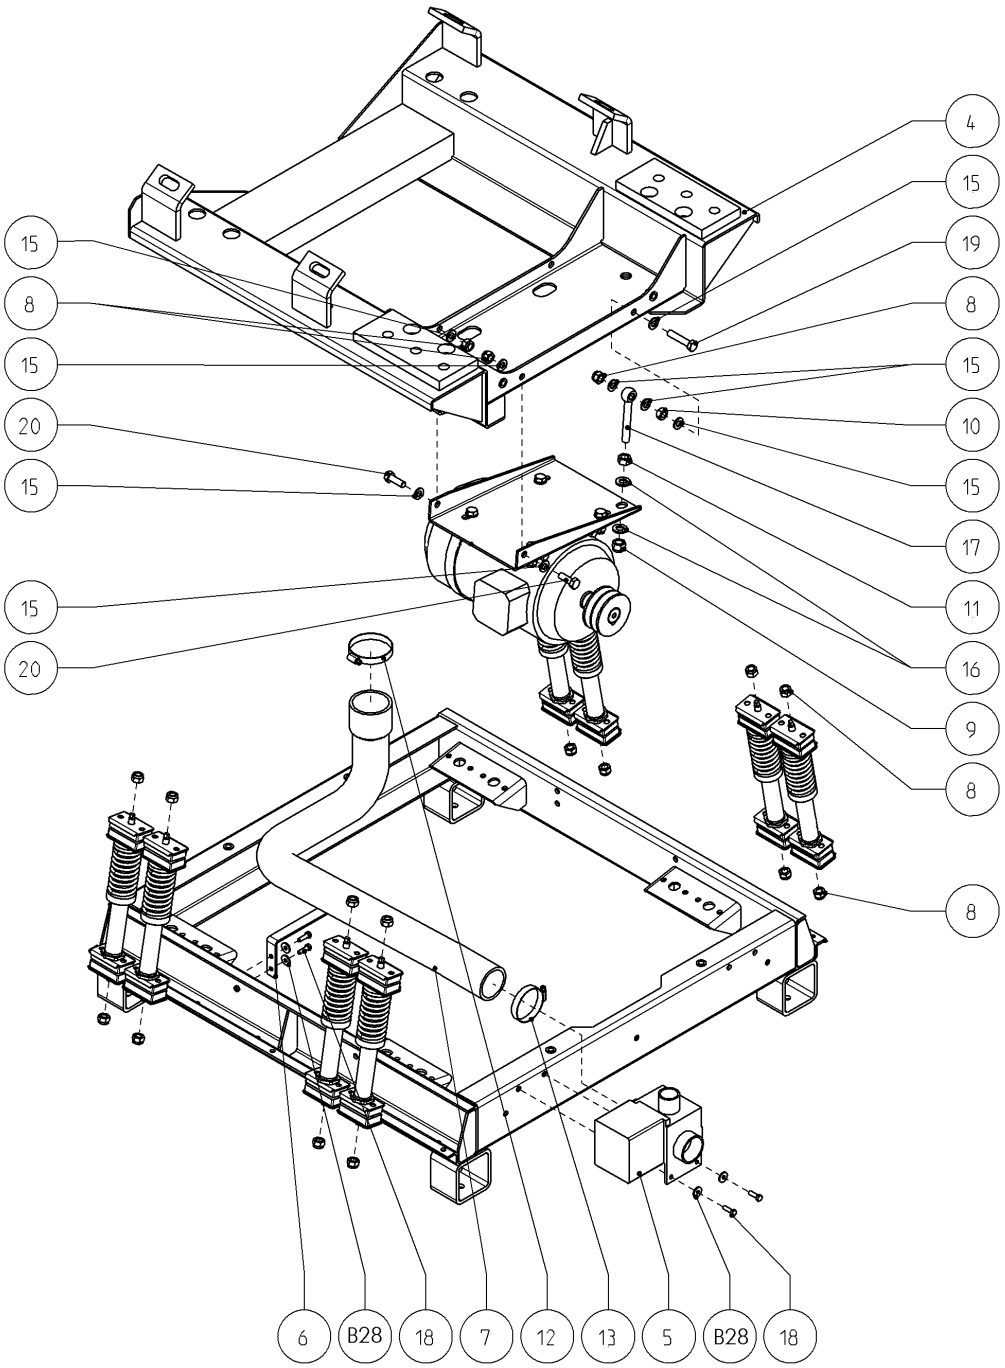

AGB233C

Exploded View


Position numbers begins with D
unless indicated with another number.

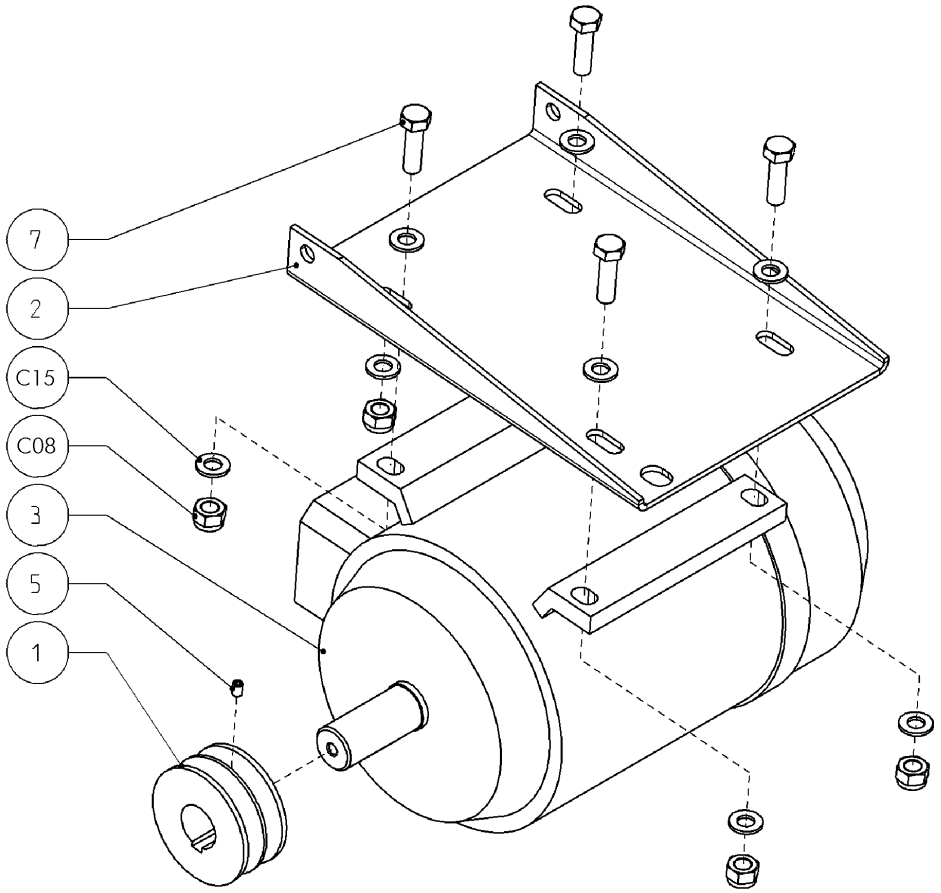

AGB233D

Exploded View


Position numbers begins with E
unless indicated with another number.

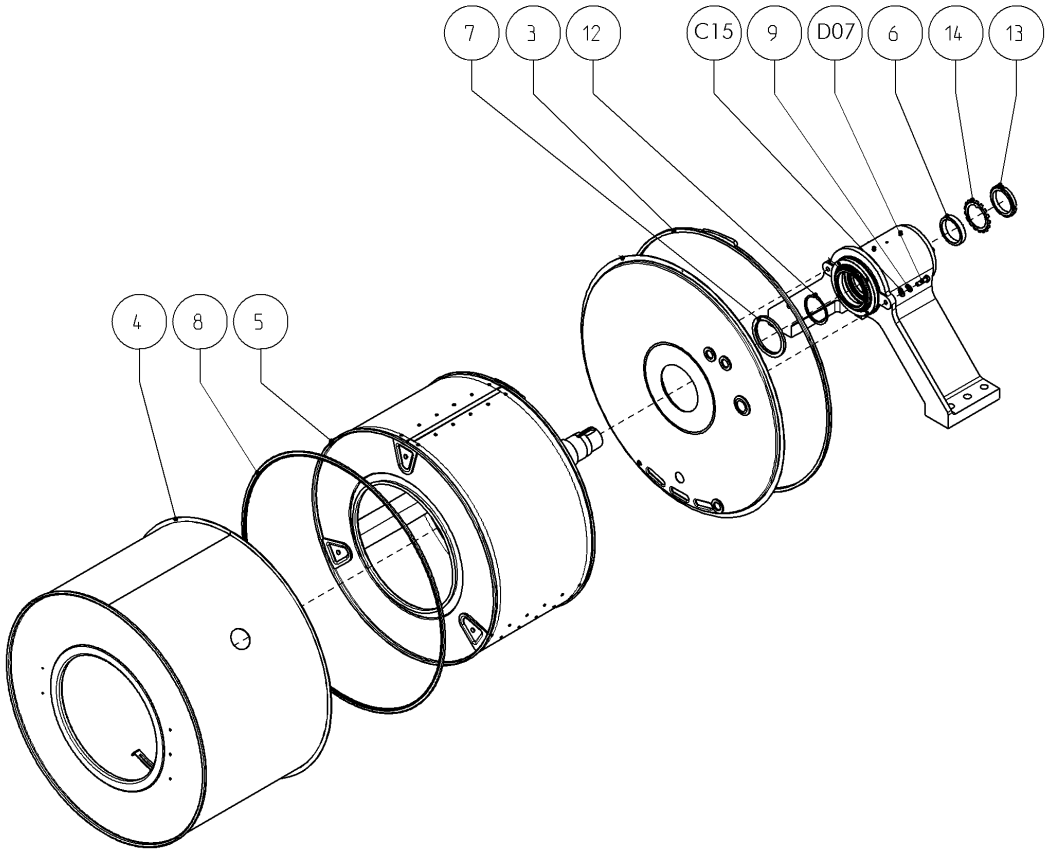

AGB233E

Exploded View


Position numbers begins with F
unless indicated with another number.

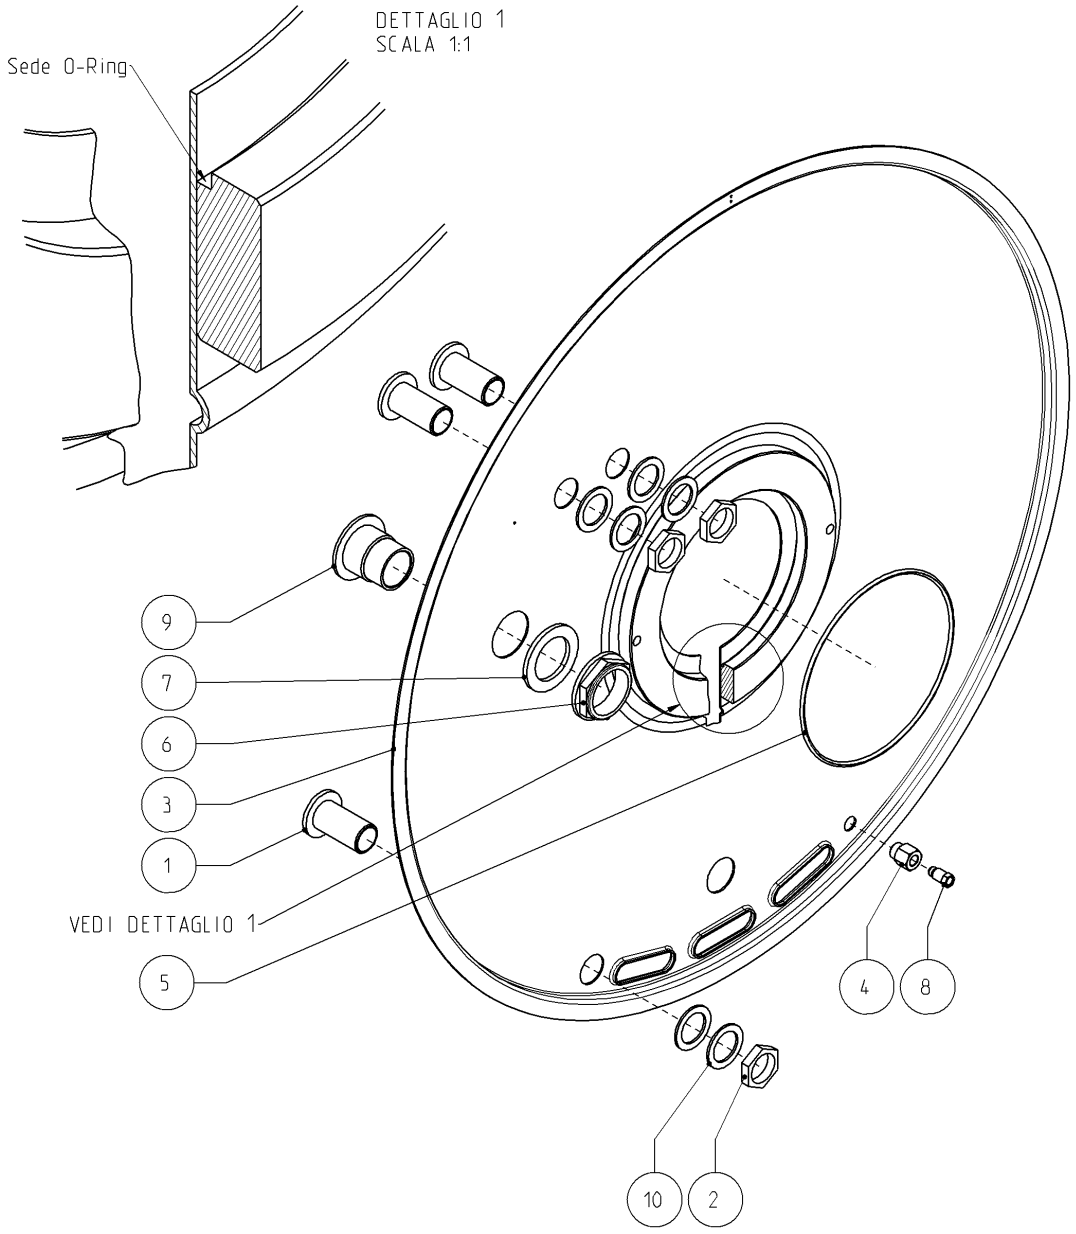

AGB233F

Exploded View


Position numbers begins with G
unless indicated with another number.

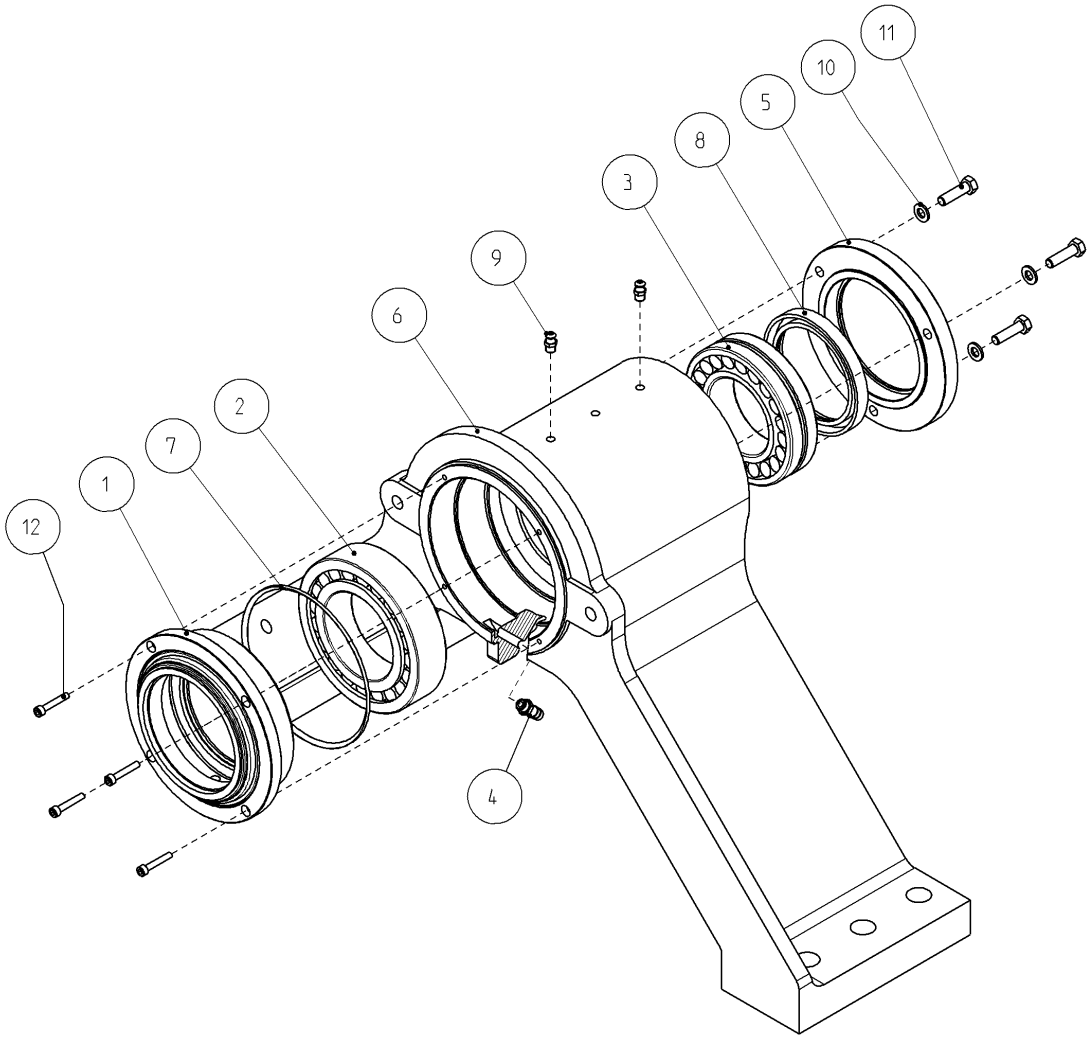

AGB233G

Exploded View


Position numbers begins with H
unless indicated with another number.

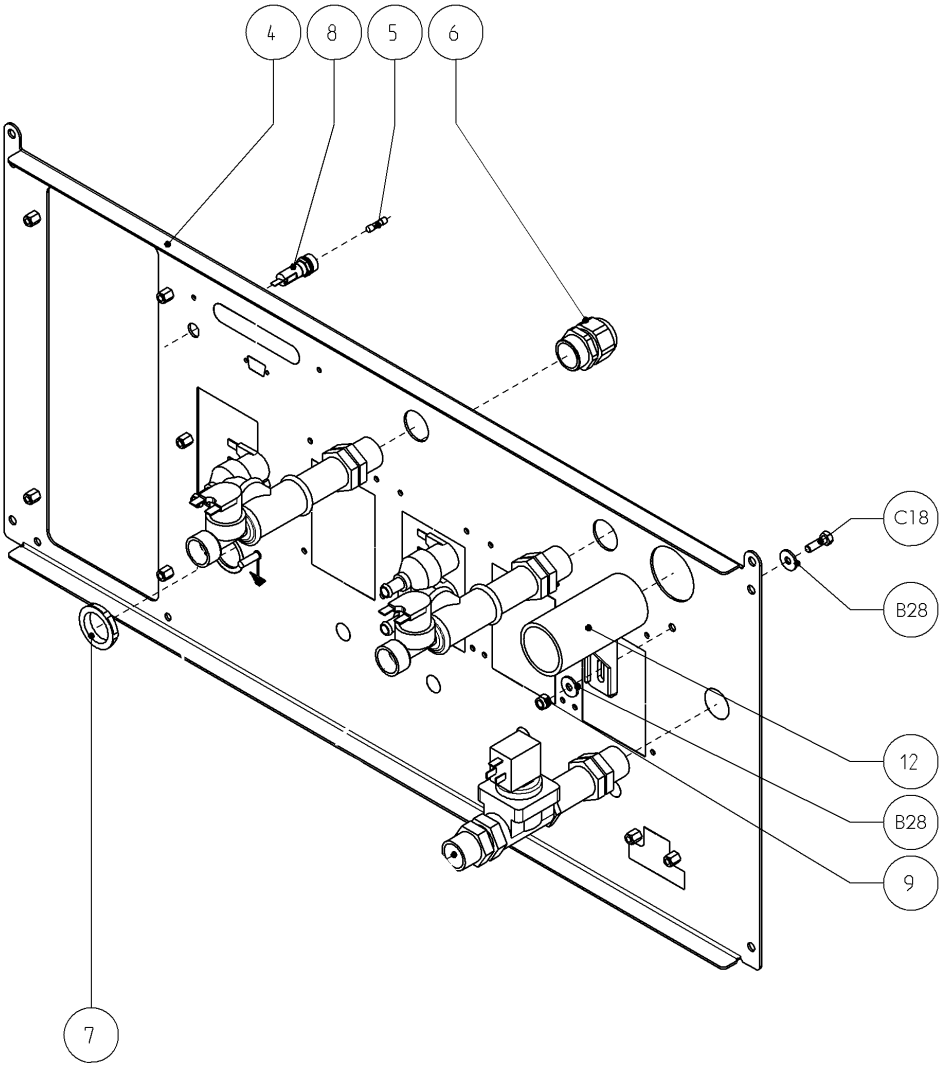

AGB233H

Exploded View


Position numbers begins with I
unless indicated with another number.

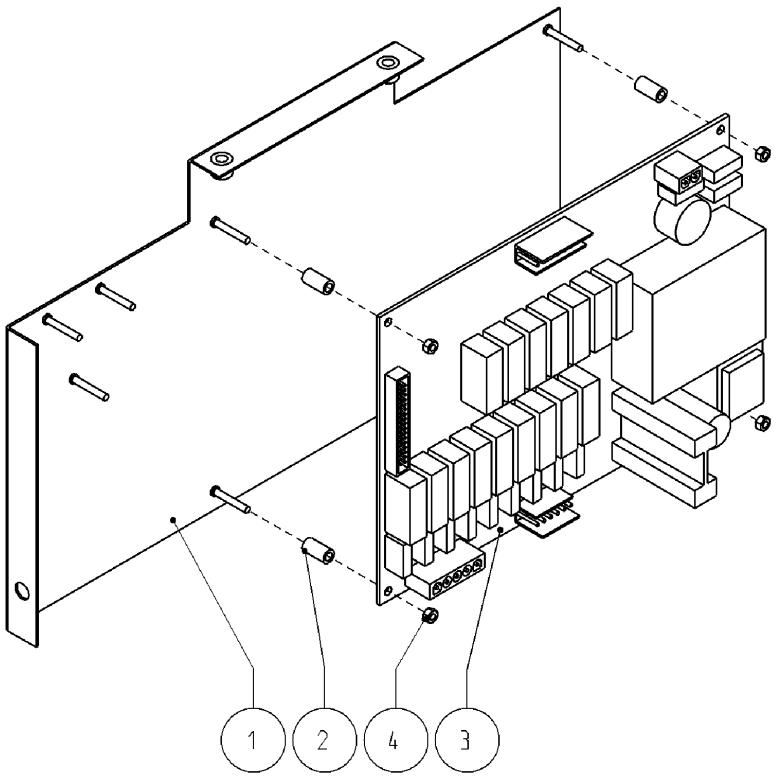

AGB233I

Exploded View


Position numbers begins with J
unless indicated with another number.

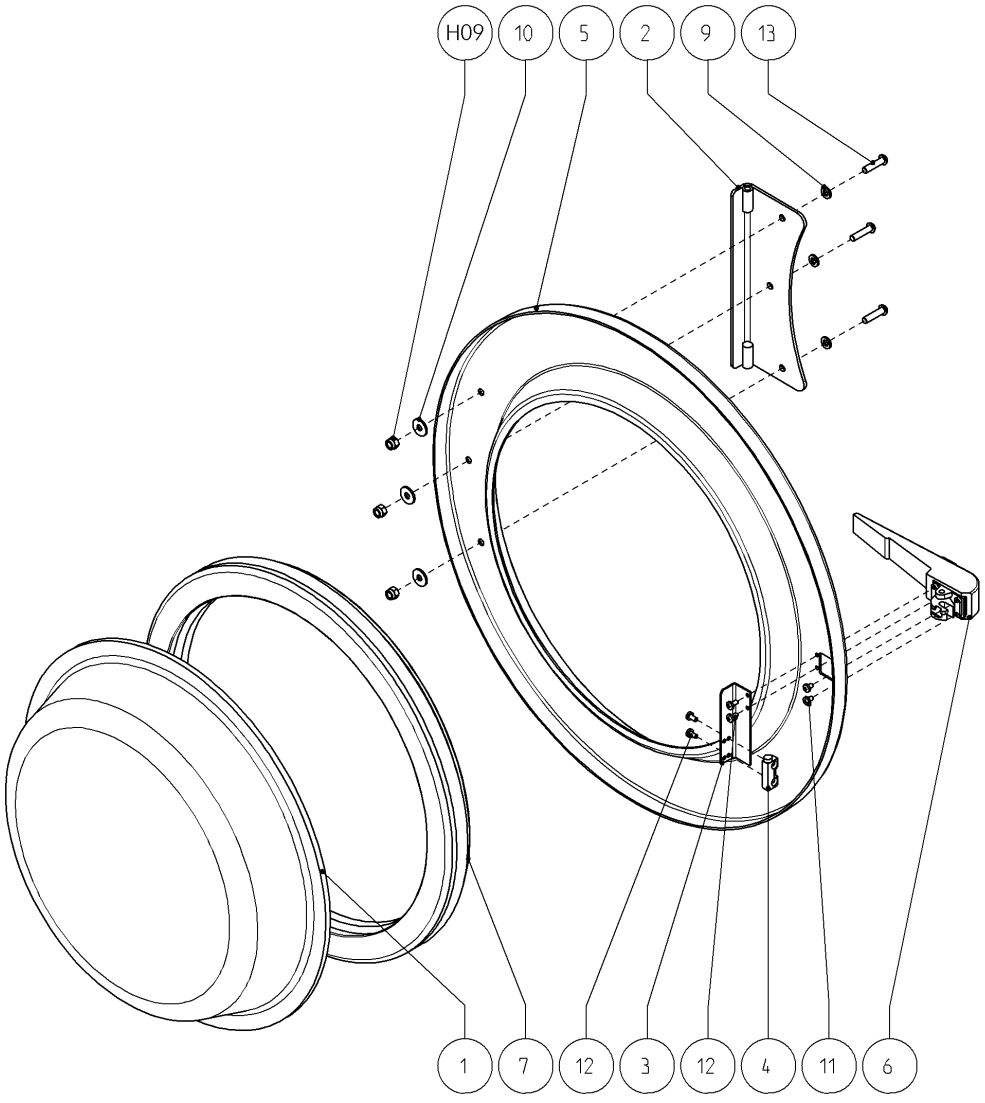

AGB233J

Exploded View


Position numbers begins with K
unless indicated with another number.

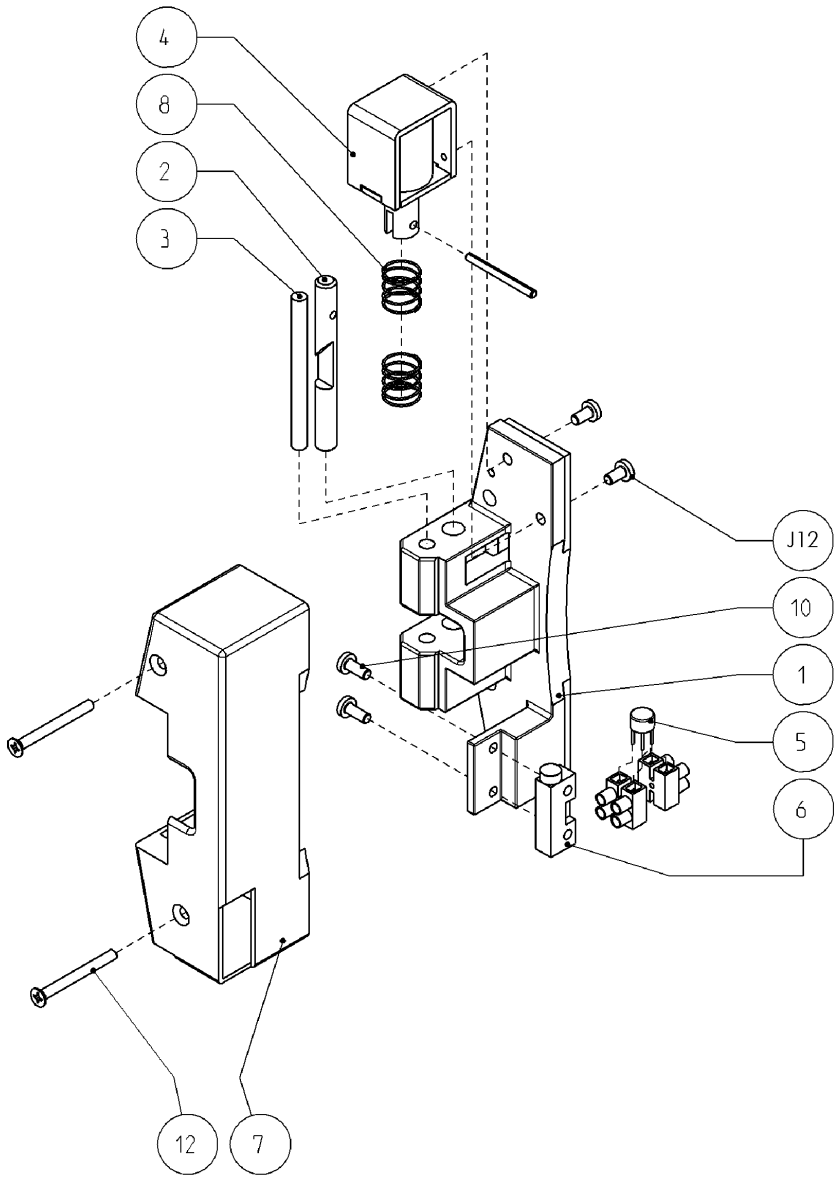

AGB233K

Exploded View


Position numbers begins with L
unless indicated with another number.

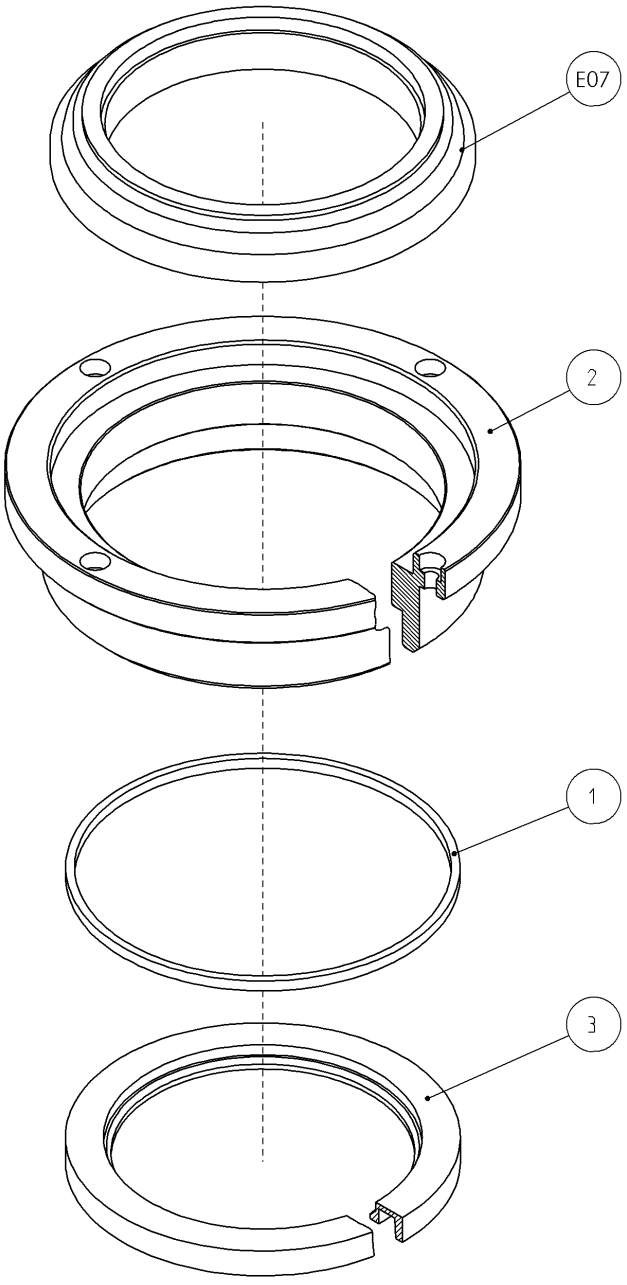

AGB233L

Exploded View


Position numbers begins with M
unless indicated with another number.

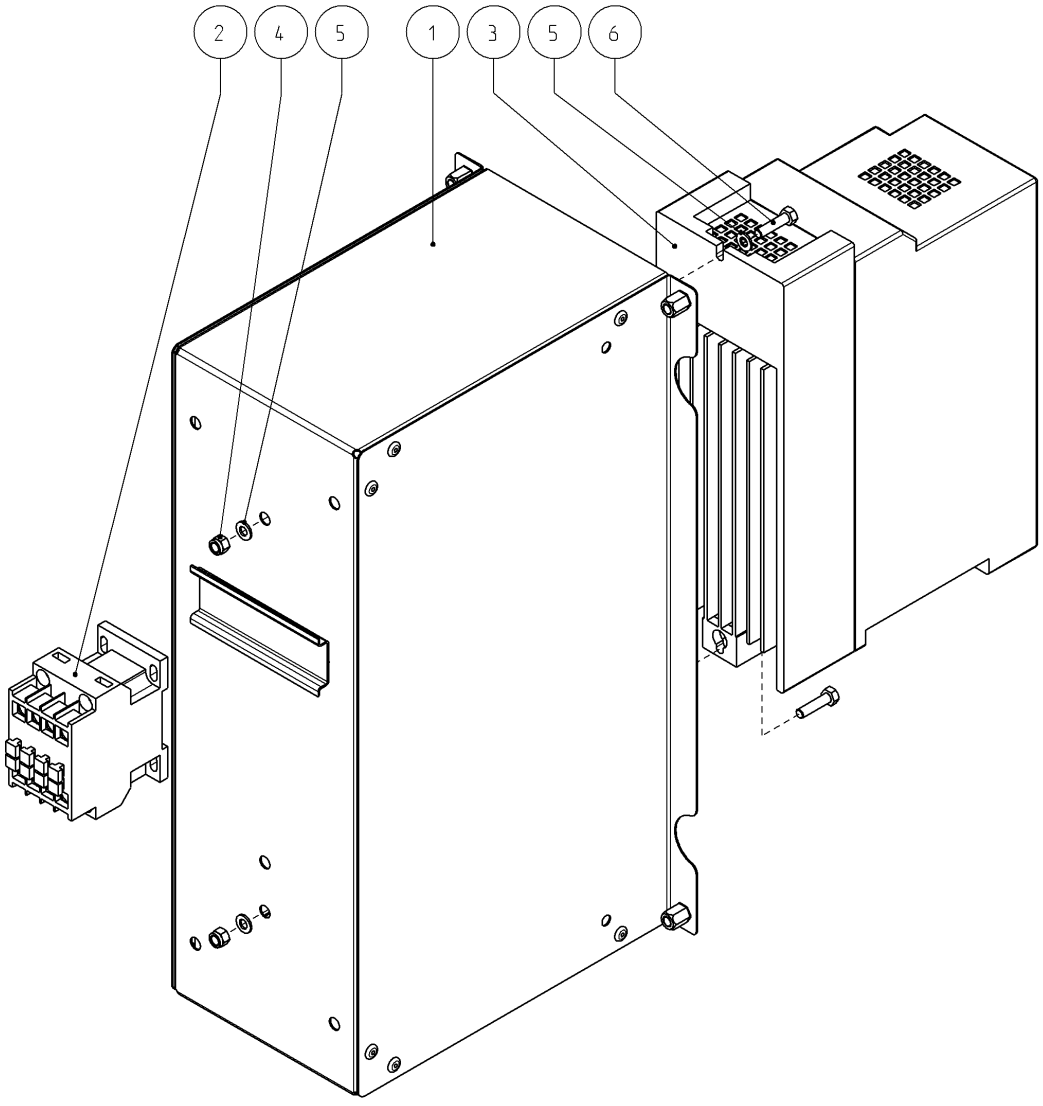

AGB233M

Exploded View


Position numbers begins with N
unless indicated with another number.

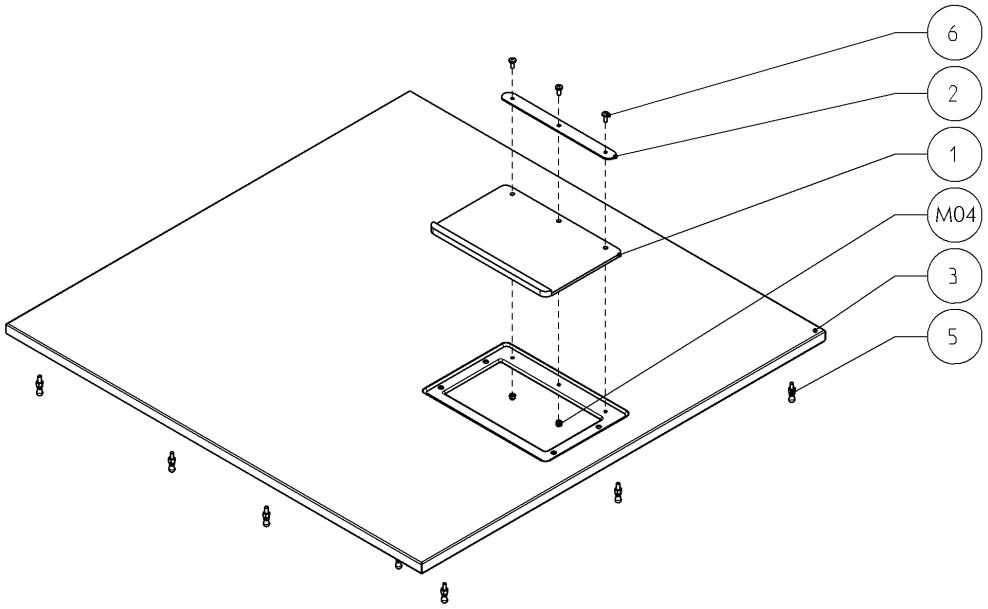

AGB233N

Exploded View


Position numbers begins with O
unless indicated with another number.

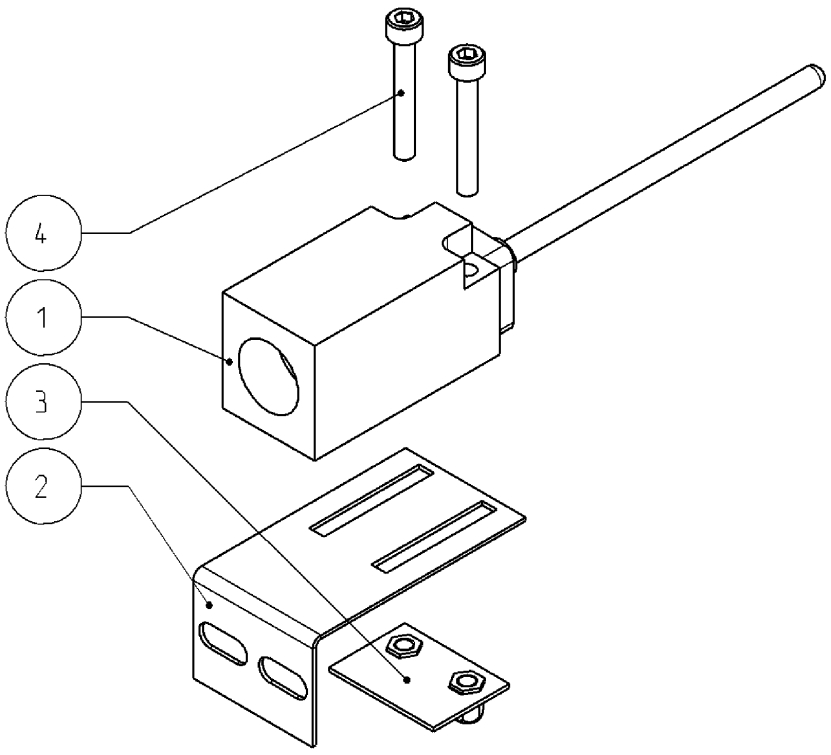

AGB233O

Exploded View


Position numbers begins with P
unless indicated with another number.

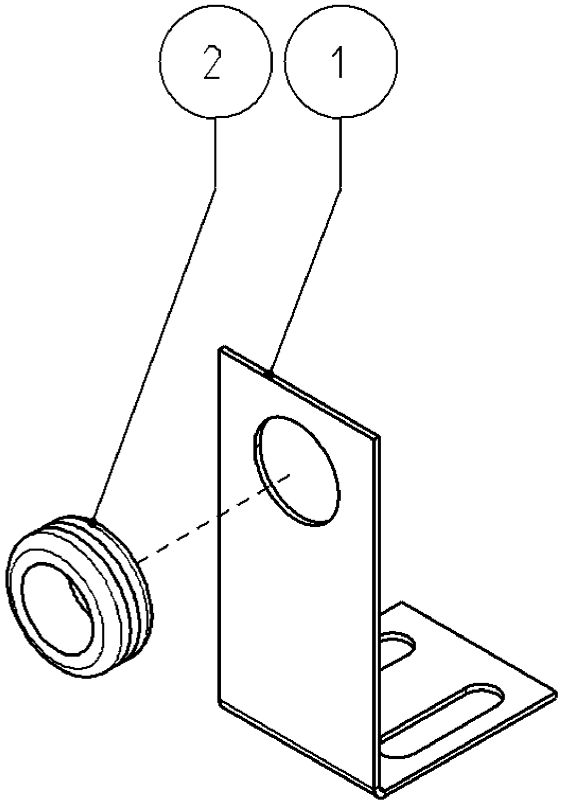

AGB233P

Exploded View


Position numbers begins with Q
unless indicated with another number.

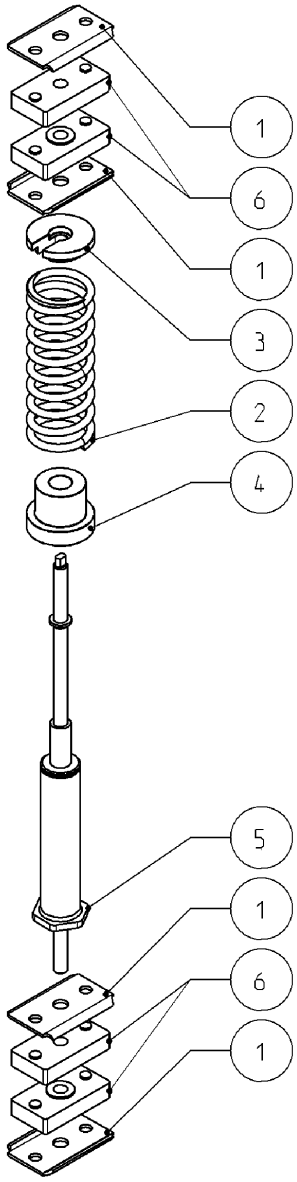

AGB233Q

Exploded View


Position numbers begins with R
unless indicated with another number.

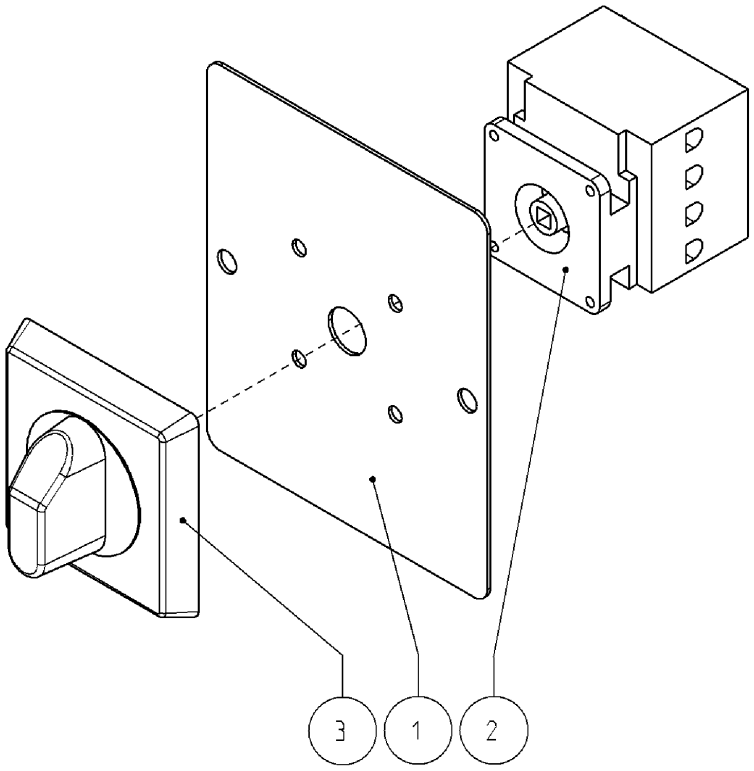

AGB233R

Exploded View


Position numbers begins with S
unless indicated with another number.

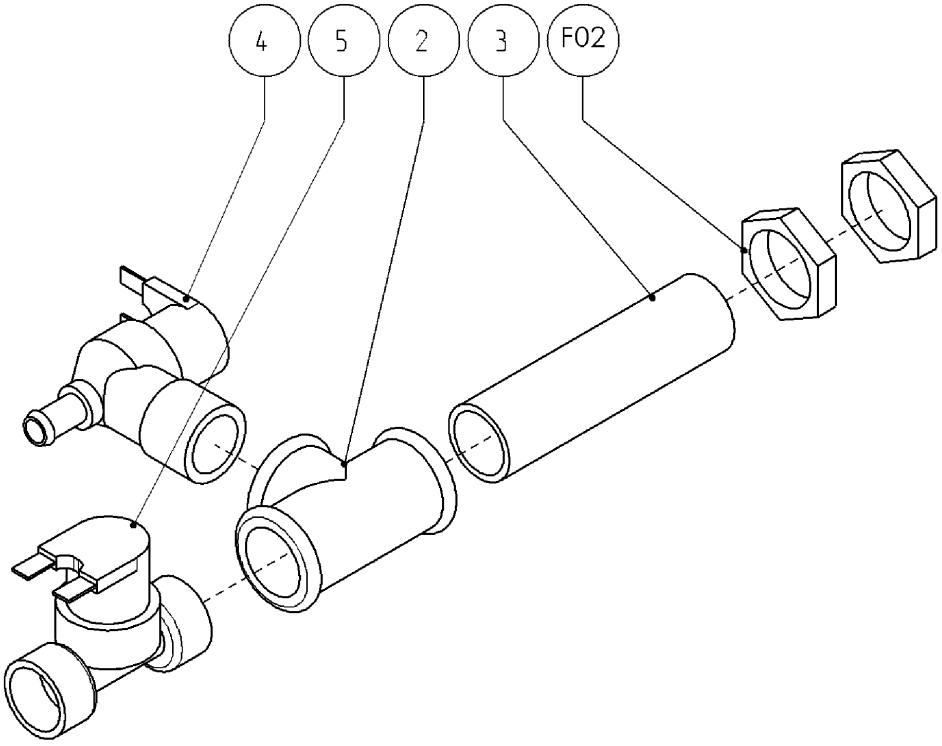

AGB233S

Exploded View

Position numbers begins with T
unless indicated with another number.

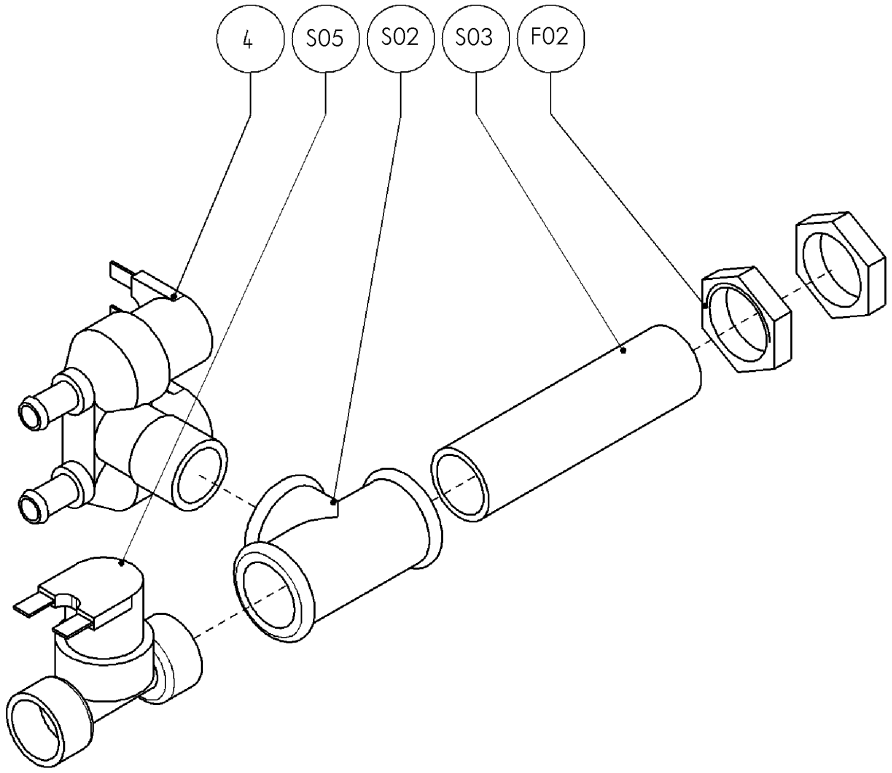

AGB233T