
INDESIT company

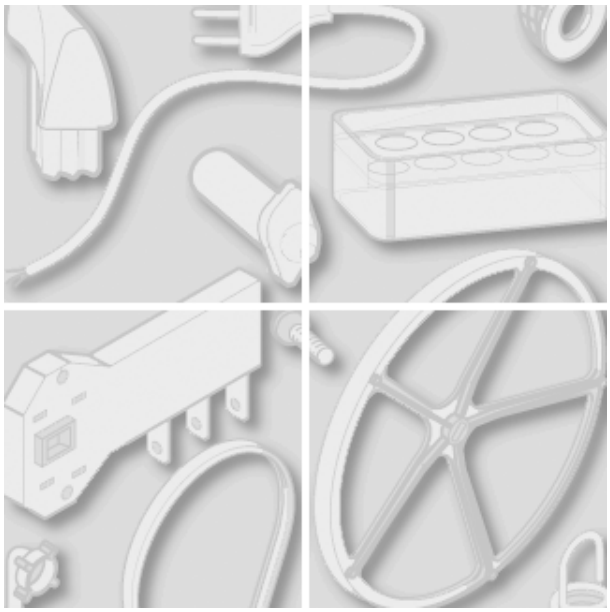

Model type:

HBD9F(ICE)

Commercial code:

F026580

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes


60660b0 Exploded views

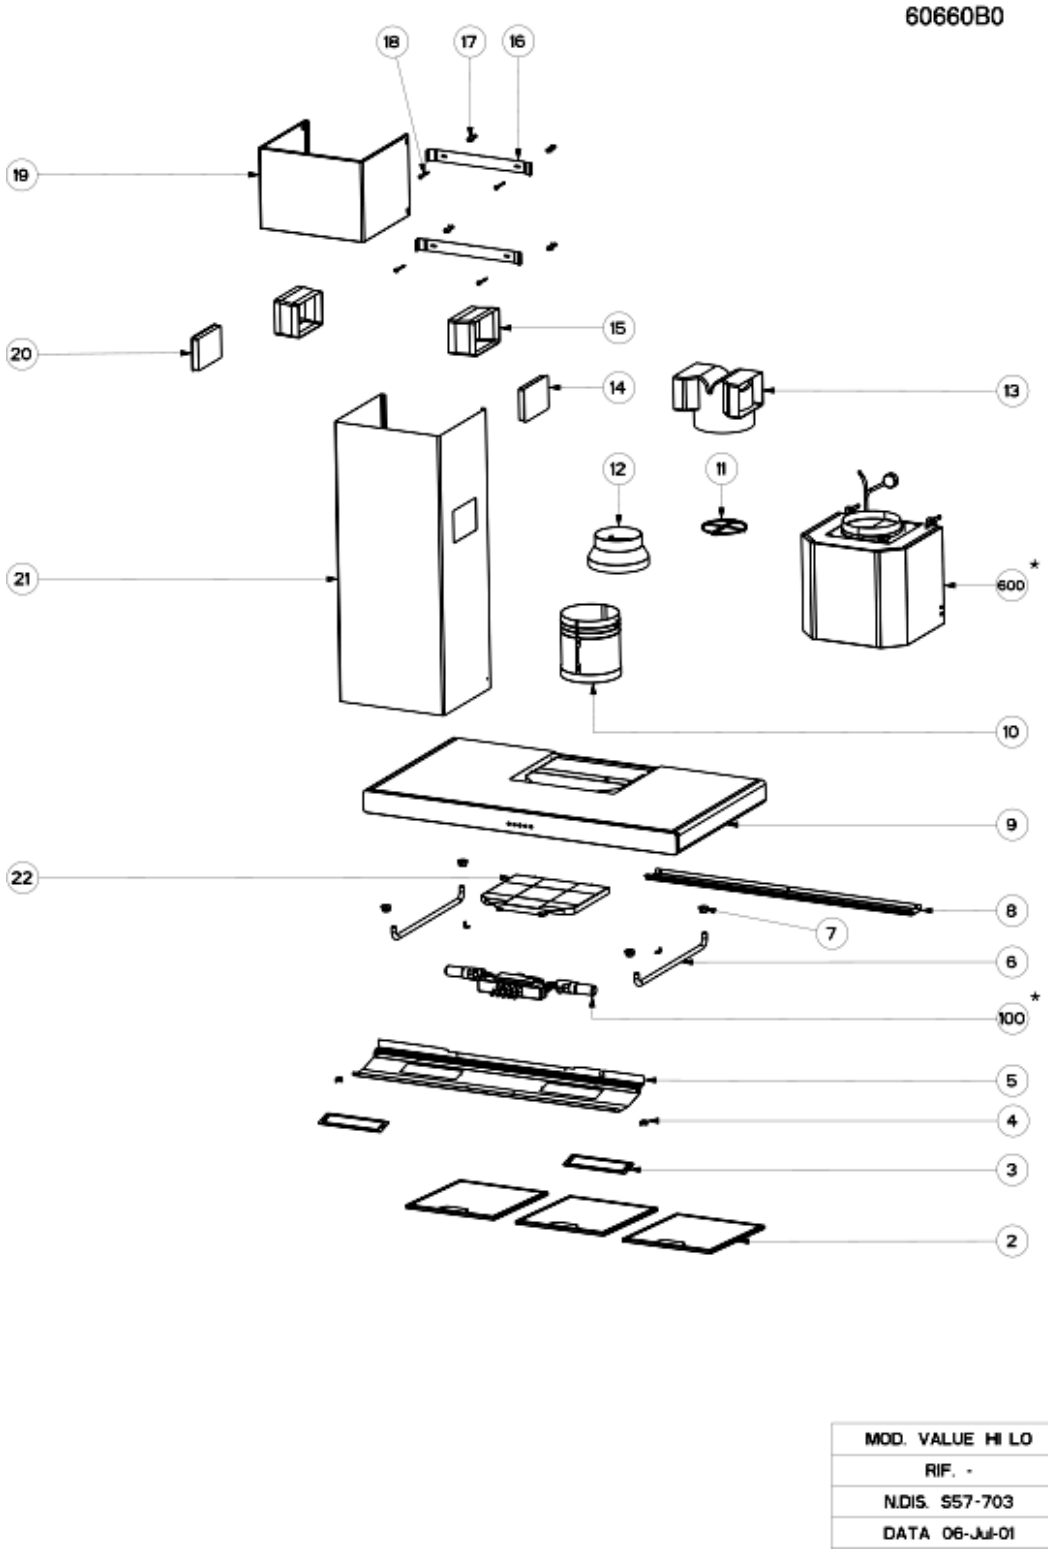

60660b0 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00085134				user instruction book		
000	C00174843				user instr. booklet tr hb6-hb9-		
002	C00059594				metal grease filter		
003	C00014091				roof-lamp 180x50		
004	C00085135				fixing bracket		
005	C00085148				lighting diffuser support inox 90		
008	C00085149				support		
009	C00085171				casing assembly ice 90##		
010	C00085083				extension		
012	C00051049				spigot adapter 150-120mm		
013	C00051050				filtering connection		
014	C00050473				right directional grid		
015	C00085082				spacer		
016	C00083228				fixing bracket chimney sup.zn pie.		
017	C00135762				rawlplug		
018	C00135757				screw 4,2x44,4		
019	C00085139				lower chimney section x		
020	C00050474				left directional grid		
021	C00085140			1 x C00085873	lower chimney section inox		
022	C00081380			1 x C00094552	filter s30 alto/stilo 2 t/f		

60660c0 Exploded views

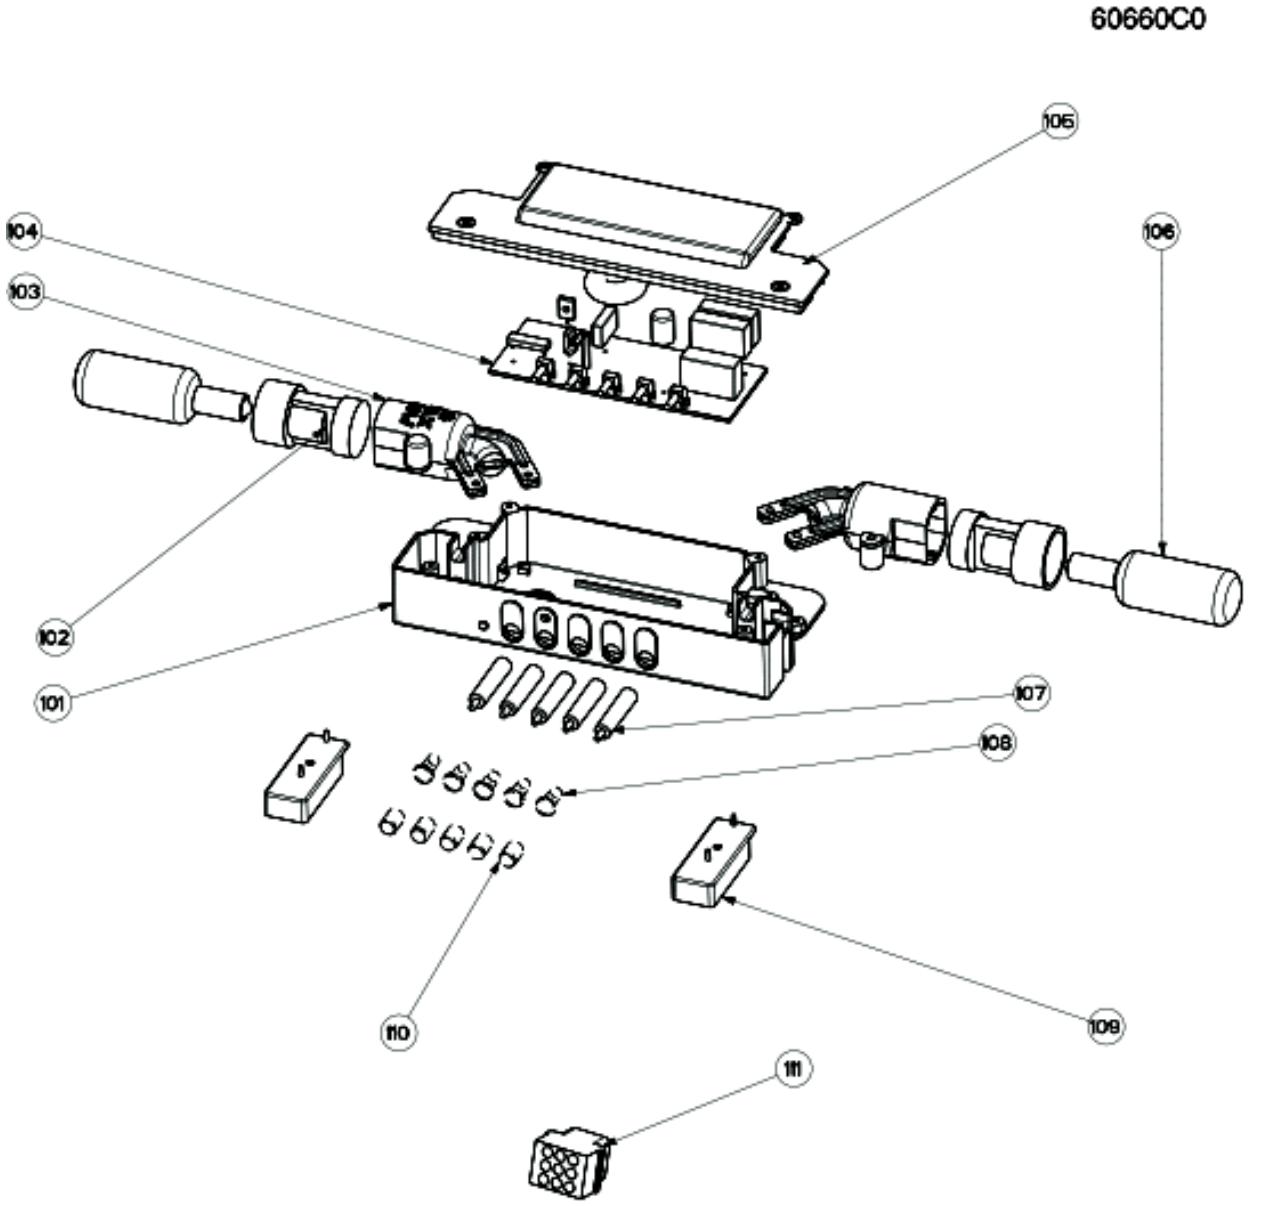


MOD. GRUP.COM ILL.VALUE
RIF. 100
N.DIS. 557-702
DATA 25-Jun-01

60660c0 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
101	C00085141				control box		
102	C00026910				lampholder		
103	C00079601				supporto portalampada (v2)		
104	C00085087				control board		
105	C00085086				cover		
106	C00042985				lamp 40w		
107	C00085142				push-button		
108	C00085172				button gr		
109	C00085143				spacer		
111	C00085089				male fast connection		


60660e0 Exploded views

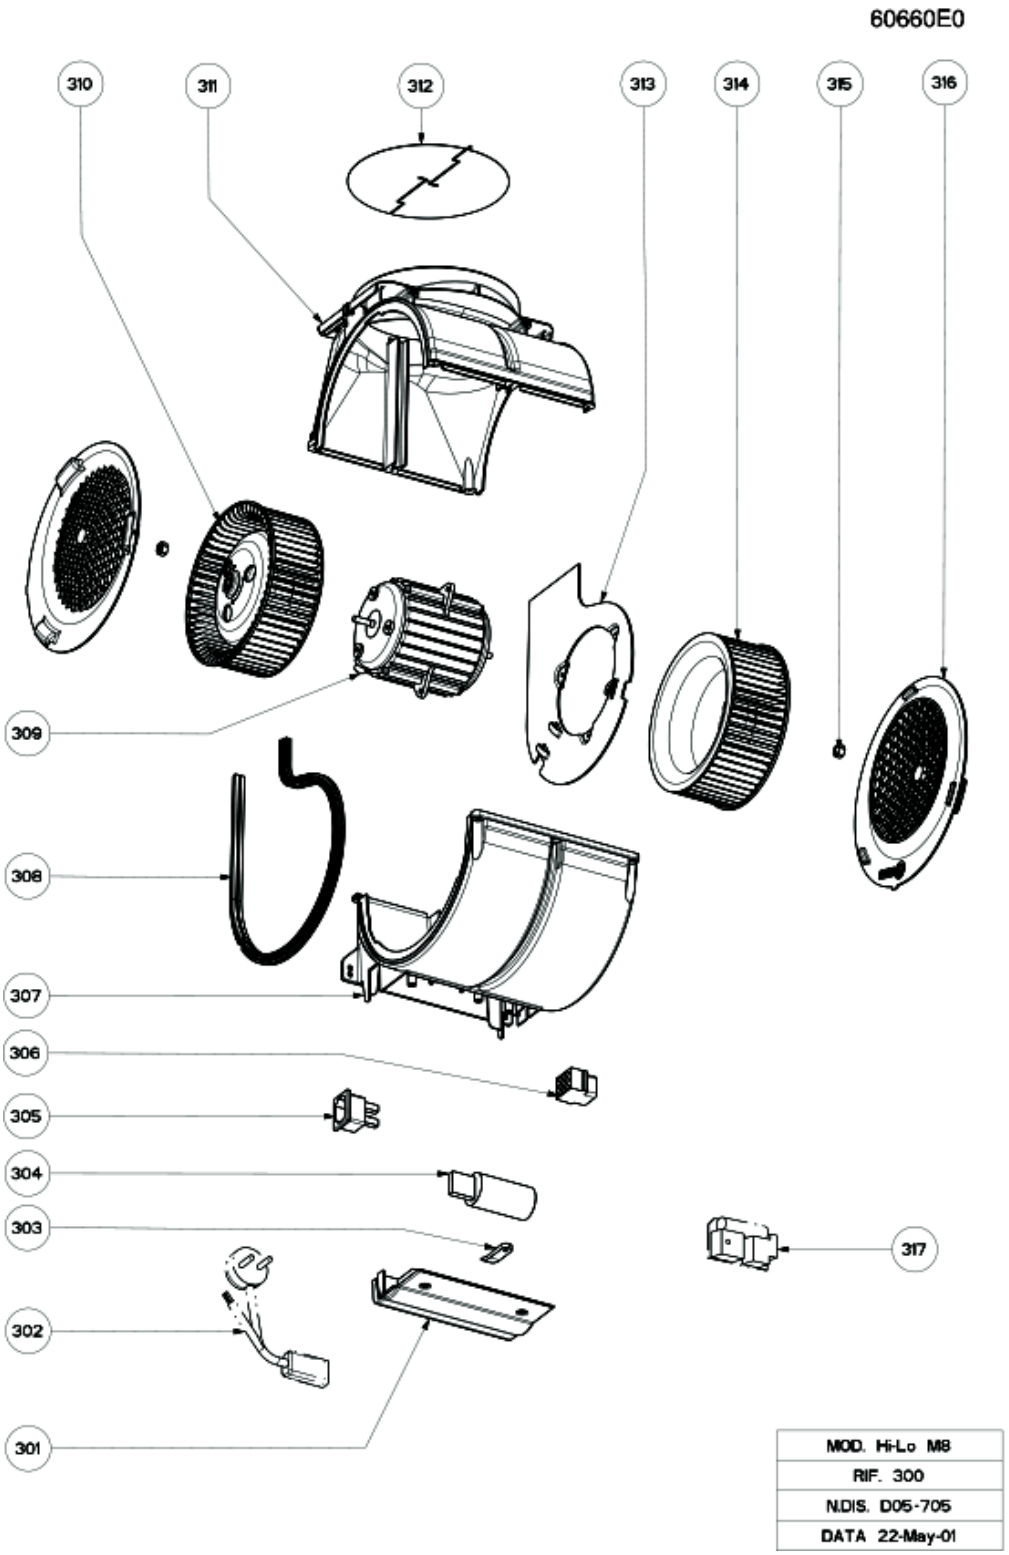

60660e0 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
300	C00085090				assembly motor##		
301	C00085091				cover		
303	C00085092				clip		
304	C00085093				condenser		
305	C00085144				connection sts 240 a1		
306	C00085095				female connect.		
307	C00085096				motor ducting		
308	C00085097				gasket		
309	C00085098				motor 8-bs/28k-a-p##		
310	C00058163				impellor left d.140 m8		
311	C00085099				motor ducting		
312	C00194426				valve		
313	C00085100				motor support		
314	C00058157				impellor right d.140 m8		
315	C00014076				impellor fastening nut		
316	C00085101				spigot		

60660g0 Exploded views

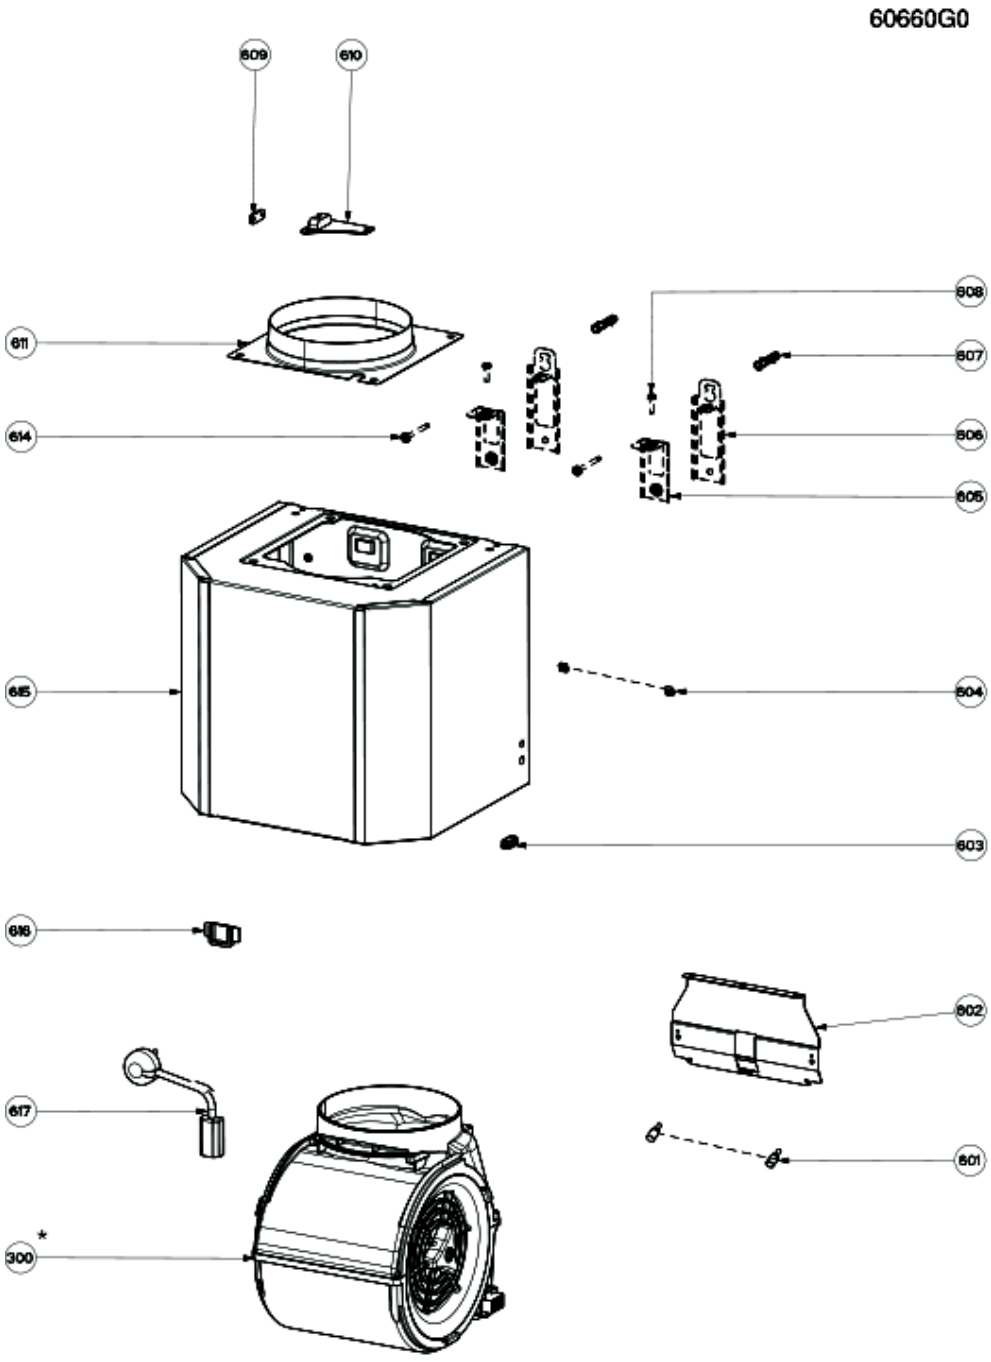


60660g0 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
601	C00077769				vite m4x10 t/t cr pz zn		
602	C00085102				wall mounting bracket		
603	C00083231				grommet (v2)		
604	C00050412				captivated nut 5004-a 4m		
605	C00080032				squadretta di fissaggio		
606	C00083233			1 x C00089310	attach bracket		
607	C00135762				rawlplug		
608	C00083234				screw zn m4x40 tc cacc.		
609	C00015773				cable clamp		
610	C00083235				mains terminal block cover (v2)		
611	C00083243				flange		
614	C00135757				screw 4,2x44,4		
615	C00083244				assembly support diffuser stilo/2		
616	C00083245				tap c.a. (v2)		
617	C00085153				supply cable 2x0,75x2100		

Electric schemes and links

Cod. se093100

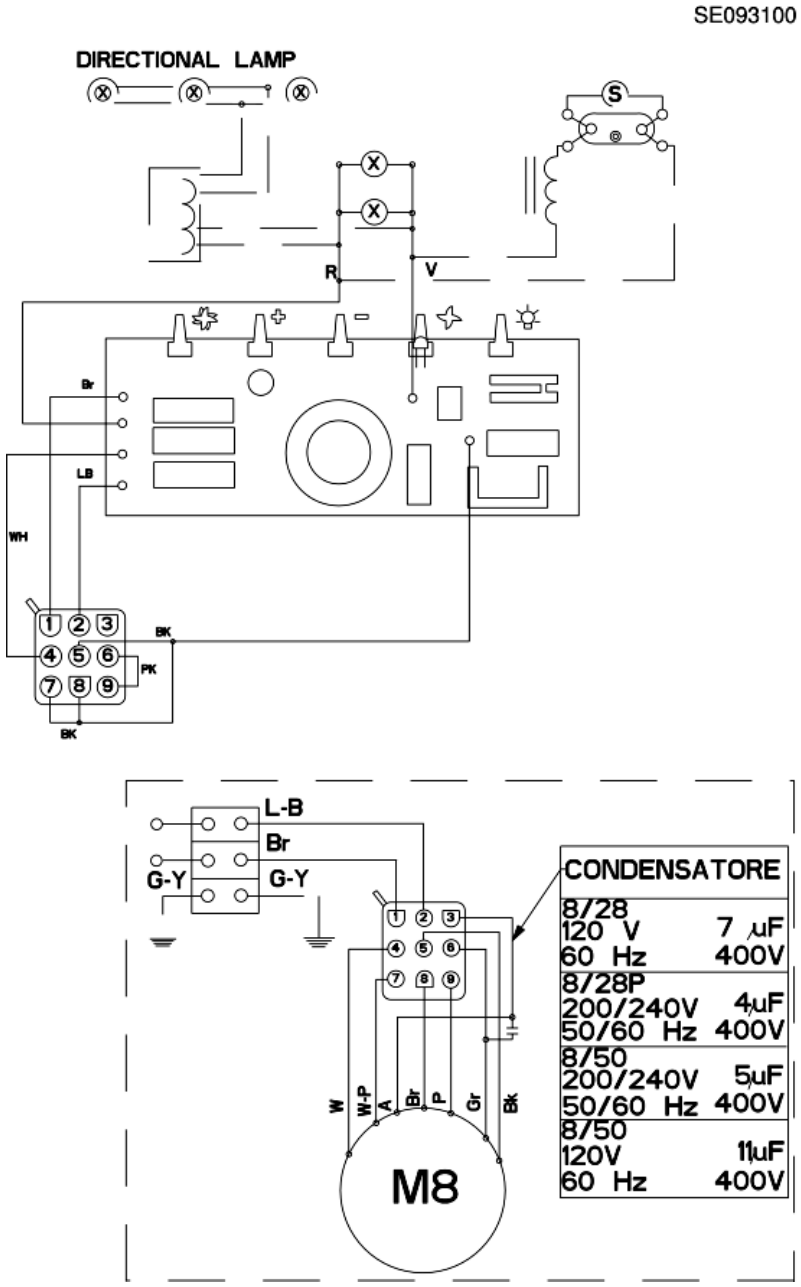

Legend

Legend: se093100

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element