
INDESIT company

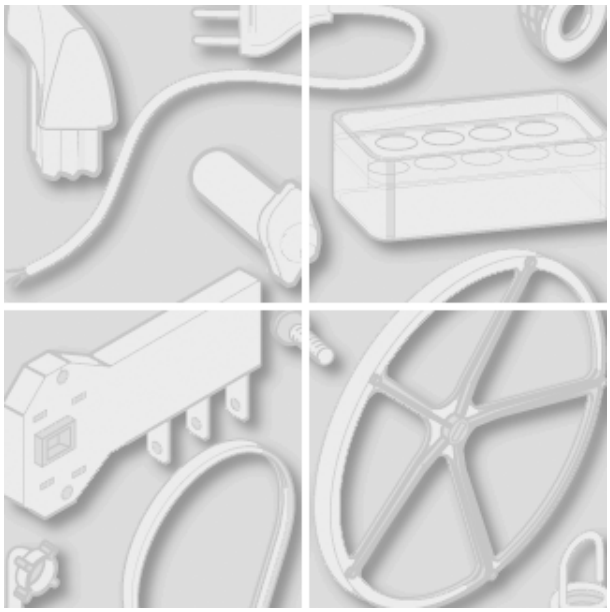

Model type:

WIXXL146EU

Commercial code:

F034544

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes


07288-15 (60213...- ...) Exploded views

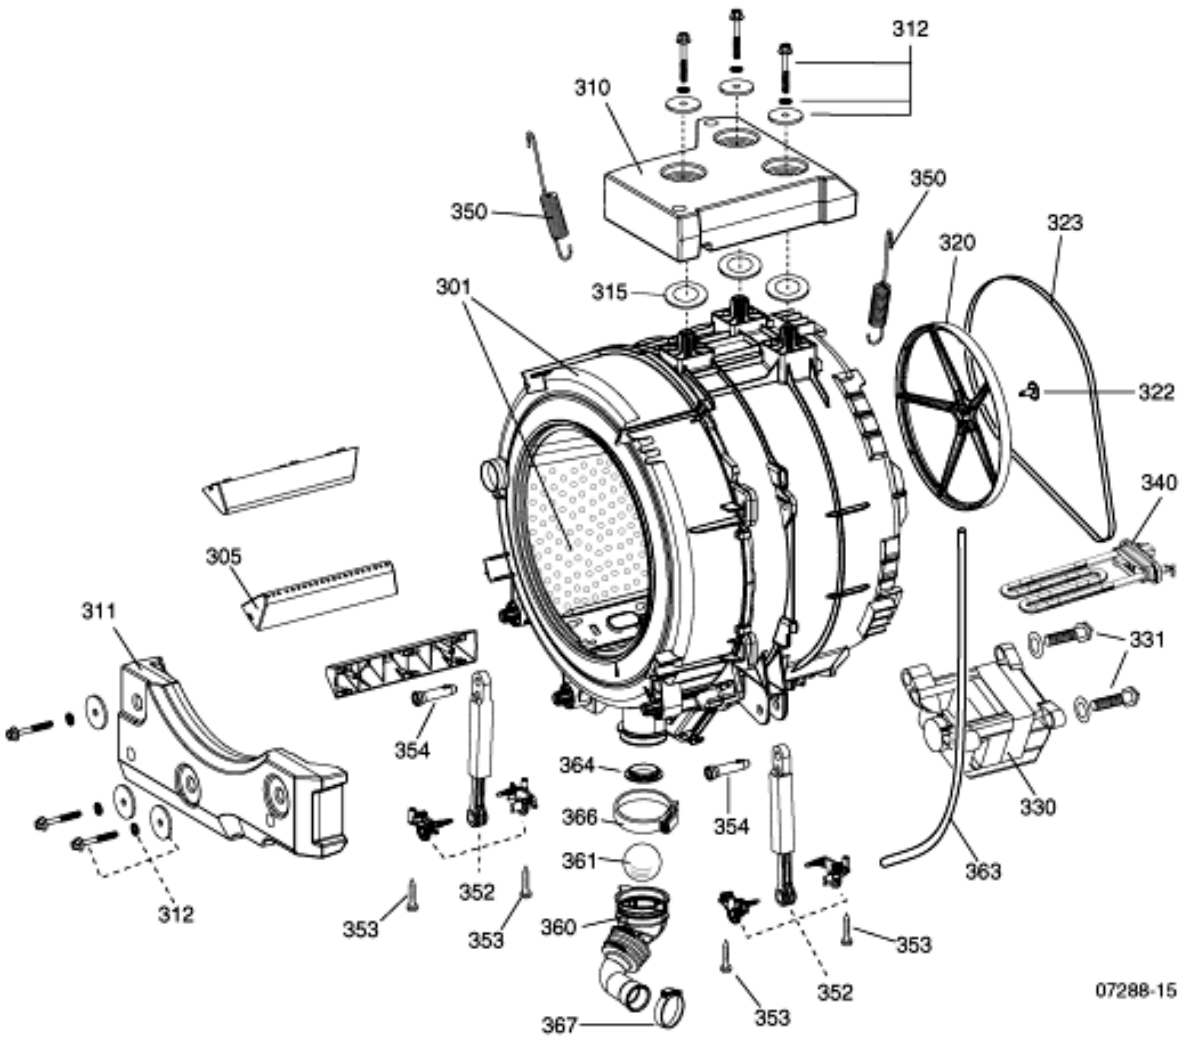

07288-15 (60213...- ...) Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
301	C00143604				drum assembly (inner & outer) ##		
305	C00112681				lifter		
310	C00143606				upper counterweight		
311	C00143607				front counterweight		
312	C00145621			1 x C00118502	screw locking counterweight/tub		
315	C00112684				thimble spacer		
320	C00143608			1 x C00199343	drum pulley		
322	C00143609				bolt		
323	C00143610				belt 1205 j5 (hl)		
330	C00140797				motor cable fasteng.		
330	C00143611				motor 1400 acc 45 stator (hl)		
330	C00145620				earth lead		
330	C00267683				brush assy. acc uoz112 g 55		
330	C00267694				brush kit acc uoz112 g 55		
331	C00094744				screw locking motor/tub		
340	C00083915				thermistor ntc		
340	C00143654			1 x C00094715	heating element & probe (hl)		
352	C00271755				suspension damper kit (6 & 7kg)	n4008d03	
353	C00112694		80316...		screw		
354	C00112695			1 x C00118593	plastic damper pag		
360	C00143613				hose tank to filter oko		
361	C00143614			1 x C00092172	ball oko		
363	C00112660				cabinet hose clip		
363	C00143615			1 x C00041785	air trap hose		
363	C00143616				pipe clamp		
364	C00143617			1 x C00119212	hose tank to filter oko seal		
366	C00143620				hose clamp		
367	C00143621				hose clamp		

1200140 Exploded views

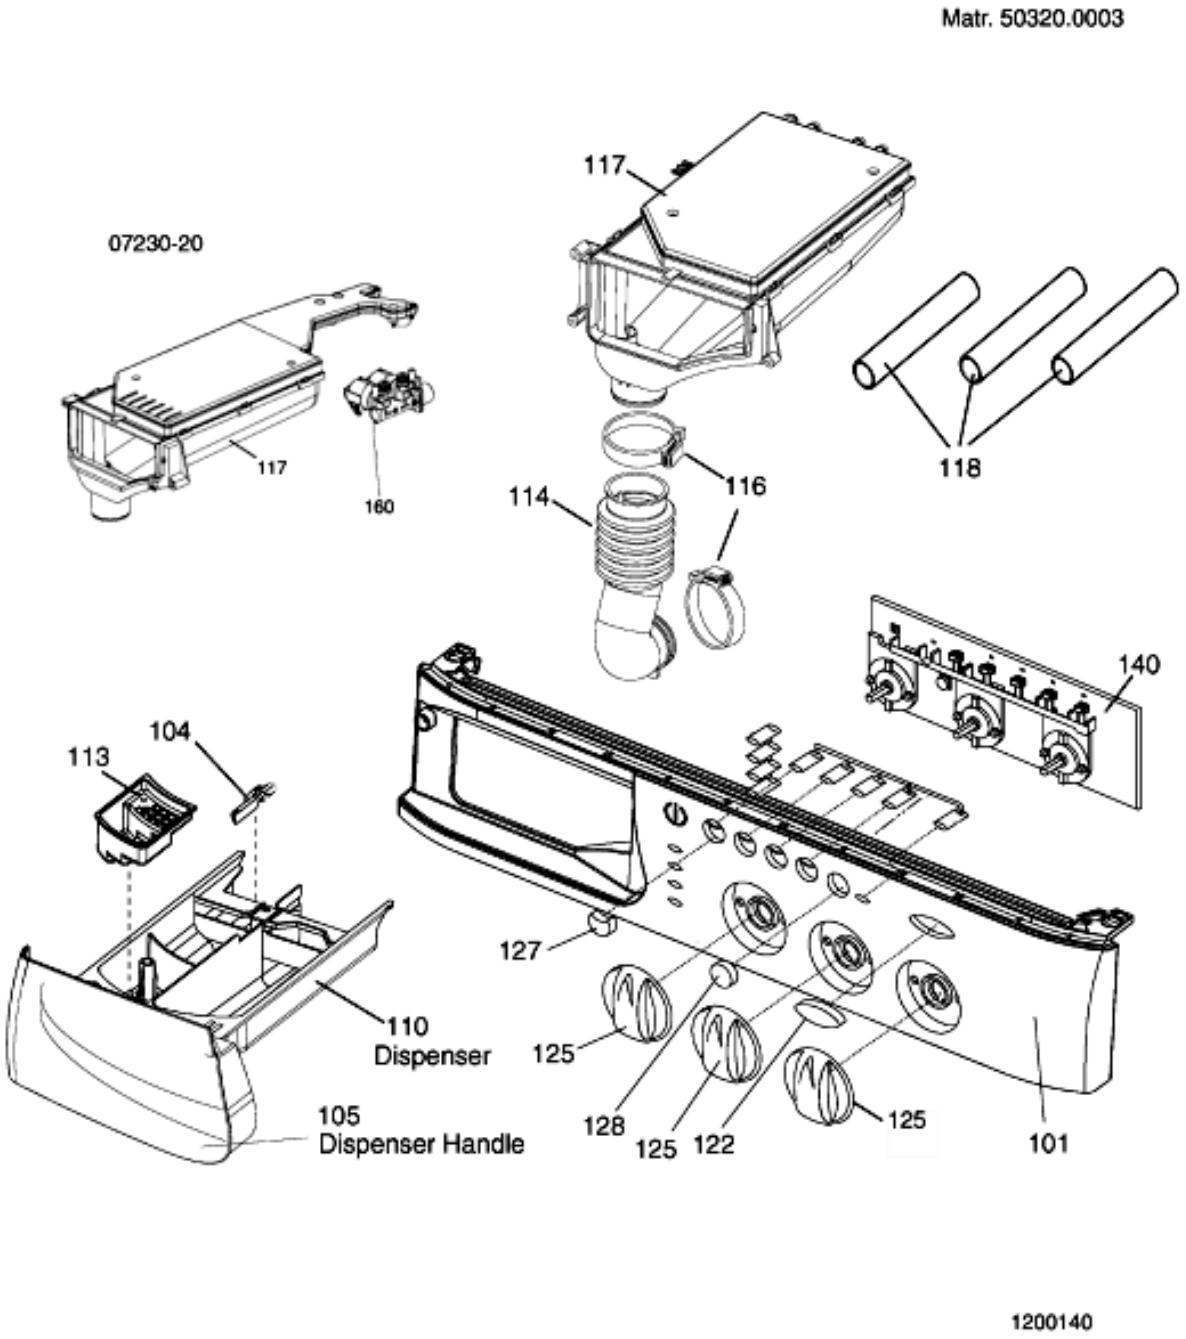


1200140 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00118479				user instruct booklet wixxl146eu		
101	C00118475				control panel white wixxl146eu		
101	C00203127				light guide horizontals		
101	C00203128			1 x C00097012	light guide		
104	C00112601			1 x C00272482	drawer latch		
105	C00117121				detergent handle wixxl146it		
110	C00112564				soap dispenser drawer		
113	C00117136				additive container		
114	C00112604			1 x C00141202	dispenser outlet hose		
116	C00112605				herbie clip		
117	C00117137		50907...	1 x C00203256	dispenser body + cover		
117	C00290783				shallow dispenser kit (wma/wd-	n4012e01	
118	C00117139				hose -		
122	C00117142				push button on-off		
125	C00117140				knob		
127	C00117143			1 x C00114825	pushbutton		
128	C00117144				card start		
140	C00143332				control card (3 x control knobs)		
160	C00112661				2x cold valve -small tag		
160	C00201982				2x cold valve -amp tag connector		

1200140B

Exploded views


Matr. 50320.0001

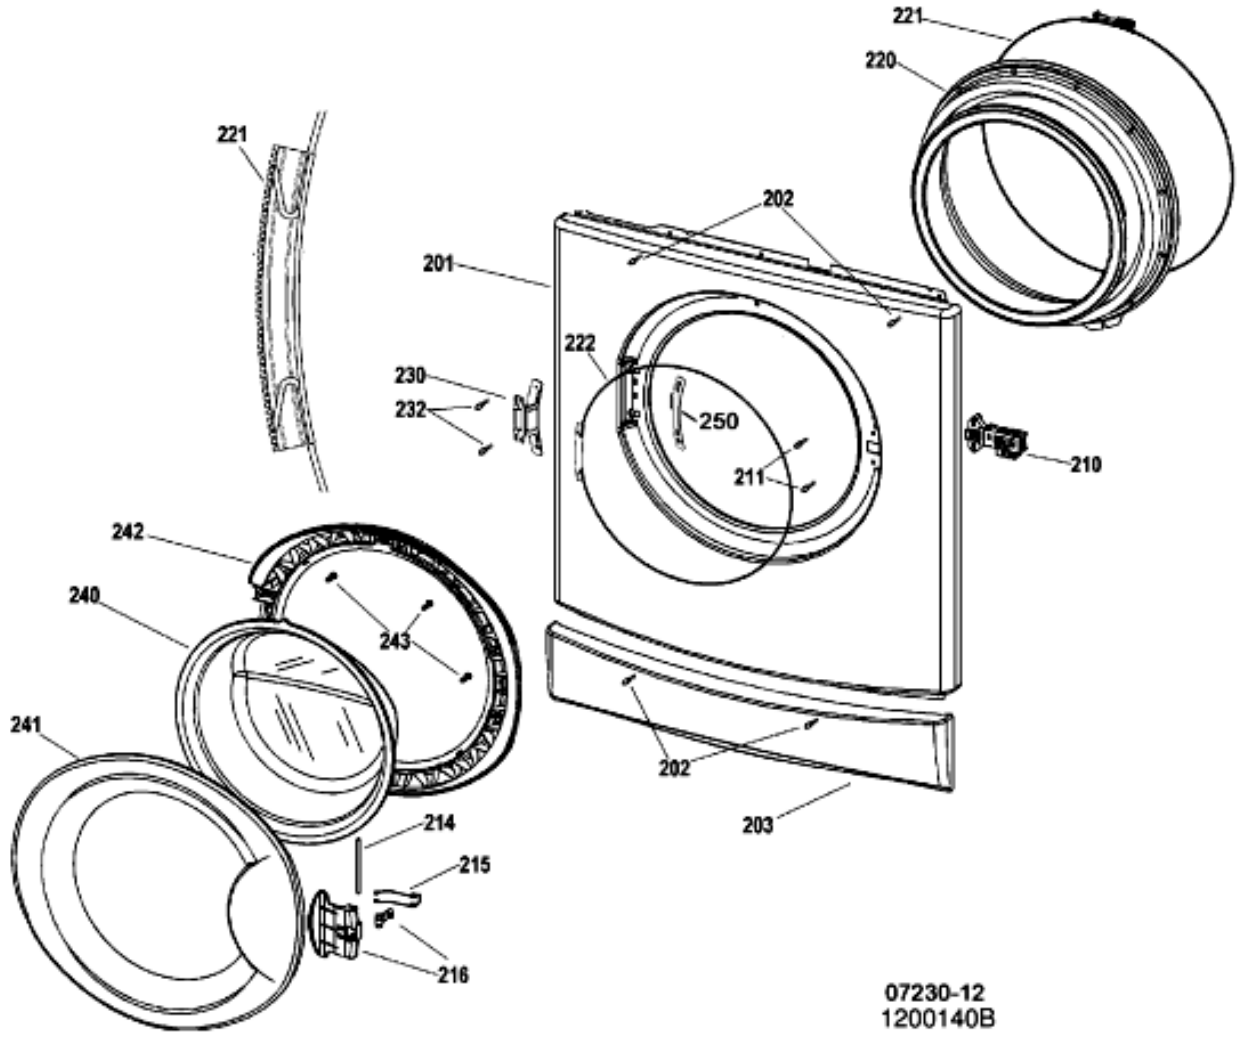

1200140B Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
201	C00115516				front panel white oem		
202	C00112582				screw no 8 x 1/2		
203	C00117326				plinth cover		
210	C00115517			1 x C00085194	door lock a1600wd		
211	C00112583				screw pan pozi		
213	C00112587			1 x C00019705	latch door		
214	C00095992			1 x C00143728	latch pivot pin		
215	C00112588			1 x C00043668	latch spring		
216	C00094059				screw m4x10tc		
216	C00115519			1 x C00096865	door handle		
220	C00112570			1 x C00143605	bellows seal avxxl105ex		
221	C00112571			1 x C00264305	bellows clamp (tank front)		
221	C00264305	80325...			gasket band	n0508c01	
222	C00112572			1 x C00092156	clamping ring - bellows seal front		
230	C00095987			1 x C00075325	hinge door		
232	C00112593			1 x C00065185	screw 4.5 x 8 zn		
240	C00113961			1 x C00193819	door bowl avxxf		
241	C00117327				door trim - front 'as60vex'		
242	C00115525				door trim rear		
243	C00039537				screw (m6 x 12)		
250	C00112277				door hinge plate		

1200230 (... - 60212...) Exploded views

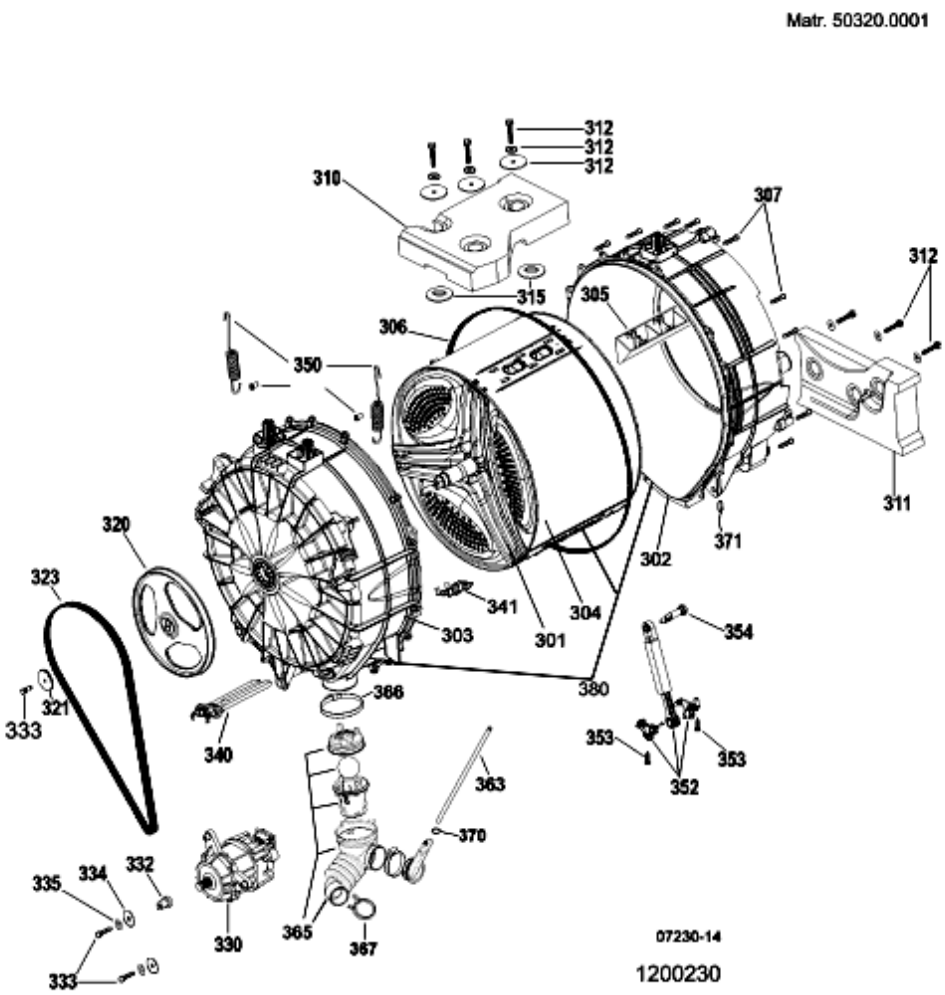


1200230 (... - 60212...) Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
301	C00117329				drum support (35mm)		
301	C00201310				torx screw m8		
302	C00117330				drum front		
303	C00199338				35mm rear drum kit with heater &		
304	C00117333			1 x C00117352	inner drum		
305	C00112681				lifter		
306	C00112682				drum seal		
307	C00051737				torx m8 x 27 dri-loc screw		
310	C00112573				upper counterweight avxxl105ex		
311	C00112574				front counterweight avxxl105ex		
312	C00112683			1 x C00118502	counterweight fixing		
315	C00112684				thimble spacer		
320	C00112575				drum pulley avxxl105ex		
321	C00112685			1 x C00118593	pulley washer 4 mm thick		
323	C00112576				belt j5 - 1158		
330	C00112577				motor 1400 acc/fhp 60mm (hl)		
330	C00201861				carbon brush set for fhp motor		
330	C00202415			2 x C00202414	carbon brush set for ceset motor		
330	C00278784				tacho generator	n4010c00	
332	C00112687				flexible motor mount		
333	C00112686				drum pulley retaining bolt		
334	C00112688			1 x C00250676	pulley retain bolt		
335	C00112689				lockwasher		
340	C00083915				thermistor ntc		
340	C00112578				heating element & probe (hl)		
341	C00112690				heater bracket (hl)		
350	C00112691				tank spring (rh)		
352	C00271755				suspension damper kit (6 & 7kg)	n4008d03	
353	C00112694		80316...		screw		
354	C00112695			1 x C00118593	plastic damper pag		
363	C00112697				air trap hose		
363	C00112698				cabinet hose clip		
365	C00112696				sump assembly		
366	C00112699				fix clip drum / sump hose		
367	C00112656				drain hose clip		

1200230 (... - 60212...) Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
370	C00112700				cable tie		
380	C00112679				drum assembly		

1200320 Exploded views

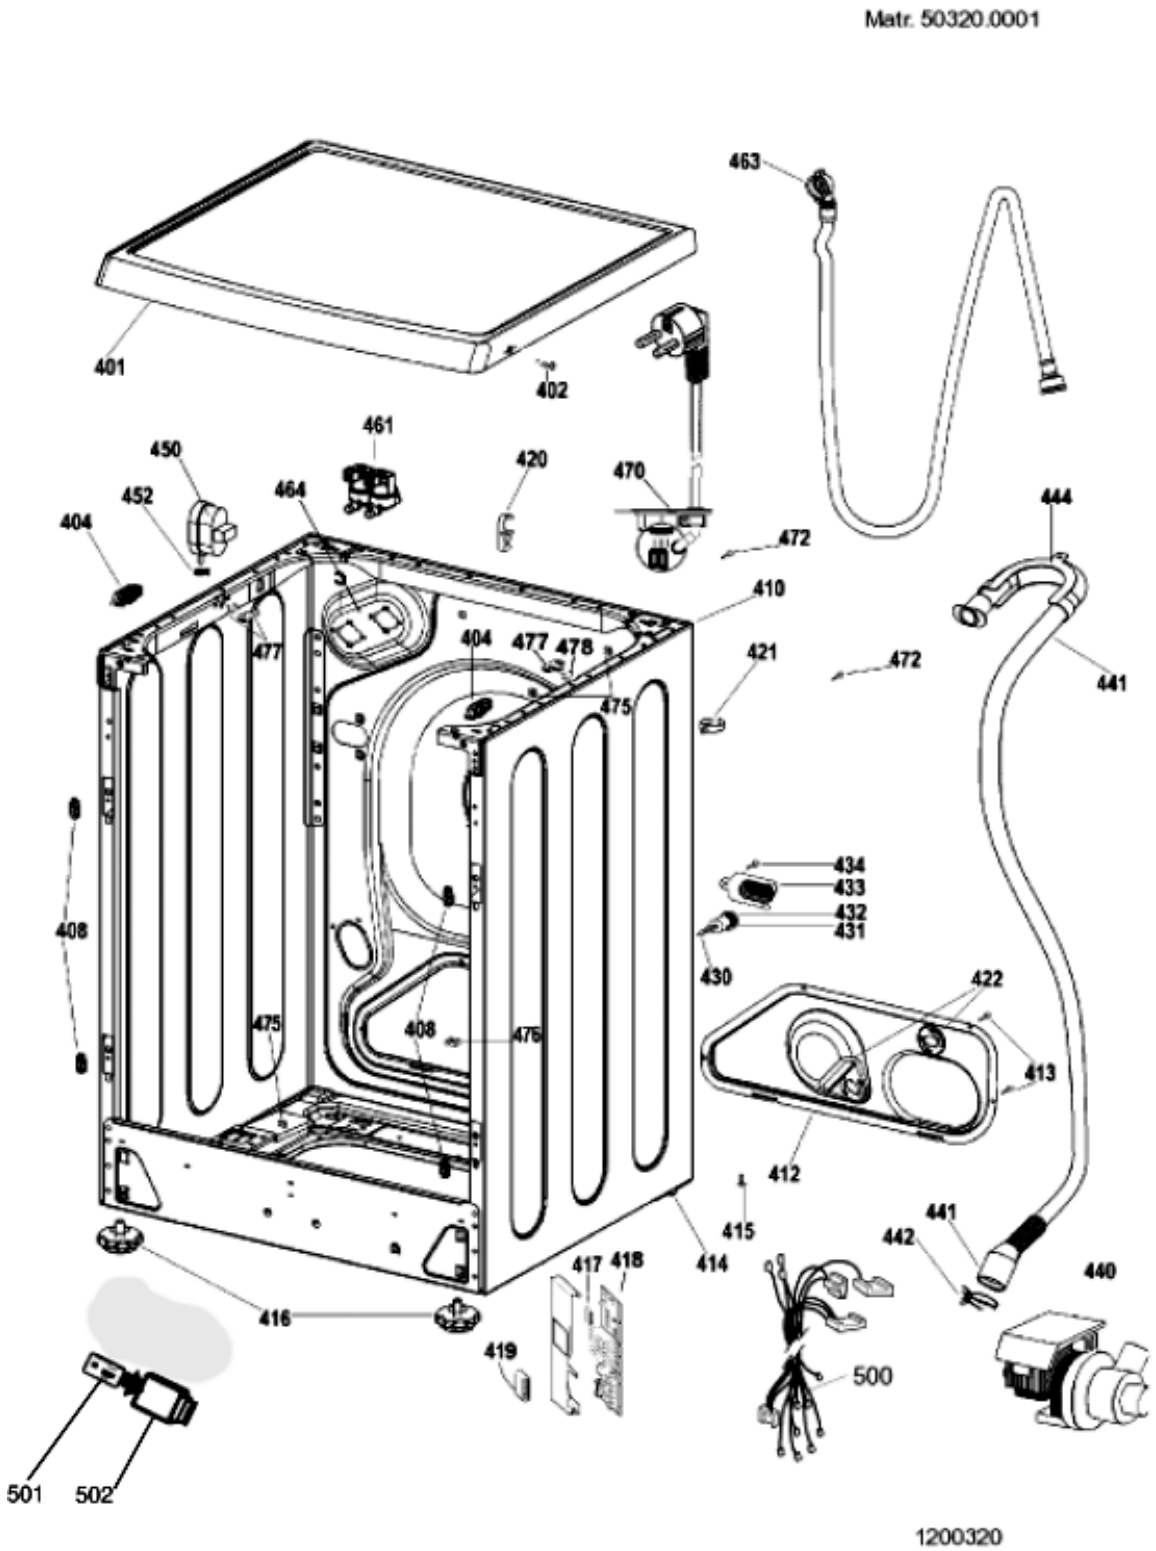

1200320 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
401	C00117334			1 x C00195896	top cover		
402	C00112631			1 x C00149572	screw top cover		
408	C00112633				front panel retainer		
410	C00112635			1 x C00144147	cabinet polar	n4008e00	
412	C00112637		60212...		rear cover		
412	C00143628	60213...			rear cover		
414	C00110045				adjustable foot		
415	C00112644				screw		
416	C00112640				adjustable foot assembly		
418	C00254297				power board module evoii (rhos)	n4008c01	
419	C00112735				cap serial port		
420	C00112646				cabinet hose clip		
421	C00112647				clip		
430	C00112651				transit spacer		
433	C00112652				transit spacer		
440	C00112653		60212...		drain pump (hl)		
440	C00112654				pump flap valve		
440	C00143637	60213...		1 x C00145315	pump & filter		
441	C00112655		60212...		drain hose l=1600mm		
441	C00143649	60213...			drain hose - to sink		
442	C00112656				drain hose clip		
442	C00145622				outlet hose clip		
444	C00112658				drain hose hook		
450	C00112659		60212...		pressure switch (hl)		
450	C00143651	60213...			pressure switch (hl)		
452	C00112660				cabinet hose clip		
460	C00112583				screw pan pozi		
461	C00112661		50907...		2x cold valve -small tag		
461	C00201982				2x cold valve -amp tag connector		
463	C00112664			1 x C00199345	fill hose hot 2m		
464	C00117335			1 x C00140810	electrovalve support		
470	C00094203			1 x C00115769	supply cable 3 x 1.0 1,5mt shuko		
472	C00095586			1 x C00250888	screw		
475	C00112673				cable clamp		
476	C00112675				wiring stop		

1200320 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
477	C00112677				bearing spring top		
478	C00112676				bearing keeper plate		
500	C00112624				harness mains / filter (hl)		
500	C00112627			1 x C00203626	harness mtr pump		
500	C00113005			1 x C00114343	harness pressure switch / heater		
				1 x C00199375			
500	C00113956				harness valves / ntc		
500	C00113957				harness ctrl/console (hl)		
500	C00114323			1 x C00114343	heater wire live		
500	C00114324			1 x C00114343	heater wire neutral		
500	C00115515				harness door switch (hl)		
501	C00262092		60212...		card wixxl146eu evoii 8kb sw	n4008c01	
501	C00262939	60213...			card wixxl146eu evoii 8kb sw	n4008c01	
502	C00263927			1 x C00272306	smart card reader		

Notices

n1040242: Power card with welded eeprom.

From serial number 20304.0001, IDC power card with welded eeprom is used to ensure the perfect connection of all parts, in the Comunanza, Teverola and Brembate factories.
To replace the module with welded eeprom, it will be necessary to use the eeprom indicated in the SAT document of the model concerned.
To replace the module on a unit with welded eeprom both the SAT module and the eeprom are required, because the latter cannot be reused.

n1040296: List of EVOII FAULTS and troubleshooting.

In case of washing-machine fault in carrying out the self-test function, the machine reproposes the fault previously signalled and the same fault is shown on the display of the new hardware key.
The type of fault can be signalled in different ways:
- on AVD models the fault is shown directly on the machine display.
- on AVL models the fault is signalled by LEDs.

Reading of Faults signalled by LEDs
When the machine has a fault:
1. The window is locked
2. The door lock light flashes fast (> 1 Hz)
3. The control panel LEDs light up, to signal the fault, according to the table (fig. 01).
The example shown in fig. 02 (Example Fault F03) below indicates which LEDs are flashing if the machine has Fault F03

List of faults, malfunctions and Warnings:

F01: Triac Motor short circuit
- Check for water leaks that may affect connector J9 causing the relevant contacts to short
- Check the motor terminal block (possible problems due to chemical effects of work residuals on the contacts which may cause short-circuiting)
- Replace Card

F02: Motor blocked, Tachometrics in Short Circuit/Open
- Check motor if blocked

- Check efficiency of J9 connector on card
- Check the tachometric winding verifying an ohmic resistance reading of 115 - 170 ohm between pins
1 and 2 on wiring connector J9. In case of short circuit/open circuit check the wiring between pins 1 and 2 of J9 relevant to the tachometrics. With three-phase motor, make sure there is ohmic continuity between J9 pins 6 and 7.
- Replace motor
- Replace card

F03: NTC Open or in Short Circuit or washing heater relay stuck (signalled in presence of full load)
- Check efficiency of J8 connector contacts on card
- Check NTC verifying that the ohmic resistance value at room temperature 20°C is approx. 20Kohm on J8 wiring connector pin 11 and 12.
- If the measurement is incorrect check J8/NTC wiring continuity
Check the same parameter directly on NTC
- Replace NTC
- Replace Card

F04: Simultaneous empty and overflow (pressure switch stuck on empty).
If the pressure switch contact is stuck on empty the washing-machine loads water until reaching the overflow. The drain pump is automatically started by the contact on the overflow pressure switch.
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring of connector J3/pressure switch
- Replace pressure switch
- Replace card.

F05: Pump Blocked or pressure switch empty not reached
- Check efficiency of J9 connector on card, verifying a voltage of 220V between pins 8 and 9
- Check that pump if being fed
- Check Pump Filter + wall drain
- Change Pump
- Replace Card

F06: No on AVD and AVL

F07: No Wash Heating Element Absorption (the fault is only signalled with the pressure switch on empty)
- Check efficiency of J3 connector contacts on card
- Check continuity of the wash heating element on J3 connector pins 5 and 6. The 1800W 230V heating element has a resistance of 25 ohm.
- Check connection of pressure switch J3 connector pins 2 and 3: there must not be ohmic continuity (shared with full load).
Check connection of pressure switch J3 connector pins 2 and 4: there must be ohmic continuity
- Replace Heating Element
- Replace Pressure Switch
- Replace Card

F08: Wash Heater Relay Stuck (signalled in presence of empty) or pressure switch stuck on Full (simultaneously empty and full)
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and
pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring J3/pressure switch
- Check connection of heating element J3 connector pins 5 and 6.
- Replace pressure switch
- Replace Card

F09: Machine Setup Error (Eeprom error)

- In case of production card with Eeprom soldered: replace the card and Eeprom
- In case of replacement of Eeprom and card, check correct housing of Eeprom on card socket

F10: No full and empty signal
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and
pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring of connector J3/Pressure switch
- Replace Pressure Switch
- Replace Card

F11: No Pump Feedback (Drain pump disconnected or winding broken)
- Check efficiency of J9 connector on card
- Check continuity of the Pump on J15 connector pins 1 and 2 (in case of washing-machine with Easy Door door lock) or on J9 connector pins 8 and 9 (in case of conventional door lock), checking a resistive value equal to 170 ohm.
- Check wiring of connector J15 (or J9)/Pump
- Replace Pump
- Replace Card

F12: No Communication Display/LED Card-Main Board
- Check efficiency of contacts on card of J11 connector
- Check the continuity of J11 connector-display card 5-pin connector
- Replace Main Board
- Replace Display Card/LED

F13: Drying NTC sensor open / Drying system NTC wiring disconnected
Check efficiency of J10 connector on card
Check NTC on J10 connector pins 7 and 8 verifying that the ohmic value of the sensor at room temperature 20°C is approx. 20Kohm
Check continuity of NTC/J10 connectors wiring
Replace NTC
Replace card

F14: Drying heater open or not connected
Check efficiency of J2 connector contacts on card
Check continuity of drying heater on J2 wiring connector pins 1 and 2, verifying that the ohmic value of the 1300W 230V heating element is approx. 40Kohm
Check wiring of connector J10/drying heater
Replace heating element
Replace card

F15: Drying heater always on (drying relay contact stuck or drying Triac short circuit)
Check efficiency of J2 connector contacts on card of
Check wiring of connector J2/drying heater
Check wiring of connector J3/pressure switch
Replace card

F16: Drum locking (top-loading only)

F17: Door lock unfed/open (with Easy Door)
- Check presence of 230V mains power on J4 wiring connector inserted on card between pins 3 and 4,
(not present with machine on standby) and presence of power from 230V door lock between pins 3 and 5
- Check ohmic continuity of the door microswitch on J4 connector inserted on card between pins 1 and 2 (with door closed/on open/off)
- Check continuity of J4/door lock wiring
- Check door hooking

- Replace door lock
- Replace card

F17: Door lock unfed/open (conventional door lock, not Easy Door)
- Check presence of 230V mains power on J4 wiring connector inserted on card between pins 2 and 3,
(not present with machine on standby) and presence of power from 230V door lock between pins 3 and 1
- Check door hooking
- Replace door lock
- Replace card

F18 --> Communication error microprocessor / DSP (Digital Signal Processor)
- Replace card

COMBINAZIONE LED


SIMBOLOGIA:
= LED ACCESO = LED SPENTO

FAULT	LED Fasi	TASTI FUNZIONI			
F01	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F02	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F03	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F04	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F05	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F06	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F07	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F08	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F09	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F10	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F11	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F12	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F13	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F14	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F15	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F16	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F17	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F18	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4



ARISTON INDESIT


FIG. 01

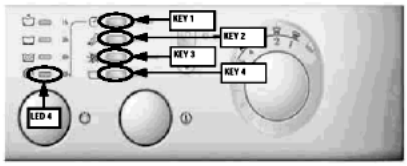

Fault	Key 1	Key 2	Key 3	Key 4	Led 4
01	Off	Off	Off	Flash	Off
02	Off	Off	Flash	Off	Off
03	Off	Off	Flash	Flash	Off
04	Off	Flash	Off	Off	Off
05	Off	Flash	Off	Flash	Off
06	Off	Flash	Flash	Off	Off
07	Off	Flash	Flash	Flash	Off
08	Flash	Off	Off	Off	Off
09	Flash	Off	Off	Flash	Off
10	Flash	Off	Flash	Off	Off
11	Flash	Off	Flash	Flash	Off
12	Flash	Flash	Off	Off	Off
13	Flash	Flash	Off	Flash	Off
14	Flash	Flash	Flash	Off	Off
15	Flash	Flash	Flash	Flash	Off
16	Off	Off	Off	Off	Flash
17	Off	Off	Off	Flash	Flash

Table Fault LED

FIG. 02

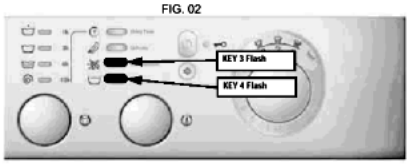


Example Fault F03

Tabla de averías para lavadora EVO II



	CO	MBINACIÓN LED				– LED
FAULT	CAU SA	LED Fase	TECLAS FUNCIONES			SIMBOLOGIA:
F01	Triac control motor en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	– led encendido
F02	Motor bloqueado, taquimetro motor abierto / en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	– led apagado
F03	Sonda NTC lavado abierta / en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F04	Vacio + sobrenivel presostato simultaneamente	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F05	No se logra vacio presostato bomba desagua bloqueada	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F06	Error de selector (no encuentra código)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F07	Falta absorción en la resistencia de lavado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F08	Relé resistencia de lavado con el contacto NA/NC pegado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F09	Error umap file (EEPROM no programada o correcta)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F10	Presostato en Rotor+Vacio o sin salial de vacio ni lleno	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F11	Falta alimentación a la bomba de desague	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F12	Falta comunicación entre módulo display y modulo de control	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F13	Sonda NTC secado abierta/corto. Ventilador secado bloqueado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F14	Falta alimentación a la resistencia de secado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F15	Contacto relé resistencia de secado pegado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F16	Bloqueo de cesto (sobe carga superior)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F17	Bloqueo puerta desalineado /abierto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	
F18	Error de comunicación Micro/DSP (MODULO)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4	


ABB. 01

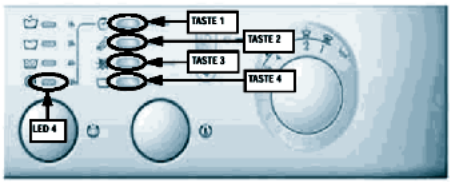

Fault	Taste 1	Taste 2	Taste 3	Taste 4	Led 4
01	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet
02	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet
03	Ausgeschaltet	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet
04	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
05	Ausgeschaltet	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet
06	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet
07	Ausgeschaltet	Blinkt	Blinkt	Blinkt	Ausgeschaltet
08	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
09	Blinkt	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet
10	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet
11	Blinkt	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet
12	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
13	Blinkt	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet
14	Blinkt	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet
15	Blinkt	Blinkt	Blinkt	Blinkt	Ausgeschaltet
16	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt
17	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt	Blinkt


Tab. Störung Led

ABB. 02

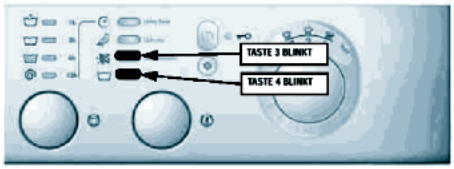

Beispiel Störung F03


FIG. 01

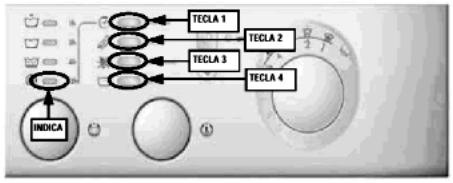

Fault	Tecla 1	Tecla 2	Tecla 3	Tecla 4	Indicador luminoso 4
01	Apagado	Apagado	Apagado	Pisca	Apagado
02	Apagado	Apagado	Pisca	Apagado	Apagado
03	Apagado	Apagado	Pisca	Pisca	Apagado
04	Apagado	Pisca	Apagado	Apagado	Apagado
05	Apagado	Pisca	Apagado	Pisca	Apagado
06	Apagado	Pisca	Pisca	Apagado	Apagado
07	Apagado	Pisca	Pisca	Pisca	Apagado
08	Pisca	Apagado	Apagado	Apagado	Apagado
09	Pisca	Apagado	Apagado	Pisca	Apagado
10	Pisca	Apagado	Pisca	Apagado	Apagado
11	Pisca	Apagado	Pisca	Pisca	Apagado
12	Pisca	Pisca	Apagado	Apagado	Apagado
13	Pisca	Pisca	Apagado	Pisca	Apagado
14	Pisca	Pisca	Pisca	Apagado	Apagado
15	Pisca	Pisca	Pisca	Pisca	Apagado
16	Apagado	Apagado	Apagado	Apagado	Pisca
17	Apagado	Apagado	Apagado	Pisca	Pisca

Tab. Fault indicador luminoso

FIG. 02

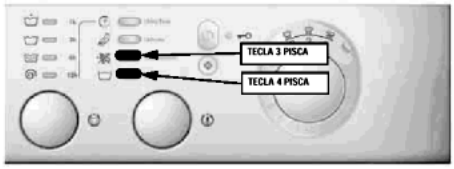

Exemplo Fault F03

n4008c01: Smart Card - LVB/DRYERS

Beginning April 2008 spare parts warehouse started to manage the EVOII modules with eeprom fixed, these can only be programmed with smart card/palmare/pc.



Cruscotto - Tableau de borde - Belde - Control panel
Painel frontal - Quadro Mandos - Kontrol paneli

Attention!! The premodification with eeprom socket can be programmed with smart card/palmare/pc using a blank eeprom or with pre programmed eeprom.

Spare parts of modules with eeprom fixed/eeprom socket:

C00265676 with eeprom fixed - C00143068 with eeprom socket - for models with conducibility sensor
C00254298 with eeprom fixed - C00143068 with eeprom socket - for models without conducibility sensor
C00254297 with eeprom fixed - C00259941 with eeprom socket
C00254531 with eeprom fixed - C00143058 with eeprom socket
C00254297 with eeprom fixed - C00143057 with eeprom socket - for models without blocking drum
C00265697 with eeprom fixed - C00143057 with eeprom socket - for models with blocking drum
C00254297 with eeprom fixed - C00143056 with eeprom socket
C00254530 with eeprom fixed - C00259738 with eeprom socket
C00254533 with eeprom fixed - C00143060 with eeprom socket
C00254535 with eeprom fixed - C00145013 with eeprom socket
C00254530 with eeprom fixed - C00145551 with eeprom socket
C00254529 with eeprom fixed - C00142293 with eeprom socket
C00257406 with eeprom fixed - C00143989 with eeprom socket
C00257409 with eeprom fixed - C00144151 with eeprom fixed
C00254530 with eeprom fixed - C00143069 with eeprom fixed

DRYERS
C00255835 with eeprom fixed - C00258789 with eeprom socket
C00255835 with eeprom fixed - C00194077 with eeprom socket

This notice has a "reference list" specific for each product where you can find the link between smart card and the eeprom code with the same software.

n4008d03: Change of Suspension Mounting Bracket

From serial number 80317.0001 all 7Kg split drum WM & 6 Kg WD’s, and from serial number 80411.0001 6Kg all welded drum WM’s the suspension damper mounting bracket changed in production from a screw fixing from outside of the cabinet base to a screw fixing from the inside of the cabinet base.

The two versions of mounting bracket are not interchangeable.

The damper assembly will now be supplied with the later version of mounting bracket and when changing a suspension unit to a machine produced prior to 80317.0001 & 80411.0001 it will be necessary to transfer the brackets from the old to the new unit.

n4008e00: Suspension fixing to cabinet

From serial number 80317.0001 all 7Kg split drum WM & 6 Kg WD’s, and from serial number 80411.0001 6Kg all welded drum WM’s the suspension damper mounting bracket changed in production from a screw fixing from outside of the cabinet base to a screw fixing from the inside of the cabinet base.

The two versions of mounting bracket are not interchangeable.

Both the cabinet and damper assembly will now be supplied with the later version of mounting bracket and when replacing a cabinet or to machine produced before serial number 80317.0001 & 80411.0001 as listed above, it will be necessary to also fit new suspension units and fixing screws.

n4010c00: Tacho Kit

The tacho kit includes both tacho generator and the fixing disc

n0508c01: Door Gasket Clamp Band

A New Polypropylene Gasket clamp band has been introduced in production from Serial number 80325.0000
The purpose is to provide added support to the inner rim of the door gasket.


n4012e01: Shallow Dispenser Kit (WMA/WD - Vogue 4)

One of two types of dispenser were fitted to these models
TYPE ONE: Has separate external hose's and solenoid valve's and can be HOT & COLD or COLD fill only versions.
TYPE TWO: Has the solenoid valve's integrated into the dispenser moulding and is COLD fill only versions.
Both types will be secured to the console area by 2 screw fixings.

The Integrated type two dispenser is NO LONGER available and will need to be replaced using the Shallow dispenser kit.
NOTE: Solenoid valve's and valve supports are NOT supplied with the kit. If replacement valves are required these will need to be visually identified from images in Partfinder and ordered seperately.


The Kit will consist of the following:
•1 x Spray plate (Adapted for Universal use)
•1 x Dispenser body (2 screw hole fixing type)
•1 x Dispenser drawer (Smooth textured moulding on drawer base)
•3 x Hose's (Dispenser to valve)
•2 x Blanking Cap's (used to blank un-used water fill spigots - refer to leaflet)
•1 x Drawer latch
•3 x Cable ties

The Contents of this kit should be used to convert from a dispenser with integral valves to a dispenser with external valves / hoses.
Any unused inlet spigots on the dispenser box are to be covered with blanking caps supplied. This does not apply to the spigots which have the raised ridge, as these are already blocked.
Cold Fill Only machines will need a blanking cap fitting to the "HOT" spigot.
Ensure the correct hose is connected to the correct dispenser spigot.
Refer to the water flow diagrams to identify them.
Ensure that the hoses from the rear of the dispenser box to the valves are secured safely using Cable Ties (supplied) to avoid contact with the Top Concrete Counterweight.

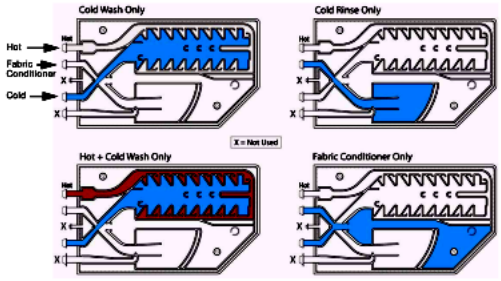
Cold Wash Only
Cold Rinse Only
Hot
Fabric Conditioner
Cold
X
X = Not Used
Hot + Cold Wash Only
Fabric Conditioner Only

Electric schemes and links

Cod. V4MONOPHASE

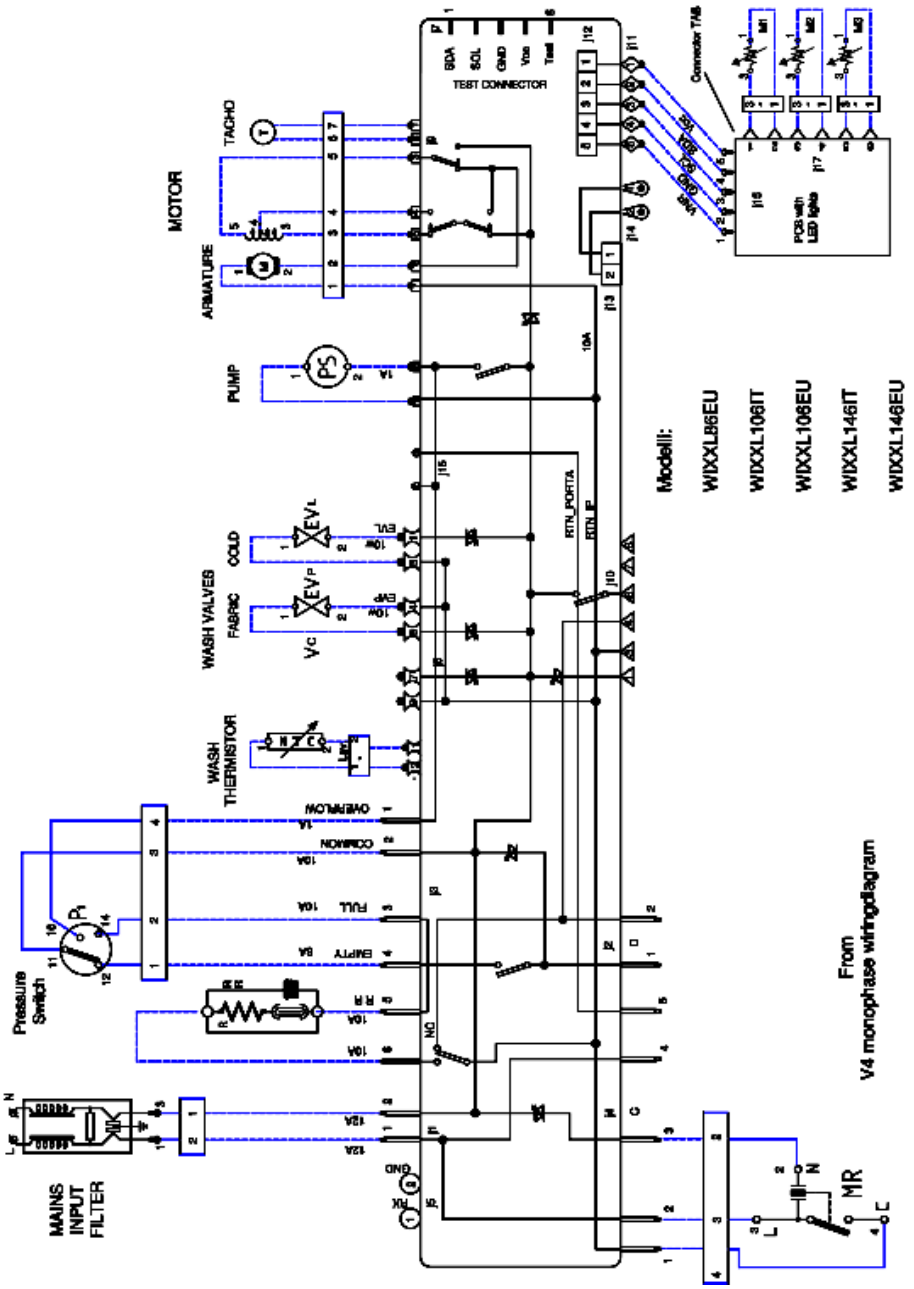

Legend

Legend: V4MONOPHASE