
INDESIT company

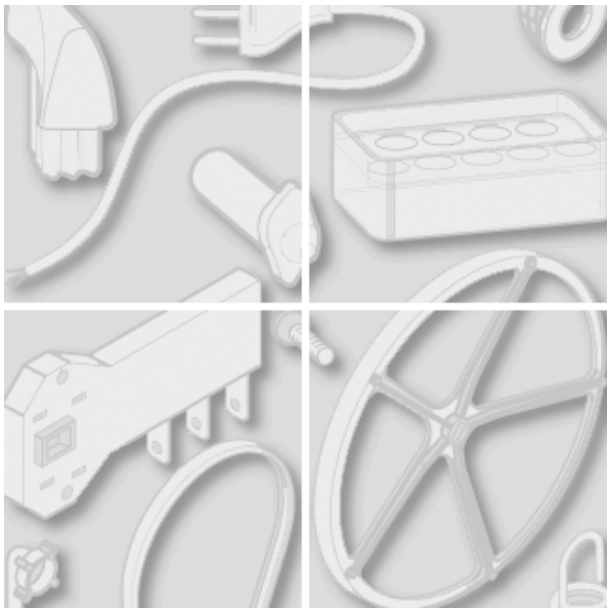

Model type:
CH110EUHA

Commercial code:
F048527

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

5077420 Exploded views

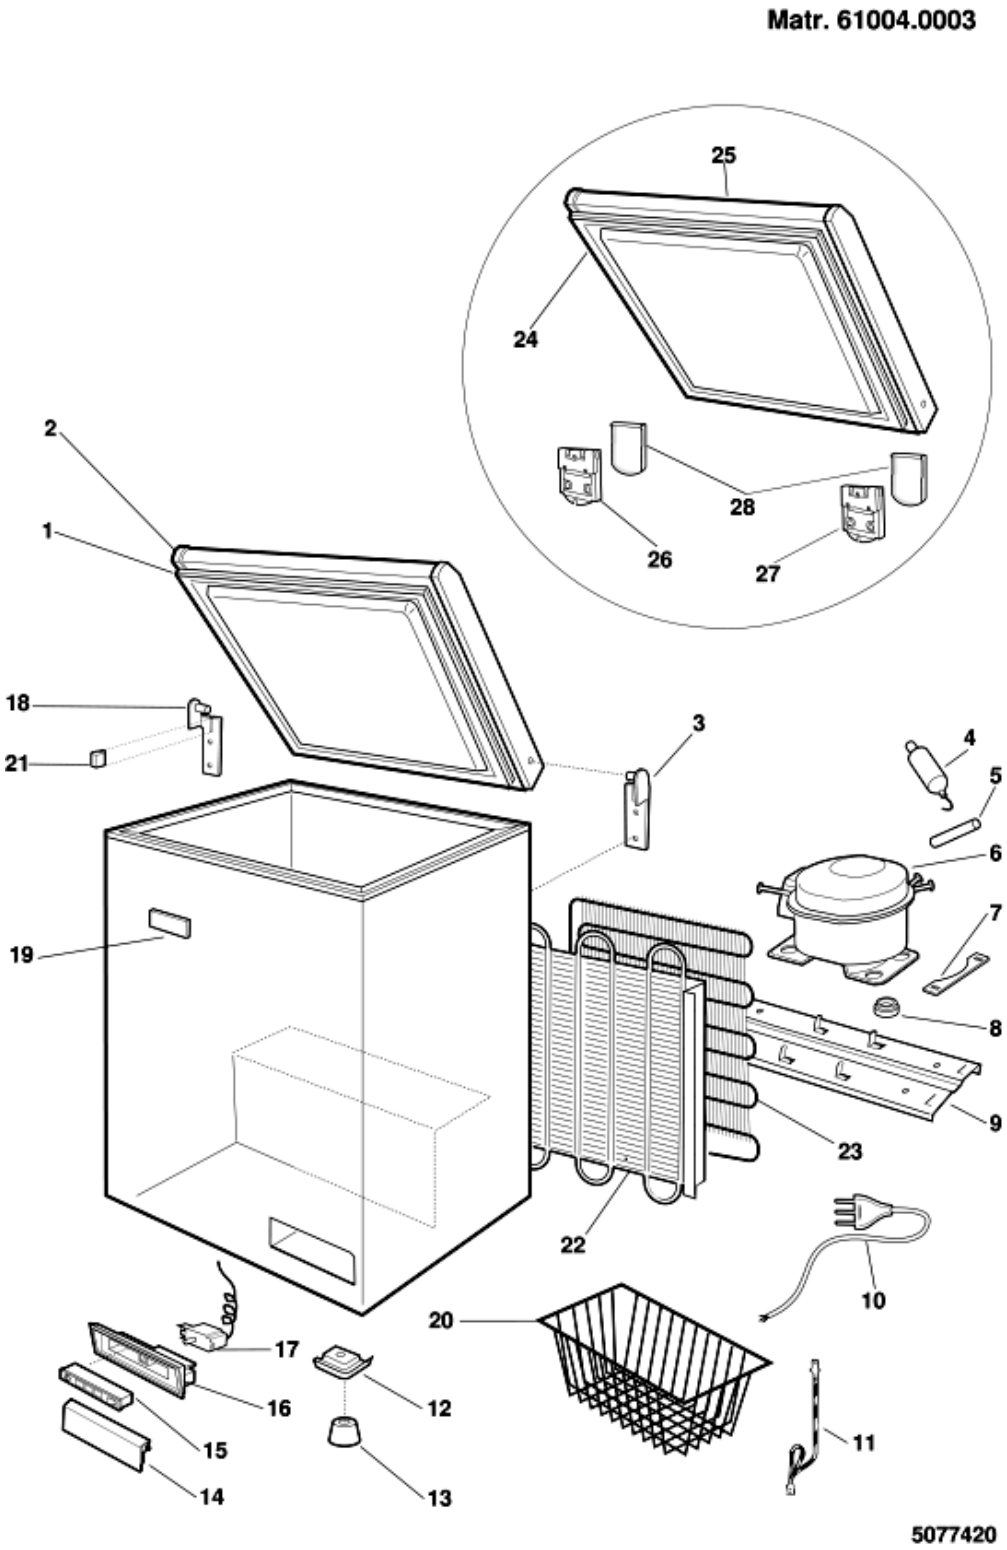


5077420 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00063637				user booklet ch110eu		
001	C00050971				freezer lid gasket 556x520 'ch110'		
002	C00063638				complete door ariston		
002	C00259578				complete door hp/ar 578x537x75		
003	C00050973				hinge right 'ch110'		
004	C00042357			1 x C00042334	filter gr.12 (r134a gas)		
005	C00042354				charging pipe 6x90 mm r134a		
006	C00056821			1 x C00061017	compressor assy u.h.gd40aa 220-		
007	C00008471			1 x C00193590	fixing plate - compressor (750908)		
008	C00032453				rubber shock absorber -		
009	C00603333				compressor crosspiece		
010	C00008598				mains supply cable 3x0,75		
013	C00605017				foot h=15mm		
014	C00612352				control bracket protection		
015	C00046918				thermostat box 'ispracontrol'		
016	C00612499				command panel box		
017	C00063636				atea thermostat a040314-a040366		
018	C00050974				hinge left 'ch110'		
020	C00063628				white basket (wxh)		
021	C00034195				rubber buffer white		
022	C00063635				imat condenser (bxhxp)		

Electric schemes and links

Cod. 507098b

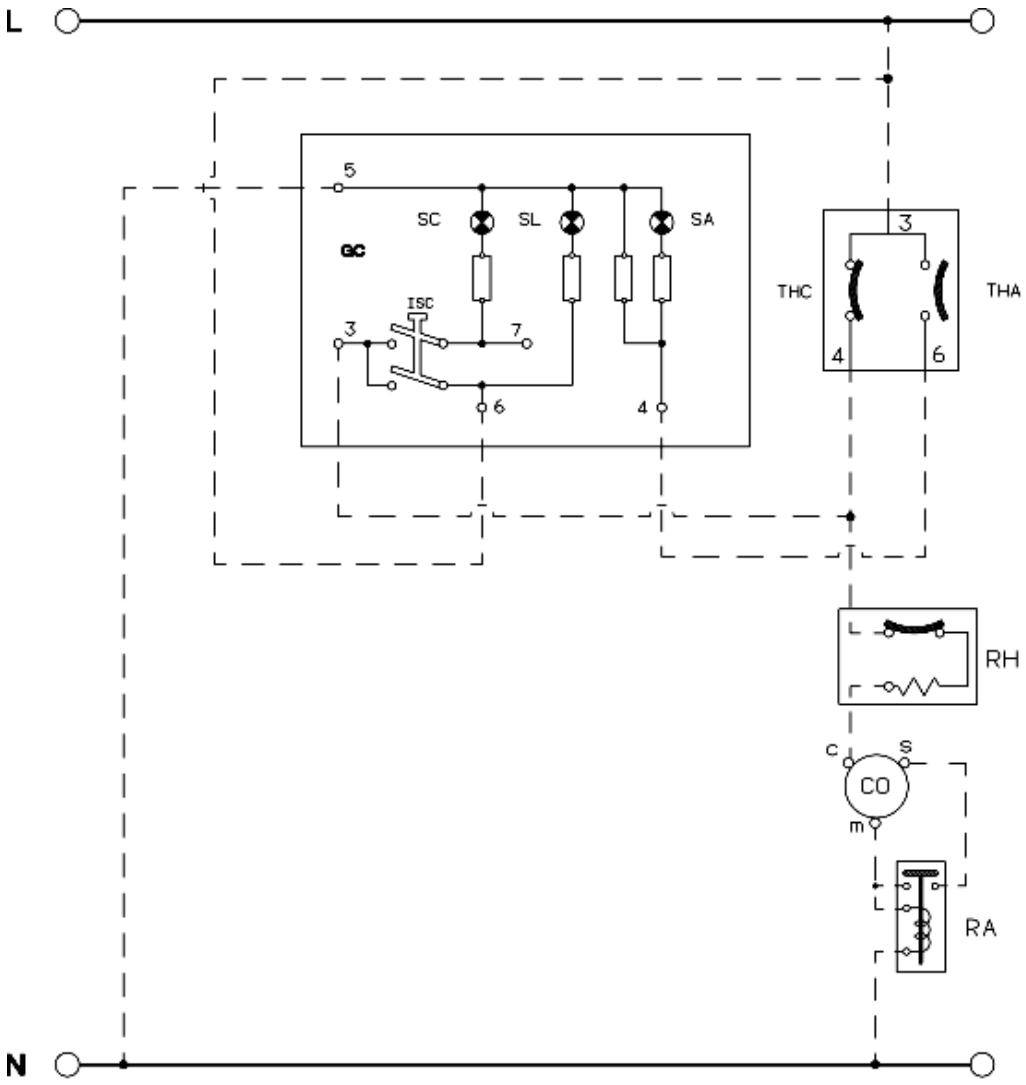

GC = CONTROL BRACKET ISPRACONTROL

Legend

Legend: 507098b

BZ	Audio freezer alarm	N	Neutral
C	Starting capacitor	PTC	PTC relay
CM	Running capacitor	R	Heating resistance
CO	Compressor	RA	Ammetrical relay
EV	Electrovalve	RAN	Heating element condensation
FA	Radio anti-trouble filter	RFZ	Heating element condensation freezer
IDS	Schackler with warning	RH	Thermal relay
IEC	ON OFF loads switch	RS	Defrosting resistance
IEFR	ON OFF refrigerator switch	RS1	Defrosting resistance no-frost evaporator
IETH	Thermostat exclusion	RS2	Defrosting resistance no-frost gutter
ILFR	Push-button for fridge lamp/fan	RTA	Thermo actuator defrosting resistance
ILFZ	Push-button for freezer lamp/fan	SA	Allarm warning
ILI	Lamp switch	SC	Freezing warning
IP	Door switch	SDC	CONTROL CARD DIAGRAM
IR	Line switch	SL	Line warning
ISC	Warning light-freezing switch	SND1	PROBE REFRIGERATOR EVAP.
IV	Fan-motor switch	SND2	AIR-PROBE FREEZER
IVFZ	Freezer fan-motor switch	SND3	AIR-PROBE REFRIGERATOR
L	Line	TA1	Open thermo actuator
LFR	Fridge lamp	TA2	Closed thermo actuator
LFZ	Freezer lamp	TC	Turbocooling
LI	Lighting lamp	TF	Fuse-thermic
M	Mass/Eart symbol	THA	Allarm thermostat
MO	Terminal board	THC	Freezer thermostat
MT	Timer motor	THDF	Refrigerator shackler thermostat
MV	Fan motor	THI	Thermostat switch
MVC	Compressor fan motor	THR	Adjustable thermostat
MVCO	Compressor compartment fan	TP	Thermoprotector