
INDESIT company

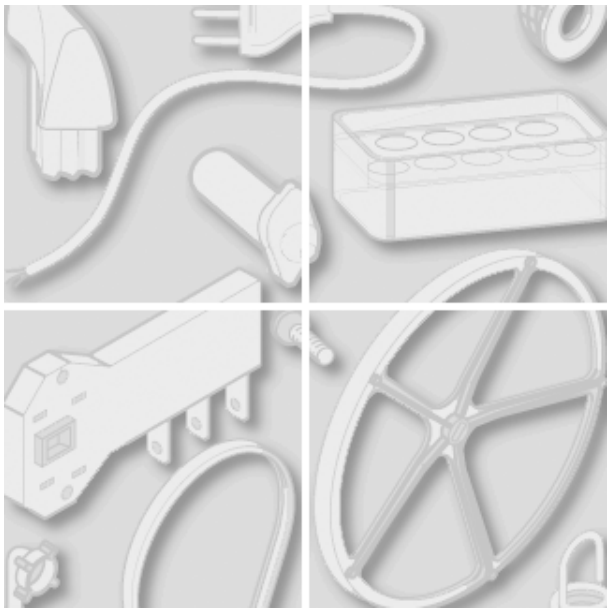

Model type:

WIXXL166EU

Commercial code:

F034545

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1200140 Exploded views

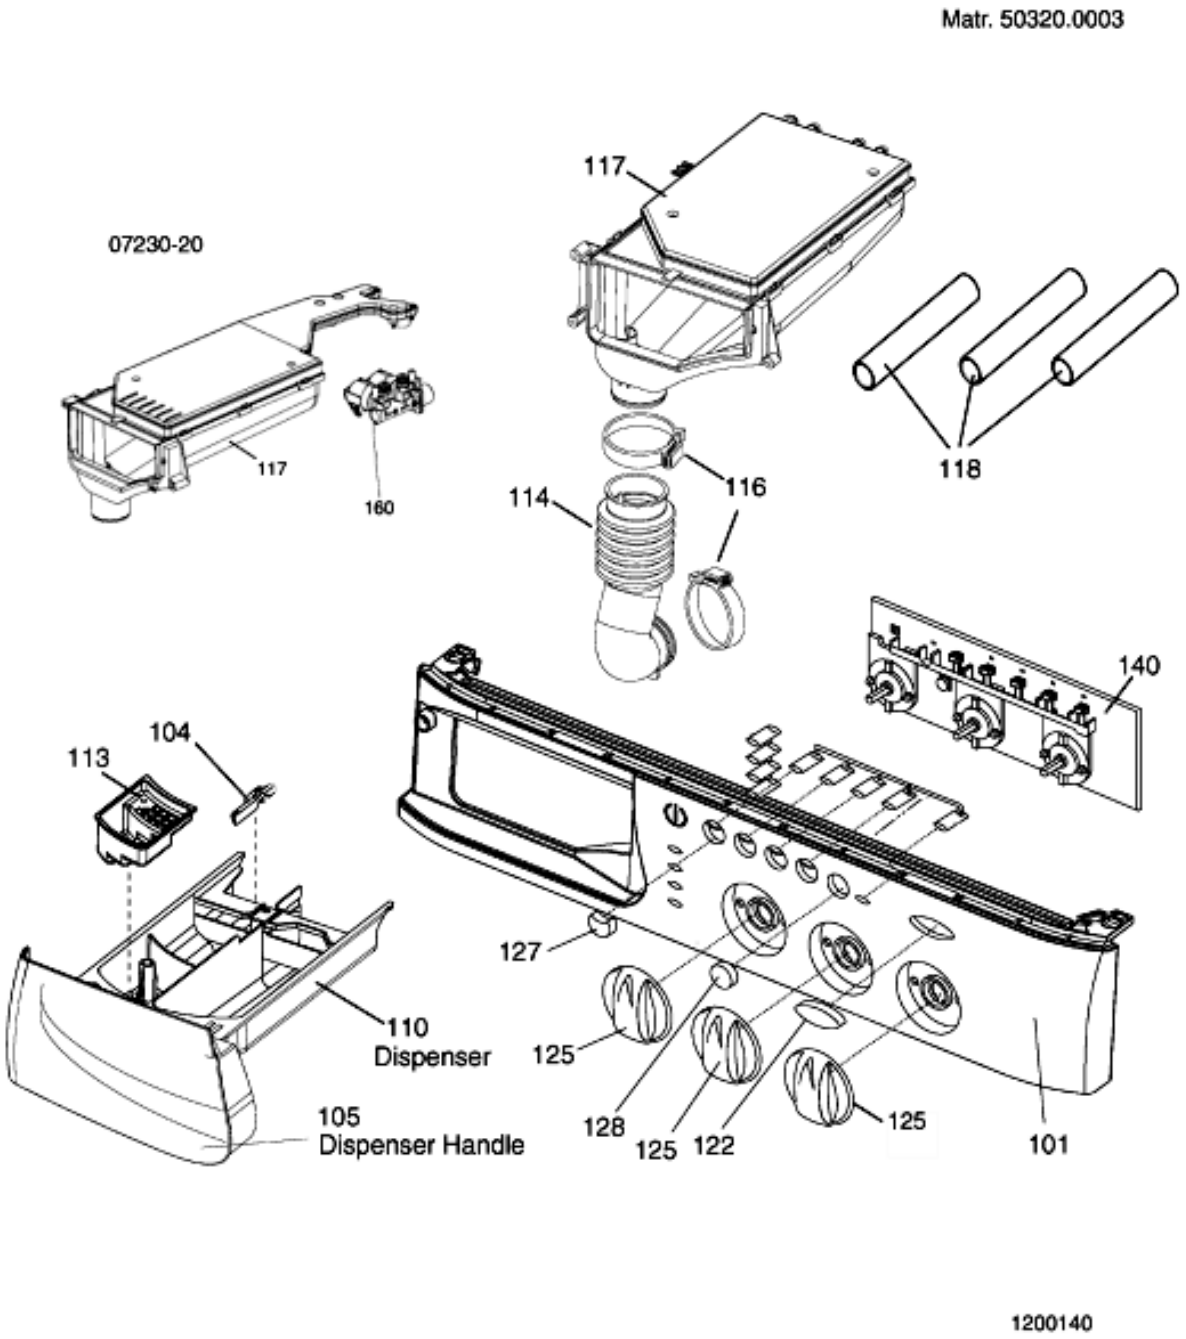


1200140 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00117353				user instruct booklet wixxl166eu		
101	C00117346			1 x C00118476	control panel white wixxl166eu		
101	C00203127				light guide horizontals		
101	C00203128			1 x C00097012	light guide		
104	C00112601			1 x C00272482	drawer latch		
105	C00117121				detergent handle wixxl146it		
110	C00112564				soap dispenser drawer		
113	C00117136				additive container		
114	C00112604			1 x C00141202	dispenser outlet hose		
116	C00112605				herbie clip		
117	C00117137			1 x C00203256	dispenser body + cover		
118	C00117139				hose -		
122	C00117142				push button on-off		
125	C00117140				knob		
127	C00117143			1 x C00114825	pushbutton		
128	C00117144				card start		
140	C00143332				control card (3 x control knobs)		

1200140B Exploded views

Matr. 50320.0001

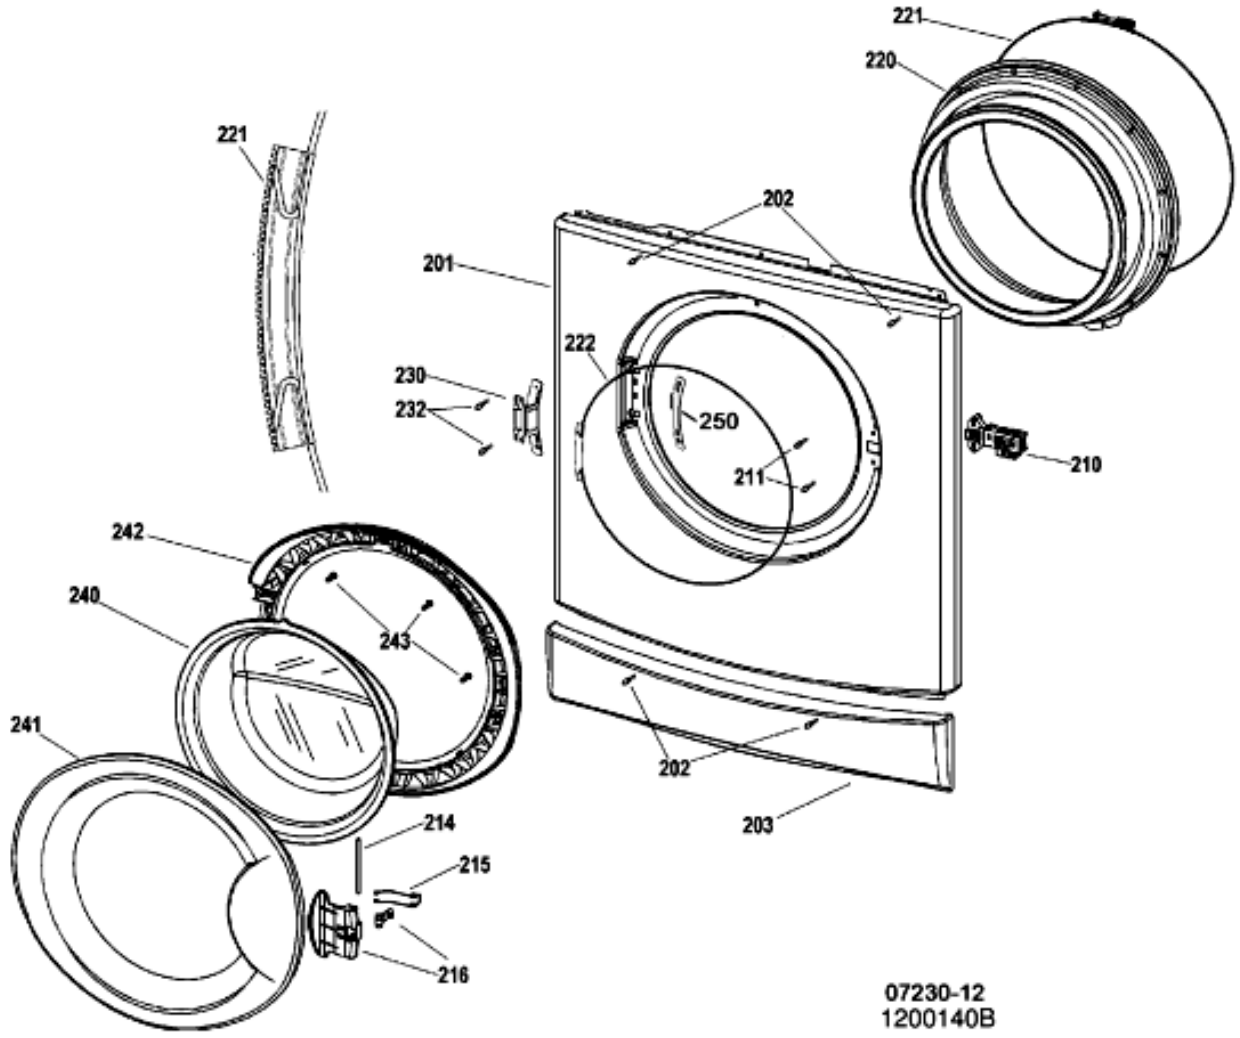


1200140B

Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
201	C00115516				front panel white oem		
202	C00112582				screw no 8 x 1/2		
203	C00117326				plinth cover		
210	C00115517			1 x C00085194	door lock a1600wd		
211	C00112583				screw pan pozi		
213	C00112587			1 x C00019705	latch door		
214	C00095992			1 x C00143728	latch pivot pin		
215	C00112588			1 x C00043668	latch spring		
216	C00094059				screw m4x10tc		
216	C00115519			1 x C00096865	door handle		
220	C00112570			1 x C00143605	bellows seal avxxl105ex		
221	C00112571			1 x C00264305	bellows clamp (tank front)		
221	C00264305	80325...			gasket band	n0508c01	
222	C00112572			1 x C00092156	clamping ring - bellows seal front		
230	C00095987			1 x C00075325	hinge door		
232	C00112593			1 x C00065185	screw 4.5 x 8 zn		
240	C00113961			1 x C00193819	door bowl avxxf		
241	C00117327				door trim - front 'as60vex'		
242	C00115525				door trim rear		
243	C00039537				screw (m6 x 12)		
250	C00112277				door hinge plate		

1200230 Exploded views

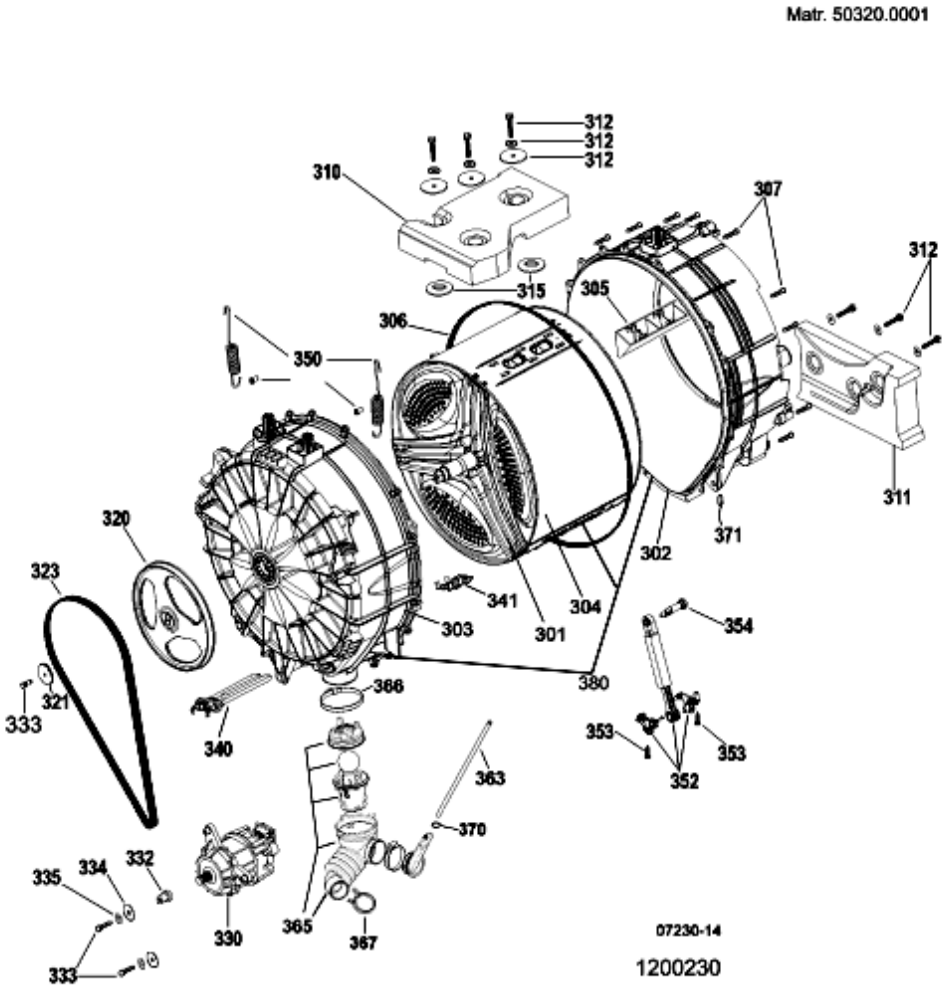


1200230 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
301	C00117329				drum support (35mm)		
301	C00201310				torx screw m8		
302	C00117330				drum front		
303	C00199338				35mm rear drum kit with heater &		
304	C00117352				inner drum		
305	C00112681				lifter		
306	C00112682				drum seal		
307	C00051737				torx m8 x 27 dri-loc screw		
310	C00112573				upper counterweight avxxl105ex		
311	C00112574				front counterweight avxxl105ex		
312	C00112683			1 x C00118502	counterweight fixing		
315	C00112684				thimble spacer		
320	C00112575				drum pulley avxxl105ex		
321	C00112685			1 x C00118593	pulley washer 4 mm thick		
323	C00112576				belt j5 - 1158		
330	C00112768				motor three phase (stator 50) (hl)	n0509j02 n4008i03	
330	C00266008				motor 3ph (stator 50 - 5 tag)	n4008i04	
332	C00112687				flexible motor mount		
333	C00112686				drum pulley retaining bolt		
334	C00112688			1 x C00250676	pulley retain bolt		
335	C00112689				lockwasher		
340	C00112578				heating element & probe (hl)		
341	C00112690				heater bracket (hl)		
350	C00112691				tank spring (rh)		
352	C00271755				suspension damper kit (6 & 7kg)	n4008d03	
353	C00112694		80316...		screw		
354	C00112695			1 x C00118593	plastic damper pag		
363	C00112697				air trap hose		
363	C00112698				cabinet hose clip		
365	C00112696				sump assembly		
366	C00112699				fix clip drum / sump hose		
367	C00112656				drain hose clip		
370	C00112700				cable tie		
372	C00118503				wear plate		

1200230 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
373	C00118502				weight fixing		
380	C00112679				drum assembly		

1200320 Exploded views

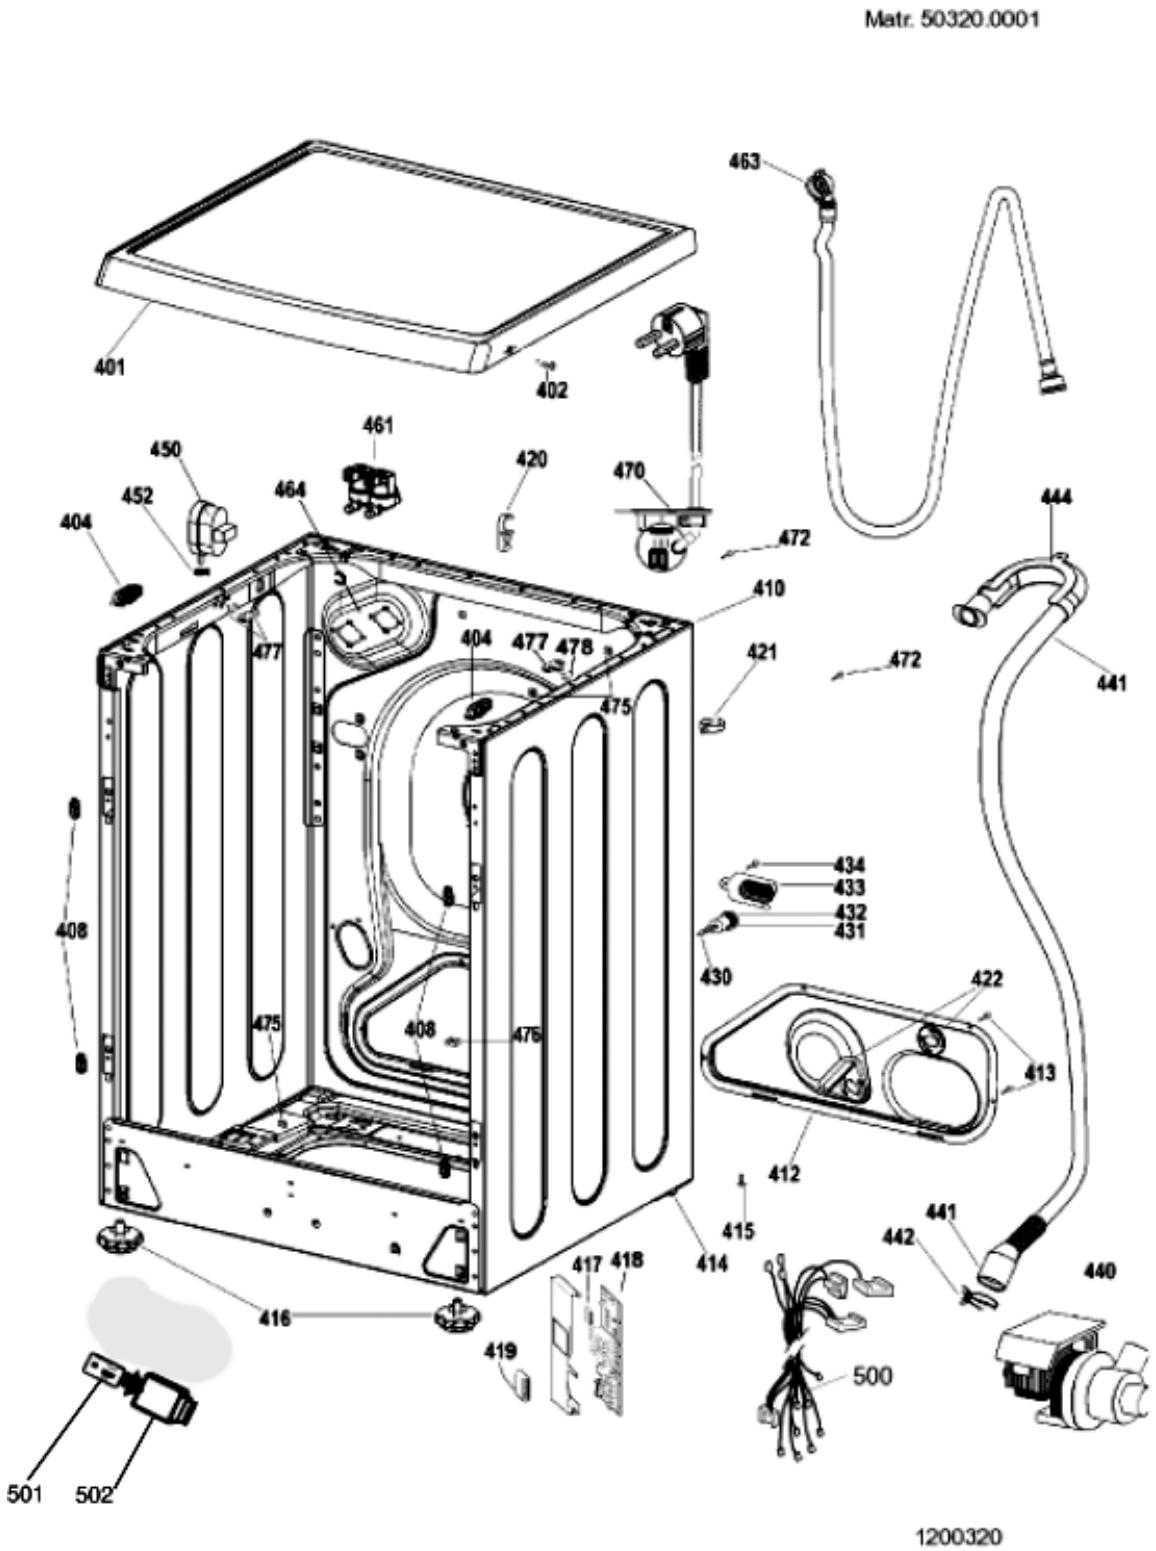

1200320 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
401	C00117334			1 x C00195896	top cover		
402	C00112631			1 x C00149572	screw top cover		
408	C00112633				front panel retainer		
410	C00112635			1 x C00144147	cabinet polar	n4008e00	
412	C00112637				rear cover		
414	C00110045				adjustable foot		
415	C00112644				screw		
416	C00112640				adjustable foot assembly		
418	C00257409				module+eep wd>1200 rpm+sc	n4008c01	
419	C00112735				cap serial port		
420	C00112646				cabinet hose clip		
421	C00112647				clip		
430	C00112651				transit spacer		
433	C00112652				transit spacer		
440	C00112653				drain pump (hl)		
440	C00112654				pump flap valve		
441	C00112655				drain hose l=1600mm		
442	C00112656				drain hose clip		
444	C00112658				drain hose hook		
450	C00112659				pressure switch (hl)		
452	C00112660				cabinet hose clip		
460	C00112583				screw pan pozi		
461	C00112661				2x cold valve -small tag		
461	C00201982				2x cold valve -amp tag connector		
463	C00112664			1 x C00199345	fill hose hot 2m		
464	C00117335			1 x C00140810	electrovalve support		
470	C00094203			1 x C00115769	supply cable 3 x 1.0 1,5mt shuko		
472	C00095586			1 x C00250888	screw		
475	C00112673				cable clamp		
476	C00112675				wiring stop		
477	C00112677				bearing spring top		
478	C00112676				bearing keeper plate		
500	C00112627			1 x C00203626	harness mtr pump		
500	C00112628				harness valves / ntc (hl)		
500	C00112629				harness s / link		

1200320 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
500	C00112775				harness mains / filter		
500	C00113005			1 x C00114343 1 x C00199375	harness pressure switch / heater		
500	C00114323			1 x C00114343	heater wire live		
500	C00114324			1 x C00114343	heater wire neutral		
500	C00115515				harness door switch (hl)		
501	C00274620				card wixxl166eu 8kb s/w	n4008c01	
502	C00252539			1 x C00263927	smart reader for card 8kb	n4008c01	

Notices

n0509j02: Alternative Motor kit

The original 7 terminal motor is no longer available and for the machines with 3.5 software has been replaced by a kit containing a 5 terminal motor and module.
Motor protection for the 5 terminal motor is achieved via the replacement module supplied in the kit. Therefore, to maintain essential overload protection when fitting this motor the enclosed module (PCB) MUST also be fitted

No modification is required to the motor plug or harness when fitting this kit.

The Programme Settings File version is not affected by this change.

Parts included in the kit
Motor C00266008
Module C00254530

n1040242: Power card with welded eeprom.

From serial number 20304.0001, IDC power card with welded eeprom is used to ensure the perfect connection of all parts, in the Comunanza, Teverola and Brembate factories.
To replace the module with welded eeprom, it will be necessary to use the eeprom indicated in the SAT document of the model concerned.
To replace the module on a unit with welded eeprom both the SAT module and the eeprom are required, because the latter cannot be reused.

n1040296: List of EVOII FAULTS and troubleshooting.

In case of washing-machine fault in carrying out the self-test function, the machine reproposes the fault previously signalled and the same fault is shown on the display of the new hardware key.
The type of fault can be signalled in different ways:

- on AVD models the fault is shown directly on the machine display.
- on AVL models the fault is signalled by LEDs.

Reading of Faults signalled by LEDs
When the machine has a fault:
1. The window is locked
2. The door lock light flashes fast (> 1 Hz)
3. The control panel LEDs light up, to signal the fault, according to the table (fig. 01).
The example shown in fig. 02 (Example Fault F03) below indicates which LEDs are flashing if the machine has Fault F03

List of faults, malfunctions and Warnings:

F01: Triac Motor short circuit
- Check for water leaks that may affect connector J9 causing the relevant contacts to short
- Check the motor terminal block (possible problems due to chemical effects of work residuals on the contacts which may cause short-circuiting)
- Replace Card

F02: Motor blocked, Tachometrics in Short Circuit/Open
- Check motor if blocked
- Check efficiency of J9 connector on card
- Check the tachometric winding verifying an ohmic resistance reading of 115 - 170 ohm between pins
1 and 2 on wiring connector J9. In case of short circuit/open circuit check the wiring between pins 1 and 2 of J9 relevant to the tachometrics. With three-phase motor, make sure there is ohmic continuity between J9 pins 6 and 7.
- Replace motor
- Replace card

F03: NTC Open or in Short Circuit or washing heater relay stuck (signalled in presence of full load)
- Check efficiency of J8 connector contacts on card
- Check NTC verifying that the ohmic resistance value at room temperature 20°C is approx. 20Kohm on J8 wiring connector pin 11 and 12.
- If the measurement is incorrect check J8/NTC wiring continuity
Check the same parameter directly on NTC
- Replace NTC
- Replace Card

F04: Simultaneous empty and overflow (pressure switch stuck on empty).
If the pressure switch contact is stuck on empty the washing-machine loads water until reaching the overflow. The drain pump is automatically started by the contact on the overflow pressure switch.
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring of connector J3/pressure switch
- Replace pressure switch
- Replace card.

F05: Pump Blocked or pressure switch empty not reached
- Check efficiency of J9 connector on card, verifying a voltage of 220V between pins 8 and 9
- Check that pump if being fed
- Check Pump Filter + wall drain
- Change Pump
- Replace Card

F06: No on AVD and AVL

F07: No Wash Heating Element Absorption (the fault is only signalled with the pressure switch on empty)
- Check efficiency of J3 connector contacts on card
- Check continuity of the wash heating element on J3 connector pins 5 and 6. The 1800W 230V heating element has a resistance of 25 ohm.
- Check connection of pressure switch J3 connector pins 2 and 3: there must not be ohmic continuity (shared with full load).
Check connection of pressure switch J3 connector pins 2 and 4: there must be ohmic continuity
- Replace Heating Element
- Replace Pressure Switch
- Replace Card

F08: Wash Heater Relay Stuck (signalled in presence of empty) or pressure switch stuck on Full (simultaneously empty and full)
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and
pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring J3/pressure switch
- Check connection of heating element J3 connector pins 5 and 6.
- Replace pressure switch
- Replace Card

F09: Machine Setup Error (Eeprom error)
- In case of production card with Eeprom soldered: replace the card and Eeprom
- In case of replacement of Eeprom and card, check correct housing of Eeprom on card socket

F10: No full and empty signal
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and
pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring of connector J3/Pressure switch
- Replace Pressure Switch
- Replace Card

F11: No Pump Feedback (Drain pump disconnected or winding broken)
- Check efficiency of J9 connector on card
- Check continuity of the Pump on J15 connector pins 1 and 2 (in case of washing-machine with Easy Door door lock) or on J9 connector pins 8 and 9 (in case of conventional door lock), checking a resistive value equal to 170 ohm.
- Check wiring of connector J15 (or J9)/Pump
- Replace Pump
- Replace Card

F12: No Communication Display/LED Card-Main Board
- Check efficiency of contacts on card of J11 connector
- Check the continuity of J11 connector-display card 5-pin connector
- Replace Main Board
- Replace Display Card/LED

F13: Drying NTC sensor open / Drying system NTC wiring disconnected
Check efficiency of J10 connector on card
Check NTC on J10 connector pins 7 and 8 verifying that the ohmic value of the sensor at room temperature 20°C is approx. 20Kohm
Check continuity of NTC/J10 connectors wiring
Replace NTC
Replace card

F14: Drying heater open or not connected
Check efficiency of J2 connector contacts on card

Check continuity of drying heater on J2 wiring connector pins 1 and 2, verifying that the ohmic value of the 1300W 230V heating element is approx. 40Kohm
Check wiring of connector J10/drying heater
Replace heating element
Replace card

F15: Drying heater always on (drying relay contact stuck or drying Triac short circuit)
Check efficiency of J2 connector contacts on card of
Check wiring of connector J2/drying heater
Check wiring of connector J3/pressure switch
Replace card

F16: Drum locking (top-loading only)

F17: Door lock unfed/open (with Easy Door)
- Check presence of 230V mains power on J4 wiring connector inserted on card between pins 3 and 4,
(not present with machine on standby) and presence of power from 230V door lock between pins 3 and 5
- Check ohmic continuity of the door microswitch on J4 connector inserted on card between pins 1 and 2 (with door closed/on open/off)
- Check continuity of J4/door lock wiring
- Check door hooking
- Replace door lock
- Replace card

F17: Door lock unfed/open (conventional door lock, not Easy Door)
- Check presence of 230V mains power on J4 wiring connector inserted on card between pins 2 and 3,
(not present with machine on standby) and presence of power from 230V door lock between pins 3 and 1
- Check door hooking
- Replace door lock
- Replace card

F18 --> Communication error microprocessor / DSP (Digital Signal Processor)
- Replace card

COMBINAZIONE LED

SIMBOLOGIA:

= LED ACCESO = LED SPENTO

FAULT	LED Fasi	TASTI FUNZIONI			
F01	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F02	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F03	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F04	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F05	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F06	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F07	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F08	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F09	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F10	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F11	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F12	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F13	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F14	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F15	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F16	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F17	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F18	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4




ARISTON



INDESIT


FIG. 01

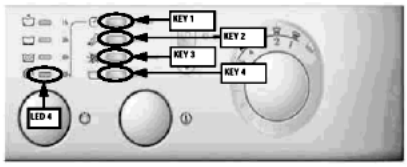

Fault	Key 1	Key 2	Key 3	Key 4	Led 4
01	Off	Off	Off	Flash	Off
02	Off	Off	Flash	Off	Off
03	Off	Off	Flash	Flash	Off
04	Off	Flash	Off	Off	Off
05	Off	Flash	Off	Flash	Off
06	Off	Flash	Flash	Off	Off
07	Off	Flash	Flash	Flash	Off
08	Flash	Off	Off	Off	Off
09	Flash	Off	Off	Flash	Off
10	Flash	Off	Flash	Off	Off
11	Flash	Off	Flash	Flash	Off
12	Flash	Flash	Off	Off	Off
13	Flash	Flash	Off	Flash	Off
14	Flash	Flash	Flash	Off	Off
15	Flash	Flash	Flash	Flash	Off
16	Off	Off	Off	Off	Flash
17	Off	Off	Off	Off	Flash

Table Fault LED

FIG. 02

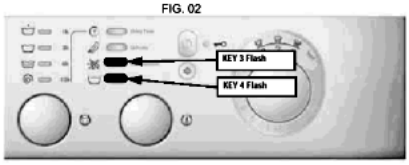

Example Fault F03

Tabla de averías para lavadora EVO II



CO		MBINACIÓN LED				
FAULT	CAU SA	LED Fase	TECLAS FUNCIONES			
F01	Triac control motor en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F02	Motor bloqueado, taquímetro motor abierto / en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F03	Sonda NTC lavado abierta / en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F04	Vacío + sobrenivel presentato simultaneamente	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F05	No se logra vacío presostato bomba desagua bloqueada	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F06	Error de selector (no encuentra código)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F07	Falta absorción en la resistencia de lavado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F08	Relé resistencia de lavado con el contacto NA/NC pegado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F09	Error setup file (EEPROM no programada o correcta)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F10	Presostato en llene=Vacío o sin señal de vacío ni llena	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F11	Falta alimentación a la bomba de desagüe	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F12	Falta comunicación entre módulo display y modulo de control	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F13	Sonda NTC secado abierta/corto. Ventilador secado bloqueado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F14	Falta alimentación a la resistencia de secado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F15	Contacto relé resistencia de secado pegado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F16	Bloqueo de cesto (solo carga superior)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F17	Bloqueo puerta desalmacado /abierta	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F18	Error de comunicación Micro/DSP (MODULO)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4


– LED

SIMBOLOGIA:

= led parpadeo

= led apagado


ABB. 01

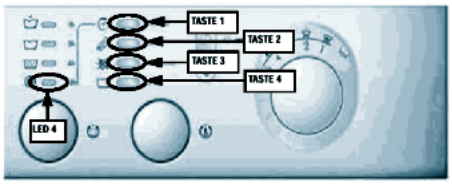

Fault	Taste 1	Taste 2	Taste 3	Taste 4	Led 4
01	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet
02	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet
03	Ausgeschaltet	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet
04	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
05	Ausgeschaltet	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet
06	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet
07	Ausgeschaltet	Blinkt	Blinkt	Blinkt	Ausgeschaltet
08	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
09	Blinkt	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet
10	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet
11	Blinkt	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet
12	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
13	Blinkt	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet
14	Blinkt	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet
15	Blinkt	Blinkt	Blinkt	Blinkt	Ausgeschaltet
16	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt
17	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt	Blinkt


Tab. Störung Led

ABB. 02

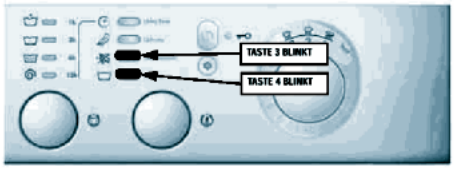

Beispiel Störung F03


FIG. 01

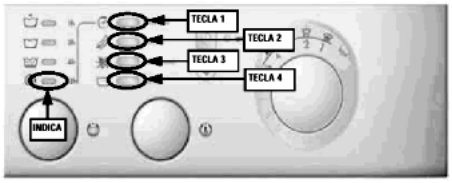

Fault	Tecla 1	Tecla 2	Tecla 3	Tecla 4	Indicador luminoso 4
01	Apagado	Apagado	Apagado	Pisca	Apagado
02	Apagado	Apagado	Pisca	Apagado	Apagado
03	Apagado	Apagado	Pisca	Pisca	Apagado
04	Apagado	Pisca	Apagado	Apagado	Apagado
05	Apagado	Pisca	Apagado	Pisca	Apagado
06	Apagado	Pisca	Pisca	Apagado	Apagado
07	Apagado	Pisca	Pisca	Pisca	Apagado
08	Pisca	Apagado	Apagado	Apagado	Apagado
09	Pisca	Apagado	Apagado	Pisca	Apagado
10	Pisca	Apagado	Pisca	Apagado	Apagado
11	Pisca	Apagado	Pisca	Pisca	Apagado
12	Pisca	Pisca	Apagado	Apagado	Apagado
13	Pisca	Pisca	Apagado	Pisca	Apagado
14	Pisca	Pisca	Pisca	Apagado	Apagado
15	Pisca	Pisca	Pisca	Pisca	Apagado
16	Apagado	Apagado	Apagado	Apagado	Pisca
17	Apagado	Apagado	Apagado	Pisca	Pisca

Tab. Fault indicador luminoso

FIG. 02

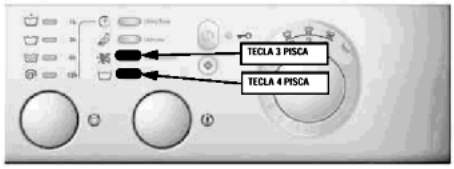

Exemplo Fault F03



Cruscotto - Tableau de borde - Belde - Control panel
Painel frontal - Quadro Mandos - Kontrol paneli

n4008c01: Smart Card - LVB/DRYERS

Beginning April 2008 spare parts warehouse started to manage the EVOII modules with eeprom fixed, these can only be programmed with smart card/palmare/pc.

Attention!! The premodification with eeprom socket can be programmed with smart card/palmare/pc using a blank eeprom or

with pre programmed eeprom.

Spare parts of modules with eeprom fixed/eeprom socket:

C00265676 with eeprom fixed - C00143068 with eeprom socket - for models with conducibility sensor
C00254298 with eeprom fixed - C00143068 with eeprom socket - for models without conducibility sensor
C00254297 with eeprom fixed - C00259941 with eeprom socket
C00254531 with eeprom fixed - C00143058 with eeprom socket
C00254297 with eeprom fixed - C00143057 with eeprom socket - for models without blocking drum
C00265697 with eeprom fixed - C00143057 with eeprom socket - for models with blocking drum
C00254297 with eeprom fixed - C00143056 with eeprom socket
C00254530 with eeprom fixed - C00259738 with eeprom socket
C00254533 with eeprom fixed - C00143060 with eeprom socket
C00254535 with eeprom fixed - C00145013 with eeprom socket
C00254530 with eeprom fixed - C00145551 with eeprom socket
C00254529 with eeprom fixed - C00142293 with eeprom socket
C00257406 with eeprom fixed - C00143989 with eeprom socket
C00257409 with eeprom fixed - C00144151 with eeprom fixed
C00254530 with eeprom fixed - C00143069 with eeprom fixed

DRYERS
C00255835 with eeprom fixed - C00258789 with eeprom socket
C00255835 with eeprom fixed - C00194077 with eeprom socket

This notice has a "reference list" specific for each product where you can find the link between smart card and the eeprom code with the same software.

n4008d03: Change of Suspension Mounting Bracket

From serial number 80317.0001 all 7Kg split drum WM & 6 Kg WD’s, and from serial number 80411.0001 6Kg all welded drum WM’s the suspension damper mounting bracket changed in production from a screw fixing from outside of the cabinet base to a screw fixing from the inside of the cabinet base.

The two versions of mounting bracket are not interchangeable.

The damper assembly will now be supplied with the later version of mounting bracket and when changing a suspension unit to a machine produced prior to 80317.0001 & 80411.0001 it will be necessary to transfer the brackets from the old to the new unit.

n4008e00: Suspension fixing to cabinet

From serial number 80317.0001 all 7Kg split drum WM & 6 Kg WD’s, and from serial number 80411.0001 6Kg all welded drum WM’s the suspension damper mounting bracket changed in production from a screw fixing from outside of the cabinet base to a screw fixing from the inside of the cabinet base.

The two versions of mounting bracket are not interchangeable.

Both the cabinet and damper assembly will now be supplied with the later version of mounting bracket and when replacing a cabinet or to machine produced before serial number 80317.0001 & 80411.0001 as listed above, it will be necessary to also fit new suspension units and fixing screws.

n4008i03: Motor identification

This motor can be identified by the number of terminal connection tags in the motor block attached to the side of the motor.

This motor has 7 Terminal connection tags.

n4008i04: Motor identification

This motor was subject to a gradual phase into production from 80418.0001 and can be identified by the number of terminal connection tags in the motor block attached to the side of the motor.


The overload protection for this motor is vai the module, the motor can be visualy identified by only having 5 Terminal connection tags.

n0508c01: Door Gasket Clamp Band

A New Polypropylene Gasket clamp band has been introduced in production from Serial number 80325.0000
The purpose is to provide added support to the inner rim of the door gasket.

Electric schemes and links

Cod. 5407185wd

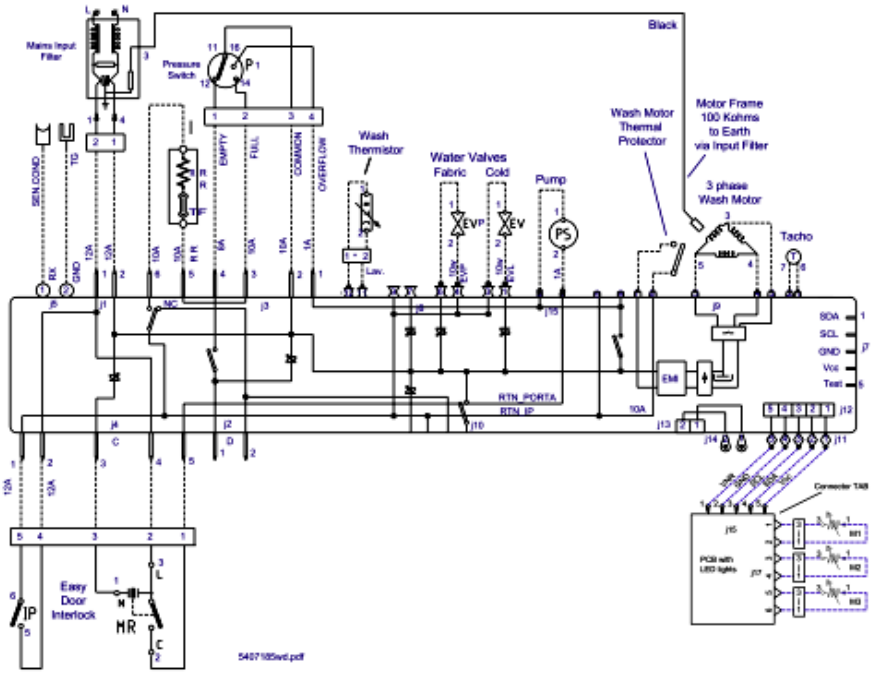

Legend

Legend: 5407185wd