
INDESIT company

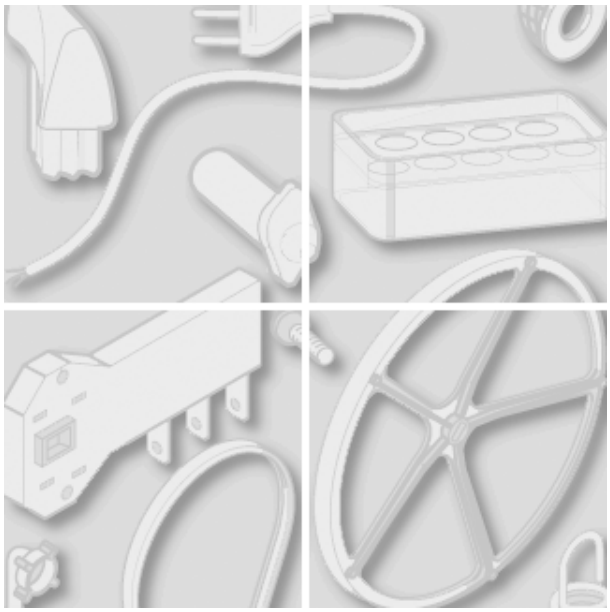

Model type:

SL16.1P(WH)

Commercial code:

F030094

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:

REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics


INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1567e (... - 80715...) Exploded views

matr.40114.0001

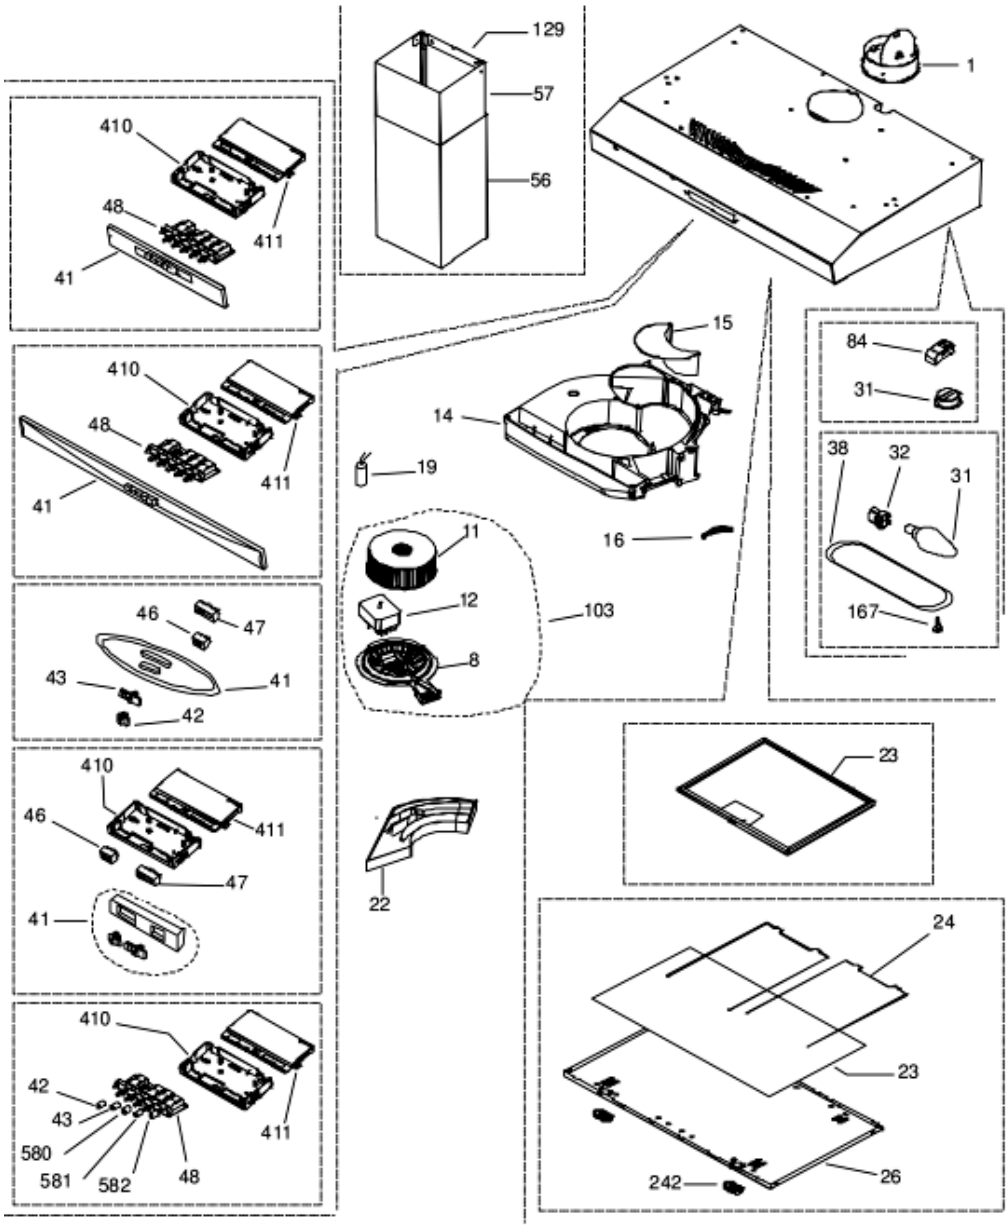


1567e

1567e (... - 80715...) Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00099093				user instruction book sl16.1		
001	C00095227				flange d125		
011	C00099098				motor propeller		
012	C00099099				motor s80-25 6200 ser.krea		
014	C00098266				conveyor		
015	C00095229				deflector conveyor		
016	C00095230				knob deflector conveyor		
019	C00090176			1 x C00255895	condenser 5mf		
022	C00266961			1 x C00090944	carbon filter model 48		
023	C00099100				grease filter		
031	C00138617			1 x C00242926	complete halogen lamp		
041	C00099092			1 x C00195615	control panel sl16.1wh		
046	C00135642				lamp switch		
047	C00135643				fan motor speed - switch		
084	C00096871				transformer		
410	C00095239				control box		
411	C00095240				control box cover		
999	C00143131				drain coupling + check valve		

2424 (80716...- ...) Exploded views

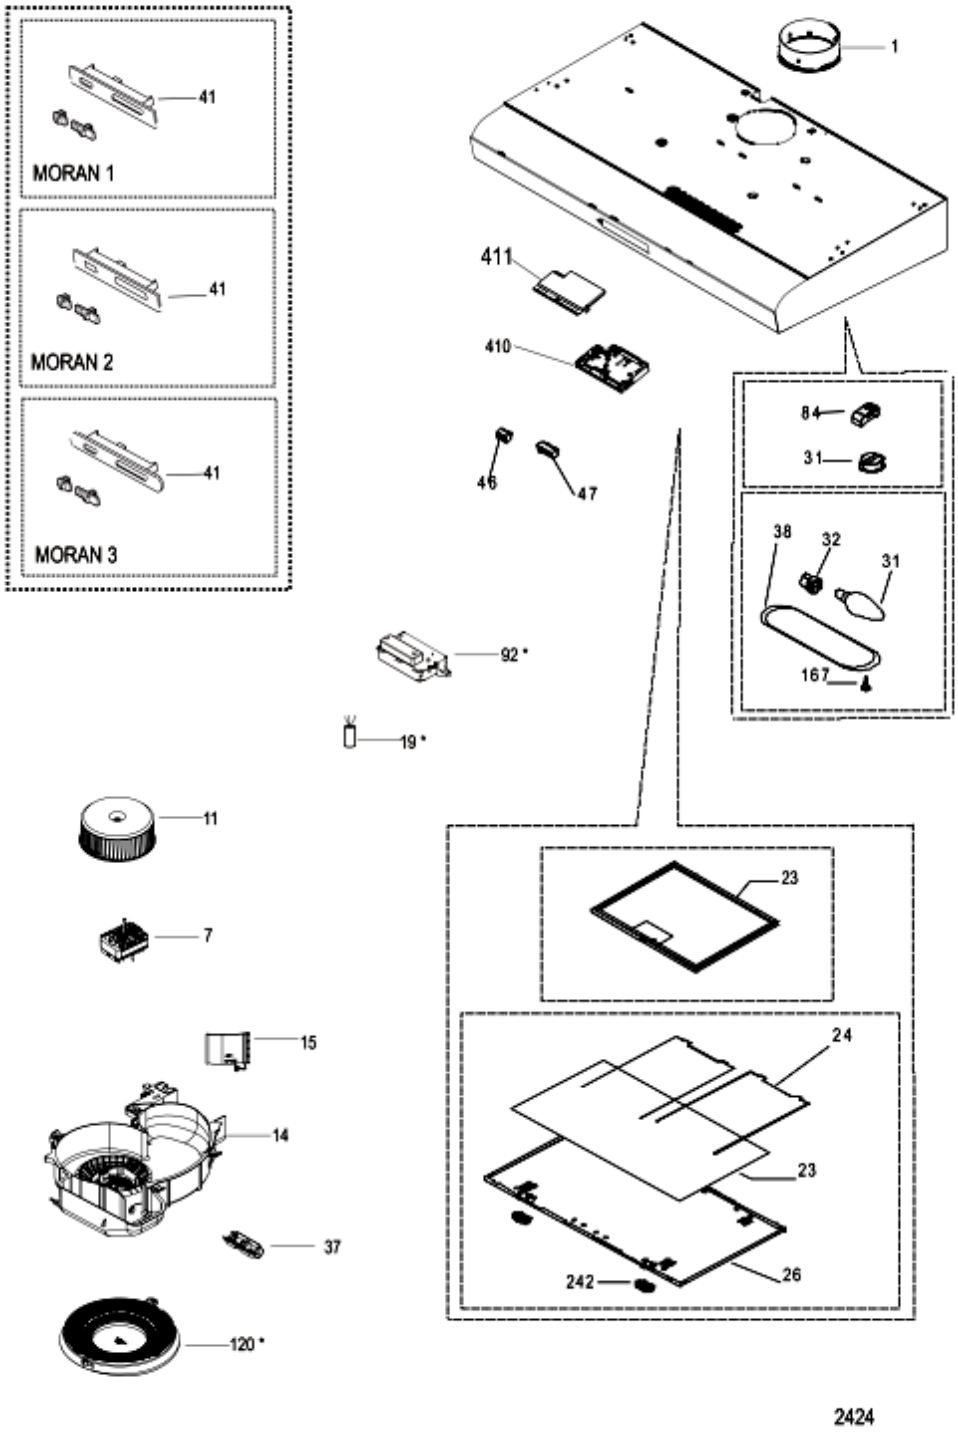


2424 (80716...- ...) Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00095227				flange d125		
007	C00268849				motor		
011	C00099098				motor propeller		
014	C00268850				conveyor		
015	C00265887				deflector conveyor		
019	C00255895				condenser		
023	C00099100				grease filter		
031	C00138617			1 x C00242926	complete halogen lamp		
037	C00265889				support, lamp		
041	C00195615			1 x C00255977	control panel		
046	C00135642				lamp switch		
047	C00135643				fan motor speed - switch		
084	C00264365				transformer		
092	C00270780				electronic box		
120	C00266961			1 x C00090944	carbon filter model 48		
410	C00265890				command box		
411	C00265891				cover box comand		
519	C00270814				user instructions booklet		

Electric schemes and links

Cod. se1BSA

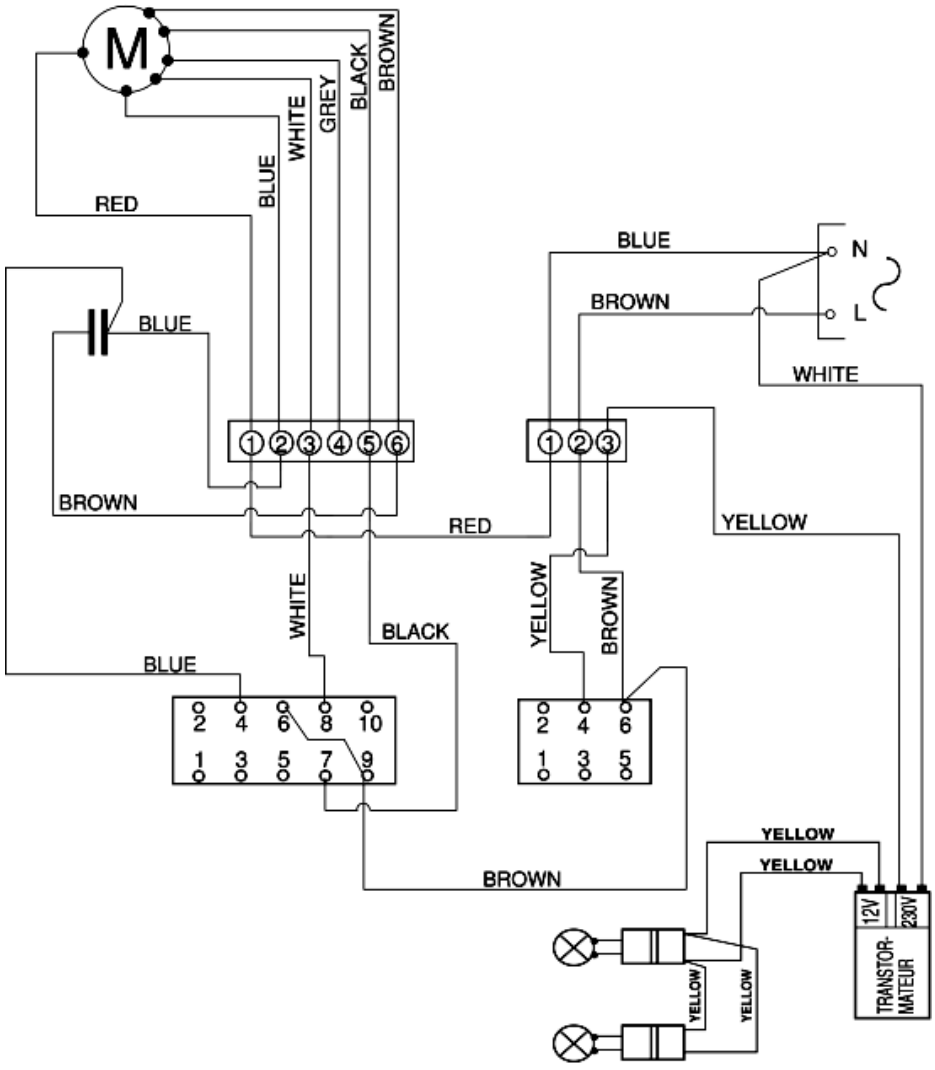

se1BSA

Legend

Legend: se1BSA

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element