
INDESIT company

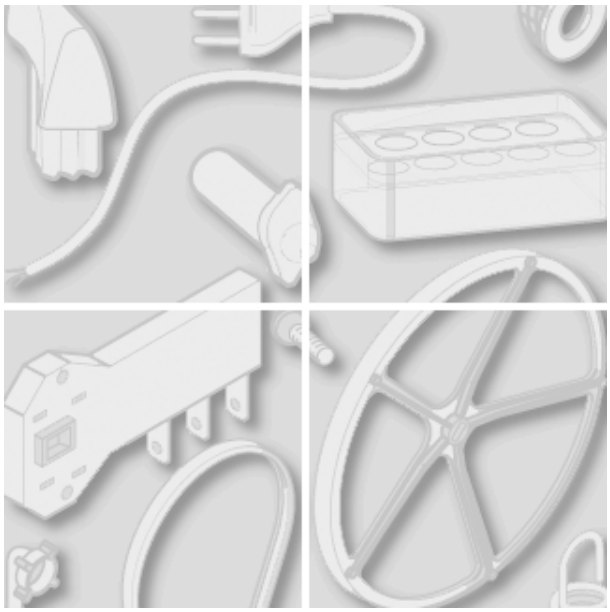

Model type:

PH960MST(WH)/HA

Commercial code:

F048304

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

4230410 Exploded views

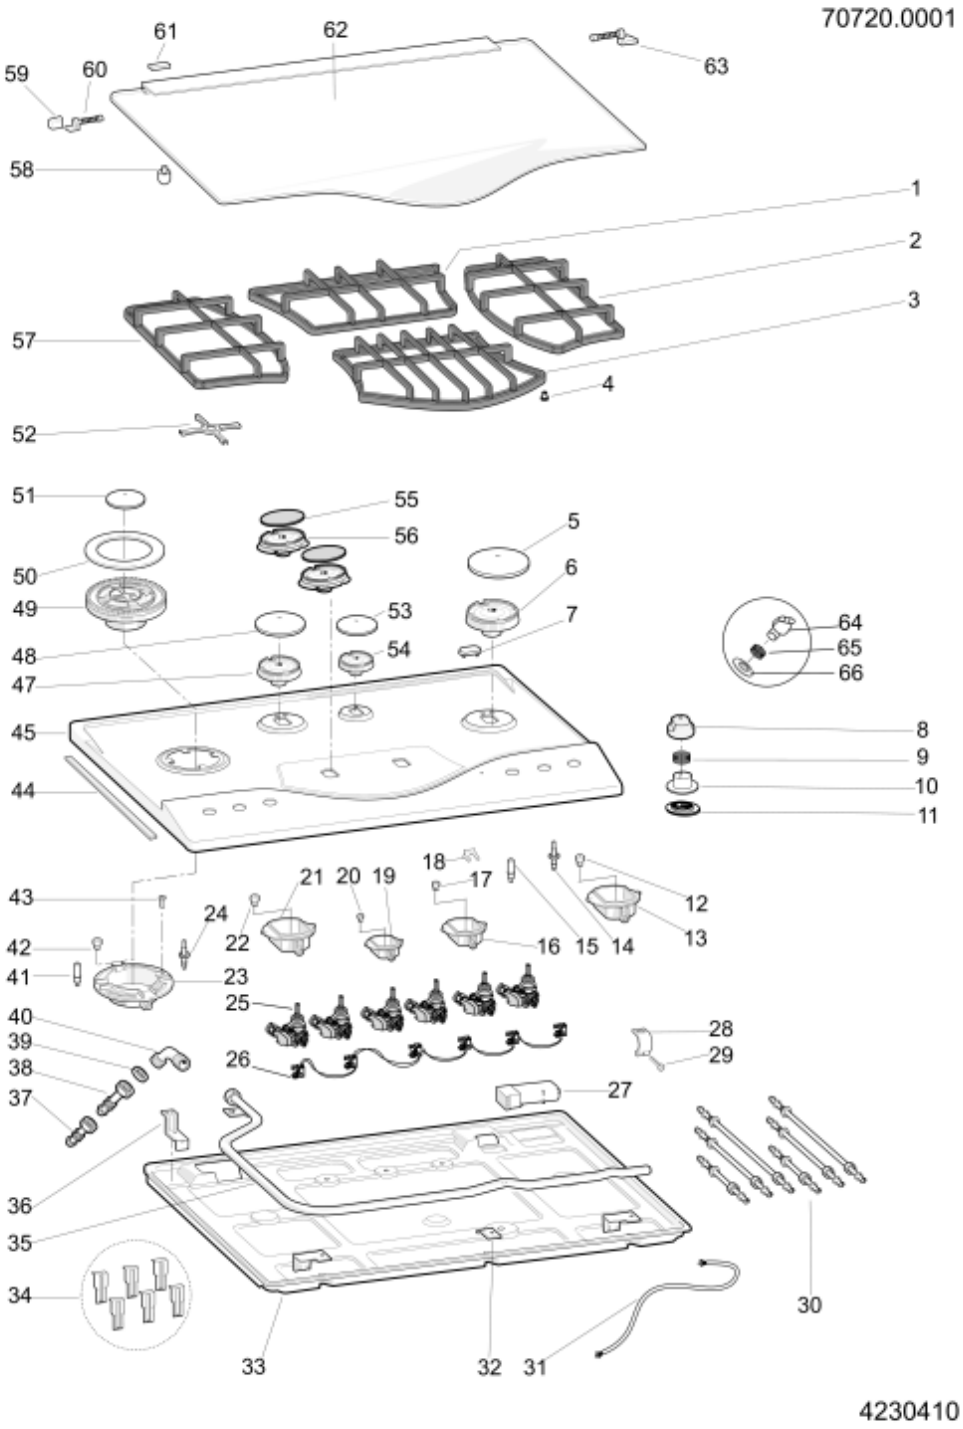

4230410 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00257367				instruction book es-pt-bd-ar		
000	C00257368				instruction book it-gb-fr-nl		
001	C00053168				pan grid centre back - black		
002	C00053170				pan grid rh - black		
003	C00053169				pan grid centre front - black		
004	C00039148				rubber buffer for pan support		
005	C00052931				burner cap rapide (large) black		
006	C00052928				burner ring/flame splitter - large		
007	C00032682				blanking plug - lid hinge hole		
008	C00118278		91129...		knob polar white	n1009l00	
008	C00276392	91130...			knob polar white	n1009l00	
009	C00039156		91129...		knob disc - spring	n1009l00	
010	C00118215		91129...		knob disc - white	n1009l00	
010	C00276348	91130...			disc ph6-7-9	n1009l00	
011	C00111235				microswitch ring		
012	C00056359				gas jet (80) lpg - large burner		
012	C00056360				gas jet 110 nat gas - large burner		
013	C00052925				burner cup - large burner		
014	C00052986				thermocouple ** not for triple		
015	C00118496			1 x C00052951	electrode l=520		
016	C00053268				burner cup-oval burner		
017	C00057114				fishburner butane nozzle 60		
017	C00097491				gas jet - gn double face 88		
018	C00052934				electrode clip		
019	C00052927				burner cup - small burner		
020	C00052939				gas jet 50 lpg - small burner		
020	C00056823				gas jet (71) ng/lpg		
021	C00052926				burner cup - medium burner		
022	C00052938				gas jet 64 lpg - medium burner		
022	C00052941				natural gas jet (96)		
023	C00053254				burner cup - triple burner		
024	C00093834				screw nut m6		
024	C00094330				thermocouple - triple burner		
025	C00111238	81120...			fixing bracket - tap copreci		
025	C00111240	81120...			gas tap medium/auxiliary copreci		

4230410 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
025	C00111241	81120...			gas tap large copreci		
025	C00111244	81120...			gas tap - triple burner 57		
025	C00145274		81119...	1 x C00002455 1 x C00111239 1 x C00111241	gas tap fast 90 micromeccanica		
025	C00145275		81119...	1 x C00002455 1 x C00111239 1 x C00111240	gas tap aux/semifast micromeccani		
025	C00145690		81119...	1 x C00002455 1 x C00111239 1 x C00111244	gas tap triple burner 90		
026	C00257366				ignition microswitch (6) copreci		
027	C00297029				terminal board assy + cable 6a		
028	C00044592		81119...		tap fixing plate		
028	C00052921				fixing bracket - tap manifold		
029	C00111239				screw m4x17tsp zinc		
030	C00017439				gas pipe - aluminium tube 8x1mm		
031	C00035727			1 x C00276836	mains supply cable 3x2,5		
032	C00052968				tap bracket		
033	C00053180				base cover		
034	C00052952				clamp kit - hob/worktop		
035	C00053167				gas pipe (tap manifold)		
036	C00143845				support bracket - glass cover rohs		
039	C00010506				sealing washer - gas elbow/pipe		
040	C00024370				elbow connection (1/2 male x 2)-		
041	C00053244				ignition spark plug - triple burner		
042	C00053176				gas jet 91 lpg - triple burner/wok		
042	C00065921				small metha.gas nozzle triple		
043	C00052960				burner fixing screw (stainless		
043	C00063709				washer		
044	C00018819				seal - hob/worktop		
045	C00257359		91129...		working table pw	n1009l00	
045	C00278996	91130...			working table newstyle ph960mst	n1009l00	
047	C00052929				burner ring - medium		
048	C00052932				burner cap semi rapide		

4230410 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
049	C00053173				burner base/flame splitter - triple		
050	C00053174				outer burner cap black work triple		
051	C00053175				burner cap (centre disc)triple black		
052	C00131879			1 x C00033532	reduction pan support black		
053	C00052933				burner cap auxiliary (small) black		
054	C00052930				burner base/flame splitter - small		
055	C00097705				burner cap - oval burner black		
056	C00097490				burner base - oval burner		
057	C00053171				pan grid lh - black		
058	C00053196				rubber buffer - glass lid front		
059	C00024300				cover (glass lid hinge) - brown		
059	C00025355				cover (glass lid hinge) - black		
059	C00118351				cover (glass lid hinge) - pw		
060	C00024299				hinge lh - glass lid		
061	C00033797				rubber buffer (lid rear) - grey		
061	C00033923				rubber buffer (lid rear) - white		
062	C00053203				glass lid - black		
062	C00053204				glass lid - brown		
062	C00053205				glass lid - mirror		
062	C00054497				glass lid - antique white		
062	C00076394				glass lid -c9h(ice)		
062	C00078657				glass lid - antracite		
062	C00118206				glass lid kit - c9h(pw)		
063	C00024297				hinge right - glass lid		
099	C00057981				electric insulation bugnato ph9		
099	C00057988				kit nozzle set lpg hobs g30/31		
099	C00058924				gas jet kit-metano ph6-9 g20		
099	C00144043				kit grid+caps+knob+disc iron		
099	C00280173				junction clamp richco		

Notices

n1009l00: Knob Disc removed on Albacina Hobs PH6-7-9

On all PH6-7-9 hobs the knob discs are replaced by smaller discs with a diameter less than the knob diameter.

Other spare parts involved on this modification are: knobs and the hobs. On the new hobs the serigrafy is moved near the knob.


The spare part warehouse will continue to manage all premodification codes of knobs and knob discs.

The old hob codes will be available on warehouses until the end of the stock, after that in case of intervention on premodification products you have to use the new hob together with new knobs and relative discs.

Please make refer to the list below for the spare part codes.

Electric schemes and links

Cod. se021600

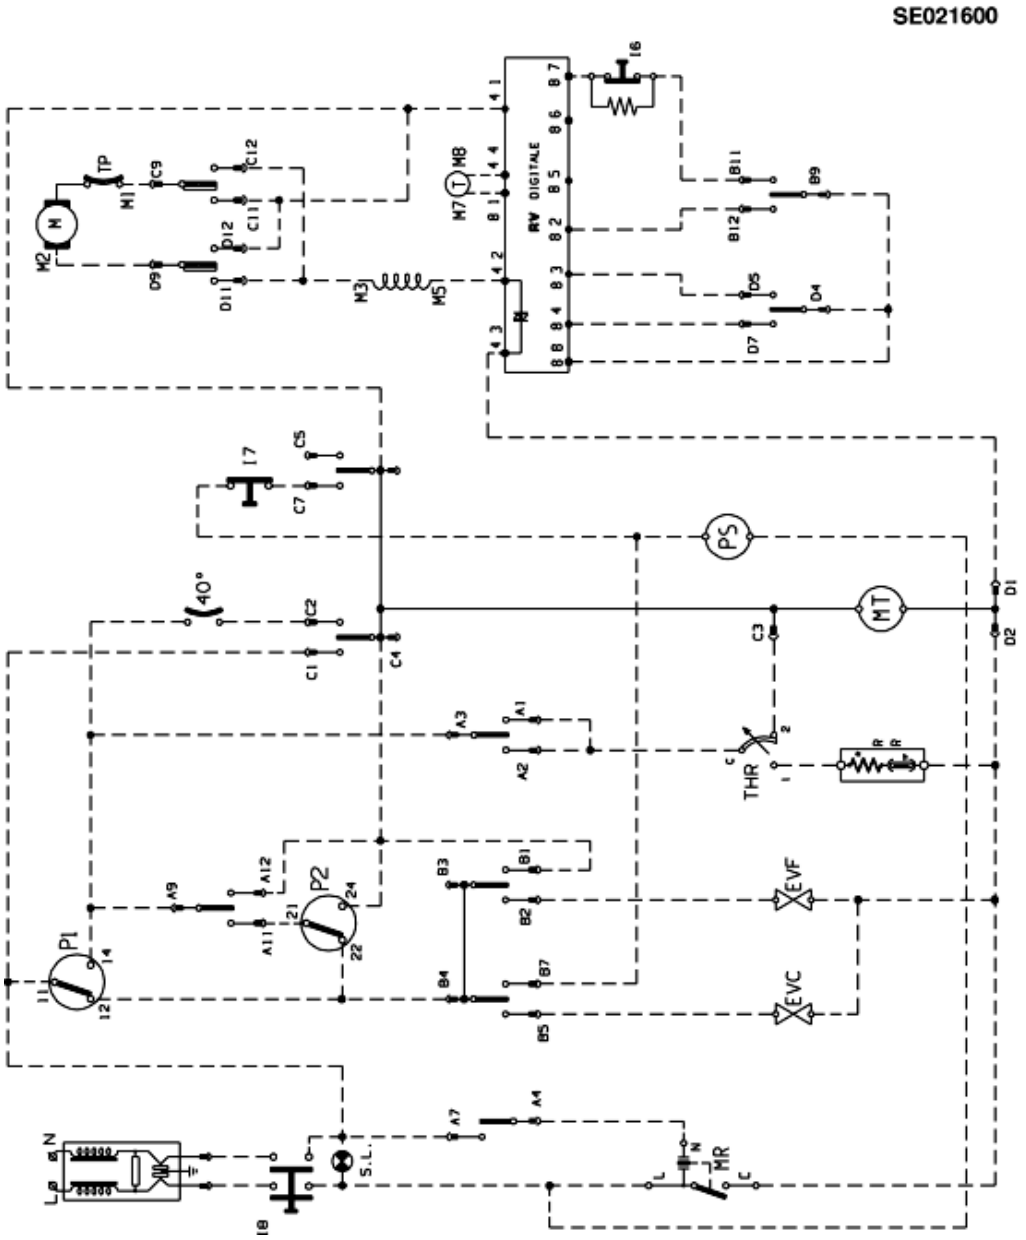

Legend

Legend: se021600

AQS	Aquastop electrovalve	Mzbn/MTA	zbn timer motor
B	Buzzer	N	Neutral or Terminal Board
BC	Blocco Cesto	NC	Spin cycle exclusion
BF	Terminal board contact, motor fan and dryer	P	Pressure switch
BP	Buzzer	P1	1st level pressure cut-off switch
C	Condensator	P2	2nd level pressure cut-off switch
CA	Condensator	PA	High speed potentiometer
DV	Switching device	PB	Low speed potentiometer
EF/CL	Electro-Valve Cold Water / Bleach	PL	Pure Wool
EF/L	Electro-Valve Cold Water / Wash	PM	Motor Thermoprotector
EF/P	Electro-Valve Cold Water / Prewash	PR	Timer programmer or Pressure switch
ER	Exclude Heating Element	PS	Drain pump
ET	Thermostat disactivation	R	Heating element
EV	Electrovalve	RE	Relay
EVA	Dryer electrovalve	RR	Heating element
EVC	Hot water electrovalve	RV	Speed regulator
EVF	Elettrovalvola acqua fredda	Ras/RA	Dryer heating element
EVL	Wash electrovalve	S	LED
EVP	Pre Wash electrovalve	SL	Line LED
FA	Antijamming filter	SO	Door LED
FD	Delicate drying cycle thermostat	SR	Heating LED
FE	Strong drying cycle thermostat	ST	Temperature selector
FRT	Thermofusible Heating Element	SV	Speed Selector for Spin
I	Inverter	T	Timer contacts
I1..2..3..	Switches/switching devices	TA	Drying timer contacts
IA	Switch On/Off	TB	Low Temperature Thermostat
IC	Switch N.C. - 1/2 Load	TC	Spider wheel earth
ID	Switch display	TFL	Flange earth
IE	Water Saving Device	TG	Main earth
IF	Switch - Spin Reduction	TH	Thermostat
IP	Door switch	TH1	1st temperature thermostat
IR	Line switch	TH2	2nd temperature thermostat

IS	Water-stop	TH3	3rd temperature thermostat
L	Line or Lamp	THF	Operating thermostat
LB	Low Level	THR	Adjustable thermostat
LN	Normal Level	TM	Motor earth
LS	Pilot lamp	TMB	Main cabinet earth
M	Earth-symbol	TMP	Motor thermal protector
MC	Spin cycle motor	TMS	Thermostop
MI	MOTOR WITH PULLEY	TP	Thermal protector
ML	Wash cycle motor	TPS	Drain pump earth
MO	Terminal Board	TR	Heating element earth
MP	Door dip-switch	TS	Safety thermostat
MR	Thermal Lock	TT	Timer earthing connection
MT	Timer motor	TTH	Earthing Thermostat
MV	Motor fan	TV	Tank earth
MV -Ras	Dryer heating element	ZBN	Timer