
INDESIT company

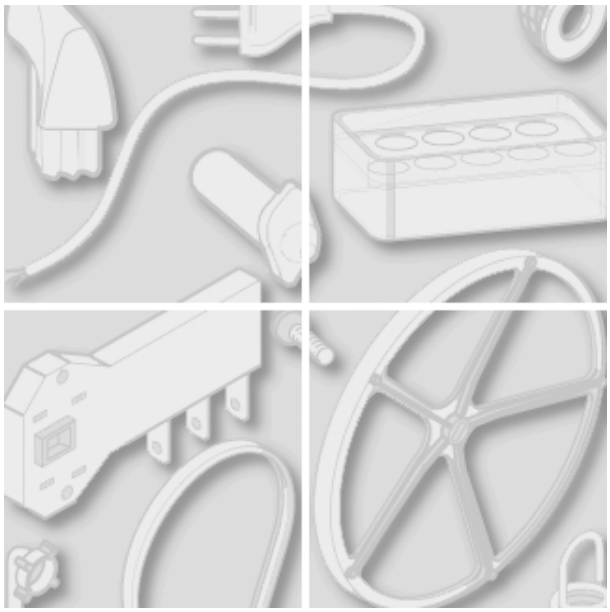

Model type:

HIP6P(IX)

Commercial code:

F056217

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

ekprime_m1l2pu Exploded views

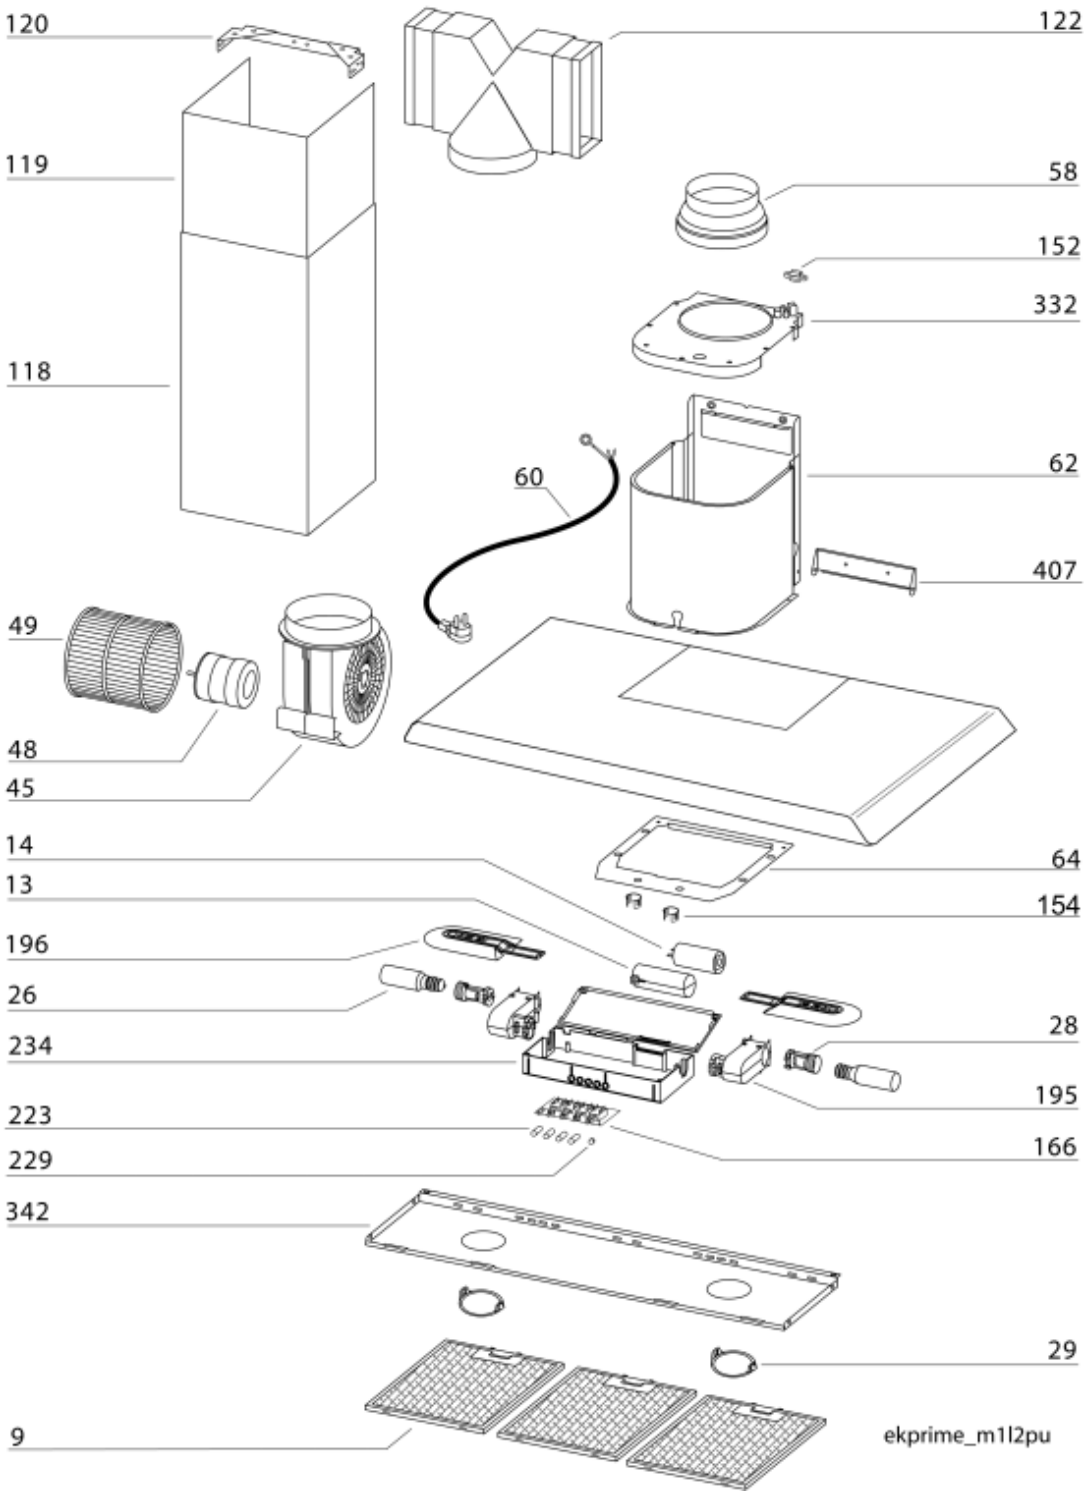


ekprime_m1l2pu Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
009	C00145143				grease filter		
013	C00142327				condenser box		
014	C00076053				capacitor		
026	C00126387			1 x C00042985	lamp		
028	C00034834				lamp-socket 39n - t190		
029	C00269907				ceiling lamp		
045	C00142328				conveyor		
048	C00269908				hood motor		
049	C00133279				double turbine		
058	C00076066				reducer (150-125mm)		
060	C00142511				power line		
062	C00076043				conveyor support		
064	C00142308				lower support		
118	C00269909				lower chimney section inox		
119	C00142311				upper chimney		
120	C00076065				upper telescopic pipe support		
122	C00142312				filter pipe plate		
152	C00136031				cable clamp		
154	C00137090				cable clamp		
166	C00260687				control board		
195	C00142314				support		
196	C00142315				lamp reflector socket		
223	C00269922				button		
229	C00042218				led cap		
234	C00269923				control box		
332	C00076044				cap		
342	C00269926				upper locking plate		
407	C00076071				conveyor support plate		
999	C00077377			1 x C00094527	carbon filter		
999	C00142321				fixing assembly		
999	C00269929				user instruct.bookl		

Electric schemes and links

Cod. se8020

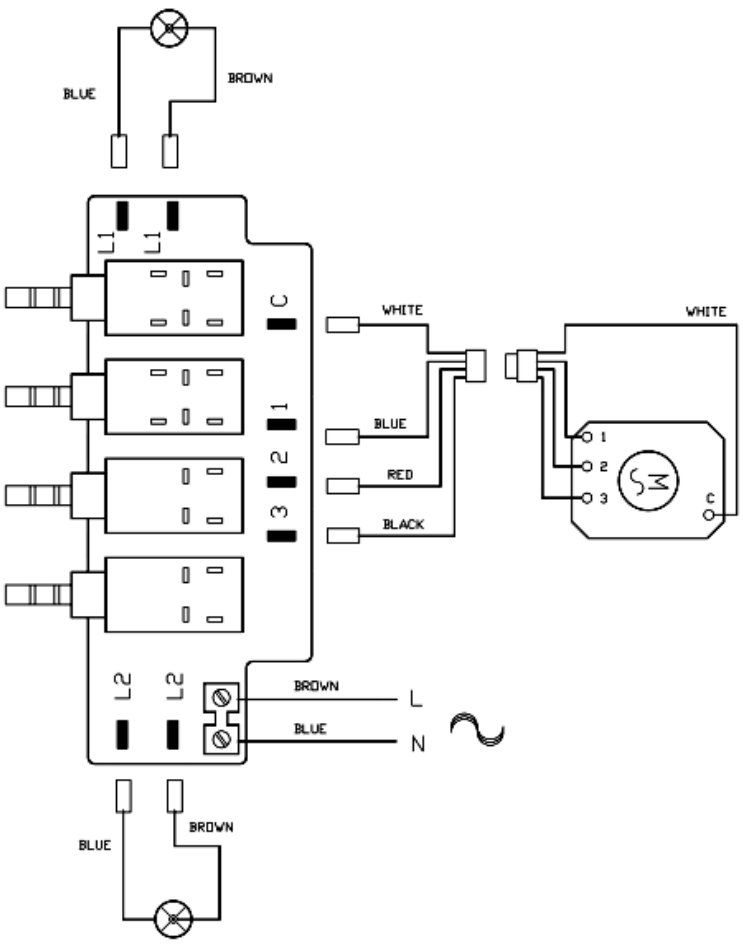

SE8020

Legend

Legend: se8020