
INDESIT company

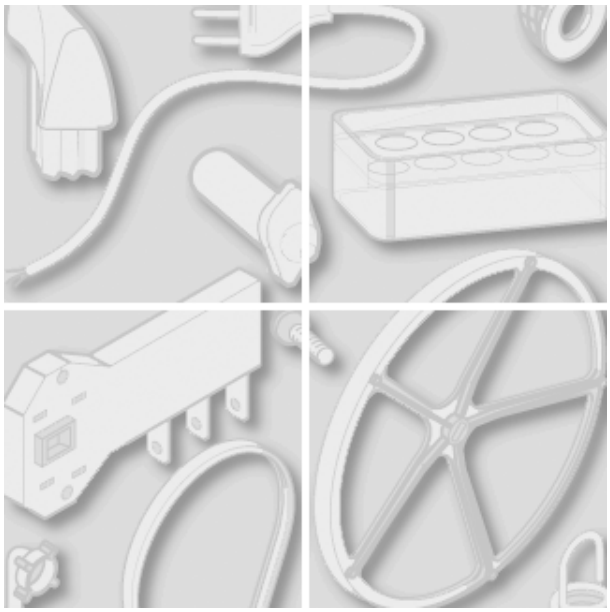

Model type:

KRM 640 X

Commercial code:

F052987

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics


INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

4370170 Exploded views

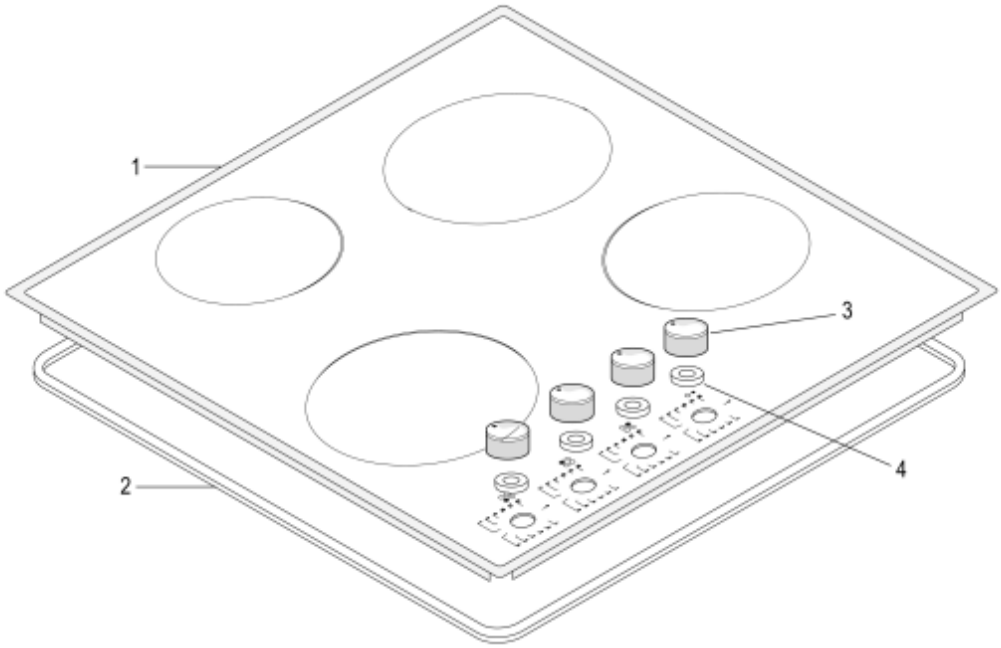

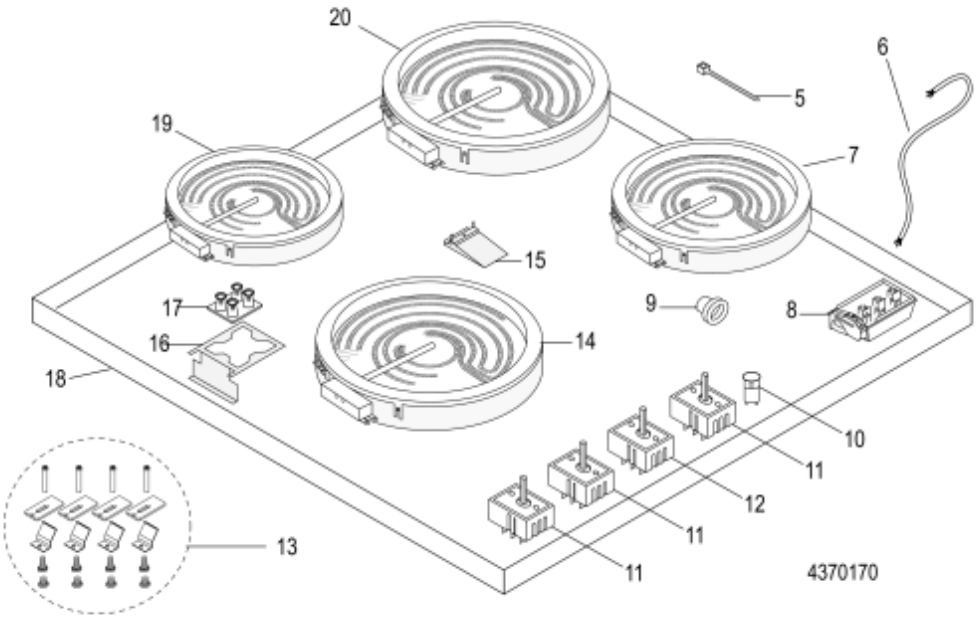

4370170 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00265095				working table sand colour krm	n1009i00	
002	C00275415				kit worktop - hob seal 5x6x2450		
003	C00264742				knob hob vtc ariston		
004	C00112484				knob seal		
005	C00125406				tight ring plt1m-30 black		
006	C00144140			1 x C00273322	power cord 25a 6x1,5		
007	C00139041				heater, 1400w/230v		
008	C00255959				junction block		
009	C00125142				cable-holder dg 13/5		
010	C00098657				residual heat light		
011	C00037056				energy regulator grill/hotplates		
012	C00133502				energy regulator d48(16)		
013	C00142145				kit hob fixing		
014	C00139036				heater, 1800w/230v d200		
015	C00096965		11119...		fixing spring		
015	C00290792	11120...			fixing spring		
016	C00098655				residual heat indicator support		
017	C00098656				residual heat lights		
018	C00136521				seal		
018	C00264739				base cover krm 641 d x		
019	C00139035				heater, 1200w/230v d=165		
020	C00097003				heater, 2300w (1000w)		
099	C00264770				support knobs x4		


Notices

n1009i00: Elimination of the gasket in production line.

In all ceramic hobs mentioned by this notice the factory has terminated to fit the bottom gasket on the ceramic glass in production line.
In case of substitution of the ceramic glass it is necessary to order also a new gasket with the SAT code C00275415

Electric schemes and links

Cod. 160017993

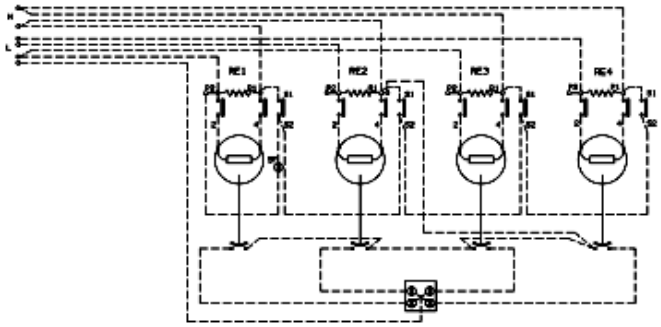

SCHEMA ELETTRICO
KBM 6004-KBM 6001H-MK 64R

Legend

Legend: 160017993

AE	Ignition transformer	PE	Plate electric (Normal and Rapid)
AT	Ignition transformer	PEL	Wall socket
CF	Oven commutator	PIF	Cooking programmer
CP	Plate commutator(Normal end Rapid)	POT	Thermostated potentiometer
CT	Plate commutator(Automatic)	PT	Termoprotector
DC DR	Double Knob double crown burner control card	PTC	Thermostated sensor
EV	Electro-Valve	RCE	Grill heating element ex- ternal
FC	End of cooking programmer	RCI	Grill heating element internal
FRONT	Daschboard	RE	Energy regulator
I/LF	OVEN LIGHT SWITCH	RF	Oven lower heating element
I/LF-MG	OVEN LIGHT SWITCH + ROTISSERIE	RG	Grill heating element
I/MG	TURNSPIT SWITCH	RG COM	Grill heating element un- ion
IL	Knobs' Lighting	RV	Heating element ventilated oven
ILG	Lamp switch turnspit	SA	Boiler operating led
IT	Thermostated switch	SB	Thermostated burner led
L	Line (Feed)	SF	Warning light working
LF	Oven light	SO	Probe temperature
LI	Oven light	SP	Operating Indicator Light for the Plate
M	Suction motor handle	ST	Warning light thermostat
MG	Turnspit motor	TH	Thermostat fixed
MO	Terminal board	TH2	Thermostated burner cooling
MUFF	Oven	THR	Adjustable thermostat
MV	Fan motor	TP	Termoprotector
N	Neutral (Feed)	TRAV	Support terminal board
PA	Ignition push-button	TRM	Thermostated burner control card