
Exploded View


Position numbers begins with A
unless indicated with another number.

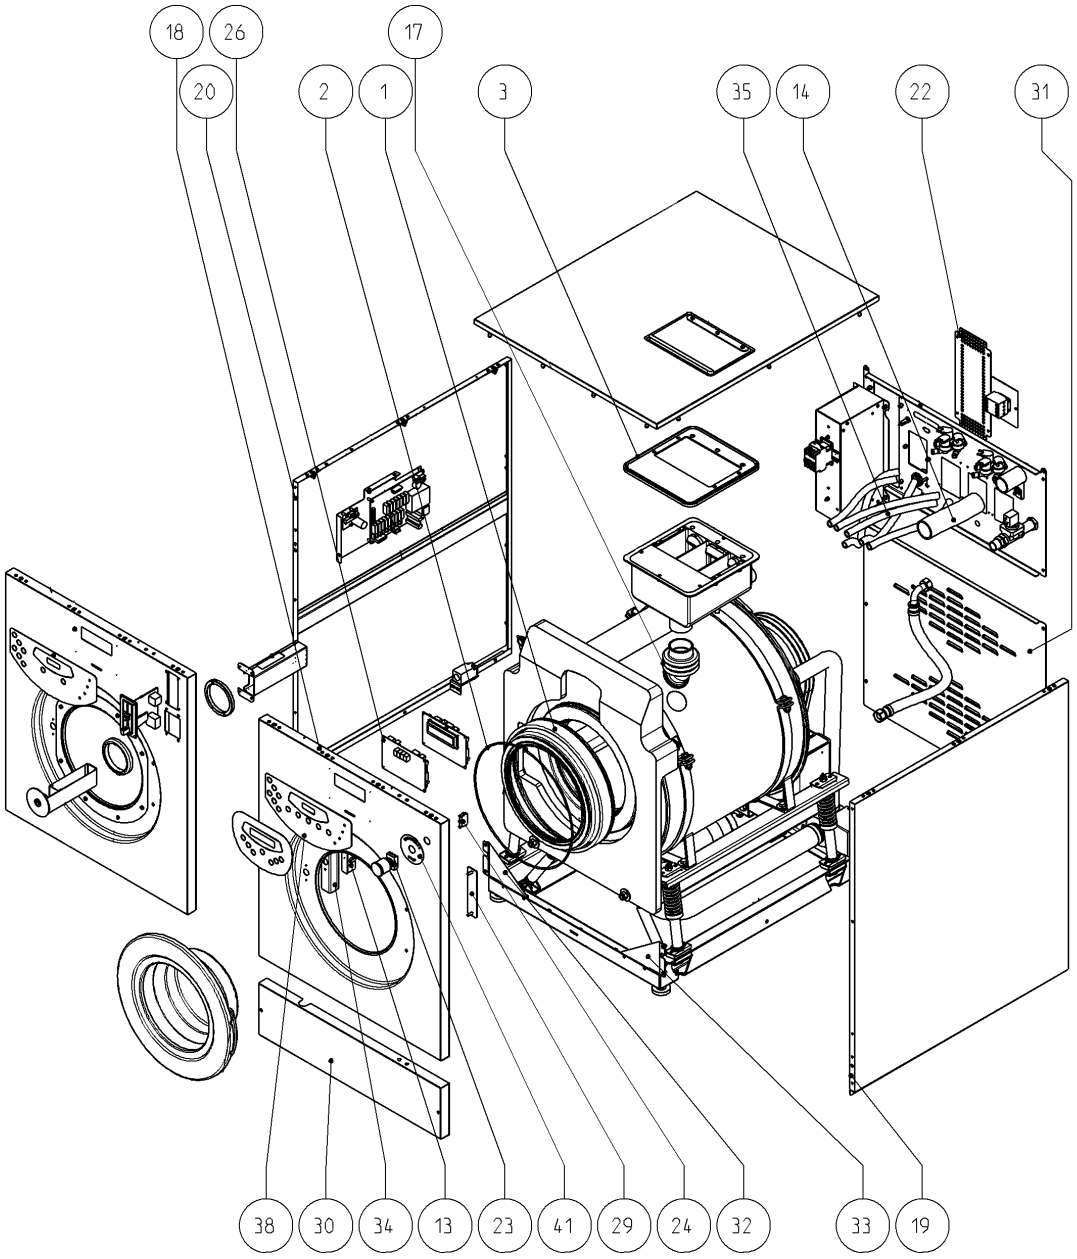

AGB232A


Exploded View

Position numbers begins with B
unless indicated with another number.

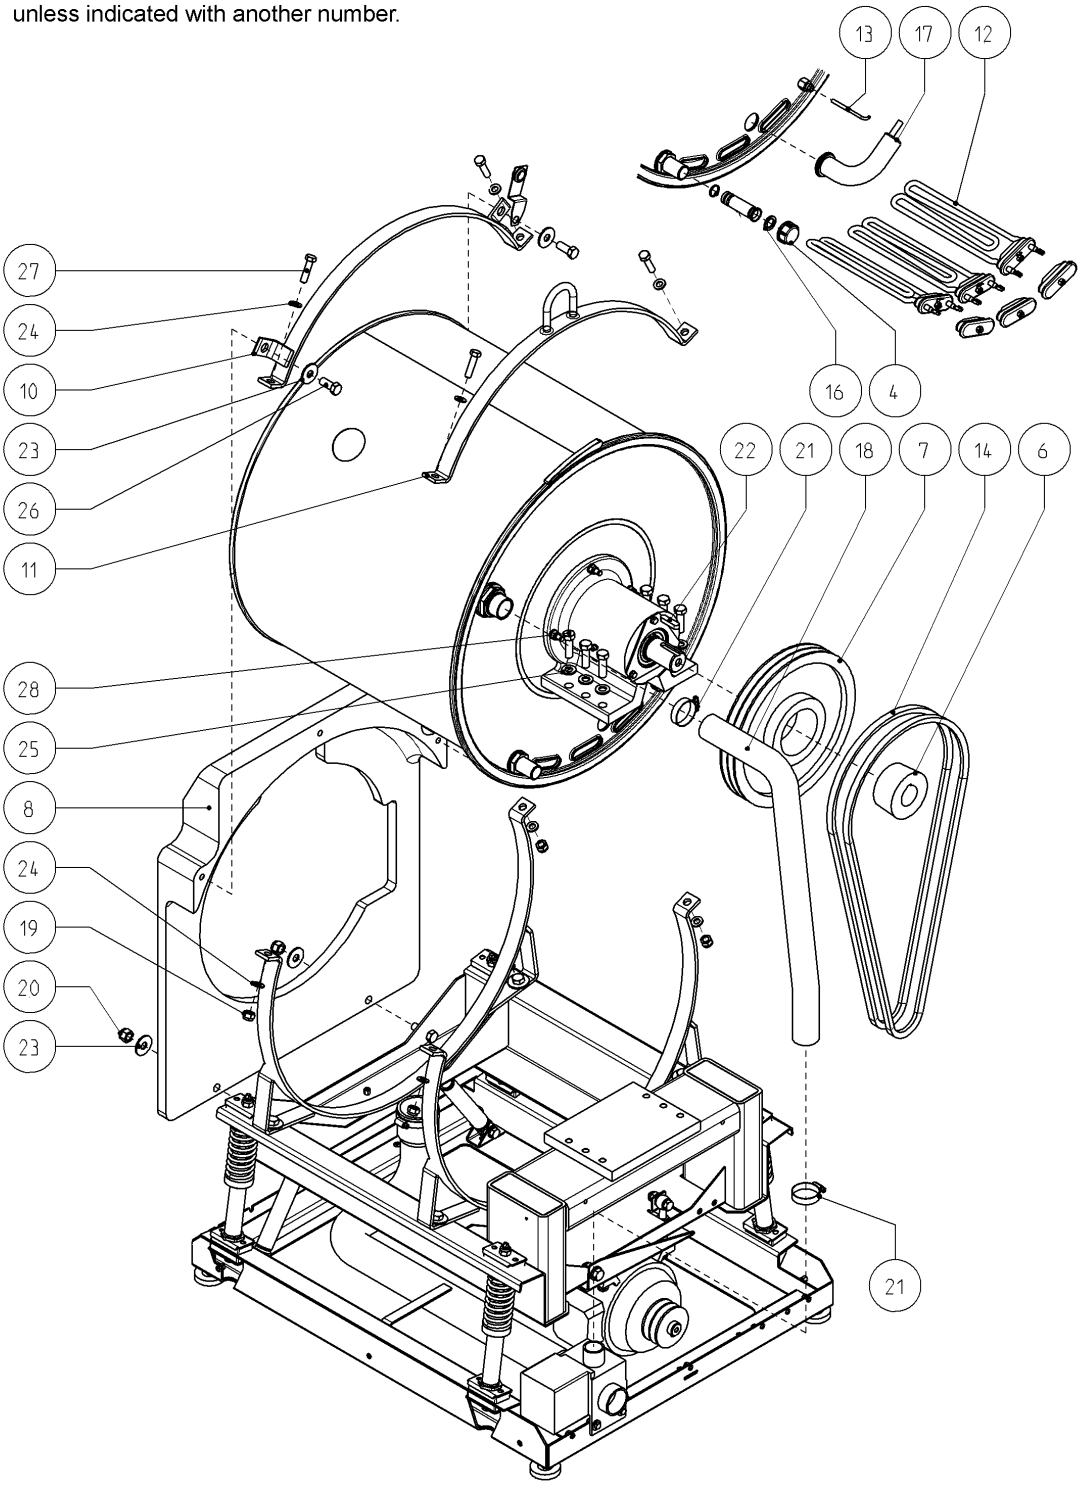

AGB232B


Exploded View

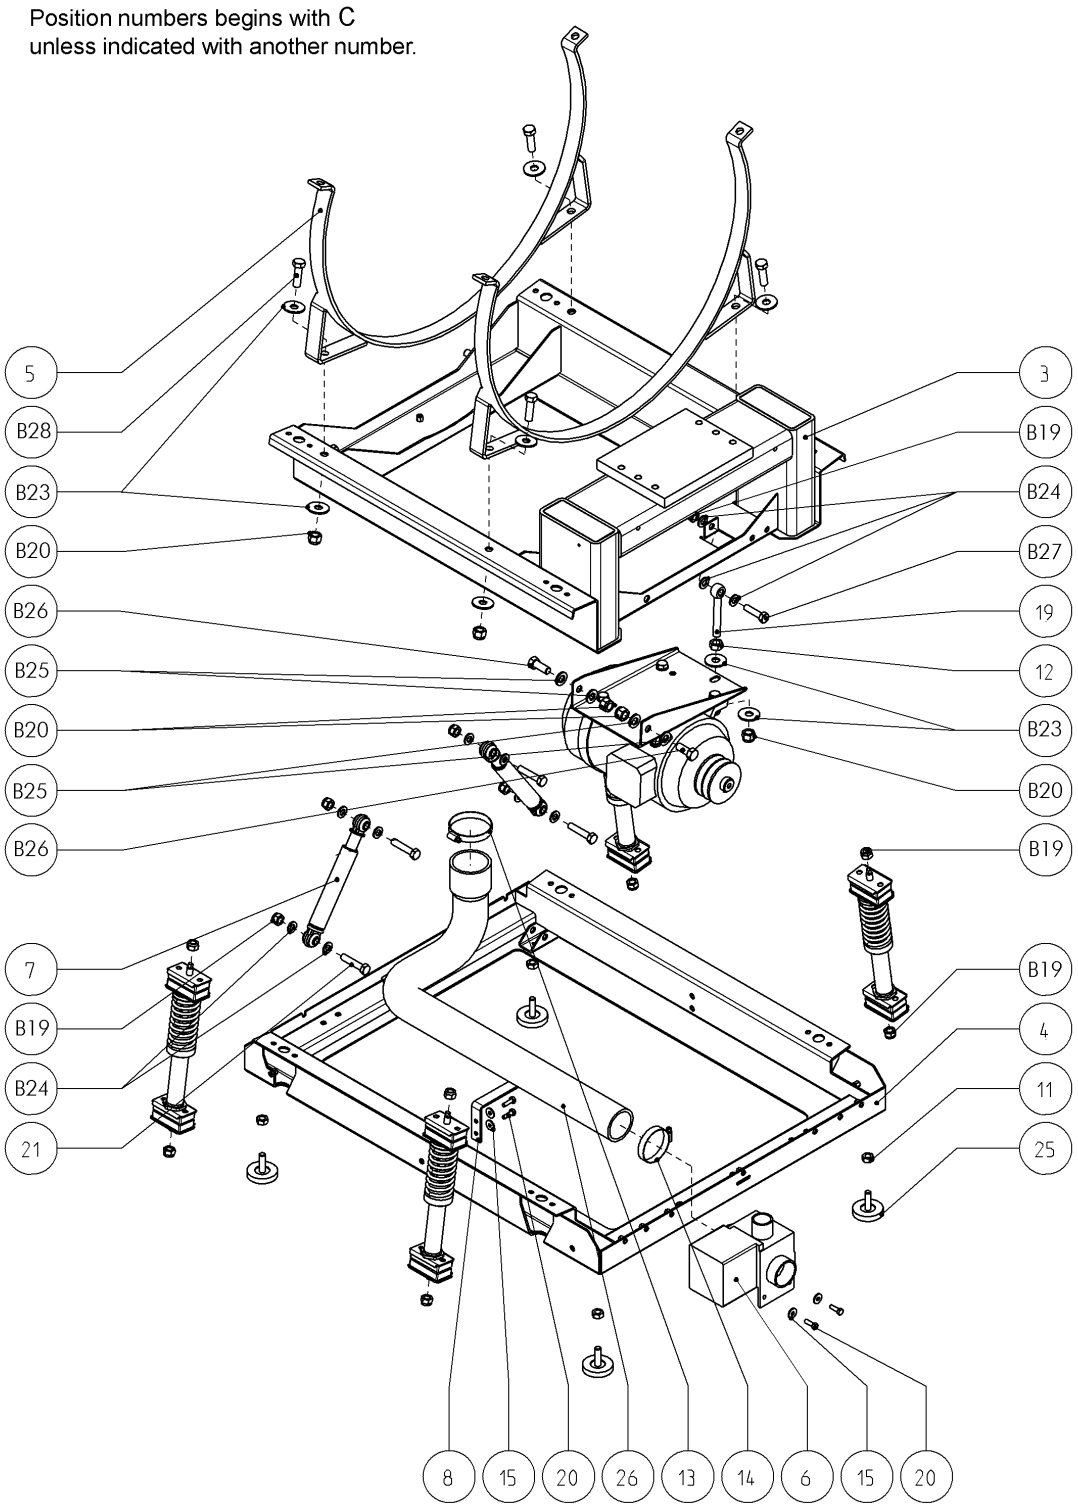

AGB232C

Exploded View


Position numbers begins with D
unless indicated with another number.

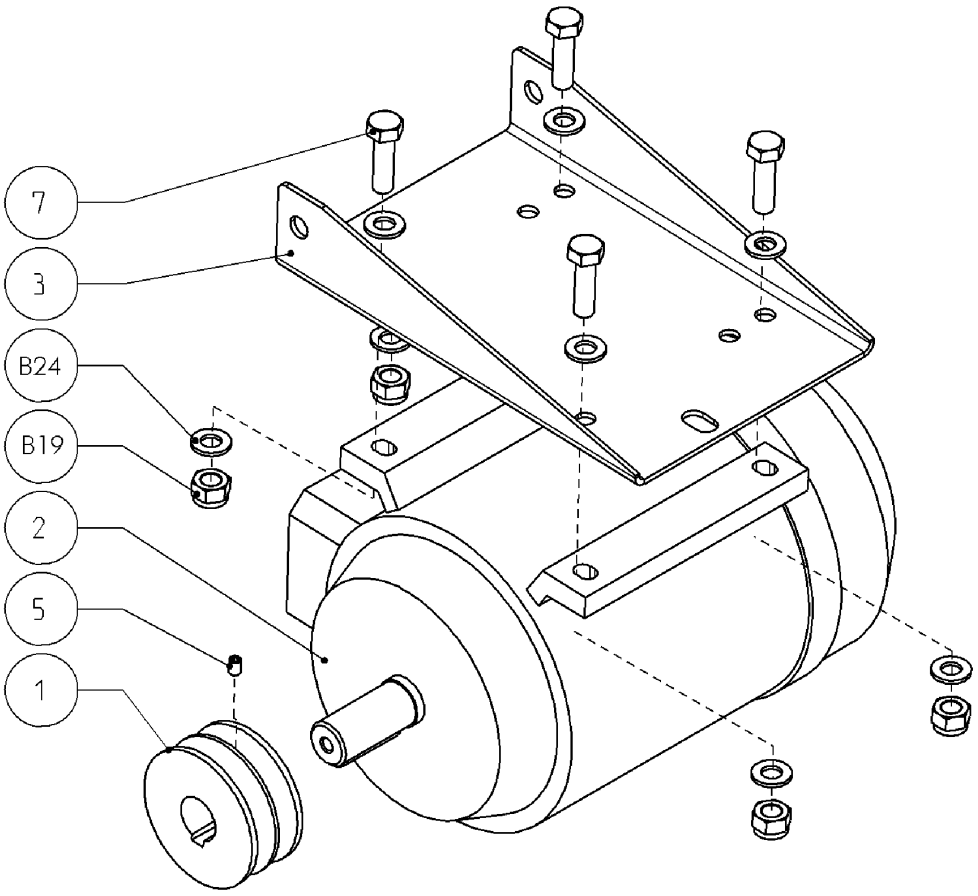

AGB232D

Exploded View


Position numbers begins with E
unless indicated with another number.

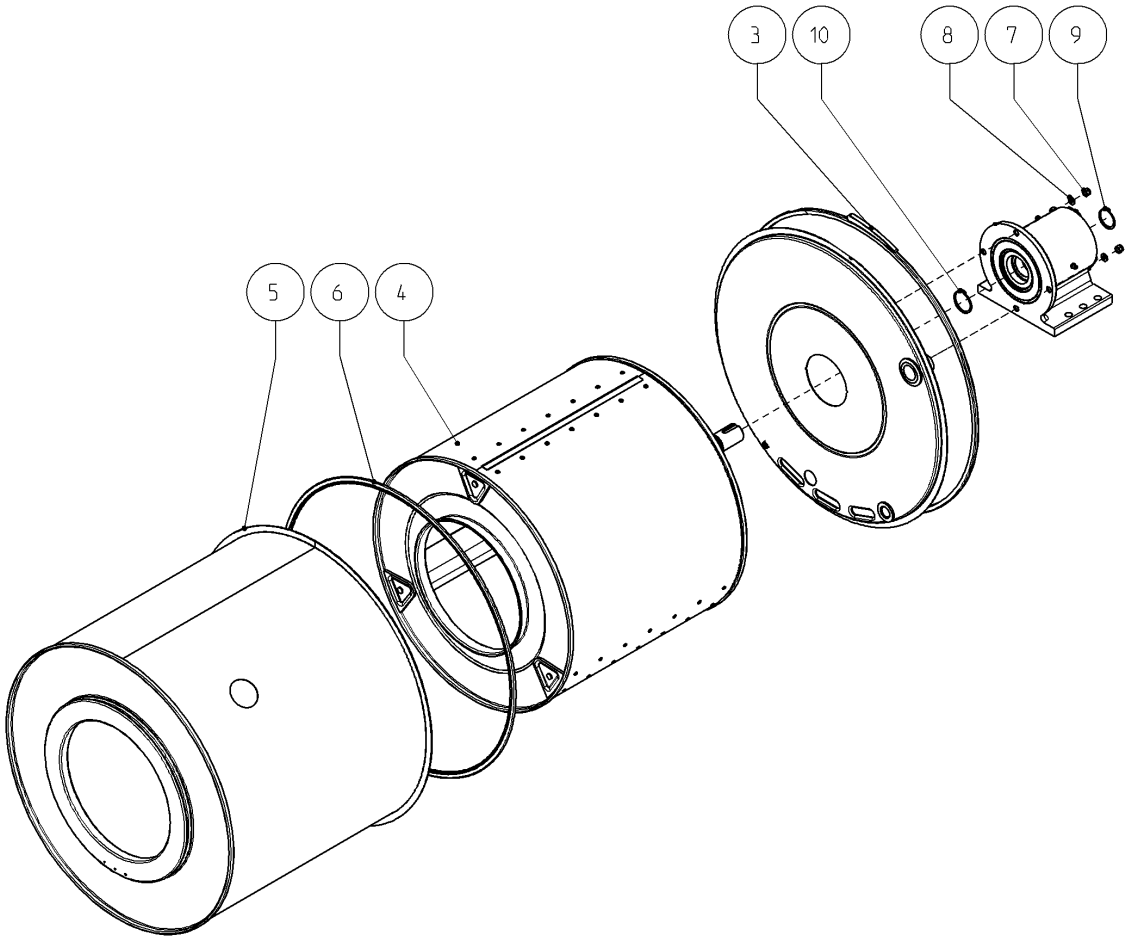

AGB232E

Exploded View


Position numbers begins with F
unless indicated with another number.

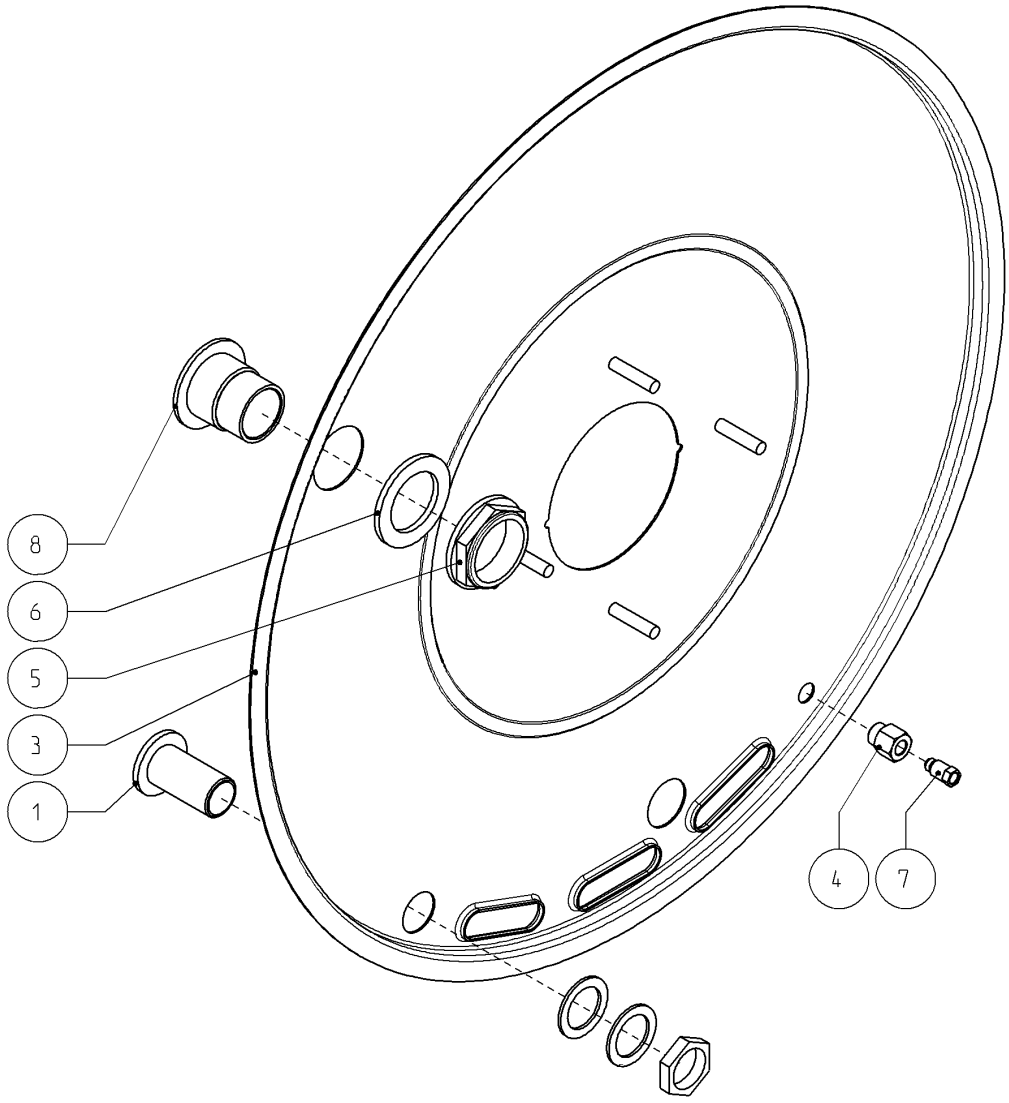

AGB232F

Exploded View


Position numbers begins with G
unless indicated with another number.

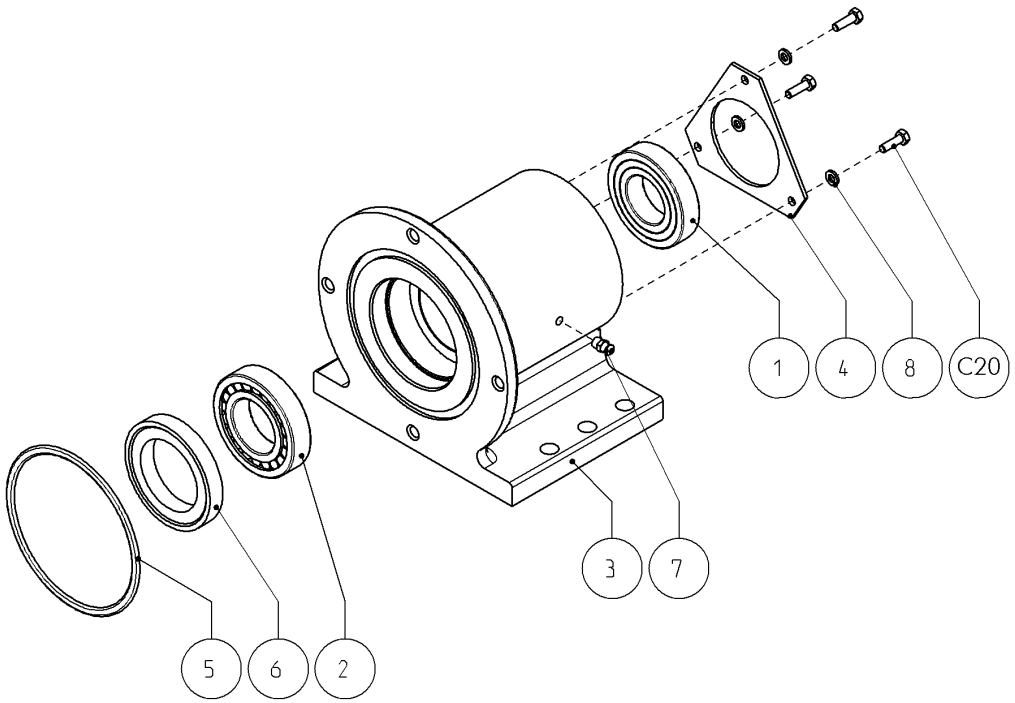

AGB232G

Exploded View


Position numbers begins with H
unless indicated with another number.

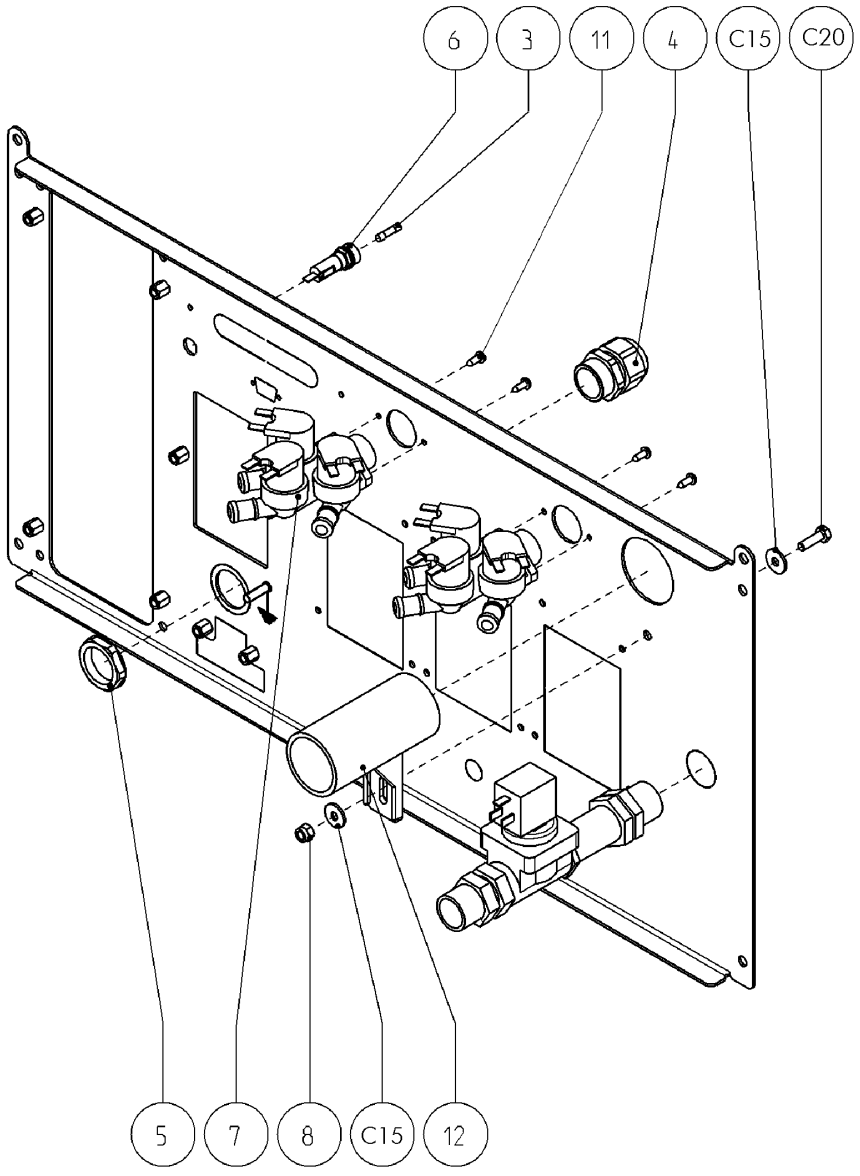

AGB232H

Exploded View


Position numbers begins with I
unless indicated with another number.

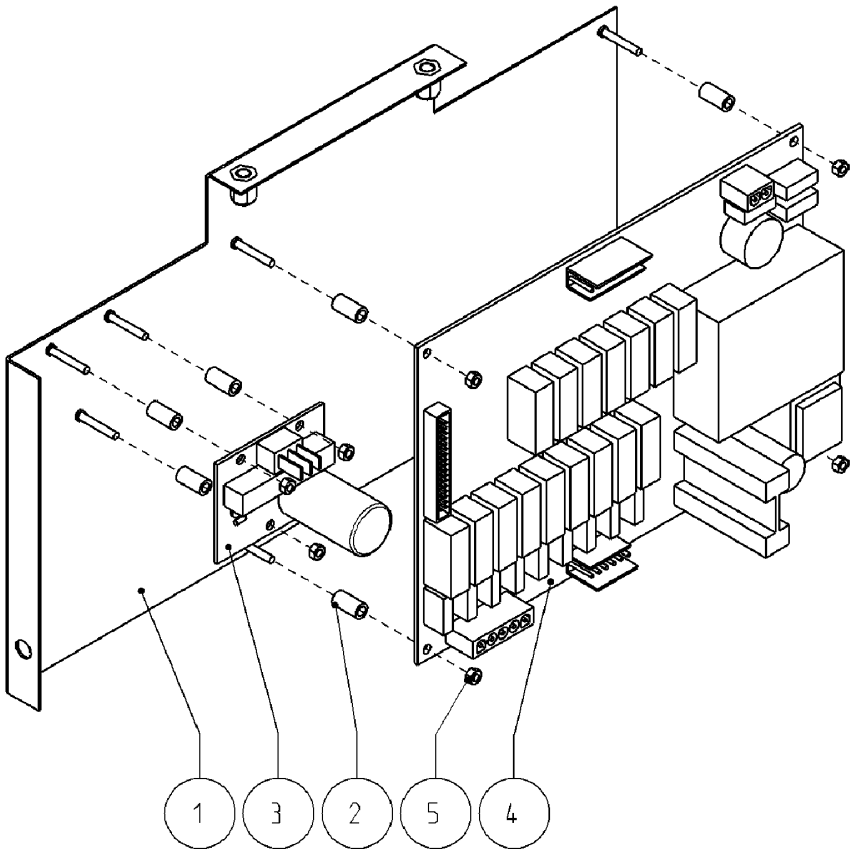

AGB232I

Exploded View


Position numbers begins with J
unless indicated with another number.

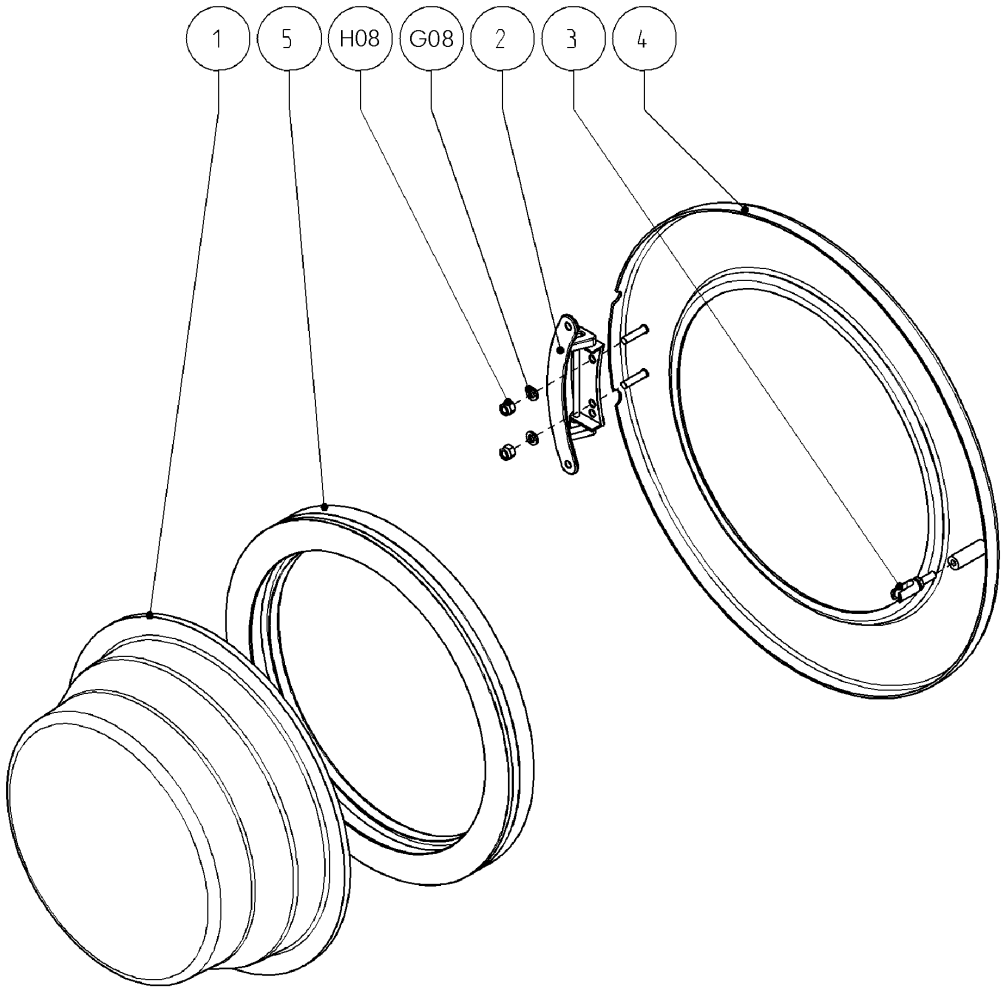

AGB232J

Exploded View


Position numbers begins with K
unless indicated with another number.

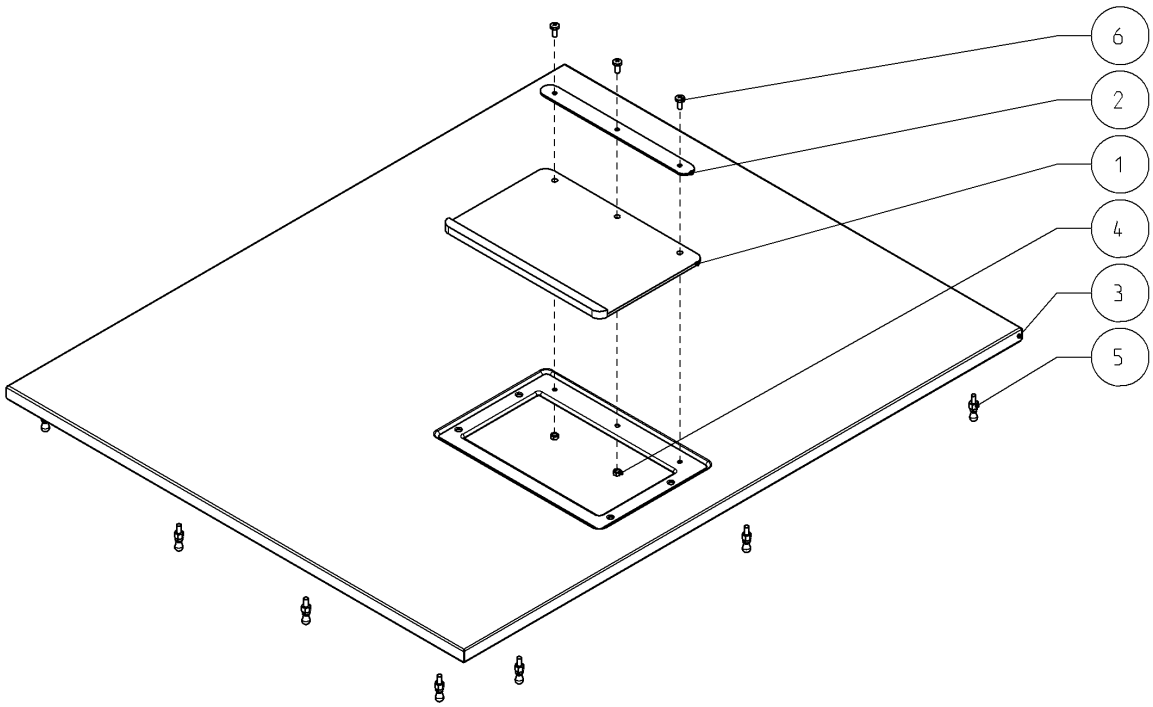

AGB232K

Exploded View


Position numbers begins with L
unless indicated with another number.

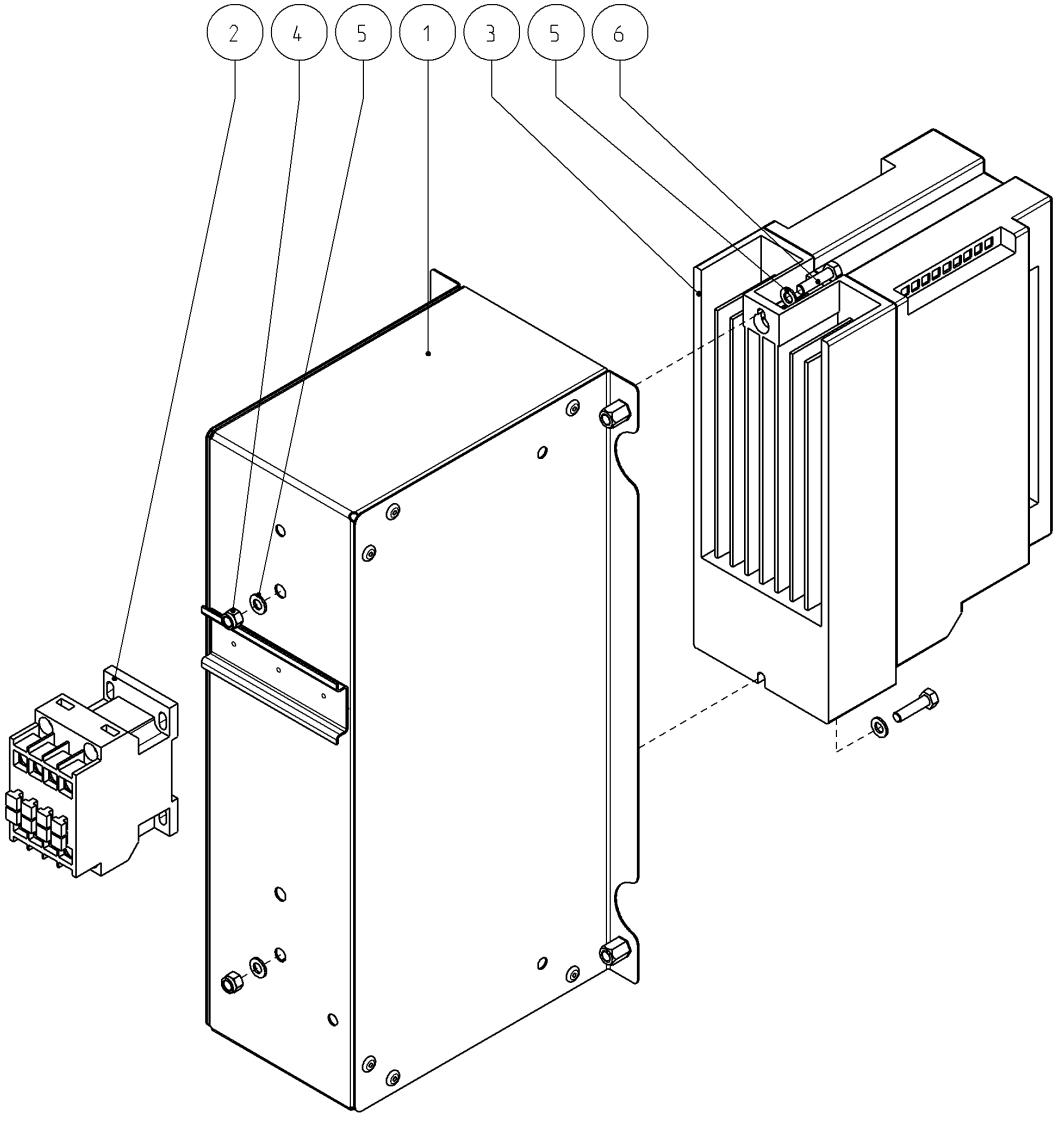

AGB232L

Exploded View


Position numbers begins with M
unless indicated with another number.

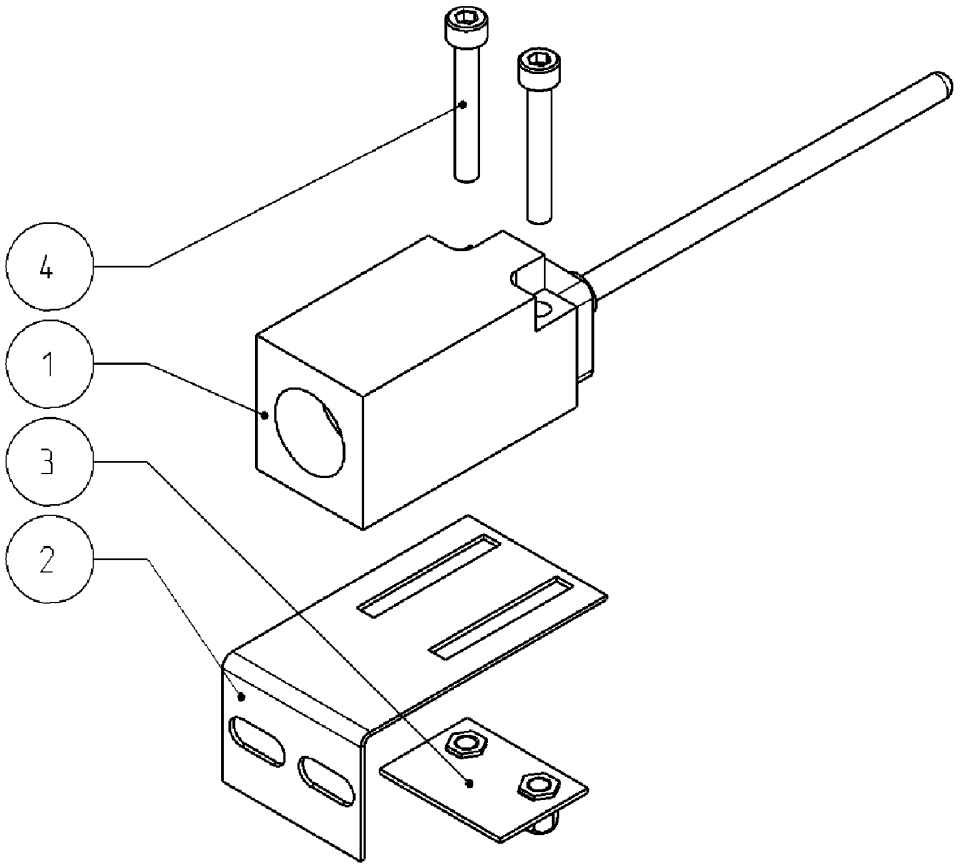

AGB232M

Exploded View


Position numbers begins with N
unless indicated with another number.

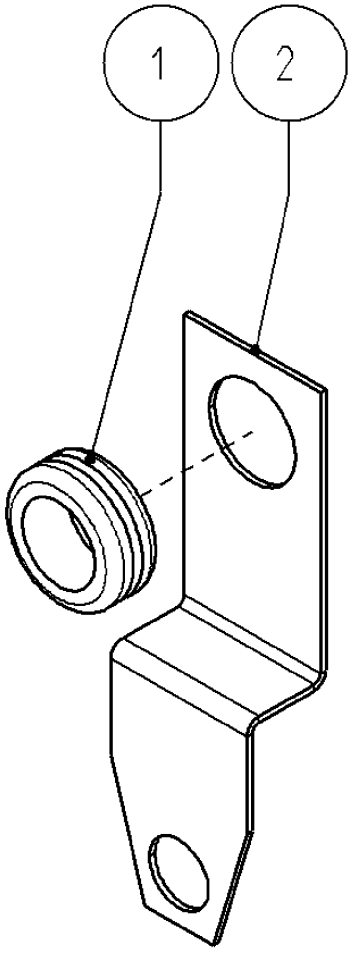

AGB232N

Exploded View


Position numbers begins with O
unless indicated with another number.

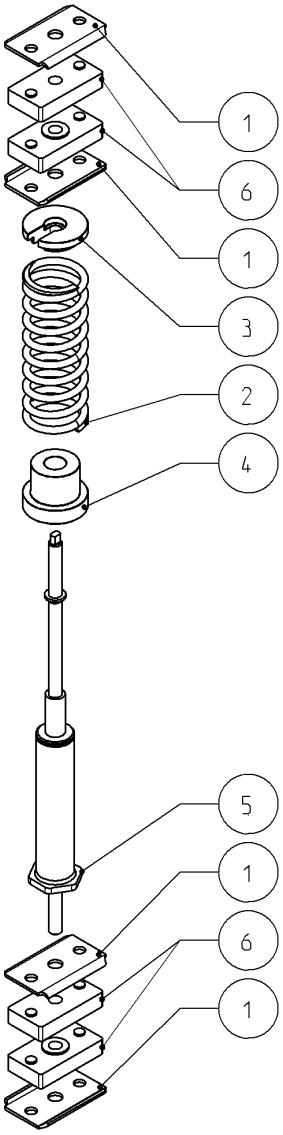

AGB232O

Exploded View

Position numbers begins with P
unless indicated with another number.

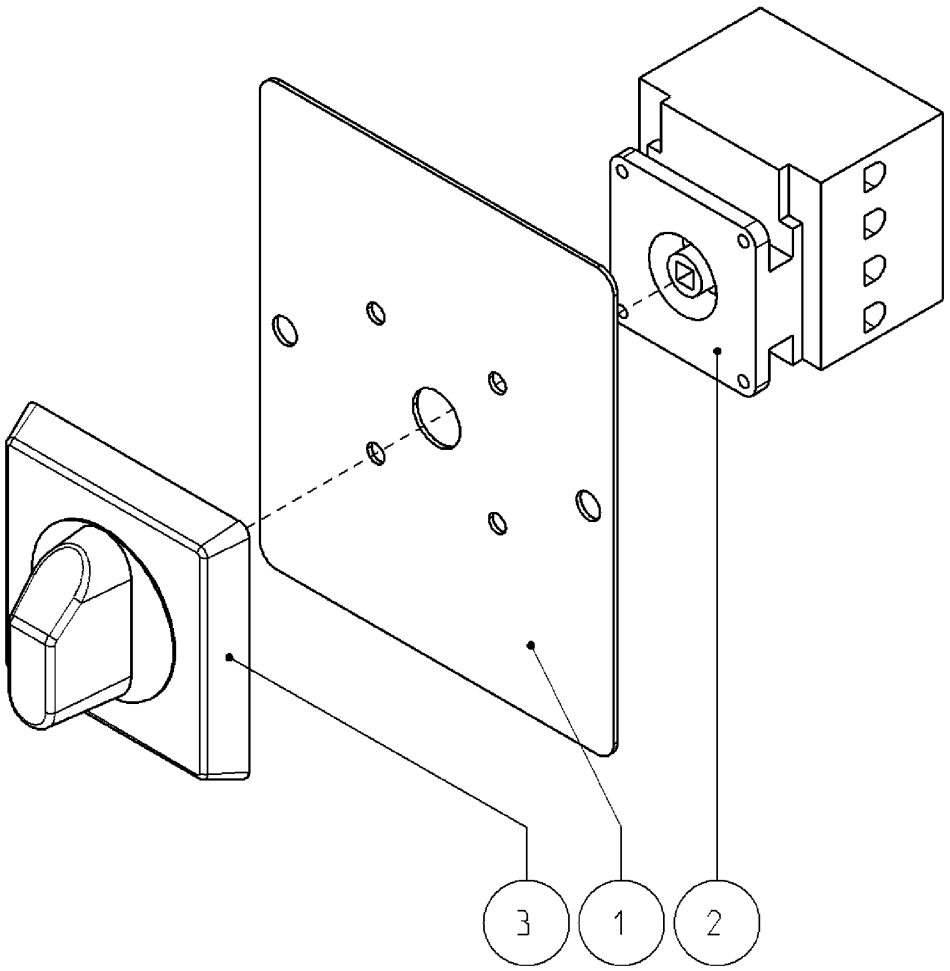

AGB232P