
INDESIT company

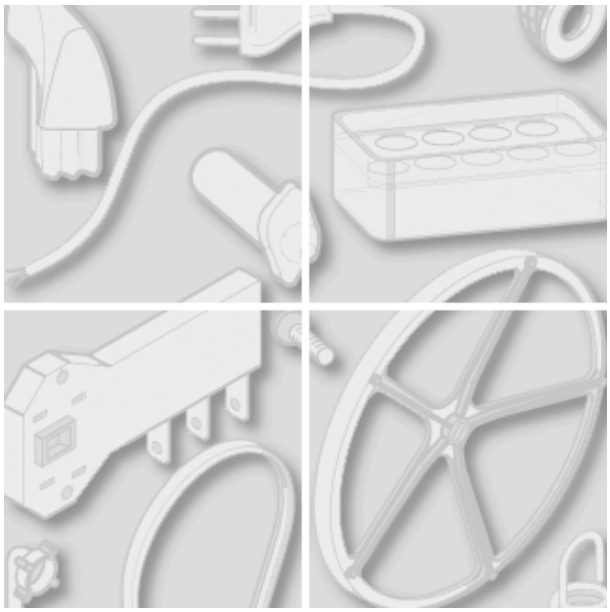

Model type:

TQ640(BK)KGH/HA

Commercial code:

F078365

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

4230530 Exploded views

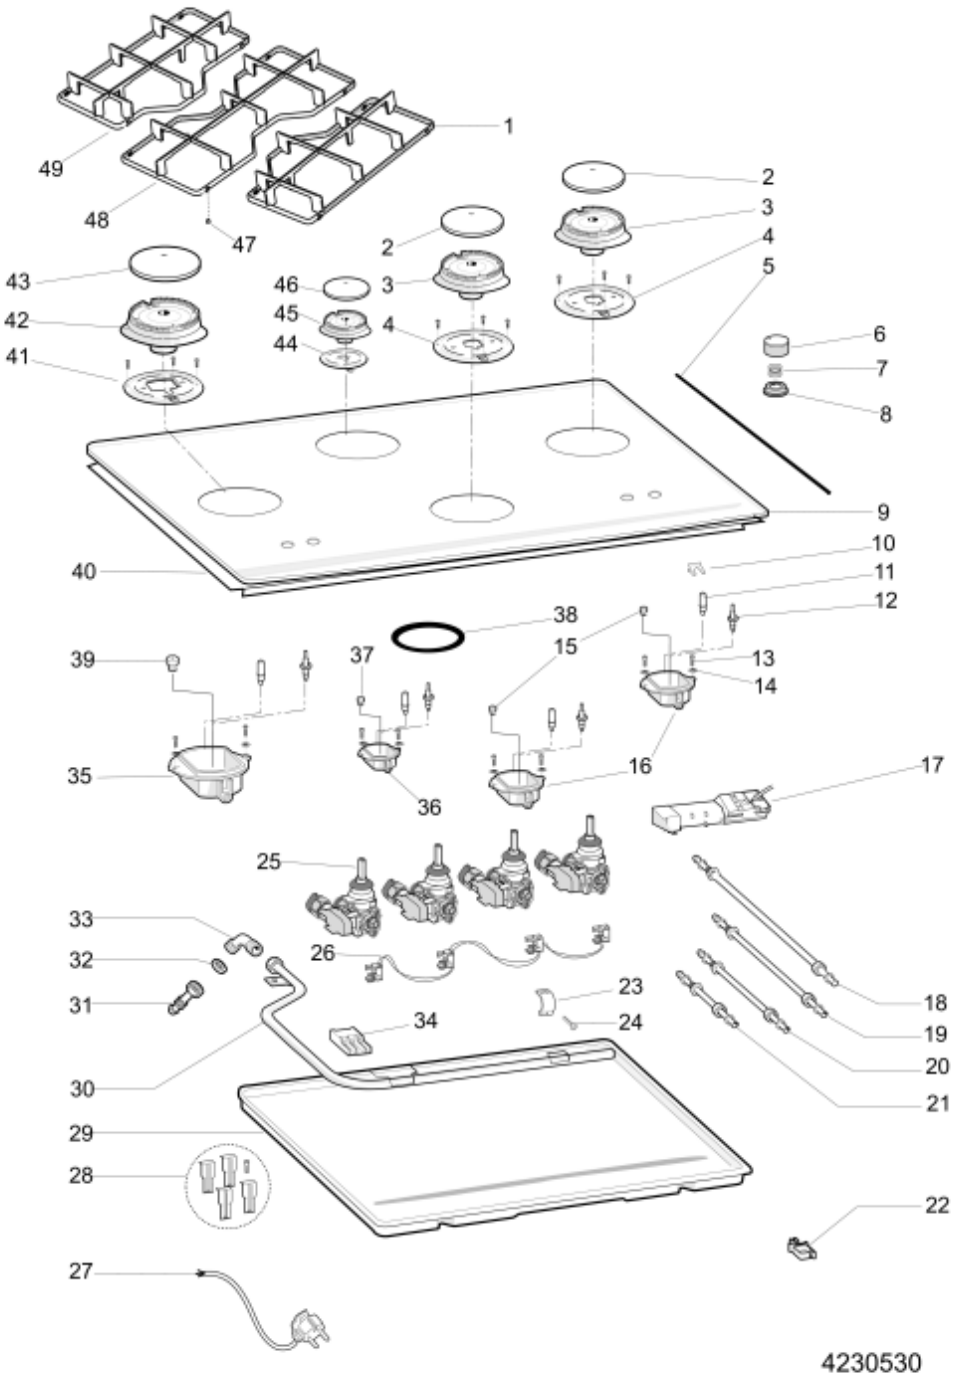

4230530 Spare parts list


Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00260761				grid for 2 burners right cast iron		
002	C00064919				burner cap - semirapide black		
003	C00136244				flame splitter medium		
004	C00260772				burner support semiifast raf exp		
005	C00063701				seal-hob/worktop		
006	C00287023	21230...			knob gas p.i.ftgh h/a vet.8mm		
006	C00291263		21229...		knob gas 8mm		
008	C00287024				gasket knob p.i.vetro 8mm		
009	C00292437				hob top tq640 (bk)		
010	C00052934				electrode clip		
011	C00118496			1 x C00052951	electrode l=520		
012	C00052986				thermocouple ** not for triple		
015	C00052941				natural gas jet (96)		
016	C00052926				burner cup - medium burner		
017	C00095359				ignition transformer		
018	C00141846				pipe semifast rh - tap		
019	C00141757				pipe semifast- tap		
020	C00141758				burner supply pipe aux		
021	C00141756				front left burner supply pipe		
022	C00280173				junction clamp richco		
023	C00260792				tap fixing plate		
024	C00064912				screw m4x18 tsp nikelata		
025	C00111240				gas tap medium/auxiliary copreci		
025	C00111241				gas tap large copreci		
026	C00111235				microswitch ring		
026	C00143913				ignition microswitch (4) copreci		
028	C00052952				clamp kit - hob/worktop		
029	C00260566				base cover td-tq640		
030	C00141761				gas pipe pz640		
032	C00010506				sealing washer - gas elbow/pipe		
033	C00024370				elbow connection (1/2 male x 2)-		
034	C00297837				terminal block 5 f.+cavo 6a		
035	C00052925				burner cup - large burner		
036	C00052927				burner cup - small burner		
037	C00066166				nat gas aux. burner nozzle rapido		

4230530 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
038	C00096132				packing d=153,4		
039	C00052940				gas jet 116 ng large burner		
041	C00260771				burner support fast raf exp		
042	C00136243				flame splitter - large		
043	C00064920				burner cap rapide black		
044	C00260774				burner support auxiliary raf exp		
045	C00063702				burner base - auxiliary		
046	C00064918				burner cap auxiliary black semi		
048	C00260762				pan grid (centre) cast iron		
049	C00260760				grid for 2 burners left cast iron		
099	C00273333				jets kit for lpg		

Electric schemes and links

Cod. 16001636200

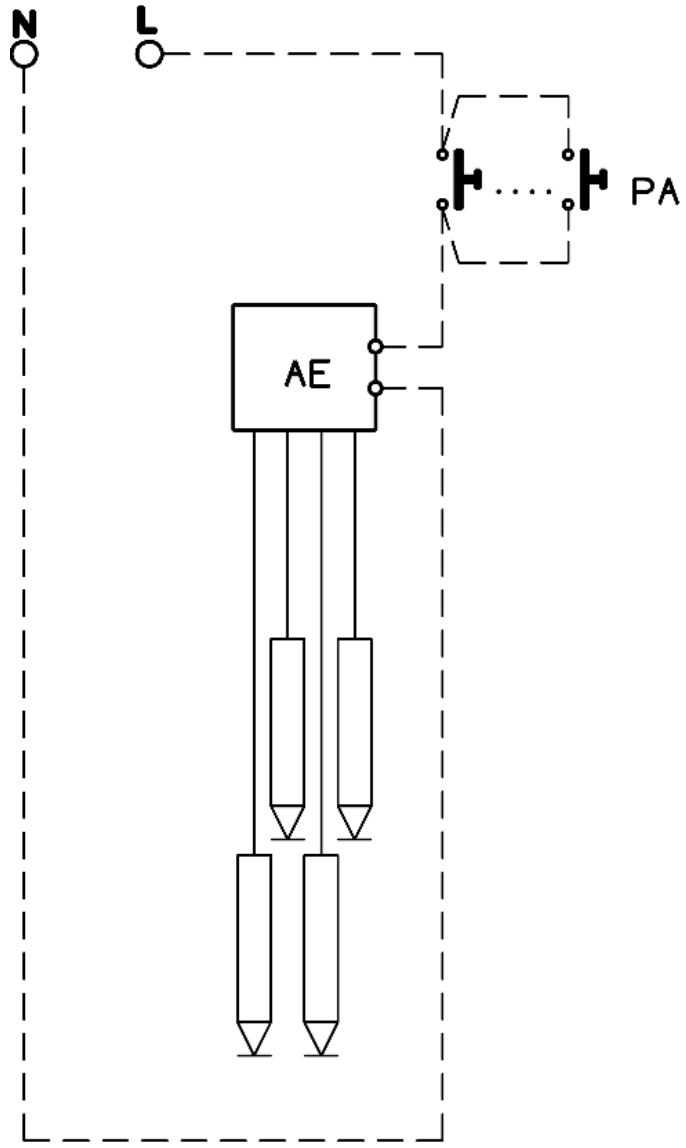

se16001636200

Legend

Legend: 16001636200

AE	Ignition transformer	PE	Plate electric (Normal and Rapid)
AT	Ignition transformer	PEL	Wall socket
CF	Oven commutator	PIF	Cooking programmer
CP	Plate commutator(Normal end Rapid)	POT	Thermostated potentiometer
CT	Plate commutator(Automatic)	PT	Termoprotector
DC DR	Double Knob double crown burner control card	PTC	Thermostated sensor
EV	Electro-Valve	RCE	Grill heating element ex- ternal
FC	End of cooking programmer	RCI	Grill heating element internal
FRONT	Daschboard	RE	Energy regulator
I/LF	OVEN LIGHT SWITCH	RF	Oven lower heating element
I/LF-MG	OVEN LIGHT SWITCH + ROTISSERIE	RG	Grill heating element
I/MG	TURNSPIT SWITCH	RG COM	Grill heating element un- ion
IL	Knobs' Lighting	RV	Heating element ventilated oven
ILG	Lamp switch turnspit	SA	Boiler operating led
IT	Thermostated switch	SB	Thermostated burner led
L	Line (Feed)	SF	Warning light working
LF	Oven light	SO	Probe temperature
LI	Oven light	SP	Operating Indicator Light for the Plate
M	Suction motor handle	ST	Warning light thermostat
MG	Turnspit motor	TH	Thermostat fixed
MO	Terminal board	TH2	Thermostated burner cooling
MUFF	Oven	THR	Adjustable thermostat
MV	Fan motor	TP	Termoprotector
N	Neutral (Feed)	TRAV	Support terminal board
PA	Ignition push-button	TRM	Thermostated burner control card