
INDESIT company

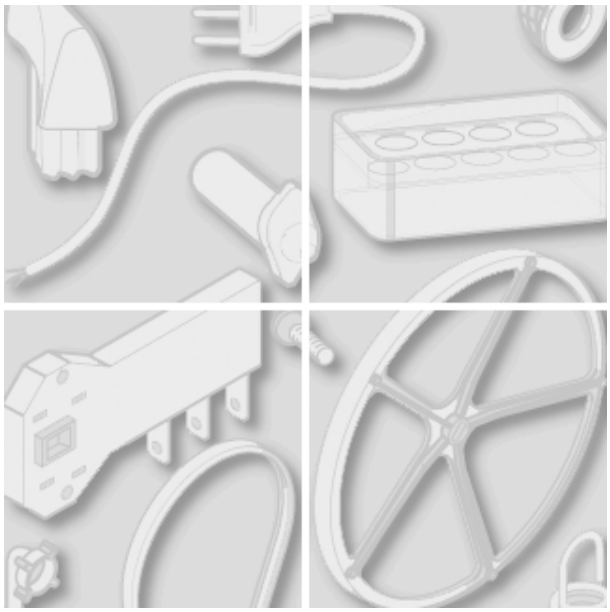

Model type:
XH90.1IX

Commercial code:
F031243

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1639 Exploded views

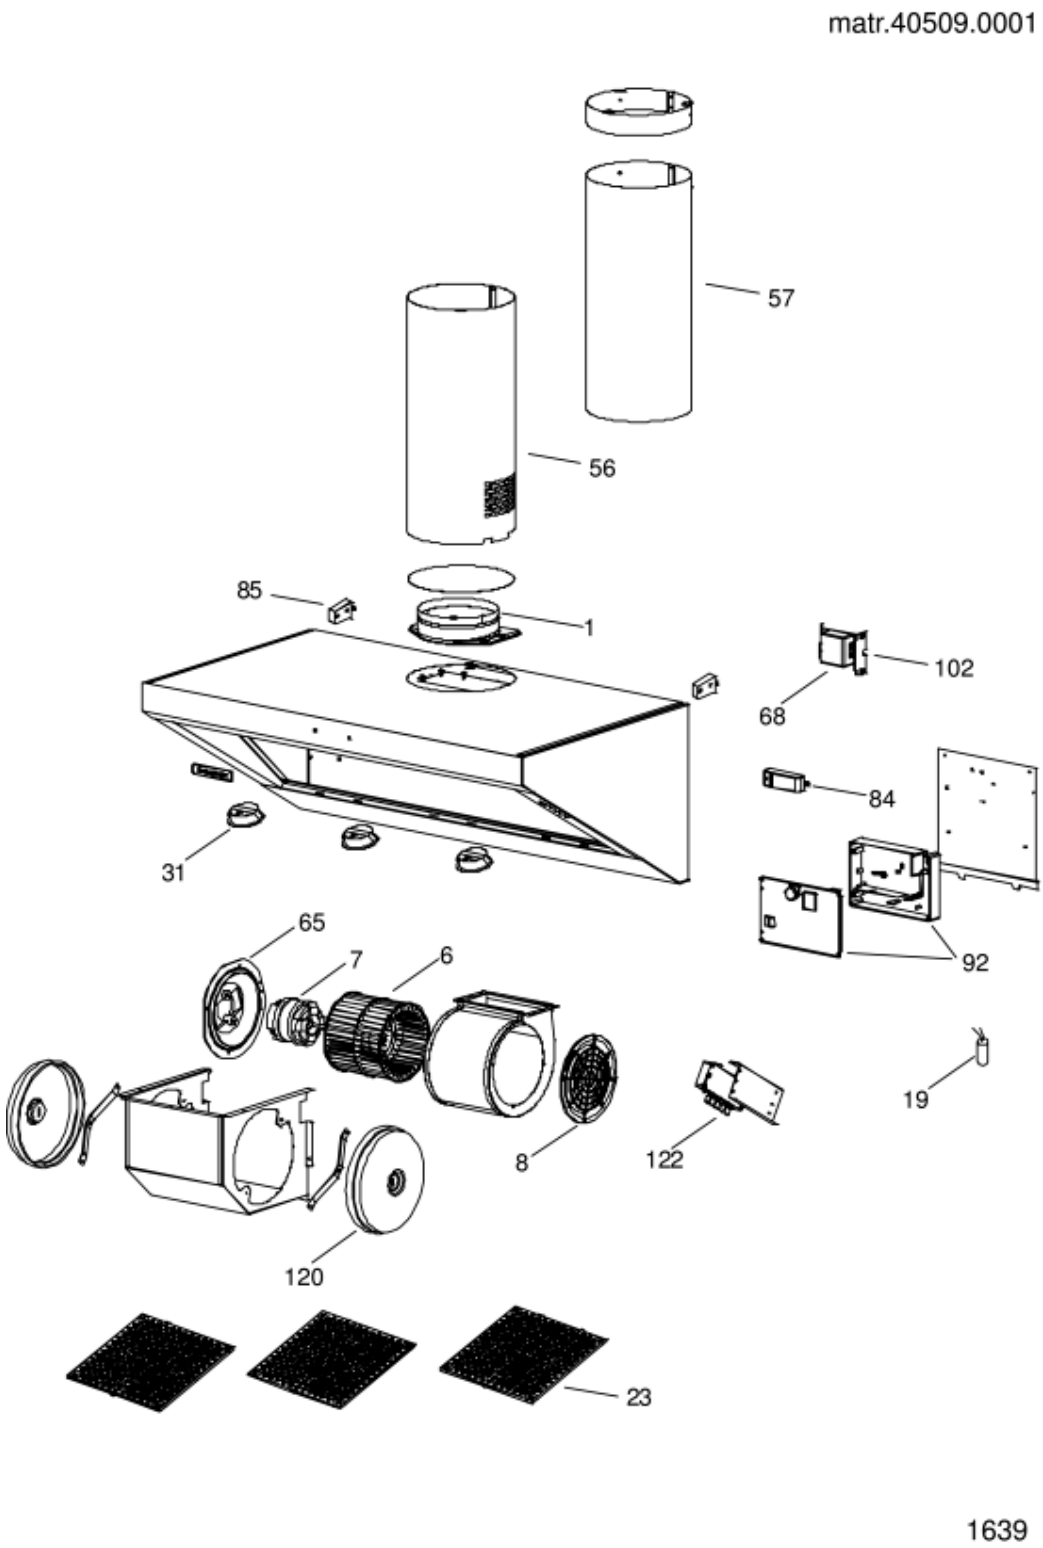


1639 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00111036				user instruction book		
001	C00111031				drain coupling		
006	C00090119				motor propeller		
007	C00096897				motor s80-35		
008	C00139285			1 x C00278471	motor support		
019	C00090176			1 x C00255895	condenser 5mf		
023	C00111032				baffle filter		
031	C00138617			1 x C00242926	complete halogen lamp		
056	C00111033				chimney lower inox		
057	C00111034				chimney upper ix		
065	C00138717				suction compressor		
068	C00090189				cover connection block		
084	C00096871				transformer		
085	C00138719			1 x C00242931	fixing hook		
092	C00137585				electronic box (ix)		
102	C00090179			1 x C00195758	connection block		
122	C00111035				control panel xh90.1 ix		
999	C00117093				carbon filter		
999	C00143128			1 x C00296517	drain coupling + check valve		
999	C00193135				hood securing brachet		

Electric schemes and links

Cod. se1GHA

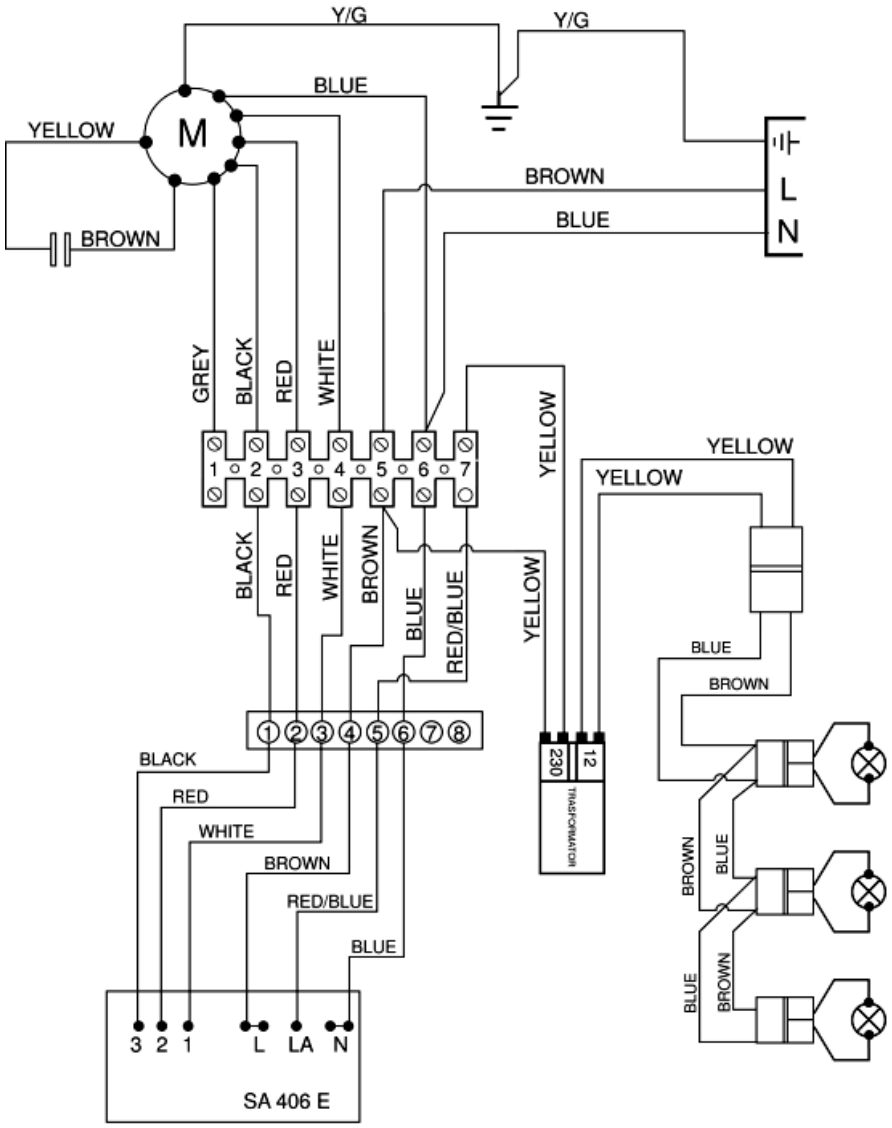

se1GHA

Legend

Legend: se1GHA

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element