
INDESIT company

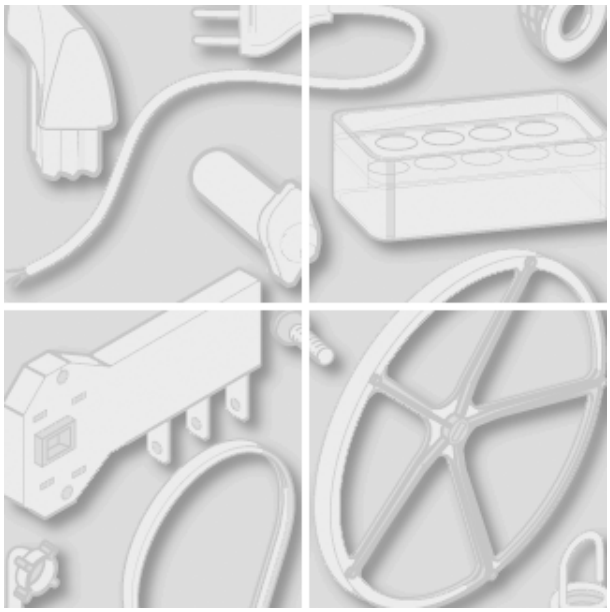

Model type:

AE2M(WH)/HA

Commercial code:

F050130

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1891 Exploded views

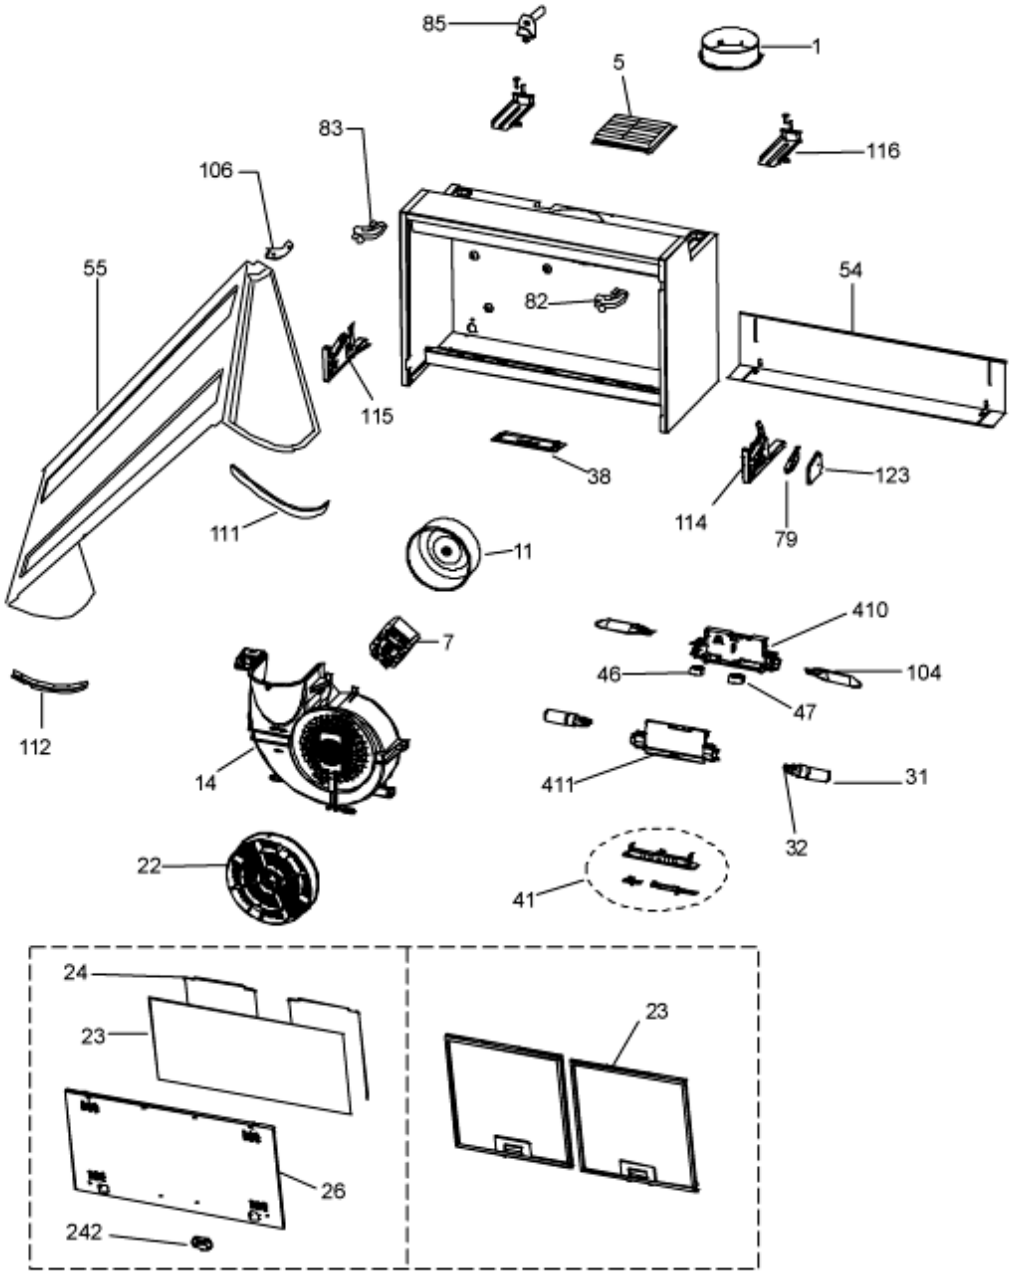


1891

1891 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00195616				instruction book		
001	C00095168				flange		
005	C00137541				deflector		
007	C00265174				motor		
011	C00098264				motor propeller		
014	C00195614				conveyor		
022	C00115686			1 x C00090942	carbon filter model d29 hp (2pcs)		
023	C00195600				grease filter		
024	C00195601				filter fixing		
026	C00195602				grease filter		
031	C00131593			1 x C00292492	lamp 40w 240v		
032	C00135455				lamp holder		
038	C00195603			1 x C00292493	lamp cover		
041	C00255977				control panel sl16 wh/ha		
046	C00135642				lamp switch		
047	C00135643				fan motor speed - switch		
054	C00127265				rear wall wh		
055	C00137475				door wh		
079	C00195605				microswitch		
082	C00099115				upper, right support		
083	C00099116				left upper guide support		
085	C00256015				hook		
104	C00136902			1 x C00242813	reflector		
106	C00137551				gate slider wh		
111	C00195607				slide right wh		
112	C00195608				slide left wh		
114	C00195609				support slide right		
115	C00195610				support slide left		
116	C00137490			1 x C00242529	fastening assembly		
123	C00195611				protection microswitch		
242	C00095238				closure		
410	C00195617				controls housing		
411	C00195613				control box cover		

Electric schemes and links

Cod. se1K8A

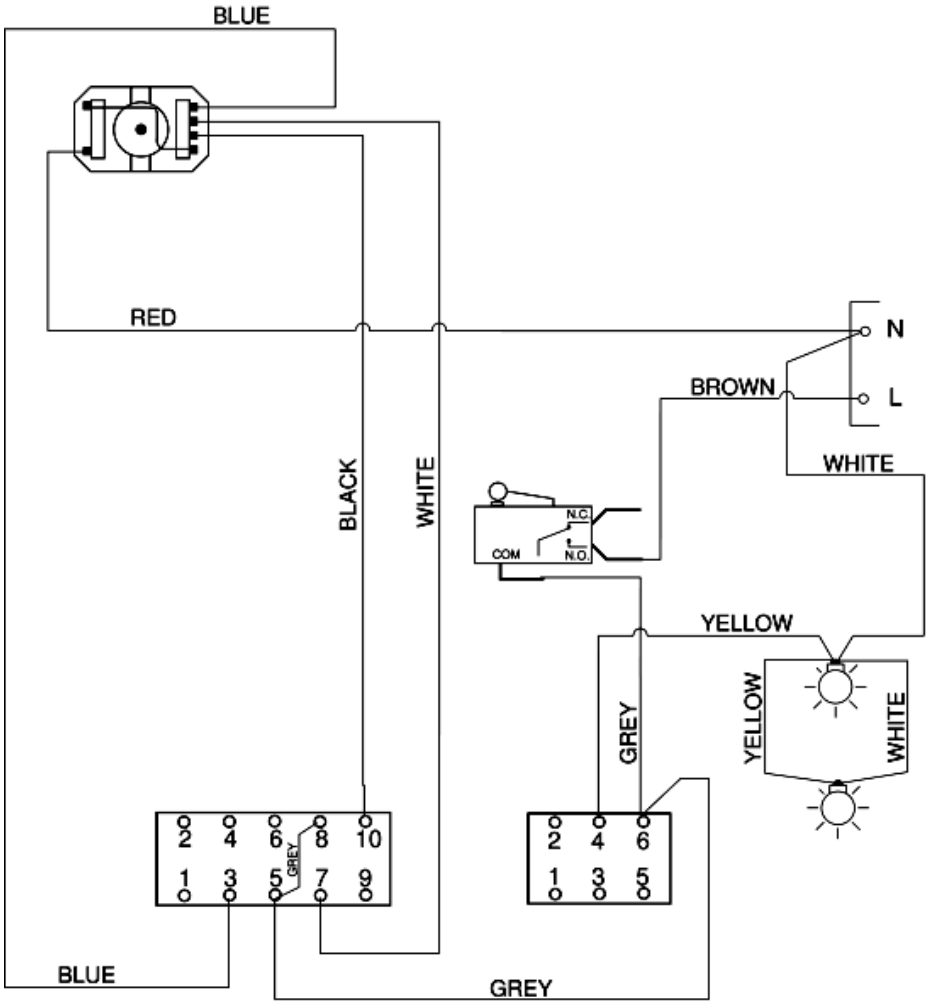

se1K8A

Legend

Legend: se1K8A

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element