
INDESIT company

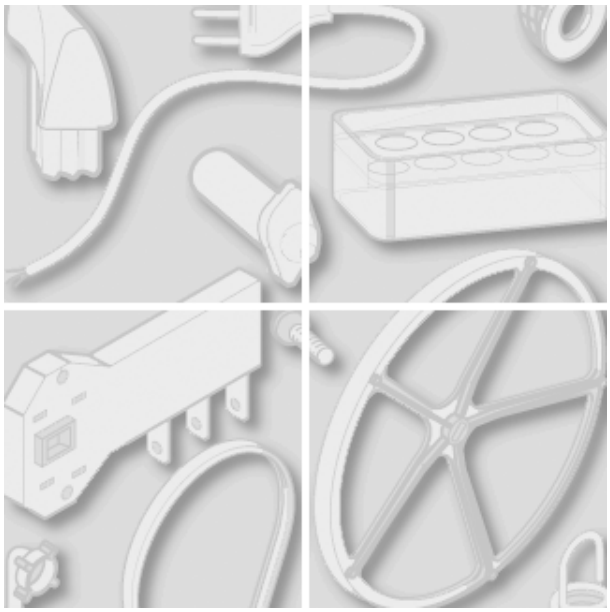

Model type:
AHS2FM.1IX

Commercial code:
F030103

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:

REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics


INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1460a Exploded views

matr.31203.0001

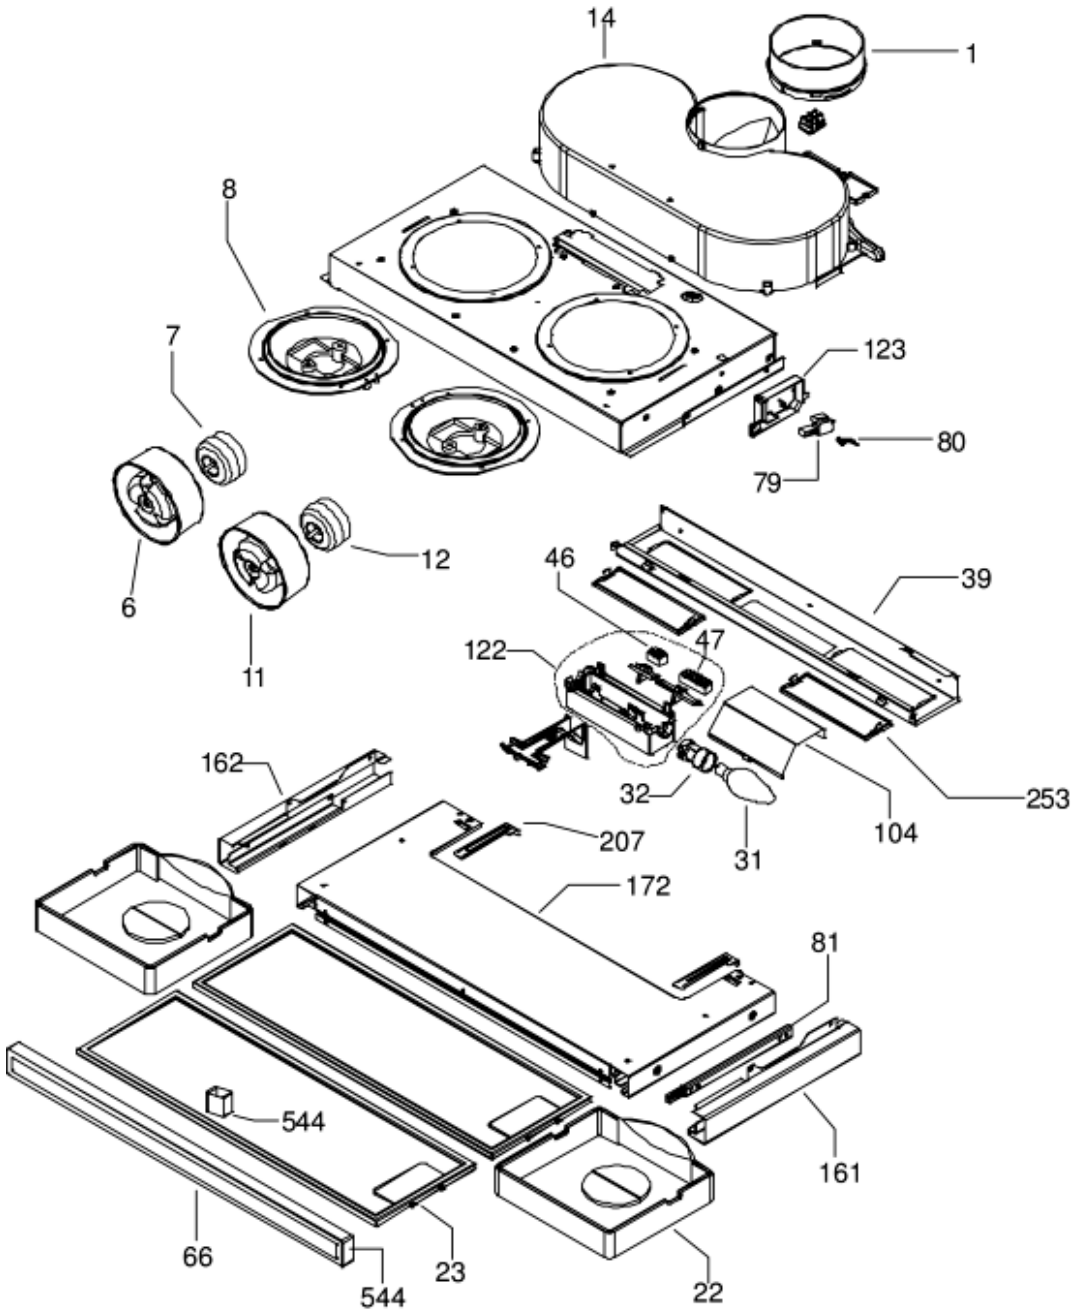


1460a

1460a Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00098638				user instruc. book it-gb-fr-es-pt-nl-		
001	C00098572				flange		
006	C00095185				motor propeller		
007	C00098622				motor		
008	C00135453			1 x C00242493	support motor		
011	C00098573				motor propeller		
012	C00098623				motor		
014	C00098624				conveyor		
022	C00135460			1 x C00090716	carbon filter		
023	C00098625				grease filter		
031	C00131593			1 x C00292492	lamp 40w 240v		
032	C00139626			1 x C00242499	lamp bushing		
039	C00098576				ceiling lamp support gy		
046	C00135642				lamp switch		
047	C00135643				fan motor speed - switch		
066	C00098626				dashborad ix ahs2fm.1		
079	C00098579			1 x C00242726	microswitch		
080	C00098578				lever microswitch		
081	C00138597			1 x C00112164	slide		
104	C00098585				lamp reflector socket		
122	C00098586				control panel h461gy		
123	C00098587				protection microswitch		
161	C00098588				right lateral profile		
162	C00098589				left lateral profile		
172	C00098590				panel gy		
207	C00098591				regulation bracket		
253	C00138604				right or left ceiling lamp		
544	C00098627				control panel support ix		
999	C00111185				fixing assembly brackets		
999	C00111274				front panel for wall position		
999	C00111275				hood/ wall spacer		
999	C00143130			1 x C00098572	drain coupling + check valve		
999	C00282910				check valve		

Electric schemes and links

Cod. se08aa

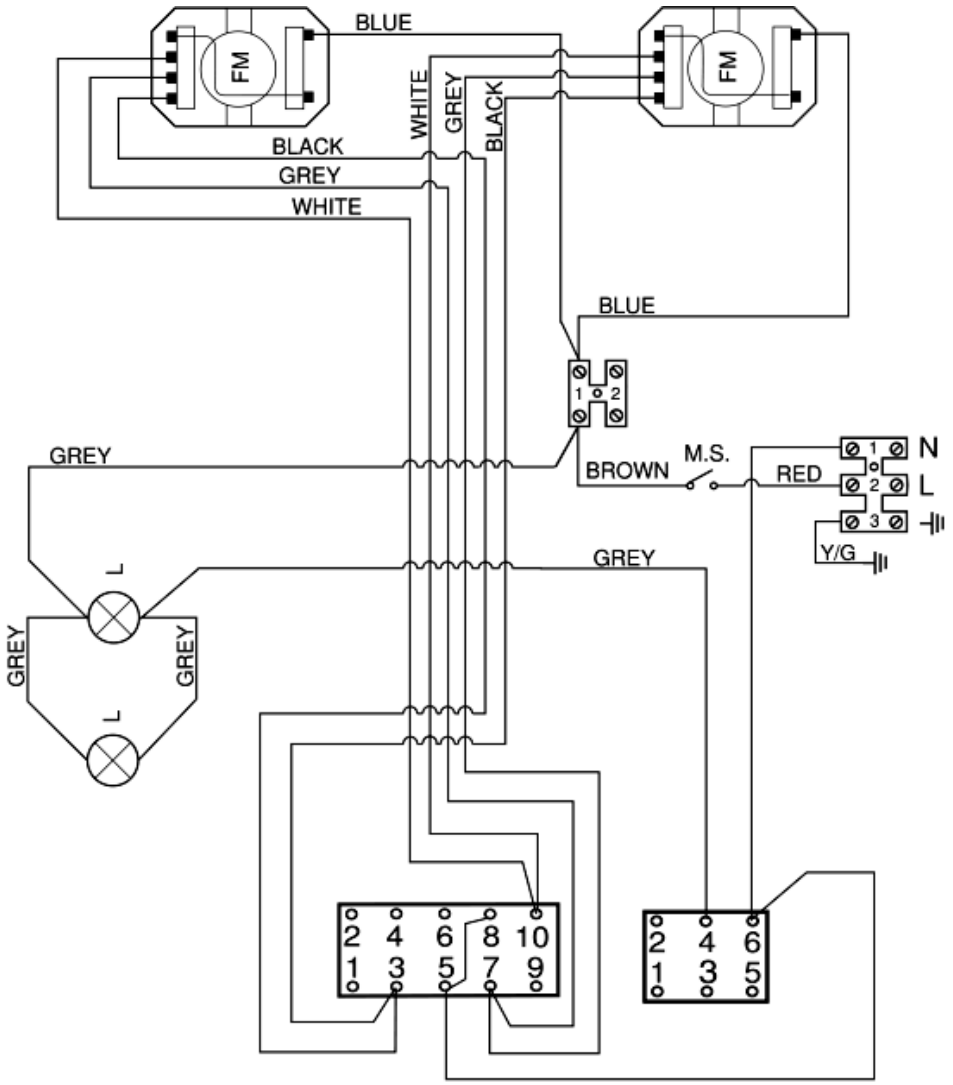

se08aa

Legend

Legend: se08aa

AT	Ignition transformer	POT	Thermostated potentiometer
CF	Oven commutator	PT	Plate electric (Automatic)
CP	Plate commutator(Normal end Rapid)	PTC	Thermostated sensor
CT	Plate commutator(Automatic)	RCE	Grill heating element external
DCDR	Double Knob double crown burner control card	RCI	Grill heating element internal
EV	Electro Valve	RE	Energy regulator
FRON	Daschboard	RF	Oven lower heating element
ILG	Lamp switch turnspit	RG	Grill heating element
IT	Thermostated switch	RG COM	Grill heating element union
L	Line (Feed)	RV	Heating element ventilated oven
LF	Dashboard light	SA	Boiler operating led
LI	Oven light	SB	Thermostated burner led
M	Suction motor handle	SF	Warning light working
MG	Turnspit motor	SO	Probe temperature
MO	Terminal board	ST	Warning light thermostat
MUF	Oven	TH	Thermostat fixed
MV	Fan motor	TH2	Thermostated burner cooling
N	Neutral (Feed)	THR	Adjustable thermostat
PA	Ignition push	TP	Termoprotector
PE	Plate electric (Normal and Rapid)	TRAV	Support terminal board
PEL	Wall socket	TRM	Thermostated burner control card
PIF	Cooking programmer	VAP	Steam boiler heating element