
INDESIT company

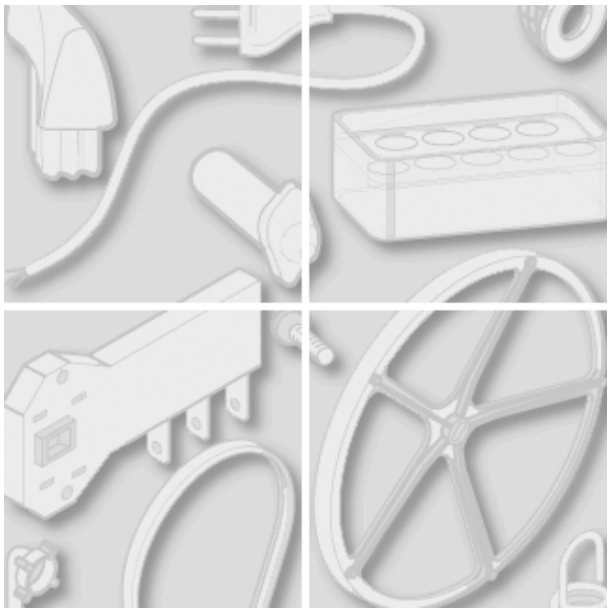

Model type:
FM10(BK)

Commercial code:
F023831

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes


4141010 Exploded views

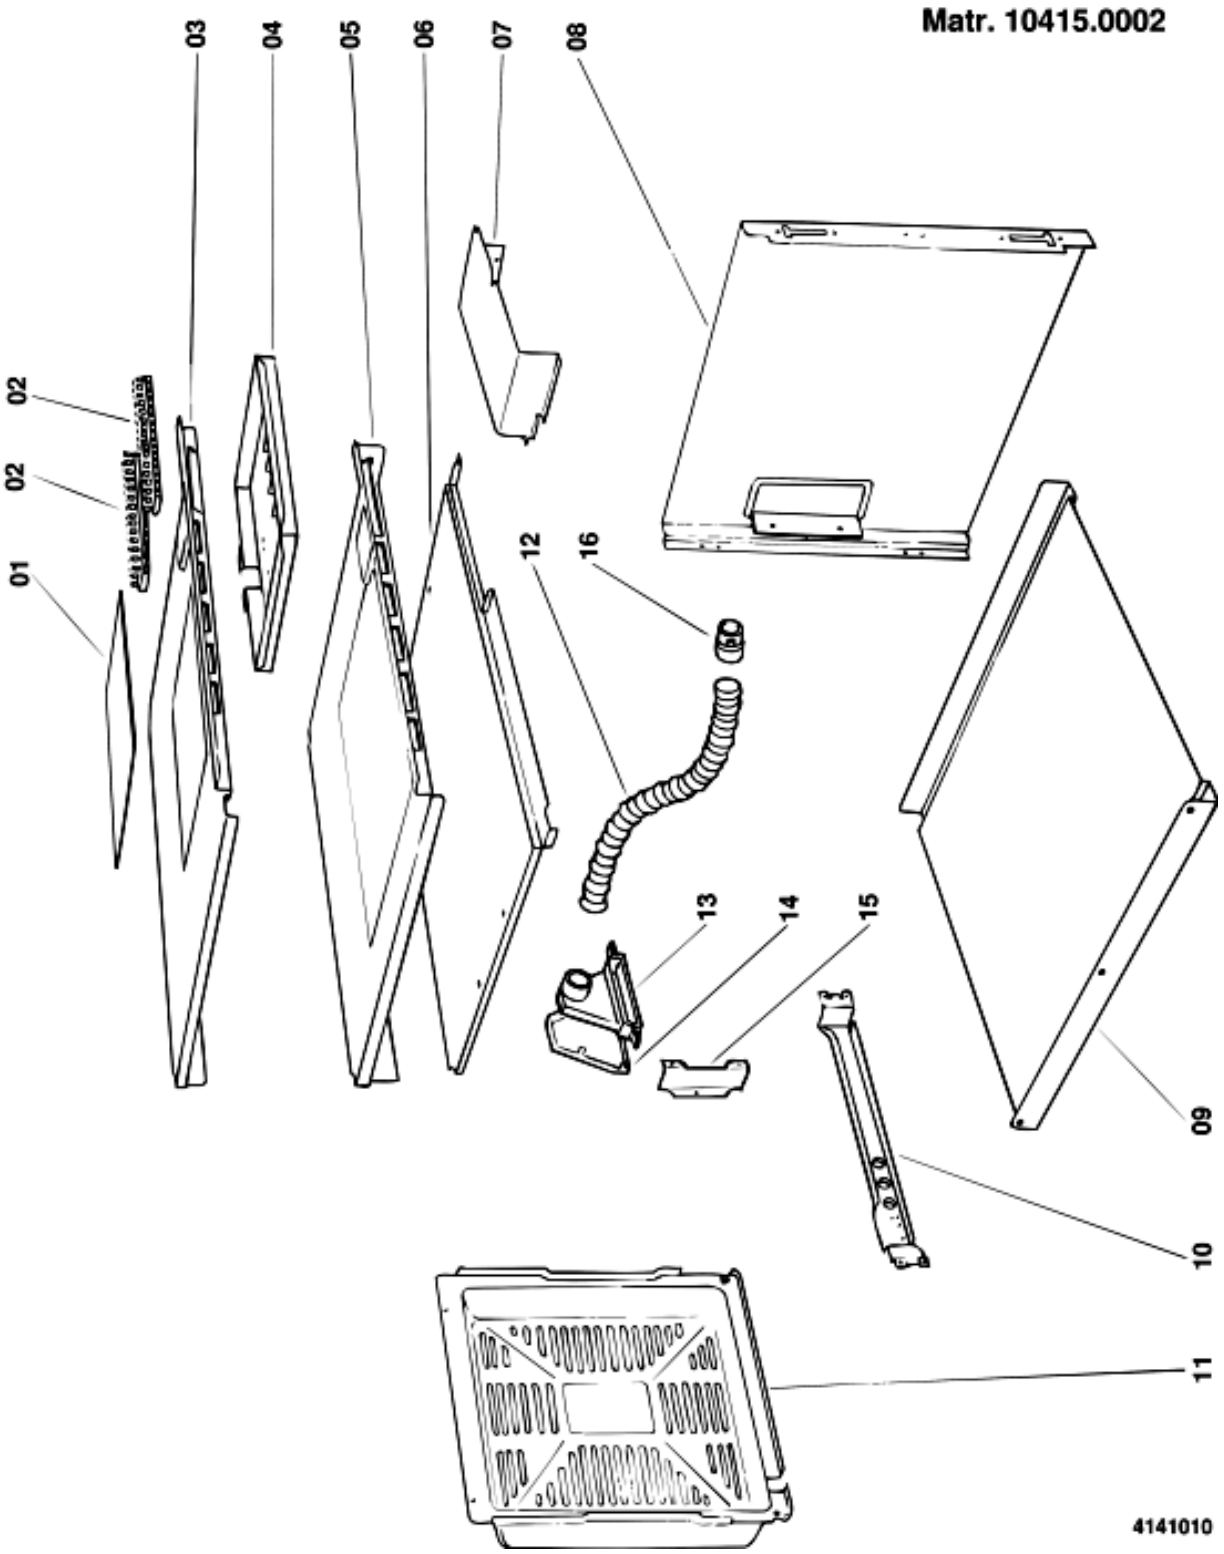

4141010 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00049374				user instruction book fm1 giugiaro		
005	C00028025 (482000063866)				oven top cover		
008	C00022146				access cover - side panel		
008	C00048091				oven side panel lh (fixed pivot)		
008	C00048092				oven side panel rh (fixed pivot)		
009	C00022148				oven bottom cover		
011	C00048011 (482000074375)				outer back oven cover		

4141110 Exploded views

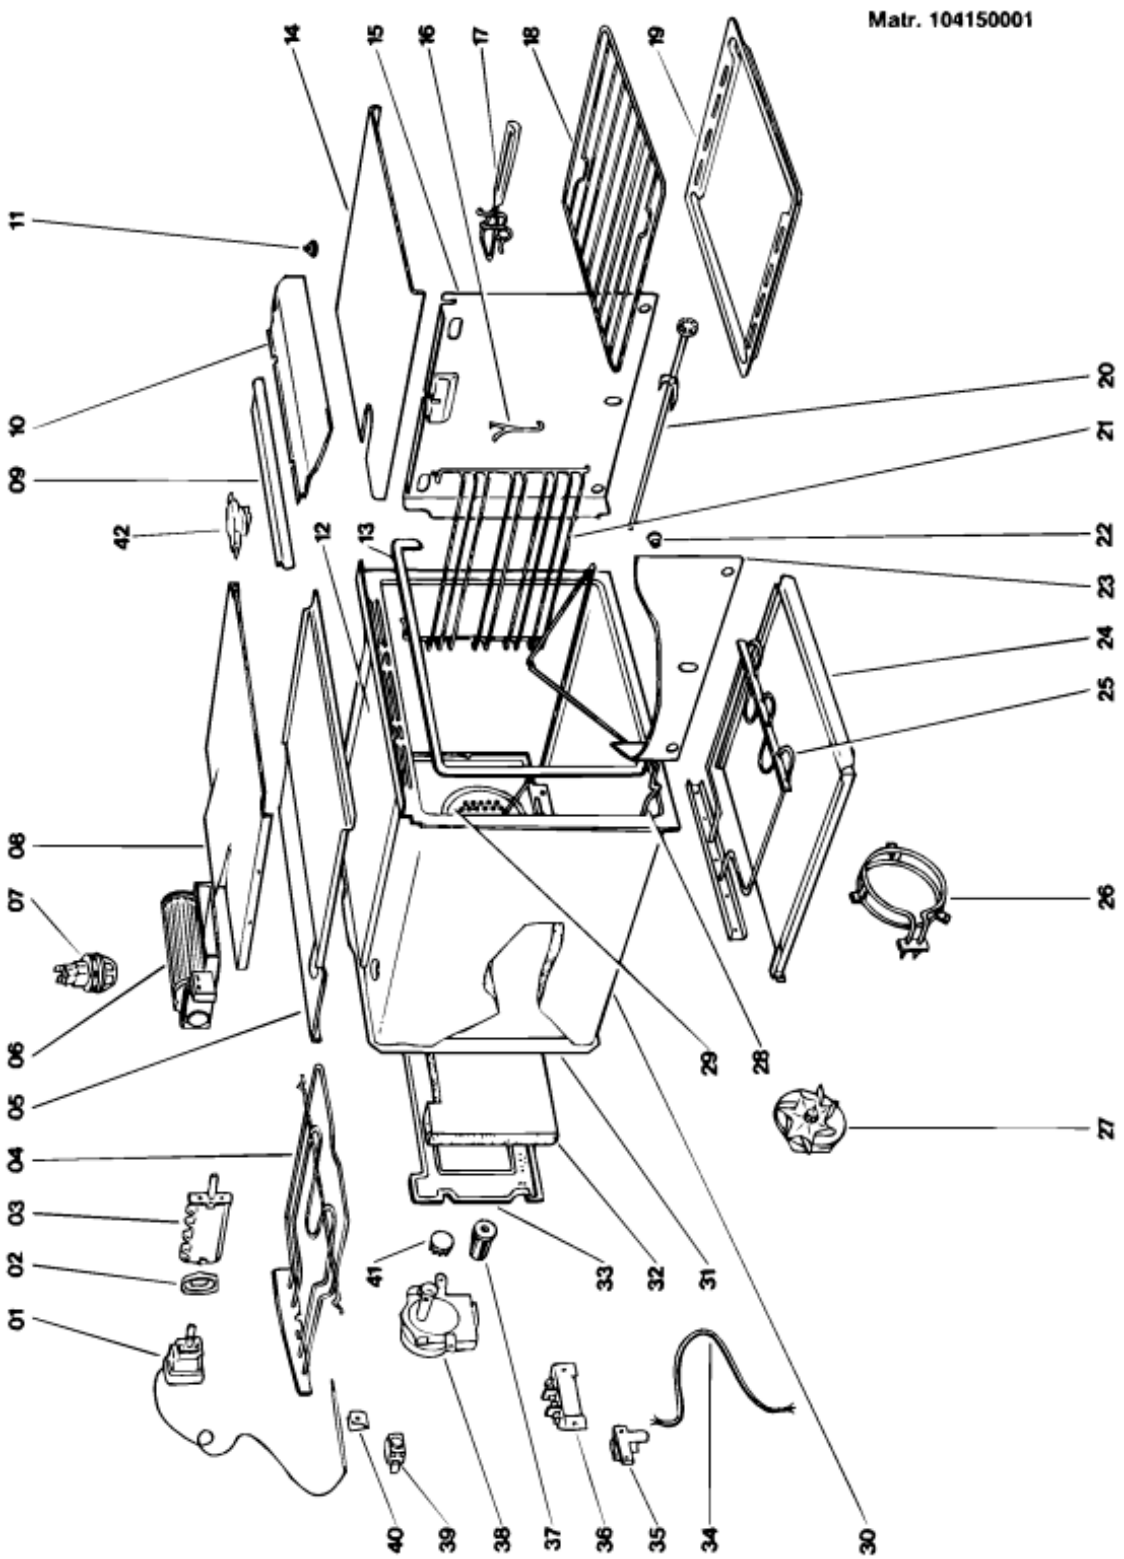


4141110 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00011573 (482000072653)			1 x C00297891 (482000032134)	oven thermostat		
003	C00033977 (482000026263)				oven function switch (5 position)		
004	C00039574 (482000022613)			1 x C00525932 (488000525932)	upper element oven/grill 1+1,2kw		
007	C00015910 (482000025965)				oven lamp e14 220v 15w		
007	C00038035 (482000026352)				oven lamp assembly		
012	C00017227				oven insulation mat - top		
013	C00027982 (482000022590)				oven door seal- 4 sides brown		
018	C00030161 (482000026148)				oven grate 30mm wires		
019	C00031422 (482000052617)				drip tray - black enamelled		
024	C00016423 (482000025972)				ducting - lower heating element		
025	C00016435 (482000025973)				heating element - oven bottom 1000w		
027	C00016057 (482000025968)				fan motor-(cooking) 220v/240v 50hz 25watt		
029	C00033403 (482000063083)				oven back panel (inner) enamelled		
030	C00033953 (482000073479)				oven insulation - sides		
031	C00049034				oven chamber mult.ful.fiss.		
032	C00066621				back insulating material oven		
033	C00016108 (482000063939)				oven outer back panel		
034	C00026767 (482000026096)				supply cable 10a 3x1		

036	C00039460 (482000026383)		terminal block 2.pole (fastex)
039	C00028264 (482000026124)		safety thermostat
040	C00039578 (482000022614)		spring for thermostat bulb
044	C00038914 (482000054451)	1 x C00280851 (482000031488)	fixing plate for self-tapping screw 8p
045	C00011116 (482000072646)		screw self-tapping black 8pt

4141210 Exploded views

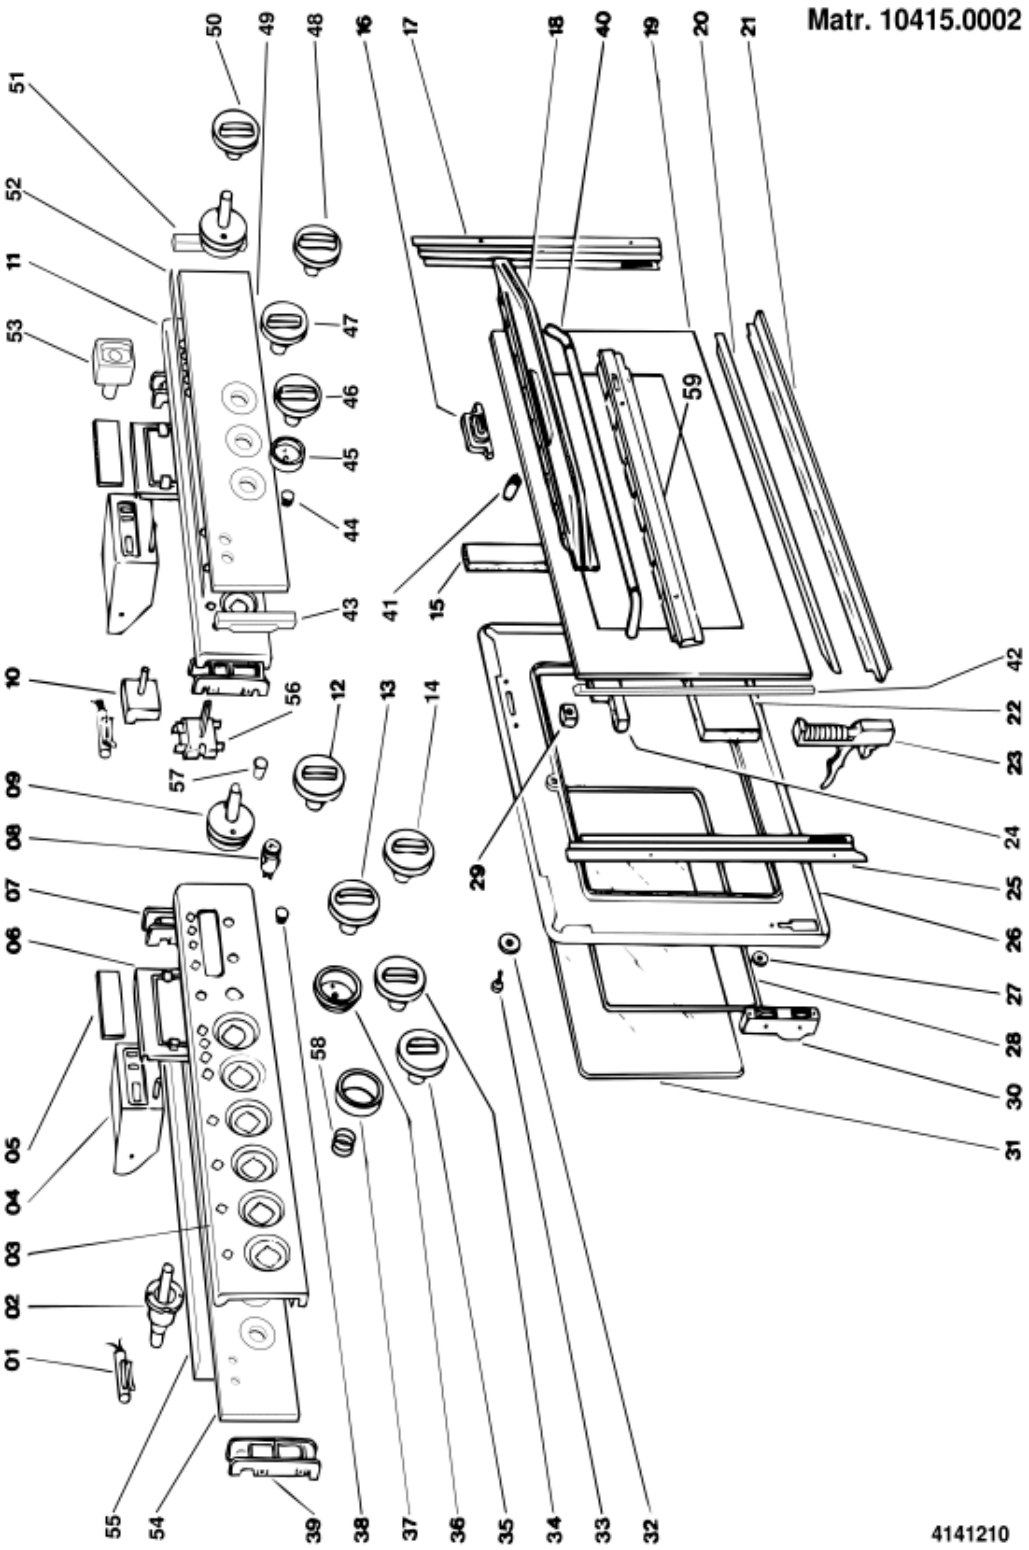

4141210 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00028054 (482000026120)				pilot light red cod everel sx27mr2e30137		
003	C00075059				black dashboard fm10		
007	C00048628 (482000074423)				control panel support rhs giugiaro		
009	C00052527 (482000026798)				minute timer d = 6mm		
013	C00075049 (482000027307)				electric oven knob black 6mm indesit		
016	C00075047 (482000076365)				vent new indesit		
017	C00048657 (482000057716)			1 x C00049250 (482000064427)	rh front strut (fixed hinge pivot)-black		
018	C00075026 (482000027300)				oven door handle black giugiaro indesit		
019	C00075025 (482000053987)			1 x C00075701 (482000076412)	oven door glass black indesit		
019	C00075701 (482000076412)				oven door glass black indesit hgk 10 bk		
020	C00048647 (482000074430)				door lower trim (fixed hinge pivot)-black		
021	C00048659 (482000074432)				lower trim black (fixed hinge pivot)		
023	C00048108 (482000026661)				oven door hinge (fixed hinge pivot)		
025	C00048658 (482000057717)			1 x C00049250 (482000064427)	lh front strut (fixed hinge pivot) - blac		
026	C00075046 (482000027306)				oven inner-door giug.indesit+glass		
027	C00033163 (482000026237)				washer - black		
030	C00048090				hinge support (fixed hinge pivot)		
038	C00036428 (482000026324)				pilot light lens - yellow		

039	C00048629 (482000074424)	control panel support lhs giugiaro
099	C00017240 (482000025977)	self-tapping screw 8px9,52 t1/2t- black
099	C00033431 (482000026247)	screw m5 x 20 tsp black

Notices

n1015015: Method to remove the external glass of the oven door.

On all built-in cooker and oven models, when it is necessary to remove the glass from the oven door handle (to avoid breaking the handle) the glass is not removed upwards, but should be oscillated towards the right and left until the two silicone points, that unite the glass to the handle, detach.


n1015029: Elimination of built-in oven spacer

With regard to all Indesit built-in ovens from serial number 20422.0001, knob spacer code 139381 has been removed in order to improve fixing. Because of this modification, new knobs designed to be fitted without spacer have been introduced. Pre-modification knobs will continue to be stocked by the spare parts warehouse and must be fitted only with the relative spacer.
The following is a list of the various knobs identified by colour:
-076286 (brown - to be used with spacer) / 088883 new brown
-075049 (black - to be used with spacer) / 075064 new black
-075043 (white - to be used with spacer) / 075075 new white
-075060 (stainless steel - to be used with spacer) / 089440 new stainless steel

Electric schemes and links

Cod. 414018b

POS.	7A/7 P2/4	1A/1 P3/5	4A/5 P1/1	4A/3 P1/3	4A/4 P1/2	2A/2 P4/6	--- ---	
0								0
1	■							
2	■	■	■	■				
3	■	■	■	■		■		
4	■	■			■			
5	■	■		■	■			
6	■	■		■	■	■		309° 34'

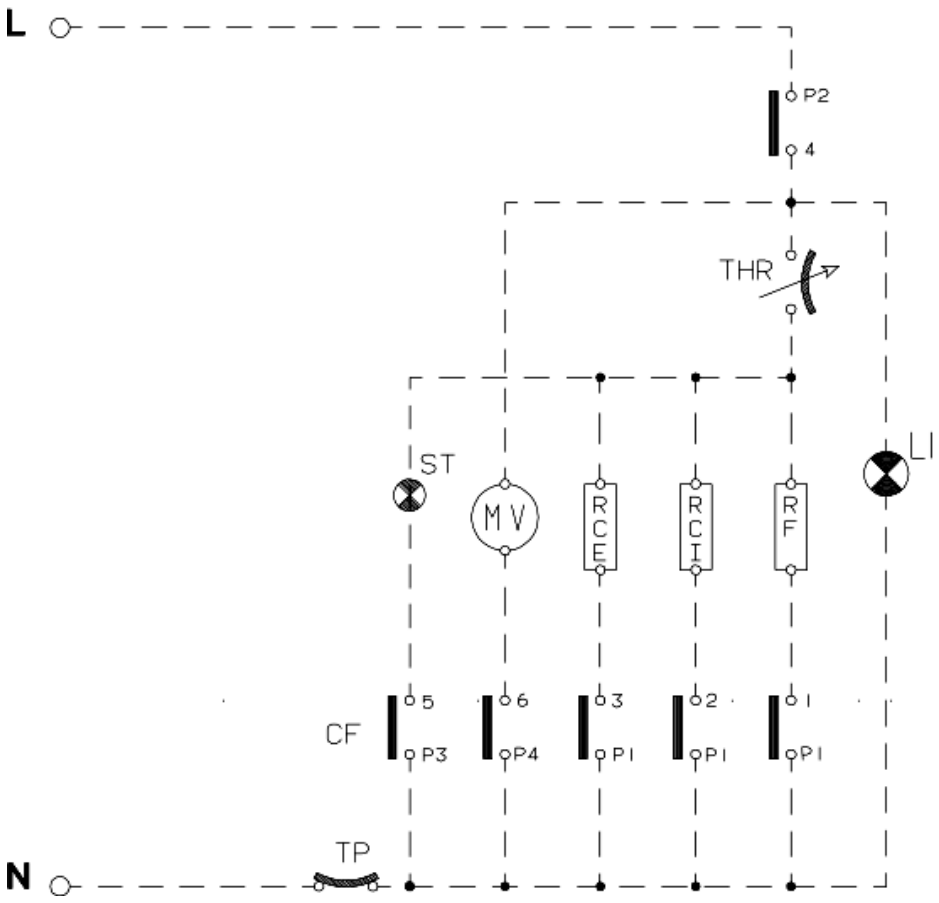

Legend

Legend: 414018b

AE	Ignition transformer	PE	Plate electric (Normal and Rapid)
AT	Ignition transformer	PEL	Wall socket
CF	Oven commutator	PIF	Cooking programmer
CP	Plate commutator(Normal end Rapid)	POT	Thermostated potentiometer
CT	Plate commutator(Automatic)	PT	Termoprotector
DC DR	Double Knob double crown burner control card	PTC	Thermostated sensor
EV	Electro-Valve	RCE	Grill heating element ex- ternal
FC	End of cooking programmer	RCI	Grill heating element internal
FRONT	Daschboard	RE	Energy regulator
I/LF	OVEN LIGHT SWITCH	RF	Oven lower heating element
I/LF-MG	OVEN LIGHT SWITCH + ROTISSERIE	RG	Grill heating element
I/MG	TURNSPIT SWITCH	RG COM	Grill heating element un- ion
IL	Knobs' Lighting	RV	Heating element ventilated oven
ILG	Lamp switch turnspit	SA	Boiler operating led
IT	Thermostated switch	SB	Thermostated burner led
L	Line (Feed)	SF	Warning light working
LF	Oven light	SO	Probe temperature
LI	Oven light	SP	Operating Indicator Light for the Plate
M	Suction motor handle	ST	Warning light thermostat
MG	Turnspit motor	TH	Thermostat fixed
MO	Terminal board	TH2	Thermostated burner cooling
MUFF	Oven	THR	Adjustable thermostat
MV	Fan motor	TP	Termoprotector
N	Neutral (Feed)	TRAV	Support terminal board
PA	Ignition push-button	TRM	Thermostated burner control card