
INDESIT company

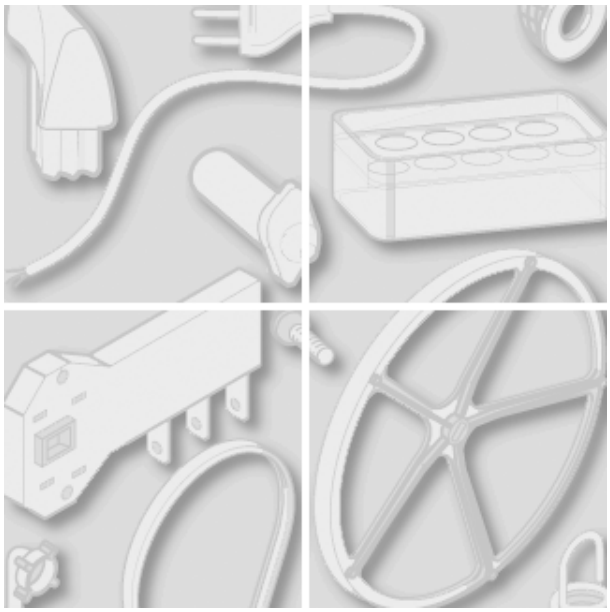

Model type:
TZ740TCES(IX)

Commercial code:
F032212

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

4240160 Exploded views

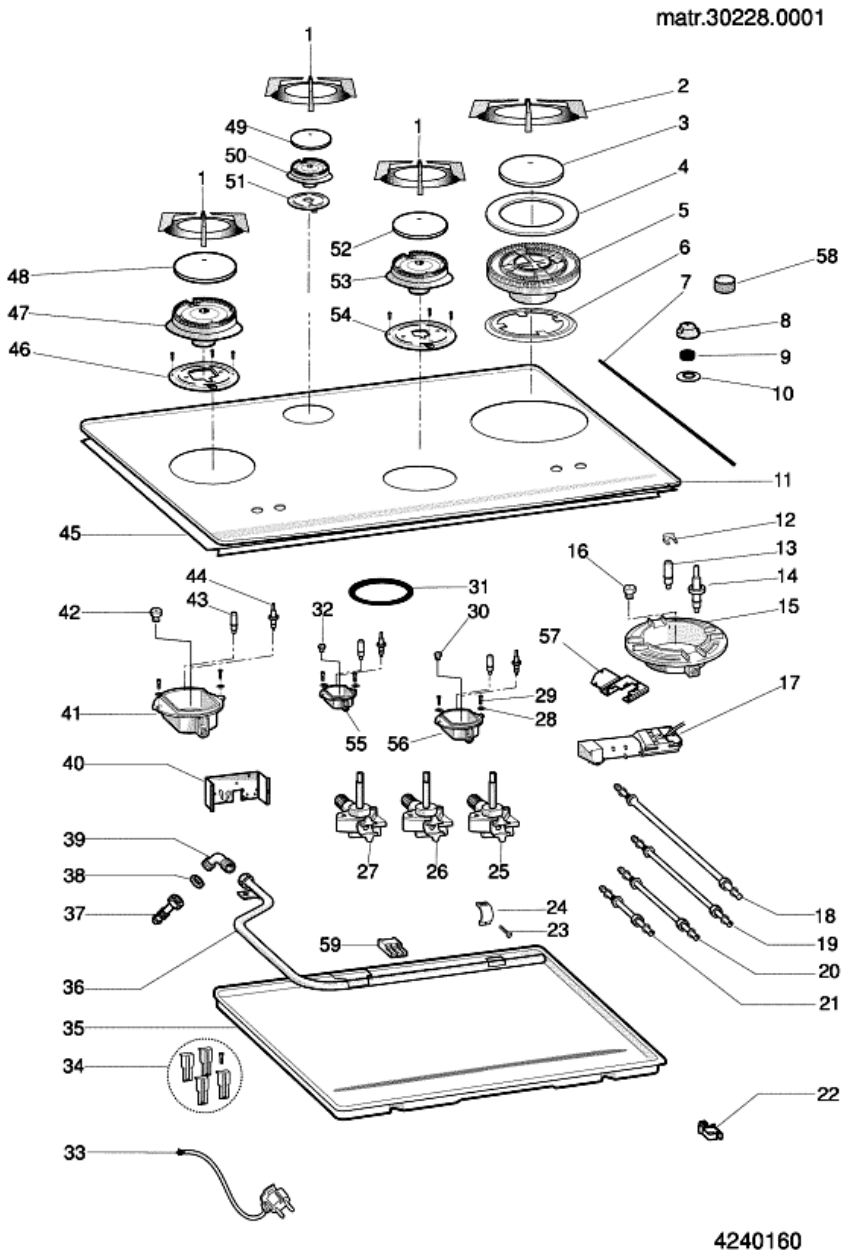

4240160 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00090615				user instructions it-gb-fr-nl-es-pt-		
001	C00098930				pan stand 2 pin type - shiny black		
002	C00063718				grid hobs diamond trip.cor.		
003	C00053175				burner cap (centre disc)triple black		
004	C00053174				outer burner cap black work triple		
005	C00053173				burner base/flame splitter - triple		
006	C00063720				burner support tripl.coron.sic.		
007	C00063701				seal-hob/worktop		
009	C00039156				knob disc - spring		
010	C00095429				knob disc - an		
011	C00112514			1 x C00142929	ice working table glass tz740tc(ix)		
012	C00052934				electrode clip		
013	C00053244				ignition spark plug - triple burner		
014	C00093834				screw nut m6		
014	C00094330				thermocouple - triple burner		
015	C00053254				burner cup - triple burner		
016	C00053176				gas jet 91 lpg - triple burner/wok		
016	C00065921				small metha.gas nozzle triple		
017	C00095359				ignition transformer		
018	C00063717				rh back tr.cor.burner supply pipe		
019	C00063697			1 x C00017439	rh back ausi.burner supply pipe		
020	C00063695			1 x C00017439	front left burner supply pipe		
021	C00063694			1 x C00017439	front left burner supply pipe		
022	C00280173				junction clamp richco		
023	C00064912				screw m4x18 tsp nikelata		
024	C00044592				tap fixing plate	n1015142	03322120000
							03322120200
024	C00111238				fixing bracket - tap copreci	n1015142	03322120100
025	C00061967				gas tap-triple burner+micro	n1015142	03322120000
							03322120200
025	C00111244				gas tap - triple burner 57	n1015142	03322120100
026	C00063699				thermostat with valve	n1015142	03322120000
							03322120200
026	C00111240				gas tap medium/auxiliary copreci	n1015142	03322120100
027	C00063698				thermostat with valve	n1015142	03322120000

4240160 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
027	C00111241				gas tap large copreci	n1015142	03322120100
028	C00063709				washer		
029	C00052960				burner fixing screw (stainless		
030	C00052938				gas jet 64 lpg - medium burner		
030	C00052941				natural gas jet (96)		
031	C00096132				packing d=153,4		
031	C00096133				gasket d=199,8		
032	C00052939				gas jet 50 lpg - small burner		
032	C00056823				gas jet (71) ng/lpg		
033	C00035727			1 x C00276836	mains supply cable 3x2,5		
034	C00052952				clamp kit - hob/worktop		
035	C00063689				base cover diamond		
036	C00096286			1 x C00143918	main gas pipe tv76		
038	C00010506				sealing washer - gas elbow/pipe		
039	C00024370				elbow connection (1/2 male x 2)-		
041	C00052925				burner cup - large burner		
042	C00056359				gas jet (80) lpg - large burner		
042	C00056360				gas jet 110 nat gas - large burner		
043	C00052951				ignition electrode (l=700)		
044	C00052986				thermocouple ** not for triple		
045	C00063719				plate clamp t.c.		
046	C00098935				burner support rapido.sic.		
047	C00136243				flame splitter - large		
048	C00052931				burner cap rapide (large) black		
049	C00052933				burner cap auxiliary (small) black		
050	C00063702				burner base - auxiliary		
051	C00098932				burner support auxiliary sic.		
052	C00052932				burner cap semi rapide		
053	C00136244				flame splitter medium		
054	C00098933				burner support semirapid.sic.		
055	C00136257			1 x C00052927	burner base+jet auxiliary		
056	C00136256			1 x C00052926	burner base+jet medium		
057	C00112512				flask td		
058	C00112511				knob inox		
059	C00297837				terminal block 5 f.+cavo 6a		

4240160 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
060	C00111235				microswitch ring	n1015142	03322120100
060	C00143913				ignition microswitch (4) copreci	n1015142	03322120100

Notices

n1015142: vINTRODUCTION OF COPRECI GAS COCKS + ASSEMBLY ON GLASS HOBS

The hobs relevant to this note have been fitted with new Copreci gas cocks in place of the Sabaf cocks.
The modification involved the introduction of new components that are not individually interchangeable with the premodification parts.

New parts:

C00111240 - cock for auxil./semirapid (x2)
C00111241 - cock for rapid (x1)
C00111244 - cock for triple flame spreader (x1)
C00111235 - microswitch activation ring
C00143913 - assembly (4 microswitches)
C00111238 - cock fixing bracket

Premodification parts:


C00063699 - cock auxiliary/semirapid (x2)
C00063698 - cock for rapid (x1)
C00061967 - cock for triple flame spreader (x1)
C00044592 - cock fixing bracket

Introduction of the new Copreci gas cocks also involved updating of the industrial part code index. Given below is the list of products/industrial part codes affected by this modification:

03283810400 - TD 740 TC ES (BK)
03283270400 - TD 740 TC ES (CH)
03280480400 - TD 740 TC ES (ICE)
03281420400 - TD 740 TC ES (MR)
03283280400 - TD 740 TC ES (SL)
03322100100 - TZ 740 TC ES (ALU)
03322120100 - TZ 740 TC ES (IX)
03353410100 - TZ 740 TC ES (IX) U
03348330100 - GE740TCX
03288070400 - GD74I

Electric schemes and links

Cod. 16001020701

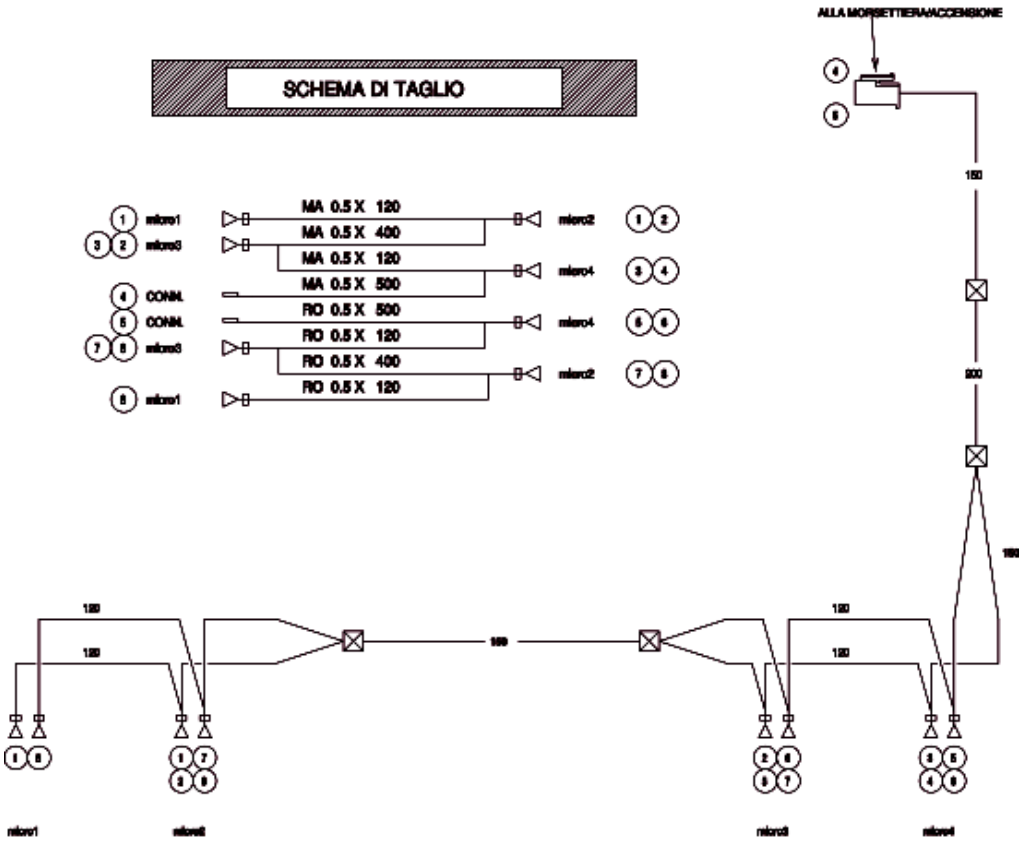

16001020701

Legend

Legend: 16001020701

AE	Ignition transformer	PE	Plate electric (Normal and Rapid)
AT	Ignition transformer	PEL	Wall socket
CF	Oven commutator	PIF	Cooking programmer
CP	Plate commutator(Normal end Rapid)	POT	Thermostated potentiometer
CT	Plate commutator(Automatic)	PT	Termoprotector
DC DR	Double Knob double crown burner control card	PTC	Thermostated sensor
EV	Electro-Valve	RCE	Grill heating element ex- ternal
FC	End of cooking programmer	RCI	Grill heating element internal
FRONT	Daschboard	RE	Energy regulator
I/LF	OVEN LIGHT SWITCH	RF	Oven lower heating element
I/LF-MG	OVEN LIGHT SWITCH + ROTISSERIE	RG	Grill heating element
I/MG	TURNSPIT SWITCH	RG COM	Grill heating element un- ion
IL	Knobs' Lighting	RV	Heating element ventilated oven
ILG	Lamp switch turnspit	SA	Boiler operating led
IT	Thermostated switch	SB	Thermostated burner led
L	Line (Feed)	SF	Warning light working
LF	Oven light	SO	Probe temperature
LI	Oven light	SP	Operating Indicator Light for the Plate
M	Suction motor handle	ST	Warning light thermostat
MG	Turnspit motor	TH	Thermostat fixed
MO	Terminal board	TH2	Thermostated burner cooling
MUFF	Oven	THR	Adjustable thermostat
MV	Fan motor	TP	Termoprotector
N	Neutral (Feed)	TRAV	Support terminal board
PA	Ignition push-button	TRM	Thermostated burner control card