
INDESIT company

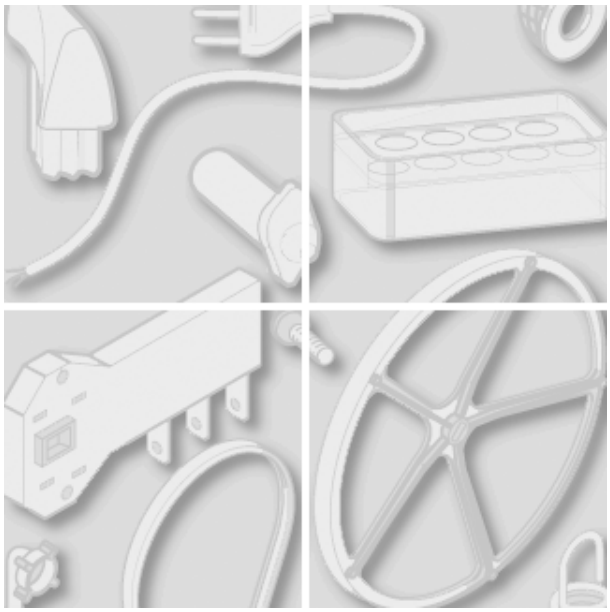

Model type:
LI685PLUS

Commercial code:
F041987

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

2210140 Exploded views

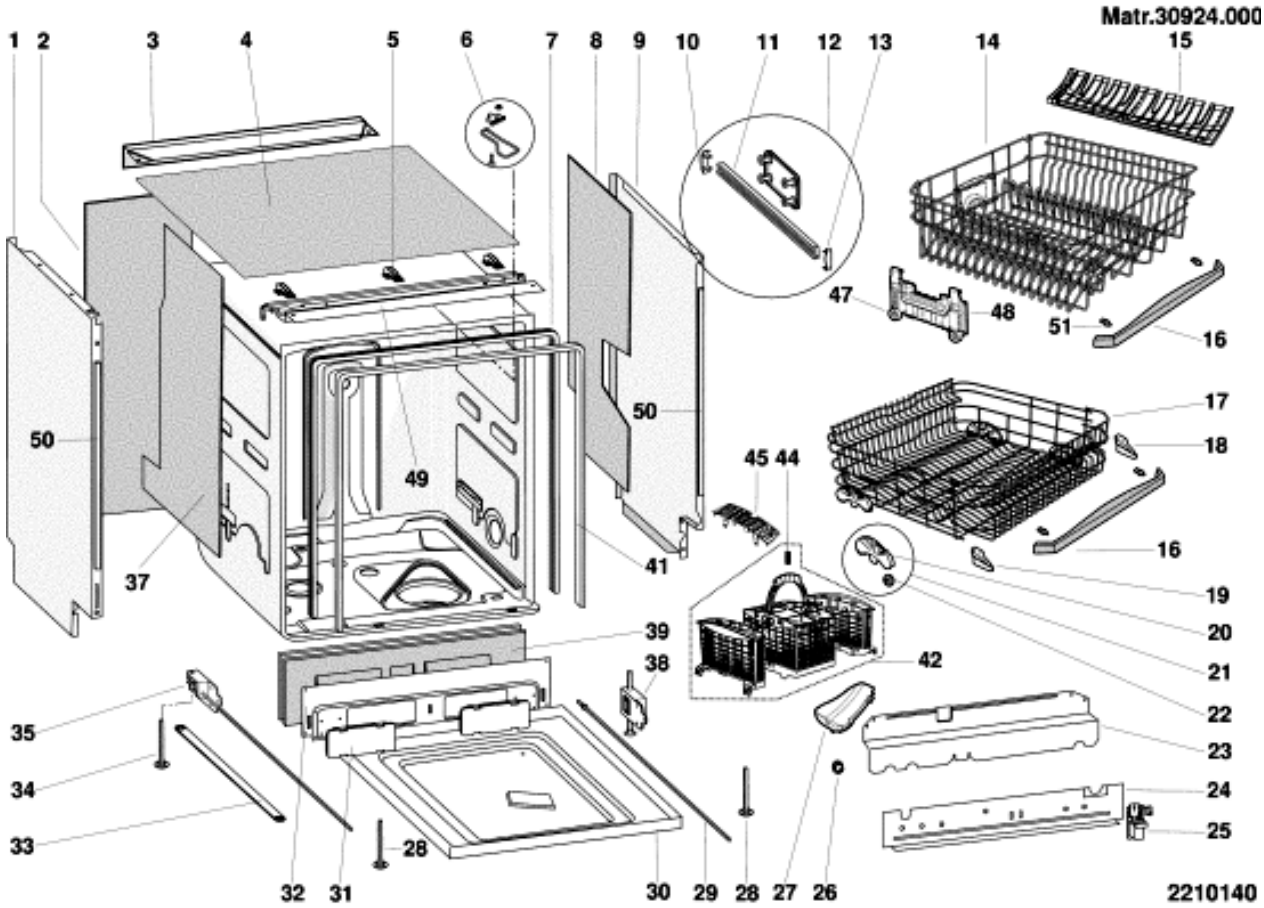


2210140 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00145339				instruction book it-en-fr-nl-es-pt-		
001	C00092827			1 x C00092835	left side panel lh zinc		
003	C00033591				rear support - top		
004	C00141310				upper panel polionda 60cm evo3		
004	C00141314				upper panel insulation evo3		
006	C00085024			1 x C00037135	catch plate (cabinet)		
				1 x C00297907			
				1 x C00297909			
				1 x C00297910			
007	C00141317				top and side door seal (1638mm)		
008	C00076388				soundproofing lateral dx		
009	C00092828			1 x C00092835	right side panel lh zinc		
011	C00094116			1 x C00094112	basket runner - upper evo3		
012	C00094112				runner assembly		
014	C00118140			1 x C00108980	upper basket assembly adjustable		
015	C00114999				upper basket flap white		
015	C00118946				flap baby cycle sky blue		
015	C00118947				flap baby cycle pink		
016	C00114048				handle basket 'blue satin' evo3		
017	C00114489			1 x C00275698	lower basket evo3		
020	C00086476				roller-lower basket body		
021	C00086474				roller-lower basket assembly		
022	C00086475				roller-lower basket		
023	C00091600				rear support - middle		
024	C00091598				lower rear support reflex		
025	C00143383				radio interference suppressor rohs		
026	C00054830				drain hose fastener		
027	C00088301				grease box		
028	C00092555				foot 155mm		
029	C00082476				rear foot adjustment assembly		
030	C00118842				tray on bottom of tub 60cm		
031	C00054833				top for front support		
032	C00119016				front support lower 60cm npe		
034	C00092822				adjustable back foot		
035	C00092820				left rear foot adjustment assembly		

2210140 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
037	C00076387				soundproofing lh		
038	C00092821				rear foot adjustment assembly		
041	C00054932				frame support for tub seal 60cm	n1045047	
042	C00114049				cutlery basket (blue satin)	n4514h00	
045	C00087980				cutlery basket top		
047	C00109840				upper basket roller evo3		
048	C00109417				set handle adjuster evo3		
049	C00079013				door spring adjuster		
050	C00086602				edge cover right		
050	C00086603				edge cover left		
099	C00036547				anti condensation strip - worktop		

2210220 Exploded views

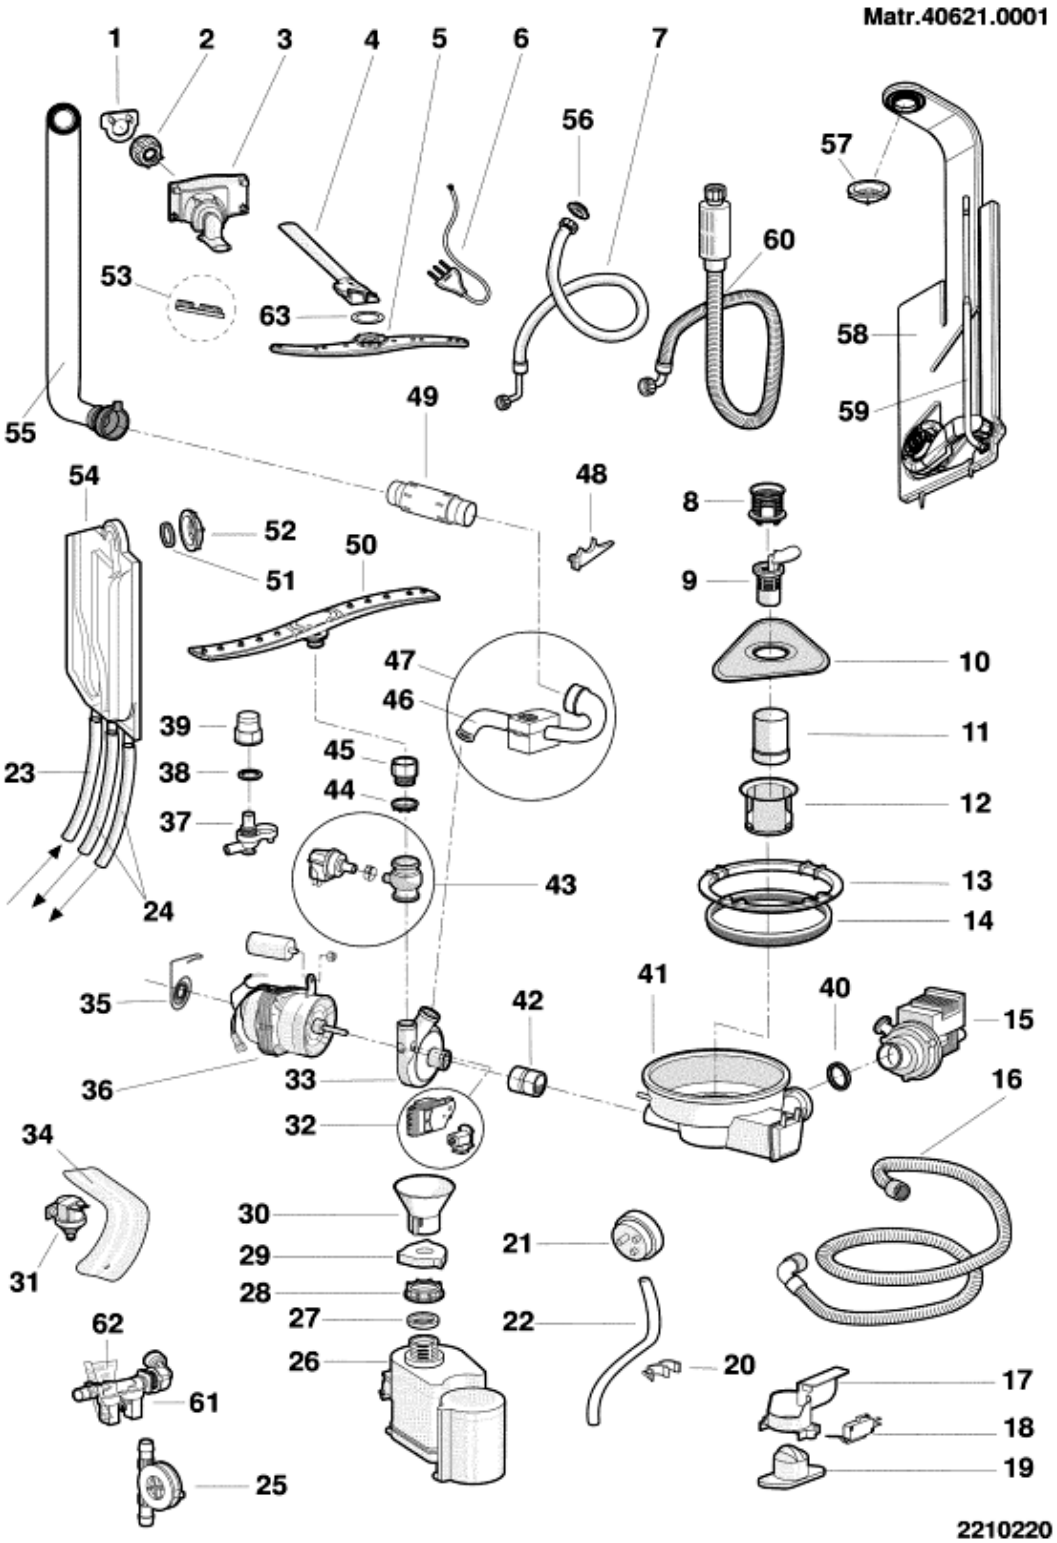


2210220 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00054925				upper was basket guide casing		
002	C00144315				top spray arm nut with seal (rohs)		
003	C00110526				water supply distribution assembly		
004	C00110527				upper wash arm feed pipe		
005	C00075746				upper wash arm curved set		
006	C00143371			1 x C00280937	supply cable schuko rohs		
009	C00054863			1 x C00142344	central filter		
010	C00145075				stainless steel outlet filter		
011	C00081164			1 x C00142344	filter cylindrical		
012	C00061929				outer fine rotating polyester filter		
013	C00054854				sump fixing ferrule		
014	C00054828				gasket - sump fixing ring		
015	C00143739				drain pump 230v 50hz evo3 rohs		
016	C00054869				drain hose		
017	C00081162				container - overflow unit		
018	C00143107				microswitch acquastop rohs		
019	C00058843				float - overflow unit		
020	C00095801				pressure hose clip evo3		
022	C00094154				pipe pressostat lvs evo3		
022	C00143740				pressure switch 90 71 evo3 rohs		
023	C00110612			1 x C00111855 1 x C00115348	tube water inlet electrovalve/air-		
024	C00054868				tube - softener/sump l.(480mm)		
026	C00094171				water softener adjustable evo3		
028	C00144235				retaining ring - softener rohs		
029	C00041088				salt cap		
030	C00005819				salt funnel		
032	C00141156			1 x C00115902	motor washing alternating		
033	C00141157			1 x C00088889	pump cover		
035	C00076628				tub spring		
036	C00115896				wash motor/pump assy w60 v220		
037	C00094159		60903...		overflow connector evo3		
037	C00196353	60904...			overflow connector evo3		
038	C00075695				connection gasket overflow		
039	C00143580		60903...		bodytop overflow evo3 rohs		

2210220 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
039	C00196352	60904...		1 x C00094159 1 x C00143580	bodytop overflow evo3 rohs		
040	C00054917				seal 'o'ring (23,81x2,62)		
041	C00094143			1 x C00141158	set sump evo3		
042	C00079016				pipe rubber sump-pump		
043	C00142435				high pressure sensor assembly		
044	C00144189				cap corner for supp.wash.blade		
045	C00144196				support - lower wash arm bush		
046	C00091568				hose circulating pump to heater		
047	C00143577				turbidity sensor markii-evo3 rohs		
048	C00078394				outlet pump support		
049	C00057684				washing heating element 2000w		
050	C00094182				lower wash arm		
051	C00084600				o ring seal 38 mm		
052	C00144335				ring-nut for air-flow body rohs		
054	C00141308			1 x C00141655	air break + turbine evo3		
055	C00094152				external pipe (hidden heating		
060	C00083761				inlet hose - includes antioverflow		
061	C00143737				load electrovalve rohs		
062	C00086801				protection electrovalve		
063	C00098769				upper wash arm seal		
099	C00040005			1 x C00033026	grease amblig ta 1 gr.		
099	C00073917				clamp for pump cover		
099	C00075678				clamp for electrovalve evo3		
099	C00077010				clamp washing heating element		
099	C00084479				hose clamp		

2210330E Exploded views

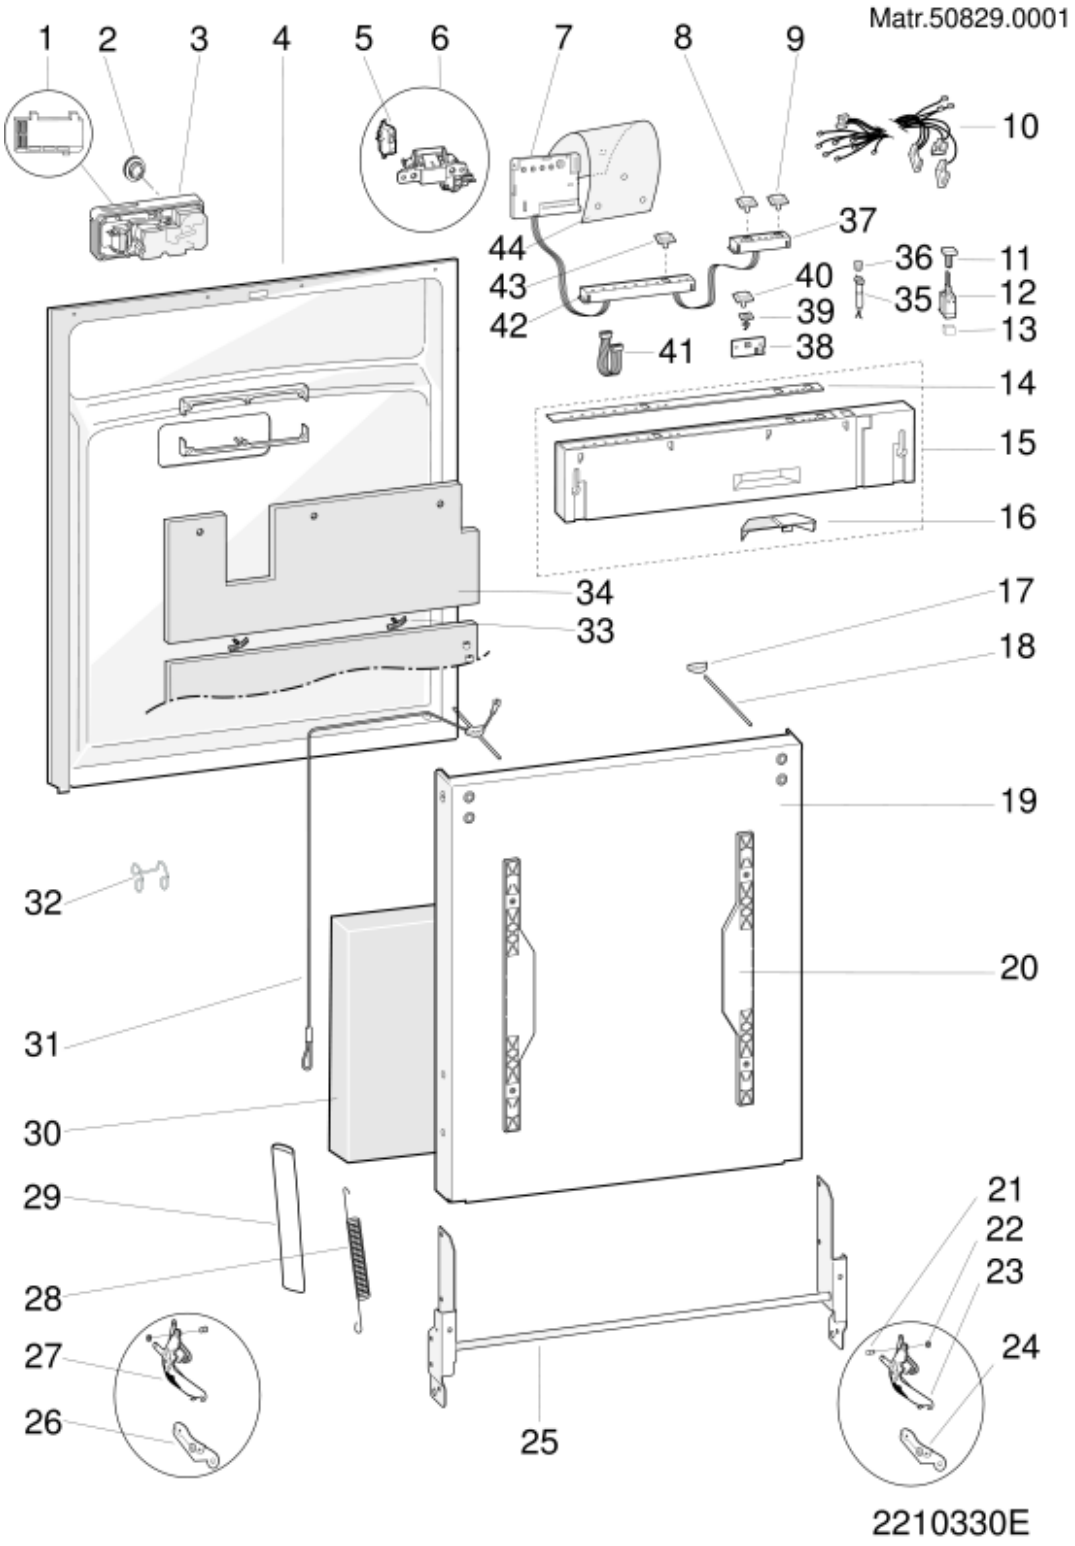

2210330E Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00098134				door detergent electrodispenser		
002	C00051755				rinse aid cap (pair) raised & flush		
003	C00143377				detergent / rinse aid dispenser		
004	C00091543			1 x C00290247	door seal lower 60cm		
004	C00109698			1 x C00290243	inner door panel built-in		
005	C00085358				microswitch		
006	C00094128			1 x C00195887	locking assembly evo3		
007	C00143222				timer bit100.1 'f6' rohs +		
008	C00087050				push-button ariston		
009	C00087049				push-button ariston delay		
010	C00142437		61127...		wiring harness assembly		37419870000
010	C00193331	61128...			wiring harness parallel bit100.1		37419870100
011	C00053468				push-button		
012	C00140609				on-off switch (unipolar) lvs		
014	C00141126				plat band control panel li680plus		
015	C00145338		61127...		dashboard+plat band li685plus		37419870000
015	C00195939	61128...			dashboard+plat band li685plus		37419870100
017	C00054933				spring adjustment piece		
018	C00143736				special screw for spring rohs		
019	C00095269				door panel zinc		
020	C00087431				door panel adhesive plastic strip		
021	C00048504				hinge pin		
022	C00058776				washer d = 6 mm		
023	C00085017				rh hinge		
024	C00085016				hinge cam+lh upper		
025	C00085014				hinge assembly		
026	C00085015				hinge cam+lh upper		
027	C00085018				lh hinge		
028	C00086467				door spring		
029	C00066426				tube hinge spring		
031	C00054936				spring adjustment wire		
032	C00140679				seal spring		
033	C00087235				spring front panel soundproofing		
034	C00087216				front panel soundproofing 60cm		
035	C00051880				red pilot lamp		

2210330E Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
036	C00100524				red pilot lamp lens		
037	C00143542				assembly support + card led dx		
038	C00143582		61127...		card extra dry rohs		37419870000
038	C00193333	61128...			card extra dry rohs		37419870100
039	C00085482		61127...		button lever		37419870000
039	C00143409	61128...			button lever		37419870100
040	C00086489				push-button extra		
041	C00087051				cable 8 ways		
042	C00143555				assembly support + card led sx		
043	C00085481				p - button cover		
099	C00057706				self-tapping screw t1/2t		
099	C00076108			1 x C00012687	screw canoe klip		
099	C00084911			1 x C00304782	screw 3.5x9.5		
099	C00085526				screw aflls 4x9 tcb61-tp20		
099	C00092251				fixing hole plug		
099	C00094120				fixing bolt inner door/dashboard		
099	C00094141				fixing screw inner/outer door		
099	C00095275			1 x C00256870	installation kit		
099	C00284955				spacer door b.i. full integrated		

Notices

n1045048: BIT 100 CARD INITIALIZATION

Free-standing dishwasher


1- Close the door and switch the dishwasher on.
2- Wait for the test cycle to start (2 LEDs light up or "ROD" appears on dishwashers with display).
3- Wait 10 seconds (dishwasher will start to fill water...)
N.B. If the cycle fails to start the card has probably already initialized, so proceed to point 5.
4- To reset the test cycle turn the programme button to reset or hold down the start/reset button for 5 seconds. (Wait for the buzzer to beep three times or if the dishwasher does not have a buzzer, wait for the programme LEDs to switch off.)
5- To check the aforementioned steps have completed successfully, select a programme and see if it starts; (reset it after this check).
6- The dishwasher is ready for the customer.

Built-in dishwashers

1- Close the door and switch the dishwasher on.
2- Wait for the test cycle to start
3- Wait 10 seconds (the dishwasher will start to fill...)
N.B. If the cycle fails to start the card has probably already initialized, so proceed to point 5.
4- To reset the cycle, open the door (2 LEDs lit up) and press the programme button for three bips of the buzzer (or until the programme LEDs go off for dishwashers with no buzzer).
5- To check the aforementioned steps have completed successfully, press the select programme button and check that the indicator light beside the corresponding programme comes on.
6- The dishwasher is ready for thecustomer.

Electric schemes and links

Cod. 16002052800

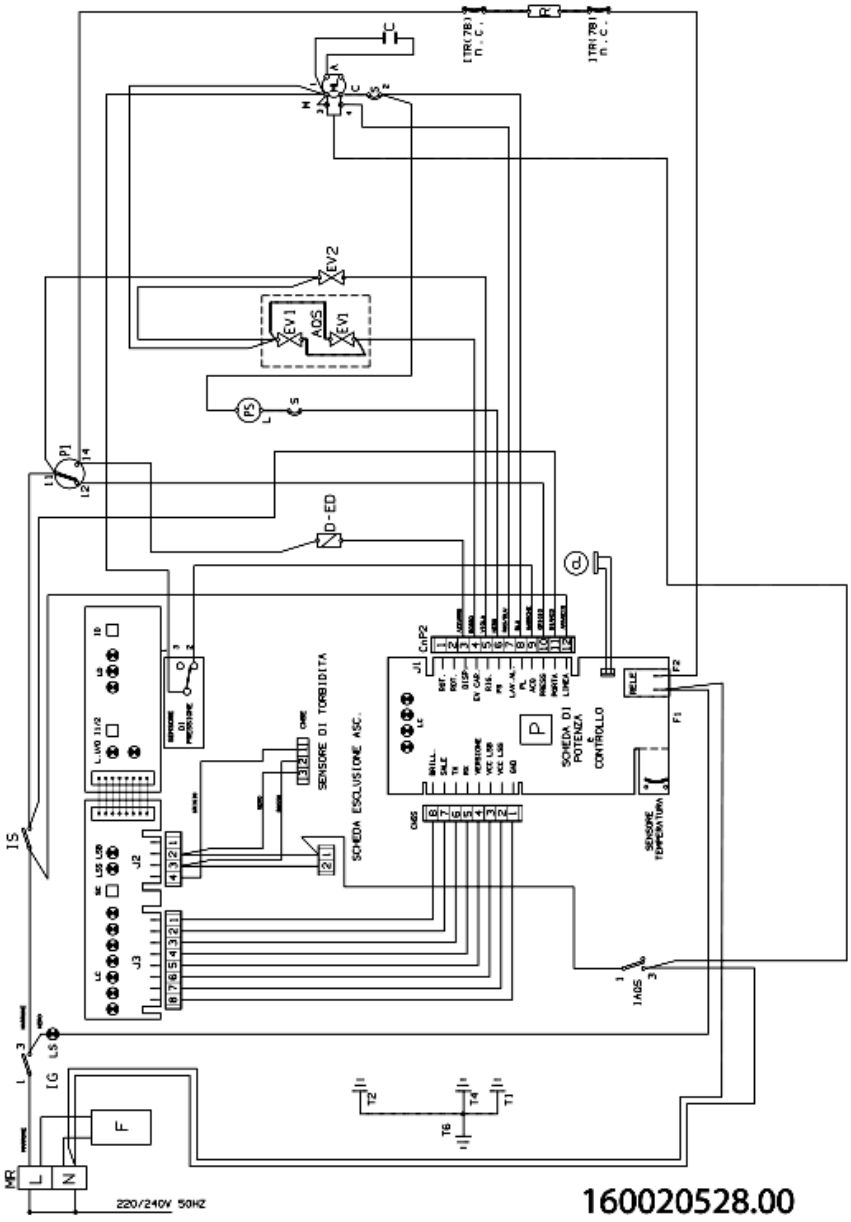

Legend

Legend: 16002052800

A..	Timer contact	LPA	Door open
AQS	Aquastop electrovalve	LPR	Prewash LED
B..	Timer contact	LRI	Rinse LED
C	Condensor	LS	Mains LED -Pilot lampe On/Off
C..	Timer contact	LSB	Polisher LED
CL	Slow cam	LSC	Cycle ranning lamp
CM	Wash pump motor connector	LSE	Acquastop LED
CN	Connector	LSS	Salt LED
CV	Fast cam	LV	Fan off lamp
D-ED	Dispenser - Electric dosing device	M	Terminal box
D..	Timer contact	MB	Polisher dip-switch
DB	Brightener dispenser	ME	Acquastop dip-switch
DD	Display - Detergent dispenser	ML	Wash motor
E1	Cold water electrovalve	MM	Handle dip-switch
E2	Regeneration electrovalve	MP	Door dip-switch
E3	Hot water electrovalve	MR	Delay-timer motor - Terminal board
ECO	Saving switch	MT	Timer motor
ED	Detergent/Brightener dispenser	MTR	Fast forward timer motor
EV1	Cold water electrovalve MM- Handle dip-switch	MV	Motor fan
EV1/2	Half-load electrovalve	P	Pressure switch
EV2	Regeneration electrovalve	P..	Pressure switch contact
EV3	Hot water electrovalve	P1	Stage 1 pressure
EVC	Hot water electrovalve	P2	Stage 2 pressure switch
EVF	Cold water electrovalve	PAP	High pressure switch
EVR	Regeneration water electrovalve	PO	Overflow pressure switch
F	Anti-interference filter ML- Wash motor	PS	Drain pump
FA	Radio interferences	PULS	Push-button panel
I1	On/Off switch - Plus cycle switch -IEC cycle	R	Heating element
I1/2	Switch half-load	R.D.	Delay rotary selector
I2	Fast switch -IEC cycle switch (standard) -	RA	Heating element drying
I2H	2-hour delay switch	ROT D	Delay rotary selector
I3	Saving switch- Switch for cycle with no pre-	ROT.	Rotary selector
I4	Switch for cycle fresh dirty	S	Motor overload cutout

I4H	4-hour delay switch	SC	Selector cycli
I5-ICR	Fast cycle switch	SS	Salt detector
I6	Soak cycle switch	ST	START
I6H	6-hour delay switch	T..	Delay-tymer contact
IAQS	Aquastop switch	T1	Power supply earth cable -Thermostat 45?C
ID	Switch display	T2	Lid earth -Thermostat 55?C
IE	Saving switch	T3	Timer earth -Thermostat 65?C
IEXD	Exstra dray switch	T36	36?C N.O. Thermostat
IG	Main switch	T4	Heating element earth
IMV	Off motor fan switch	T46	46?C N.O. Thermostat
IP	High temperature switch	T5	Drain pump earth
IS	Cut-off switch	T57	57?C N.O. Thermostat
ISB	Polisher led switch	T6	Wash motor earth
ISS	Salt LED switch	T8	External lid earth
ITR	Heating element switch	TE	Relay switch
L	Mains LED	THP	Thermoprotector
L1	Cycle 1 lamp	TM	Timer
L1/2	Lamp cjcle half-load	TS	Safety thermostat
L2	Cycle 2 lamp	TS 40	Thermostat 40 ?C
L3	Cycle 3 lamp	TS 50	Thermostat 50 ?C
L4	Cycle 4 lamp	TS 62	Thermostat 62 ?C
L5	Cycle 5 lamp	TS1	Min. temperature thermostat
L6	Cycle 6 lamp	TS2	Max. temperature thermostat
LA	Drying LED	TT	Terminal box support earth
LAQ	Aquastop on lamp	Tcp	nner-door earthing connection
LC	Cycle ranning lamp	Tfa	Radio interference
LD	Delay activated lamp	Tml	Pump wash motor earthing connection
LE	Saving cycle	Tpg	Large door earthing connection
LH2	2-hour delay lamp	Tpi	Inspection door earthing connection
LH4	4-hour delay lamp	Tpr	Pressure switch
LH6	6-hour delay lamp	Tps	Discharge pump earthing connection
LL	Wash LED	Tr	Heating element
LP	High temperature LED	Tte	Delay-timer earthing connection