Service Information

ADG 301

8511 231 01000
Last Modification: 20/01/17
Creation Date: 12/03/15

Spare Part List 2

Exploded View 5

Technical Data 8

Circuit Diagram 12

Testprogram 13

Error Codes 16

Installation Instruction 19

This document is only intended for qualified technicans who are aware of the respective safety regulations.
Subject to modifications

© Whirlpool EMEA

Spare Part List

Pos	12NC	Description
1040	**4820 000 22053**	DOOR ZINC 45CM
1210	**4820 000 22081**	INNER DOOR PANEL + GASKET 45CM
1211	**4820 000 22062**	FIXING BOLT INNER DOOR/DASHBOARD
1212	**4820 000 22064**	FIXING BOLT INNER/OUTER DOOR EOS
1300	**4820 000 22043**	LOCKING ASSEMBLY DEA602 NEW 45CM
1310	**4820 000 21982**	CATCH PLATE NEW
1620	**4820 000 21979**	SIDE PANEL LEFT
1621	**4820 000 21975**	PANEL LATERAL RIGHT
1830	**4820 000 21996**	DOOR SPRING ADJUSTER LUCE
1831	**4820 000 21981**	REAR SUPPORT - TOP 45CM NEW
1832	**4820 000 21980**	SUPPORT
1840	**4820 000 21967**	TRAY ON BOTTOM OF TUB 45CM
1850	**4820 000 21976**	BASE + FEET 45CM BI
1851	**4820 000 21968**	FOOT
1852	**4820 000 21969**	REAR FOOT ADJUSTMENT ASSEMBLY
1853	**4820 000 21970**	REAR FOOT ADJUSTMENT ROD
1870	**4820 000 21985**	FRAME SUPPORT FOR TUB SEAL
1881	**4820 000 22054**	HINGE ITEM RIGHT
1882	**4820 000 22056**	HINGE ITEM LEFT
1883	**4820 000 22055**	HINGE WIRE 45CM EOS
1884	**4820 000 22063**	HINGE SCREW M5X14 TSP 6L-T20 90G
1910	**4820 000 21984**	DOOR SEAL - TOP AND SIDES 45CM EOS
2030	**4820 000 21983**	SOUNDPROOFING SX+DX+TOP 45CM BI
2330	**4820 000 21965**	LOWER BASKET WHEEL
2331	**4820 000 21966**	BASKET WHEEL AXIS
2333	**4820 000 22205**	BASKET HIGHT LIFT UP LEFT BASIC BLUE
2334	**4820 000 22206**	BASKET HIGHT LIFT UP RH BASIC BLUE
2335	**4820 000 21960**	RACK HANDLE (RAL 7040)
2410	**4820 000 22204**	UPPER BASKET HIGH MED/HIGH 45 SILV GREY
2415	**4820 000 21964**	LOWER BASKET MED/HIGH 45 SILVER GRAY
2419	**4820 000 21988**	CUTLERY BASKET COVER GREY 45CM
2430	**4820 000 21963**	CUTLERY BASKET GREY 45CM EOS
2440	**4820 000 21987**	FLAP GREY PLP2 45
2610	**4820 000 21974**	BASKET RUNNER - UPPER EOS
2611	**4820 000 21986**	RAIL BACK STOP
2612	**4820 000 21973**	RAIL FRONT STOP SLIM PLP2
2613	**4820 000 21971**	RUNNER SUPPORT UPPER BASKET
2614	**4820 000 21972**	FIXING PLATE FOR RUNNER SUPPORT
3010	**4820 000 22251**	DASHBOARD ADG351
3500	**4820 000 22079**	FI DIGIT3 5B CORE SYNC WHR BAUK
4050	**4820 000 22018**	WASH MOTOR/PUMP 220-240V(45CM) + SEAL
4051	**4820 000 22032**	PIPE WASH MOTOR-SPRAY ARM(Y) HANNING
4210	**4820 000 21977**	RADIO INTERFERENCE SUPPRESSOR
4211	**4820 000 21978**	COVER FILTER DEA700 HANNING
4300	**4820 000 22009**	DRAIN PUMP 45-60 CM EOS
4500	**4820 000 22016**	HEATER AND SEAL (31.8ohm)+PIPE+ORING
4800	**4880 005 05204**	WIRING MOD.DEA700 RES-ALIMENT. 45 CM WHR
4800	**4880 005 04513**	CABLAGGIO DEA603 MOTORE LAVAGGIO 45cm
4800	**4880 005 04384**	WIRING DEA700 DRAIN PUMP
4800	**4820 000 93033**	WIRING MOD.DEA700 RES-ALIMENT. 45 CM WHR


© Whirlpool EMEA

Pos	12NC	Description
4800	**4820 000 22050**	WIRING DEA603 PRESSUR.SWITCH/BAC/TURBINA
4800	**4820 000 22049**	WIRING MODULO DISPENSER /MICRO PORTA
4800	**4820 000 22048**	WIRING DEA603 EV1/EV2
4800	**4820 000 22047**	WIRING MODULO SERIALE PLP2 SX
4800	**4820 000 22046**	WIRING SALT CARD-SOFTENER
4800	**4820 000 22045**	WIRING DEA602-DRAIN PUMP-MOTOR.(SIN)
4800	**4820 000 22044**	WIRING CONSOLE CARD-REED
4900	**4820 000 22003**	SUPPLY CABLE SCHUKO WITHOUT FILTER
5211	**4820 000 22057**	TIMER DEA603 PLP2 SINC. STRIP 45CM
5212	**4820 000 22082**	CARD ADL101 8KB SW 30898820045
5219	**4820 000 21959**	C00383278 Adapter Smart Reader
5830	**4820 000 22014**	PRESSURE SWITCH 80/60
5831	**4820 000 22015**	PIPE PRESSOSTAT
6310	**4820 000 22013**	FLOAT - OVERFLOW UNIT 45CM
6330	**4820 000 22042**	MICROSWITCH
6800	**4820 000 22041**	ELECTRODISP.(NO LAMP RINSEAID-REED)
7000	**4820 000 22209**	INLET HOSE LONG WATERSTOP 1640MM
7100	**4820 000 22019**	WATER SOFTENER
7101	**4820 000 22025**	SEAL - SOFTENER/WASH CHAMBER
7102	**4820 000 22026**	RETAINING RING - SOFTENER
7103	**4820 000 22027**	SALT CAP
7220	**4820 000 22030**	LOWER SPRAY ARM 45CM
7221	**4820 000 22000**	SET UPPER WASH ARM CURVED 45CM
7222	**4820 000 21999**	UPPER WASH ARM FEED PIPE
7223	**4820 000 22031**	RING NUT OF UPPER WASH ARM
7260	**4820 000 21997**	UPPER WASH ARM FEED PIPE
7261	**4820 000 21998**	RACK GUIDE CASING
7500	**4820 000 22022**	AIR BREAK + TURBINE
7502	**4820 000 22023**	RING-NUT FOR AIR-FLOW BODY
7510	**4820 000 22011**	SET SUMP 45CM
7511	**4820 000 22008**	SUMP FIXING FERRULE
7550	**4820 000 22017**	PIPE SUMP-WASH MOTOR
7630	**4820 000 22005**	OUTER FINE ROTATING FILTER
7631	**4820 000 22004**	CENTRAL FILTER
7632	**4820 000 22006**	OUTLET FILTER STAINLESS INOX 45CM
7633	**4820 000 22007**	WATER CHANNELER
7634	**4820 000 22029**	SUPPORT - LOWER WASH ARM BUSH 45CM
7810	**4820 000 22012**	DRAIN HOSE 45-60CM 1750MM
7811	**4820 000 22002**	HOSE SUPPORT 45CM
7813	**4820 000 22010**	FLAP FOR SET SUMP
7832	**4820 000 22021**	TUBE - SOFTENER/SUMP 100MM EOS
9000	**4820 000 22220**	HOSE CLAMP D=18.5
9001	**4820 000 22034**	HOSE CLAMP D=14,9
9002	**4820 000 22035**	CABLE CLAMP HOSE
9003	**4820 000 22036**	HOSE CLAMP D=45,5 PIPE SUMP/MOTOR PUMP
9004	**4820 000 22037**	HOSE CLAMP D=38,1 PIPE SYNCR.MOT/WASH AR
9005	**4820 000 22039**	TIE L=276
9006	**4820 000 22040**	HOSE CLAMP D=44
9040	**4820 000 21989**	SERIAL PORT COVER
9041	**4820 000 21990**	COVER FIX (SX) LH


Pos	12NC	Description
9042	**4820 000 21991**	COVER FIX (DX) RH
9043	**4820 000 21992**	SPACER DOOR B.I. FULL INTEGRATED
9044	**4820 000 21993**	BASKET BUFFER
9045	**4820 000 21994**	FIXING HOLE PLUG
9100	**4820 000 22061**	SELF-TAPPING SCREW T1/2T
9500	**4820 000 22065**	TANK BORDER TOP STRIP FS. 45
9935	**4820 000 22028**	SALT FUNNEL
9940	**4820 000 22038**	INSTALLATION KIT 45/60CM
9941	**4820 000 22059**	SHOULDERED BUSH - TOP WOOD DOOR FIXING
9943	**4820 000 21995**	ANTI CONDENSATION STRIP - WORKTOP 600/75

© Whirlpool EMEA


Exploded View

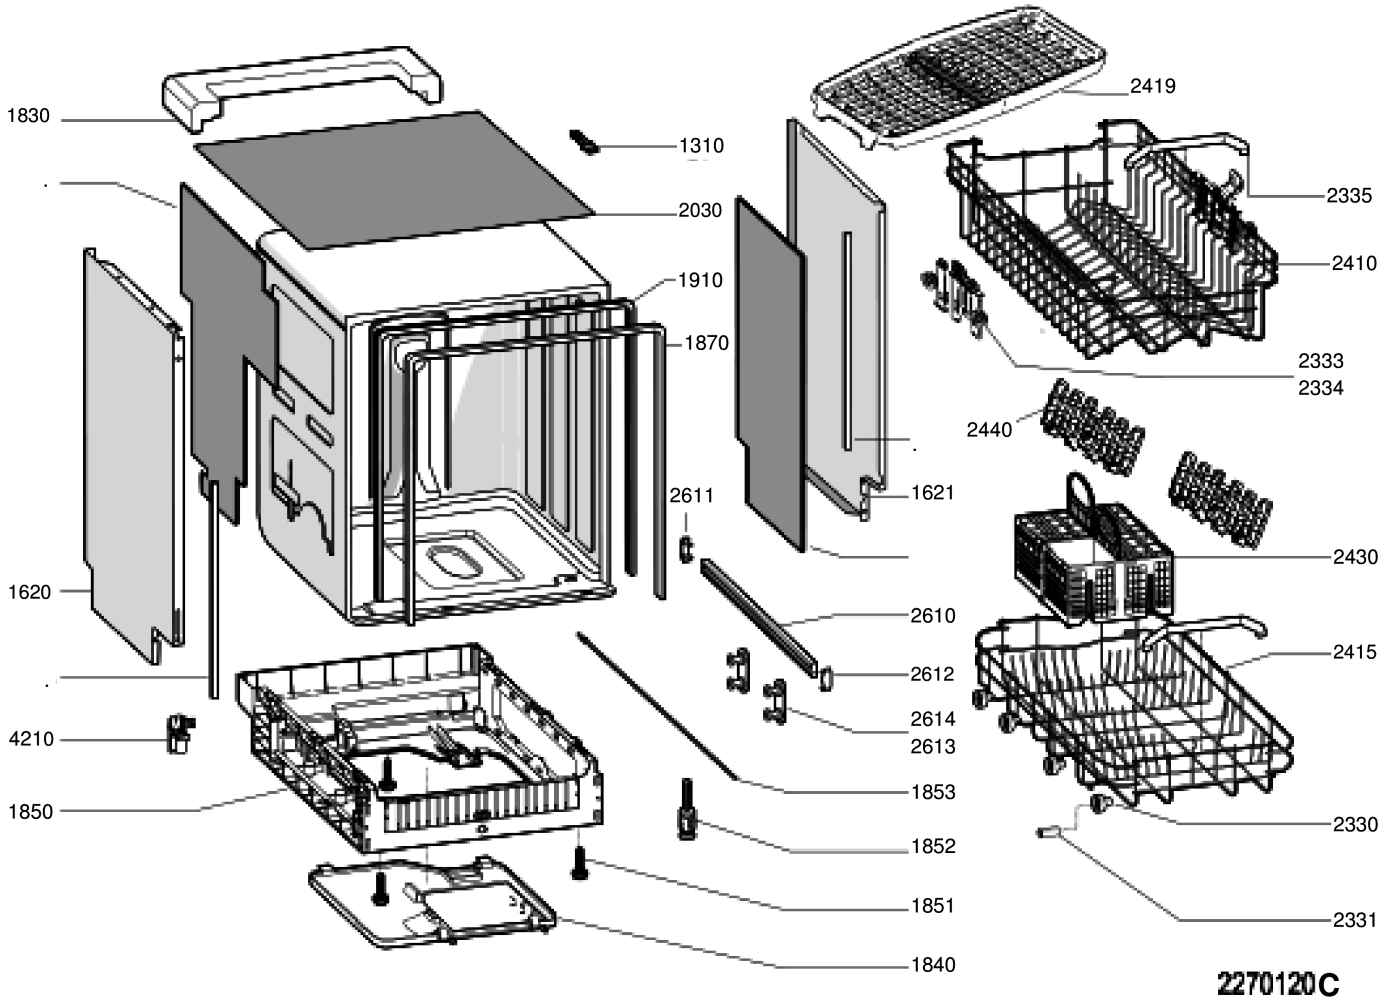

Exploded View

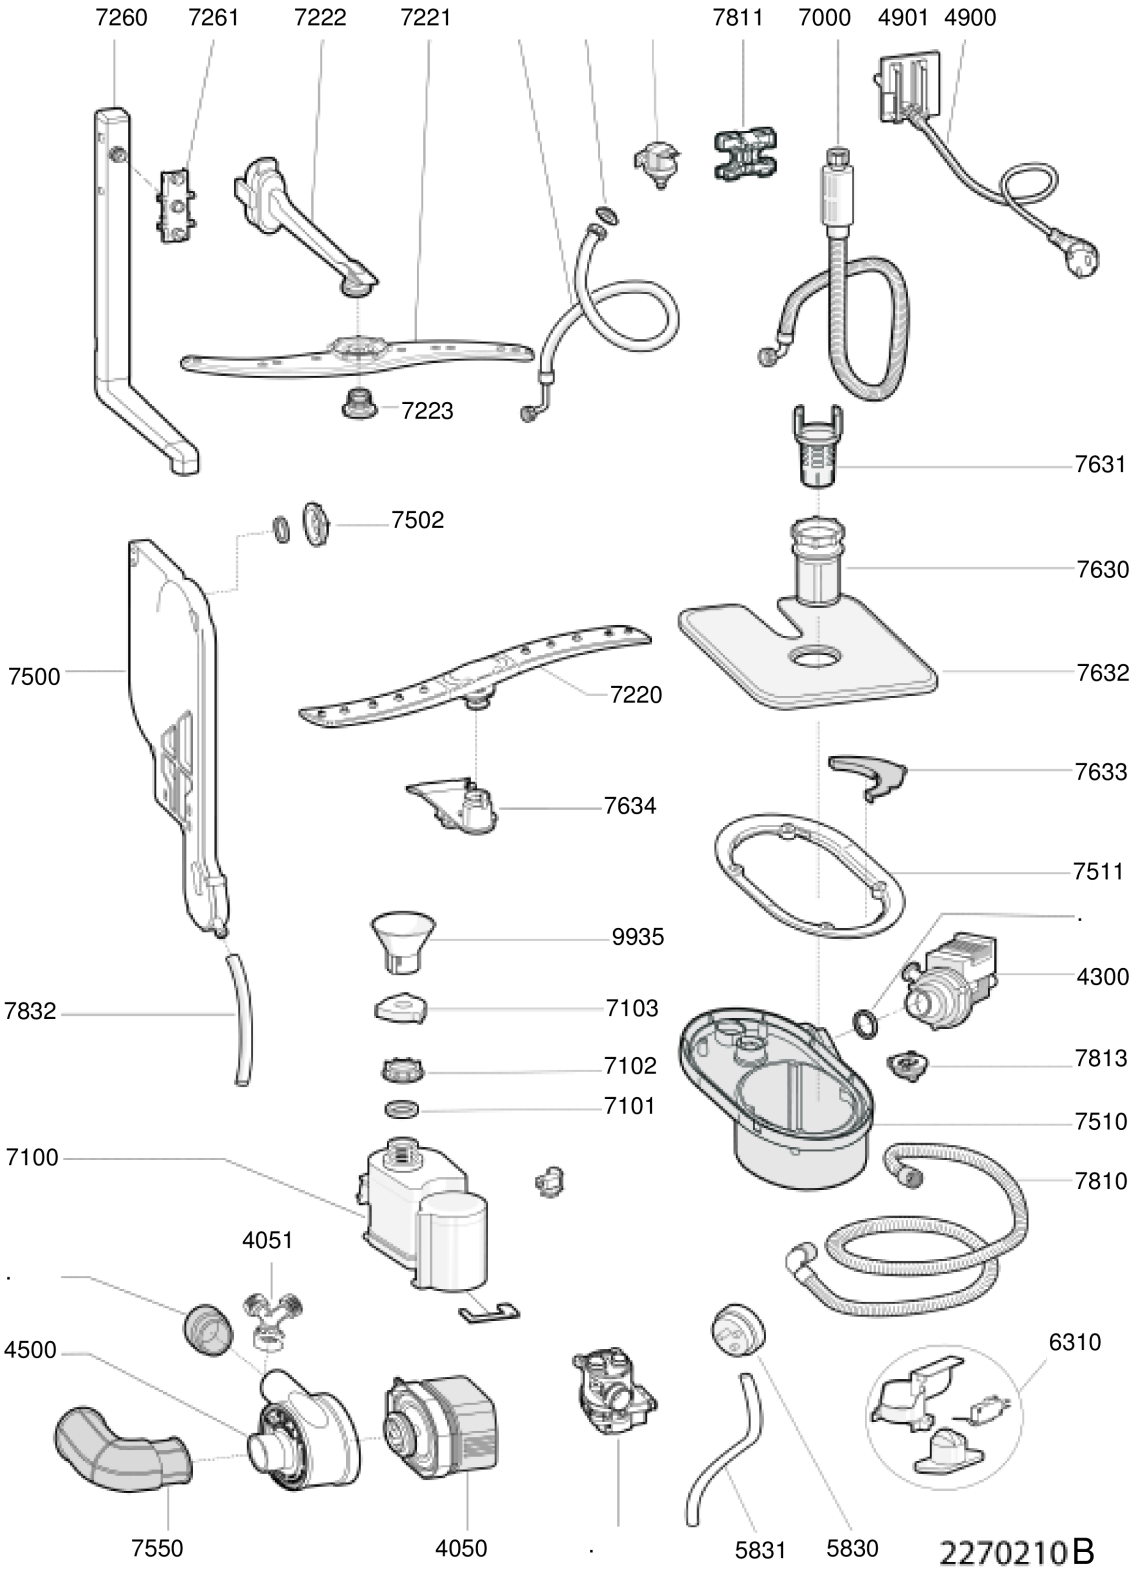

Exploded View

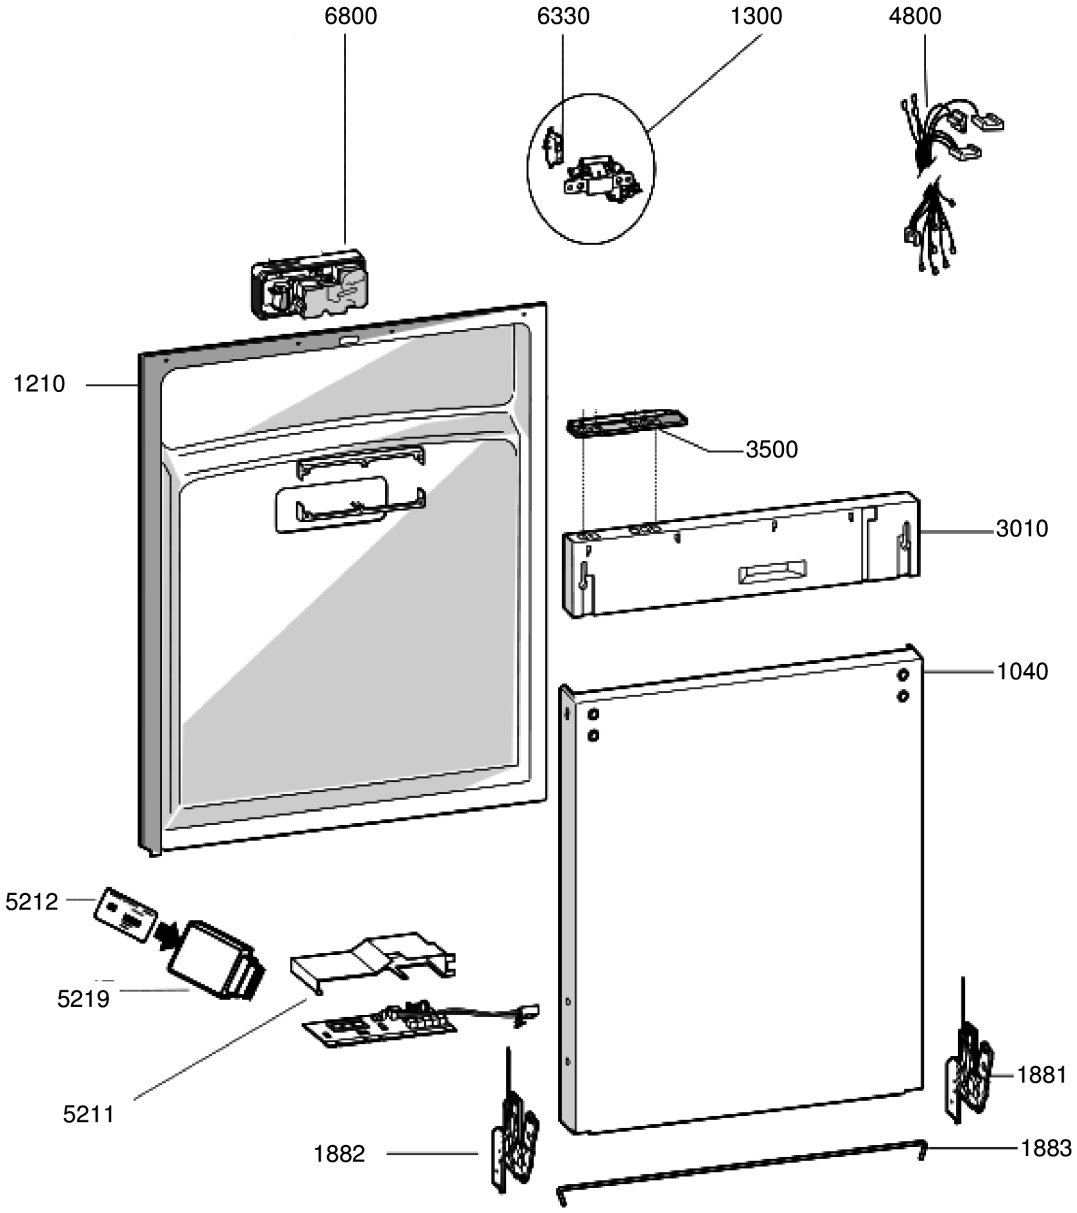

2270310C

Technical Data

Dimensions + Weight

Product dimensions


Height	82.0 - 87.0 cm
Width	45.0 cm
Depth	57.0 cm
Weight	28.6 kg

Control board

DEA 603

SQG_DW_312_EN

DEA603 Wiring Diagram (Synchronous Motor)

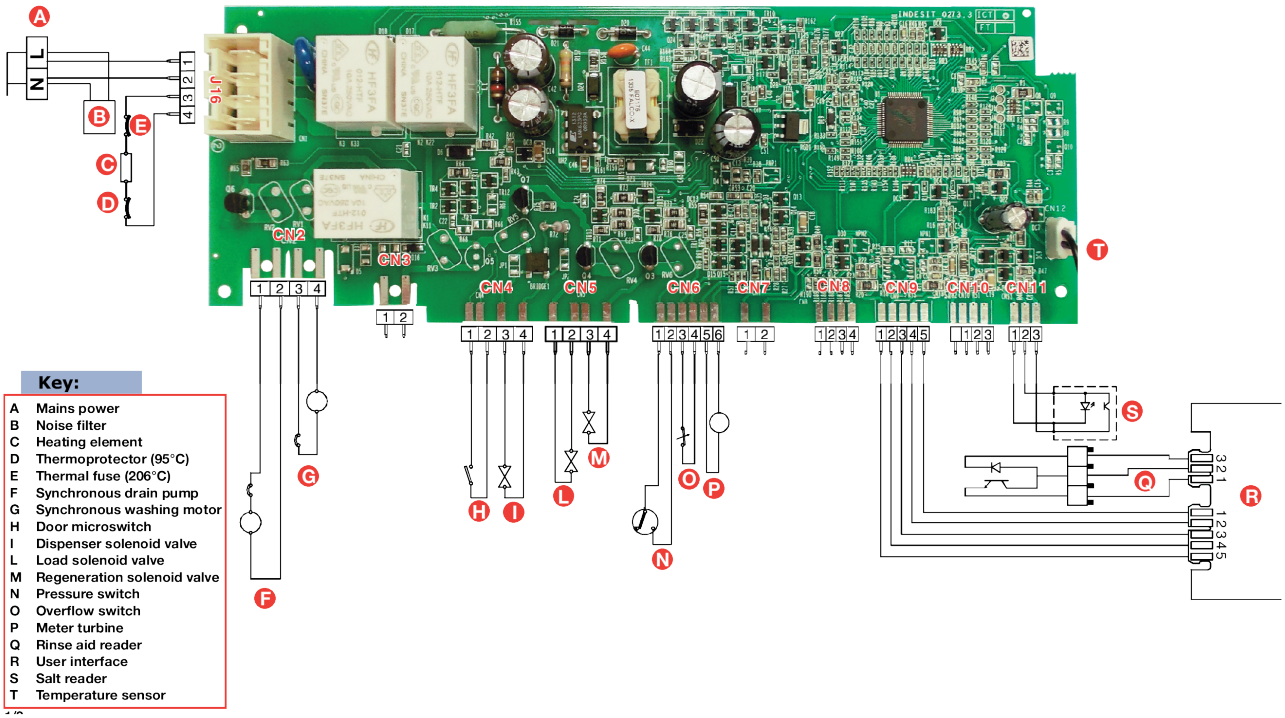

Key:

A	Mains power
B	Noise filter
C	Heating element
D	Thermoprotector (95°C)
E	Thermal fuse (206°C)
F	Synchronous drain pump
G	Synchronous washing motor
H	Door microswitch
I	Dispenser solenoid valve
L	Load solenoid valve
M	Regeneration solenoid valve
N	Pressure switch
O	Overflow switch
P	Meter turbine
Q	Rinse aid reader
R	User interface
S	Salt reader
T	Temperature sensor

Succession of programs

Reference program		
Eco	50°C	180 min
Prewash, cold		
Delicate dishes		
Express		25 min
Eco		180 min

Spray pump motor

	Syncronous
Type	CP035_005
Voltage	220 V / 50 Hz
Current	0.5 A
Power Consumption	60 W
Radio interference filter	0.1µF (X2) + 2x 27nF (Y2)

Electrical base data

Voltage	220 - 240 V / 50 Hz
Total power	1.9 kW
Fuse	13 A

Heating

Type	
Type	PC47
Voltage	230 - 240 V / 50Hz
Power Consumption	1.8 / 1.96 kW
Heating resistances (T=20°C)	26.1 Ω
Heating speed	~2.0 °C/min
Safety thermostat self reset (Temperature of water)	100 °C
Fuse	206 °C
Temperature on surface	~115 °C

NTC

0 °C	1794.3	kΩ
5 °C	1351.2	kΩ
10 °C	1025.8	kΩ
15 °C	785.0	kΩ
20 °C	605.2	kΩ
25 °C	470.0	kΩ
30 °C	367.4	kΩ
35 °C	289.1	kΩ
40 °C	229.0	kΩ
45 °C	182.4	kΩ
50 °C	146.2	kΩ
55 °C	117.8	kΩ
60 °C	95.4	kΩ
65 °C	77.7	kΩ
70 °C	63.5	kΩ
75 °C	52.2	kΩ
80 °C	43.1	kΩ
85 °C	35.8	kΩ
90 °C	29.8	kΩ
95 °C	24.9	kΩ
100 °C	20.9	kΩ

Drain pump motor

Voltage ..... 220 - 240 V / 50 Hz
Power Consumption ..... 30 W
Resistance ..... 146 Ω

Inlet valve aquastop

Voltage ..... 220 - 240 V
Frequency ..... 50 / 60 Hz
Resistance
Inlet pressure ..... 0,3 - 10 bar
Power Consumption ..... 13 W

Pressostat

Pressure range ..... 85 - 65 mbar

Regeneration valve


Voltage ..... 220 / 240 V

Frequency ..... 50 / 60 Hz
Power ..... 7 W
Resistance ..... 3,75 kΩ

Coil of dispenser

Voltage ..... 230 / 240 V
Frequency ..... 50 Hz
Resistance ..... 5,160 kΩ

Circuit Diagram

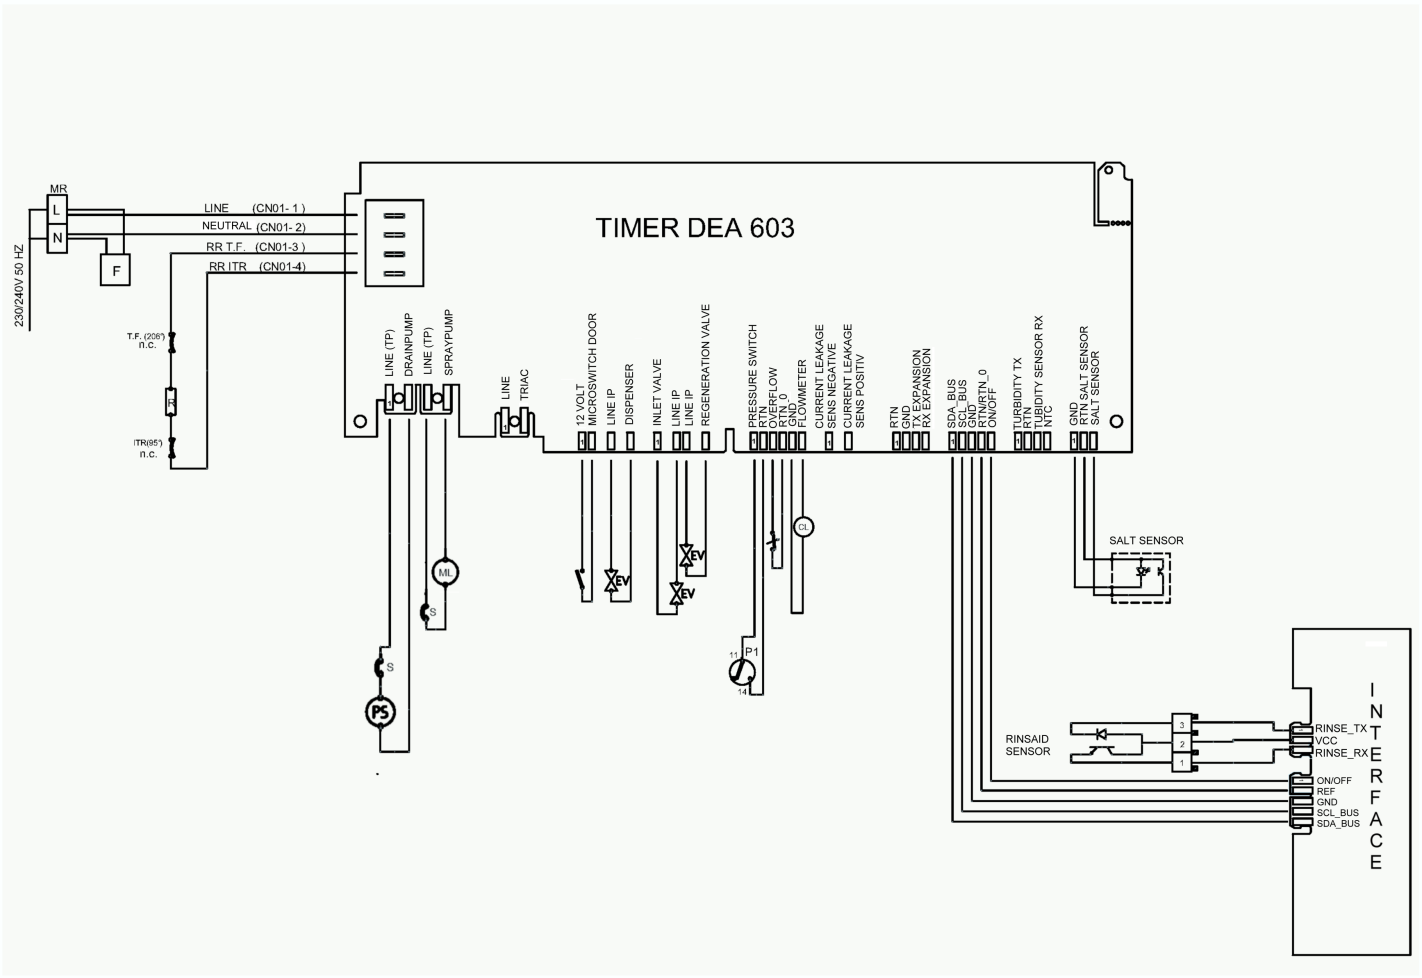

Testprogram

Service Quick Guide

SQG_DW_23_EN

AUTOTEST EOS DEA 700 - PLP 2 - Synchronous and BLAC* Motor

Models Covered:

TAll **EOS** dishwashers with electronics **DEA 700 - PLP 2 - Synchronous and BLAC* Motor**

Steps to complete before starting the autotest cycle:

1. close dispenser door
2. place a thermometer on drum (not essential for the test)
3. mount clear door - in this case, use a closure device to simulate electrical closure of door - (not essential for the test)
4. complete the autotest entry sequence

Entry sequence:

BUILT-IN INSTALLATION

- Switch on with on/off button
- Press P
- Press P
- Switch off with on/off button
- Press P
- Press P
- Switch on with on/off button
- Close the door to start autotest




LCD-DISPLAY:

- Switch on with on/off button
- Switch off with on/off button
- Press button (P) top arrow
- Press button (P) top arrow
- Switch on with on/off button
- Press Start/Pause to start autotest



SELECTOR KNOB:

- Switch on with on/off button
- Switch off with on/off button
  (start position different for 3 and 5)
- Turn selector knob to program 5 position (prog. 3)
- Turn selector knob to program 1 position
- Turn selector knob to program 5 position (prog. 3)
- Switch on with on/off button
- Press Start/Pause to start autotest



© Whirlpool EMEA

AUTOTEST EOS DEA 700 - PLP 2 - Synchronous and BLAC* Motor

Last Fault Management:

On starting the autotest sequence, after completing the autotest entry sequence:
The dishwasher **shows the code of the last fault detected during a wash cycle**.
This is displayed for 15/20 seconds, after which it indicates the start of the loads sequence.

Reset alarm:

During the autotest procedure, to reset the last alarm that occurred during a wash cycle, you must run an autotest cycle right through until there are no more errors.

Autotest Sequence:

The autotest sequence in machines DEA 700 – PLP2 with "L"-shaped plumbing layout (BLAC Motor with two sprayer arms) is as follows:

1. VDisplay of last fault (if any) for 15/20 seconds
2. The machine is drained to empty status + 15 seconds (D-Sensor); meantime the alternating wash motor is repositioned to operate with the bottom delivery outlet open
3. Empty status is verified by the wash pump (W-sensor), running with the bottom delivery outlet open at 1400 rpm for 40 seconds
4. The tub takes in 2 litres of water, with activation of the W-sensor to confirm full status
5. Another 2 litres are added in dynamic mode
6. The wash pump is activated for 30 seconds with the top delivery outlet open
7. The pump is switched to the bottom outlet for 30 seconds
8. The wash heating element is activated, with the wash pump running at 2500 rpm, and the temperature raised to 30 °C
9. The machine is drained to empty status (D_sensor) + 15 seconds
10. The dispenser is opened by activating the solenoid valve for 2 seconds
11. 10-second pause
12. Service action: once the dispenser has opened, open the door, remove the salt cover and insert the door needle
13. The regenerate solenoid is activated for 5 seconds
14. The fill solenoid valve and regenerate solenoid valve are activated for 10 seconds. Check for outflow of water from the salt container
15. The Turbo Dry Fan is activated (if installed)
16. Drain to empty status (D-Sensor) + 15 seconds

The autotest sequence in DEA 700 – PLP2 machines with "C"-shaped plumbing layout (BLAC motor with two spray arms and showerhead) is as follows:

1. Display of LAST FAULT (if any) for 15/20 seconds
2. The machine is drained to empty status + 15 seconds (D_sensor); at the same time, the alternating wash motor is repositioned to operate with the bottom delivery outlet open
3. Empty status is verified by the wash pump (W-sensor), running at 1400 rpm for 40 seconds
4. The tub takes in 2 litres of water, with activation of the W-sensor to confirm full status
5. Another 2 litres are added in dynamic mode

© Whirlpool EMEA

AUTOTEST EOS DEA 700 - PLP 2 - Synchronous and BLAC* Motor

6. The wash pump is activated for 30 seconds on the top spray arm and showerhead delivery outlets
7. Flow is switched to the bottom spray arm and showerhead delivery outlets for 30 seconds
8. Flow is switched to the bottom and top spray arm delivery outlets for 30 seconds
9. The wash heating element is activated, with the wash pump running at 2500 rpm, and the temperature raised to 30 °C
10. The machine is drained to empty status (D_sensor) + 15 seconds
11. The dispenser is opened by activating the solenoid valve for 2 seconds
12. 10-second pause
13. Service action: once the dispenser has opened, open the door, remove the salt cover and insert the door needle
14. The regenerate solenoid is activated for 5 seconds
15. The fill solenoid valve and regenerate solenoid valve are activated for 10 seconds. Check for outflow of water from the salt container
16. The Turbo Dry Fan is activated (if installed)
17. The machine is drained to empty status (D_sensor) + 15 seconds

The Autotest sequence in DEA 700 – PLP2 Synchronous motor machines is as follows:

1. Display of last fault (if any) for 15/20 seconds
2. Activation of drain pump until pressure switch empty + 15 seconds
3. Activation of filling solenoid valve until pressure switch full status reached
4. Activation of wash motor until pressure switch empty status reached
5. The wash motor is switched off
6. Water filling until reaching a total of 4 liters
7. Activation of wash pump
8. Activation of drain pump + 10 seconds
9. Activation of dispense solenoid (for 15 seconds)
10. INTERVENTION BY THE TECHNICIAN (not essential for completing the autotest): immediately after hearing the sound of the dispenser opening, the technician must: open the door to check opening of the dispenser cover, remove the salt cap, insert a service needle in the door closing mechanism and check the proper functioning of the regeneration circuit, checking water coming out the salt container
11. Activation of regeneration solenoid valve for 15 seconds
12. The dispenser is opened by activating the solenoid valve for 2 seconds
13. 10-second pause
14. Service action: once the dispenser has opened, open the door, remove the salt cover and insert the door needle

© Whirlpool EMEA

Error Codes


Service Quick Guide


SQG_DW_13/7_EN


"EOS" Alarm Table (DEA 601/DEA 602/DEA 603/DEA 700)

LED interface Fault display:

IMPORTANT: Led interfaces only have been included, to show clearly how Faults are indicated. DIGIT and LCD (Display) interfaces are not included, given the ease with which Faults are identified (in writing). When Faults are being displayed, the Leds involved in their identification will remain alight and off, whilst the ON/OFF Led and others on the machine may blink rapidly.

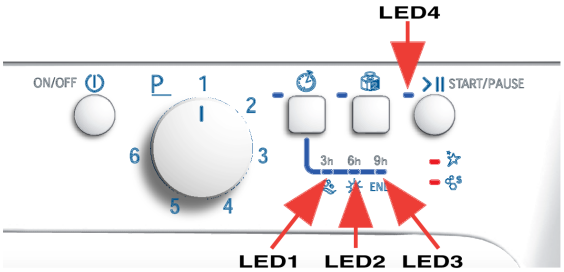

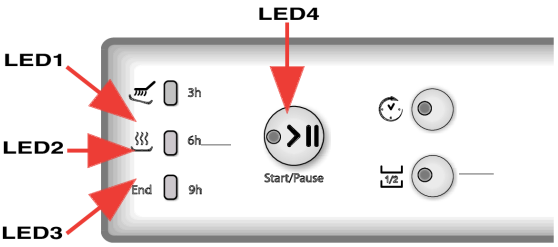

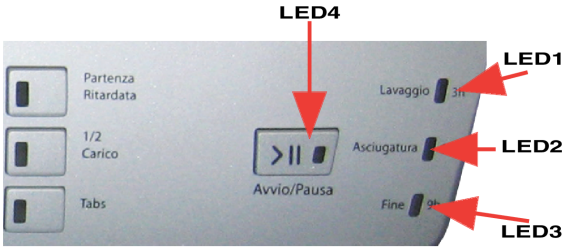







1/3

"EOS" Alarm Table (DEA 601/DEA 602/DEA 603/DEA 700)

Fault	Name	LED combination			
		LED1	LED2	LED3	LED4
1	ANTI-FLOODING OVERFLOW	On	Off	Off	Off
2	WATER FILL SOLENOID VALVE FAILURE	Off	On	Off	Off
3	DRAIN TIMEOUT	On	On	Off	Off
4	THERMISTOR (NTC) not compliant	Off	Off	On	Off
5	PRESSURE SWITCH non compliant	On	Off	On	Off
6	WATER FILL TIMEOUT	Off	On	On	Off
7	WATER TURBINE damaged	On	On	On	Off
8	TEMPERATURE TIMEOUT (1 hour)	Off	Off	Off	On
9	Software recognition error. Main board not programmed	On	Off	Off	On
10	HEATING ELEMENT CIRCUIT not compliant	Off	On	Off	On
11	Wash Pump Failure	On	On	Off	On
12	COMMUNICATION error between main board and display	Off	Off	On	On
13	Main board NOT WORKING	On	Off	On	On
15	VIRTUAL SENSOR	On	On	On	On

ALARM	4 LED	6 LED	NAME	CAUSE	CHECKS
1	1 ■□□□	1 ■□□□□□	ANTI-FLOODING OVERFLOW	Bowl float microswitch electrical circuit OPEN! (must be closed)	- Water leak; - Float switch or wiring defective; - New main board: Eeprom was programmed off-site; to reset the alarm, switch off and switch on again using the ON/OFF button.
2	2 □■□□	2 □■□□□□	WATER FILL SOLENOID VALVE FAILURE	Fill valve admits water even when deactivated.	- Fill solenoid valve failure; - Main board fill solenoid valve triac short-circuiting; - Make certain drain hose is not on the floor.
3	1-2 ■■□□	1-2 ■■□□□□	DRAIN TIMEOUT	Maximum drain time elapsed.	- Drain pump blocked by foreign matter; - Drain pump faulty/disconnected; - Drain hose blocked; - Drain trap blocked; - Air bubble in hose; - Check drain pump wiring and connectors at component end and main board end; - Check integrity of drain pump impeller; - Replace drain pump.
4	3 □□■□	3 □□■□□□	THERMISTOR (NTC) not compliant	THERMISTOR (NTC) circuit not compliant (break in continuity or short-circuit)	- NTC sensor cables disconnected or damaged; - Cables or connectors disconnected or short-circuiting; - NTC sensor wet, short-circuit; - NTC sensor damaged, open circuit.


© Whirlpool EMEA

"EOS" Alarm Table (DEA 601/DEA 602/DEA 603/DEA 700)

ALARM	4 LED	6 LED	NAME	CAUSE	CHECKS
5	1-3	1-3	PRESSURE SWITCH non compliant	Pressure switch has not indicated completion of fill, even though turbine has filled appliance with water correctly.	- Pressure switch faulty; - Pressure switch tube damaged; - Water in air trap; - Air trap damaged.
6	2-3	2-3	WATER FILL TIMEOUT	Maximum interval of time for completion of fill has been exceeded.	- Tap closed or partially closed; - Filler hose pinched; - Filler hose filter clogged/bent; - Water pressure low or flow meter doesn't work; - Water solenoid valve faulty or disconnected.
7	1-2-3	1-2-3	WATER TURBINE damaged	Turbine has given no signal indicating entry of water, even though fill has effectively been completed.	- Turbine faulty or disconnected; - Connector terminals not making contact; - Turbine wiring faulty; - Turbine faulty, disconnected or wet; - WATER has been introduced manually; - Filler hose filter obstructed; - Pressure switch faulty.
8	4	4	TEMPERATURE TIMEOUT (1 hour)	Maximum interval of time for establishing temperature has been exceeded (1 hour).	- NTC sensor bracket detached from bowl; - Fault in electrical circuit of heating element; - Heating element ITR incorrectly calibrated/faulty; - Excessive suds; - Heating element false contact - NTC sensor incorrectly calibrated - Lime scale on heating element. Water hardness setting not compliant. User not putting in salt - NTC sensor separated from socket (replaces first check) - Heating element defective.
9	1-4	1-4	Software recognition error. Main board not programmed	Software recognition error Processor not programmed.	- Main board not programmed; - Incorrect setting file.
10	2-4	2-4	HEATING ELEMENT CIRCUIT not compliant	HEATING ELEMENT CIRCUIT not compliant (circuit open).	- Heating element cables disconnected; - Main board relay defective - Heating element defective; - Main board relay defective.
11	1-2-4	1-2-4	Wash Pump Failure	No communication/power between BLDC/BLAC motor and main board, or motor seized.	- Motor connectors disconnected; - Wiring not compliant; - Foreign matter between motor blades; - Motor defective/seized.
12	3-4	3-4	COMMUNICATION error between main board and display	No communication/connection between main board and user interface.	- Fault in Main board/user interface wiring; - Disconnect from electrical power supply. Wait 2 minutes. Reconnect appliance to power supply and test again; - User interface defective.
13	1-3-4	1-3-4	Main board NOT WORKING	Main board NOT WORKING	- Replace main board.
15	1-2-3-4	1-2-3-4	VIRTUAL SENSOR	Reading between Wash pump and Drain pump not consistent.	- Replace wash pump.

© Whirlpool EMEA

Installation Instruction

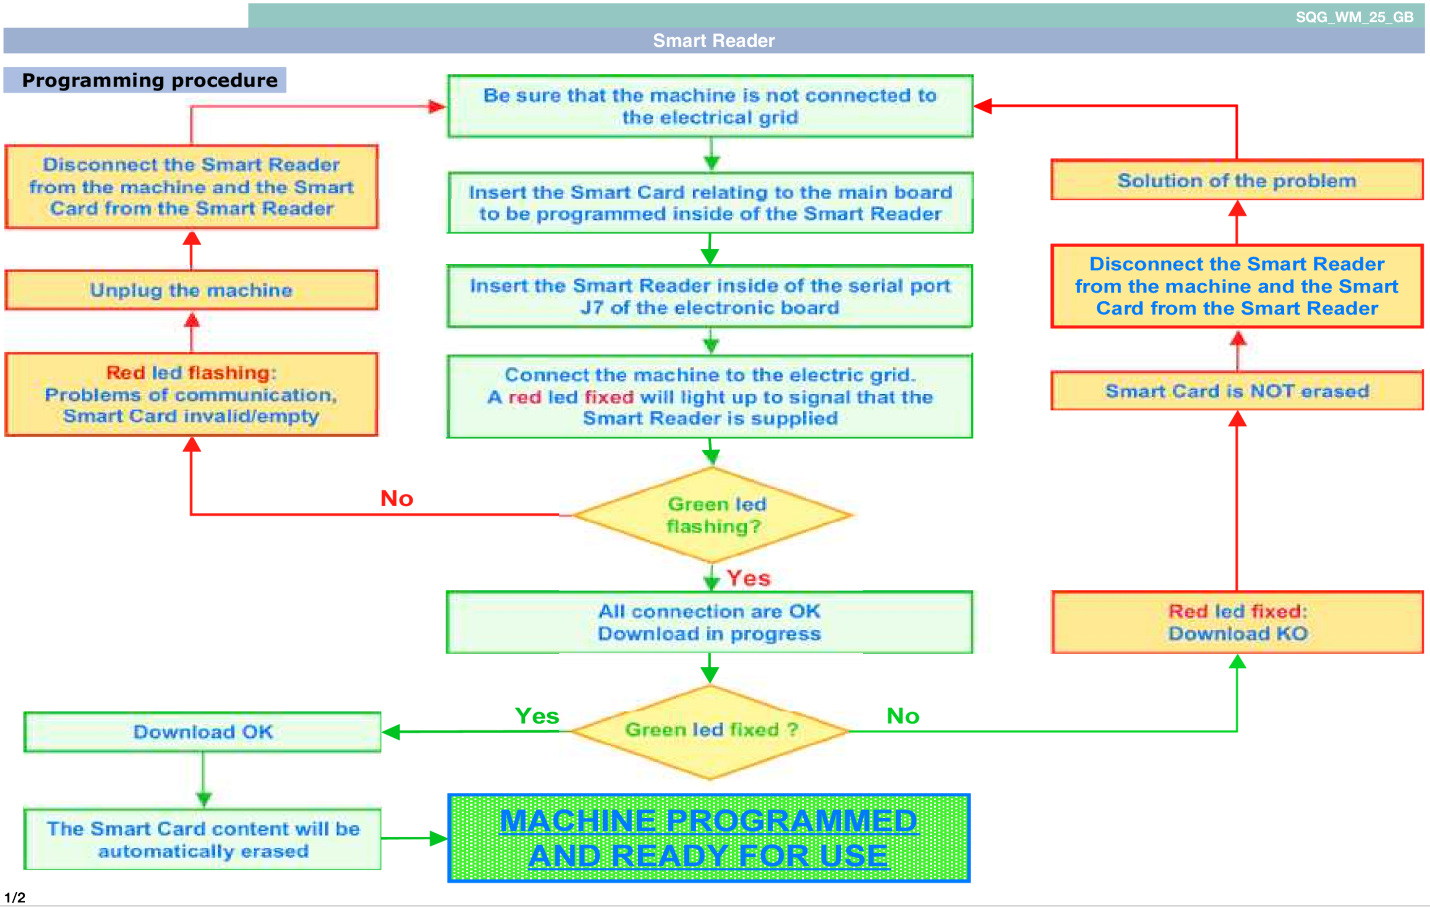

Service Quick Guide

SQG_WM_25_GB

Smart Reader

- CK → Hot 2005
- WM → Evo II and Arcadia
- DW → Seven Digit and EOS
- CL → New Platform 2005







2/2

WASHING

Problems rising during programming procedure

After having inserted and supplied the Smart Reader, if Red led flashes instead of Green led:

There is NOT a good communication

What to do?

- Unplug the machine.
- Disconnect Smart Reader from the serial port.
- Pull out the Smart Card of Smart Reader.
- Clean the Smart Card.
- Repeat again the procedure.


If Red led fixed lights up at the end of the download phase (when the Green led stops flashing):

Download KO

What to do?

- Unplug the machine.
- Disconnect the Smart Reader from the serial port.
- Repeat again the procedure.

User Interface:

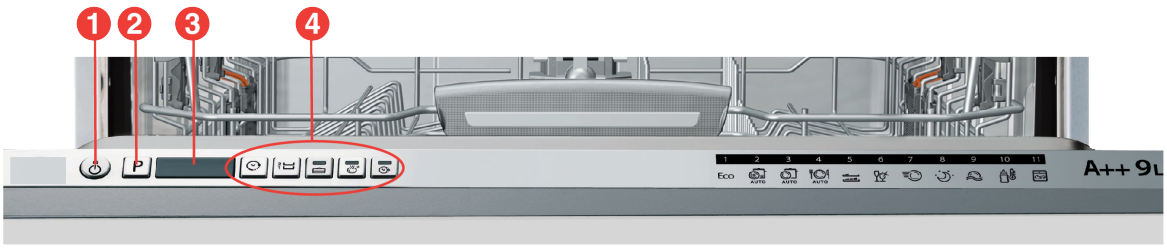

Function Keys

1 **ON/OFF** & **Reset** button
2 **Program selection** button
3 **Digit**
4 **Options** buttons & leds

Rinse aid Setting:

- Switch on with “On/Off” button
- Switch off with “On/Off” button
- Press button “P” 3 times
- Switch on with “On/Off” button
- Adjust the level of rinse aid using button “P”
- Switch the machine off with the “On/Off” button within 10 seconds to save the new setting, otherwise the original water hardness setting will remain unchanged.

Setting water hardness:

- Switch on with “On/Off” button
- Switch off with “On/Off” button
- Press and hold button “P” button for 3 seconds
- Switch on with “On/Off” button
- Adjust the water hardness using button “P”
- Switch the machine off with the “On/Off” button within 10 seconds to save the new setting, otherwise the original water hardness setting will remain unchanged.

Faults:



If there is a fault (active):

The technician will find the fault on the Digit interface.

If the fault is intermittent (not continuous):

When the autotest is run, the last fault will be displayed for 15/20 seconds; after that, the autotest sequence will start automatically.
If the autotest reaches the end, the last fault will be reset. If the autotest is stopped midway, the last fault will be saved and displayed the next time the autotest procedure is run.