
INDESIT company

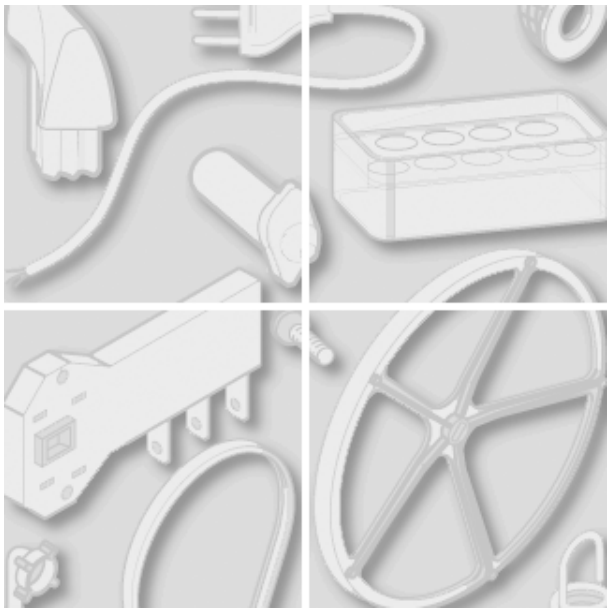

Model type:
CDE129ALL

Commercial code:
F032570

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:

REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.


6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1140130B

Exploded views

Matr . 40520.0002

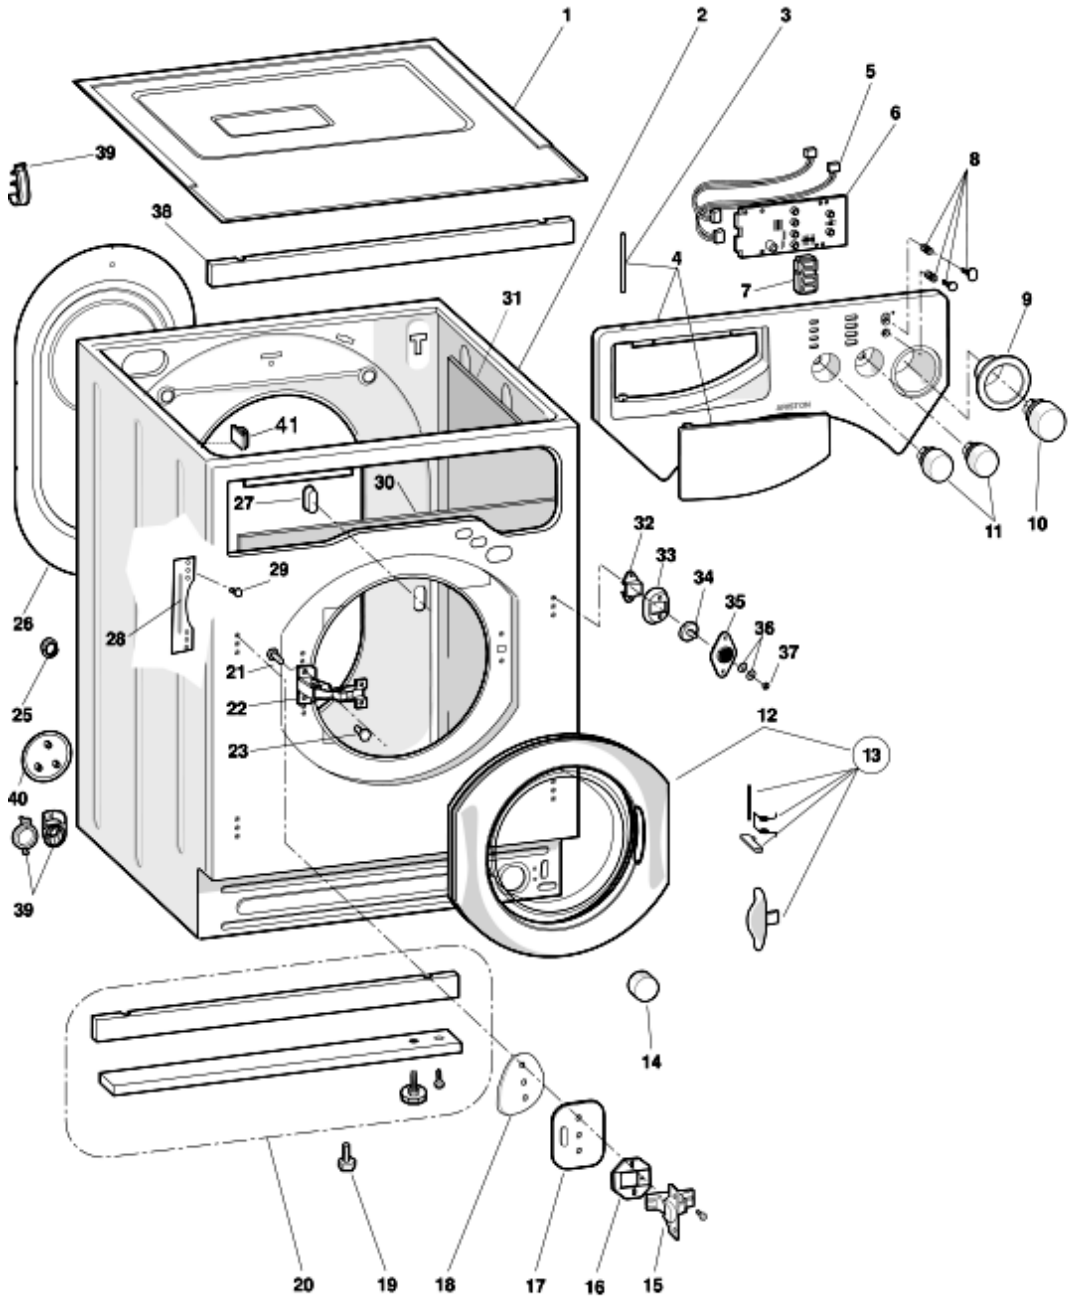

1140130B

1140130B

Spare parts list


Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00084868				door fixing - template		
000	C00087354				installation hinge kit (20121)		
000	C00111083				user instruct.bookl it-gb-fr-de		
000	C00111084				user instruct.bookl nl-es-pt		
001	C00084883				cabinet cover		
002	C00090573			1 x C00116543	cabinet white	n1040359	80325700000
002	C00116543				cabinet white pw		80325700900
							80325700905
003	C00065186			1 x C00091882	pivot pin - drawer front 108.5x5		
004	C00111086				control panel + handle cde129all	n1040359	80325700000
004	C00116779				control panel + handle pw		80325700900
							80325700905
005	C00109854				wiring console lbe evoii		
006	C00143338				display pcb		
007	C00110055			1 x C00116392	silicone push buttons		
008	C00110116				on-off / reset push button white	n1040359	80325700000
008	C00116919			1 x C00110116	push-buttons kit pw lbe on-		80325700900
							80325700905
009	C00111091			1 x C00116590	knob timer disc	n1040359	80325700000
009	C00116590				programme disc white pw		80325700900
							80325700905
010	C00109846			1 x C00116593	wash timer-components knob	n1040359	80325700000
010	C00116593				control knob - white		80325700900
							80325700905
011	C00109847			1 x C00116592	temperature knob white	n1040359	80325700000
011	C00111078			1 x C00116604	dry timer knob aml cde evoii	n1040359	80325700000
011	C00116592				temperature knob white pw		80325700900
							80325700905
011	C00116604				dry timer knob white pw evoii cde		80325700900
							80325700905
012	C00087818			1 x C00116585	door frame and glass assy	n1040359	80325700000
012	C00116585				door frame & glass assy		80325700900
							80325700905
013	C00065250			1 x C00116580	door handle kit	n1040359	80325700000
013	C00116580				door handle kit		80325700900

1140130B

Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
014	C00087353				rubber buffer h=29.5 mm grey		
015	C00056261				furniture door hinge		
016	C00087348				hinge support shim 11.8 mm		
017	C00087350				hinge plate spacer shim 4 mm		
018	C00055735				door hinge support		
019	C00110512			2 x C00259390	rear foot 3.7cm x m8		
020	C00084867				built-in washing machine base kit		
021	C00074149			1 x C00256725	bolt m4x9 tesrfr		
022	C00064541				outer door hinge assembly	n1040349	
023	C00065185				bolt m4,5 x 8		
024	C00046666				collar for drain hose		
025	C00065871				blanking plug		
025	C00089419				blanking plug 6.5 mm		
026	C00099313			1 x C00116923	rear cover - white		
026	C00116923				rear cover - white pw		80325700900 80325700905
027	C00084817				blanking plate-rear(test plug)		
028	C00064539				hinge plate door		
032	C00058277			1 x C00058030	bolt plate		
033	C00058030				magnet bracket for decor door		
034	C00033428				magnet		
035	C00045656				magnet support		
036	C00045655				magnet catch washer		
037	C00024221				push on fix ring		
038	C00085004			1 x C00084867	door strip - white		
039	C00064550				drain hose holder		
040	C00089803				blanking plug d = 53 mm		

1140340 Exploded views

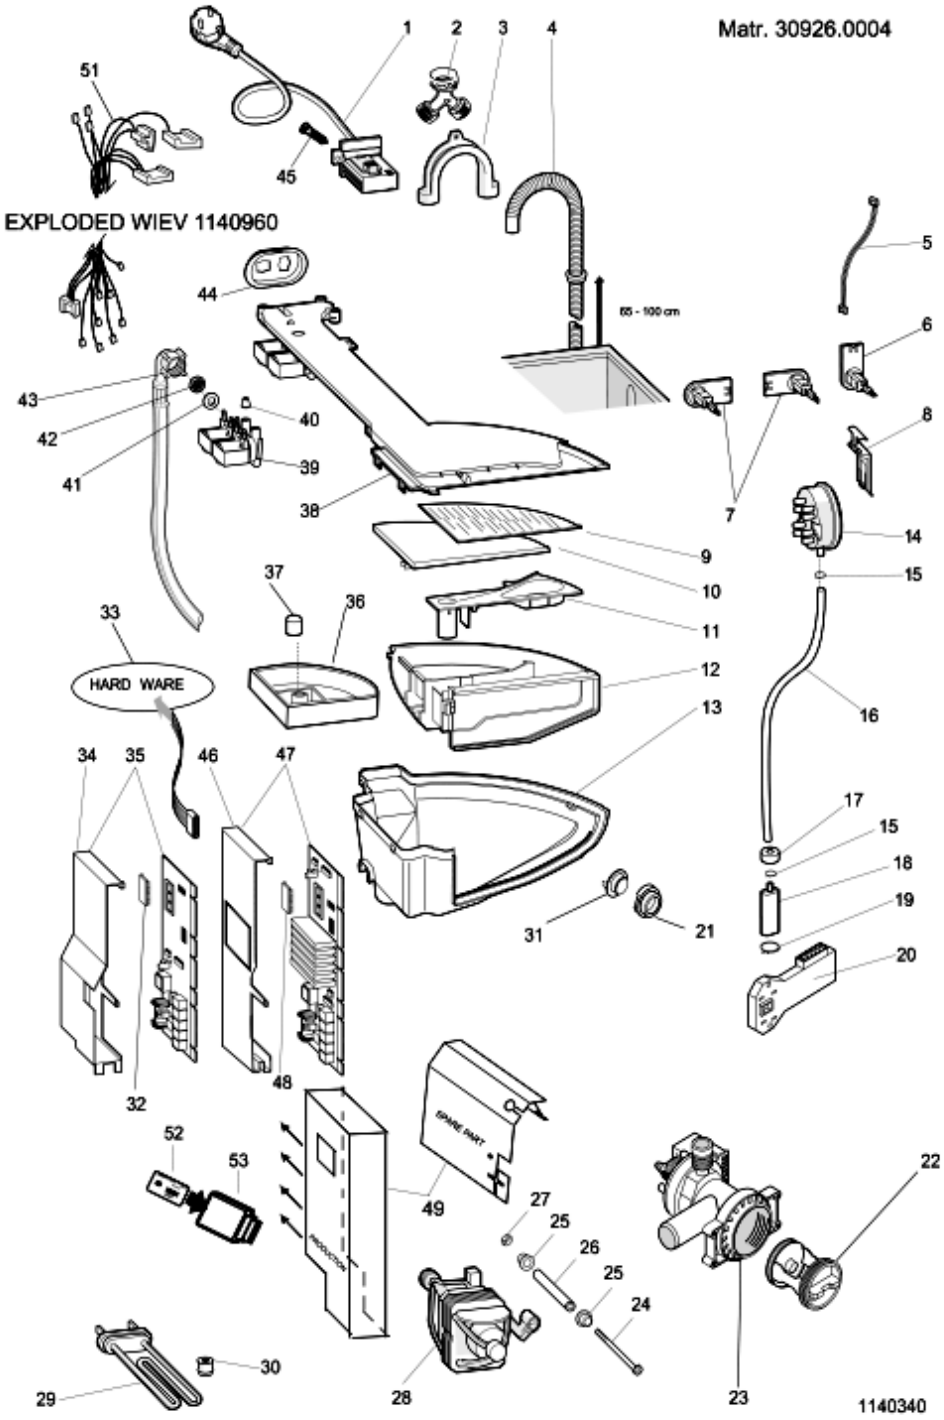

1140340 Spare parts list


Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00094203			1 x C00115769	supply cable 3 x 1.0 1,5mt shuko	n1040365	80325700000
							80325700900
001	C00115769				supply cable 3 x 1.0 1,5mt shuko		80325700900
003	C00019902				plastic -u- to make drain hose		
004	C00027466				drain hose - to sink l=1860mm		
005	C00095750				wiring console avl avsl avxl evo2		
006	C00087067			1 x C00143095	programme select bitron 16		
007	C00085195			1 x C00143096	potentiometer 8 pos. idc rast 2,5		
008	C00064537			1 x C00263210	support - pressure switch		
012	C00046148			1 x C00281253	soap dispenser drawer (rotary)		
013	C00092176				dispenser body		
014	C00110327				pressure switch 1 l. +		
015	C00092412				hose clamp		
016	C00092170			1 x C00041785	pipe pressostat l= 470mm. evo ii		
017	C00019755				anti-vibration bush (foam)		
018	C00092173				air trap x oko		
020	C00065185				bolt m4,5 x 8		
020	C00085194				door interlock		
021	C00014917				grommet - thermostat		
022	C00045023				filter handle		
022	C00045025				filter seal		
022	C00045027				pump filter kit		
023	C00092264				self cleaning drain pump (hl)		
024	C00074152				bolt m6x30		
025	C00019682				rubber bush 20 mm - motor	n1040365	80325700000
							80325700900
025	C00118675				rubber bush 20 mm - motor		80325700900
026	C00074153				spacer motor support l= 187 mm		
027	C00040932				self locking nut m6		
028	C00094023				motor three phase cim2-55	n1040351	80325700000
						n1040362	
028	C00097258				tacho generator for motor ceset		
028	C00116103				motor three phase standard (stator		80325700900
							80325700905
029	C00066086				heating element+t cut-out 1700w		

1140340 Spare parts list


Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
030	C00058523				pillar retainer-heating element		
031	C00053573				temperature sensor (hl)		
033	C00066292				insulated tweezers		
033	C00084943			1 x C00099862	serial cable lb2000 - pc	n1040317	
033	C00095669			1 x C00145046	hardware key mk1	n1040317	
038	C00111093				hopper cover 1e 3u ev		
039	C00111094				electrovalve 1e-3u 7 (triple)		
040	C00064534				seal - dispenser to valve		
041	C00005572				sealing washer-mains inlet hose		
042	C00005781				inlet hose filter		
043	C00003070				mains inlet hose cold 25c 10bar		
044	C00084840				electrovalve support 1 ev		
045	C00092348				self-scraping screw 3,5x8		
046	C00094047				support cover 3 f		
046	C00094049				bracket for module 3 f		
047	C00254298	51011...			module(3 phase /3.5 software/inc	n4008c01	80325700905
047	C00257406		51010...		module wd>1200 rpm+sc fw2.74	n1040378	80325700000
						n4008c01	80325700900
049	C00254409				protecting module (mylar) (hl)		
052	C00262025	50315...	51010...		card cde129all evoii 8kb s/w	n4008c01	80325700900
052	C00262115	51011...			card cde129all evoii 8kb s/w	n4008c01	80325700905
052	C00262966		50314...		card cde129all evoii 8kb s/w	n4008c01	80325700000
053	C00252539			1 x C00263927	smart reader for card 8kb		

1140960 Exploded views

The new wiring when fitted, must be securely attacched to the machine wiring with insulating tape. **Matr. 61116.0001**



WIRING P = DRUM BLOCK COD. C00141995

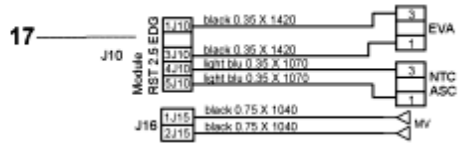


WIRING F = EVA+NTCAS / WIRING G = MTV COD. C00141769




WIRING P = DRUM BLOCK COD. C00112822




WIRING B2 = DISPLAY CONNECTION COD. C00111227

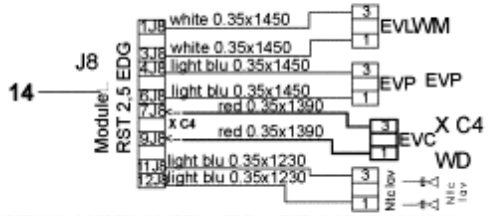


WIRING C1(WM) C3(WD) = EVL + EVP COD. C00093713
WIRING C4 (WD) = EVL + EVP + EVC COD. C00109960




WIRING D = INTERLOCK. + MICRO SWITCH COD. C00093714




WIRING D1 = INTERLOCK. COD. C00093715




WIRING H = DRYING ELEMENT COD. C00093716

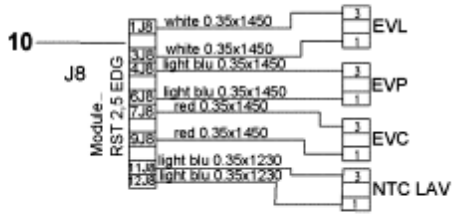


WIRING C = EVL + EVP + EVC COD. C00093724




WIRING A COD.C00141139 (ex C00093722)

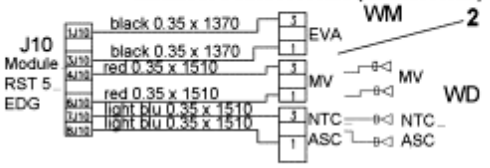


WIRING F = EVA + MV + NTCAS COD.C00093717

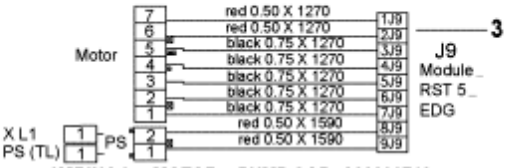


WIRING L = MOTOR + PUMP COD. C00093718
WIRING L1 (TL) = MOTOR + PUMP COD. C00195340




WIRING I = CONDUCTIVITI SENSOR COD. C00093725

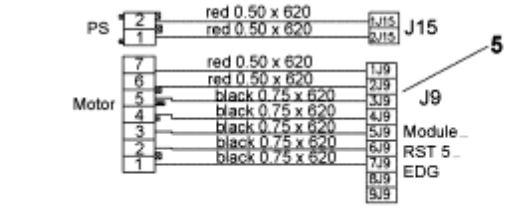


WIRING N = MOTOR + PUMP COD. C00093719




WIRING X = EART STD MACCHINE COD. C00093720



WIRING Y = EART TRI-PHASE MACCHINE COD. C00093721



WIRING B1 = MAIN-DISPLAY CONNECTION COD. C00093726

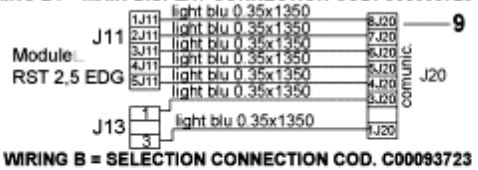

WIRING B = SELECTION CONNECTION COD. C00093723


1140960

1140960 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00141139				wiring		
002	C00093717				wiring eva - mv - ntcas	n1040378	80325700000 80325700900
003	C00093718				wiring pump-motor-module j9 (hl)		
006	C00093720				wiring standard earth		80325700900
007	C00093721				wiring earth triphase	n1040365	80325700000 80325700900
008	C00093726				wiring display		
008	C00119950				wiring display		
011	C00093716				wiring dryer heater-module j2		
012	C00093715			1 x C00259857	wiring door lock-module j4		
014	C00093713				wiring ntc-evl+evp-module j8		
017	C00141769				wiring module-electrovalve-dry		80325700905

1180240 Exploded views

Matr. 30926.0004

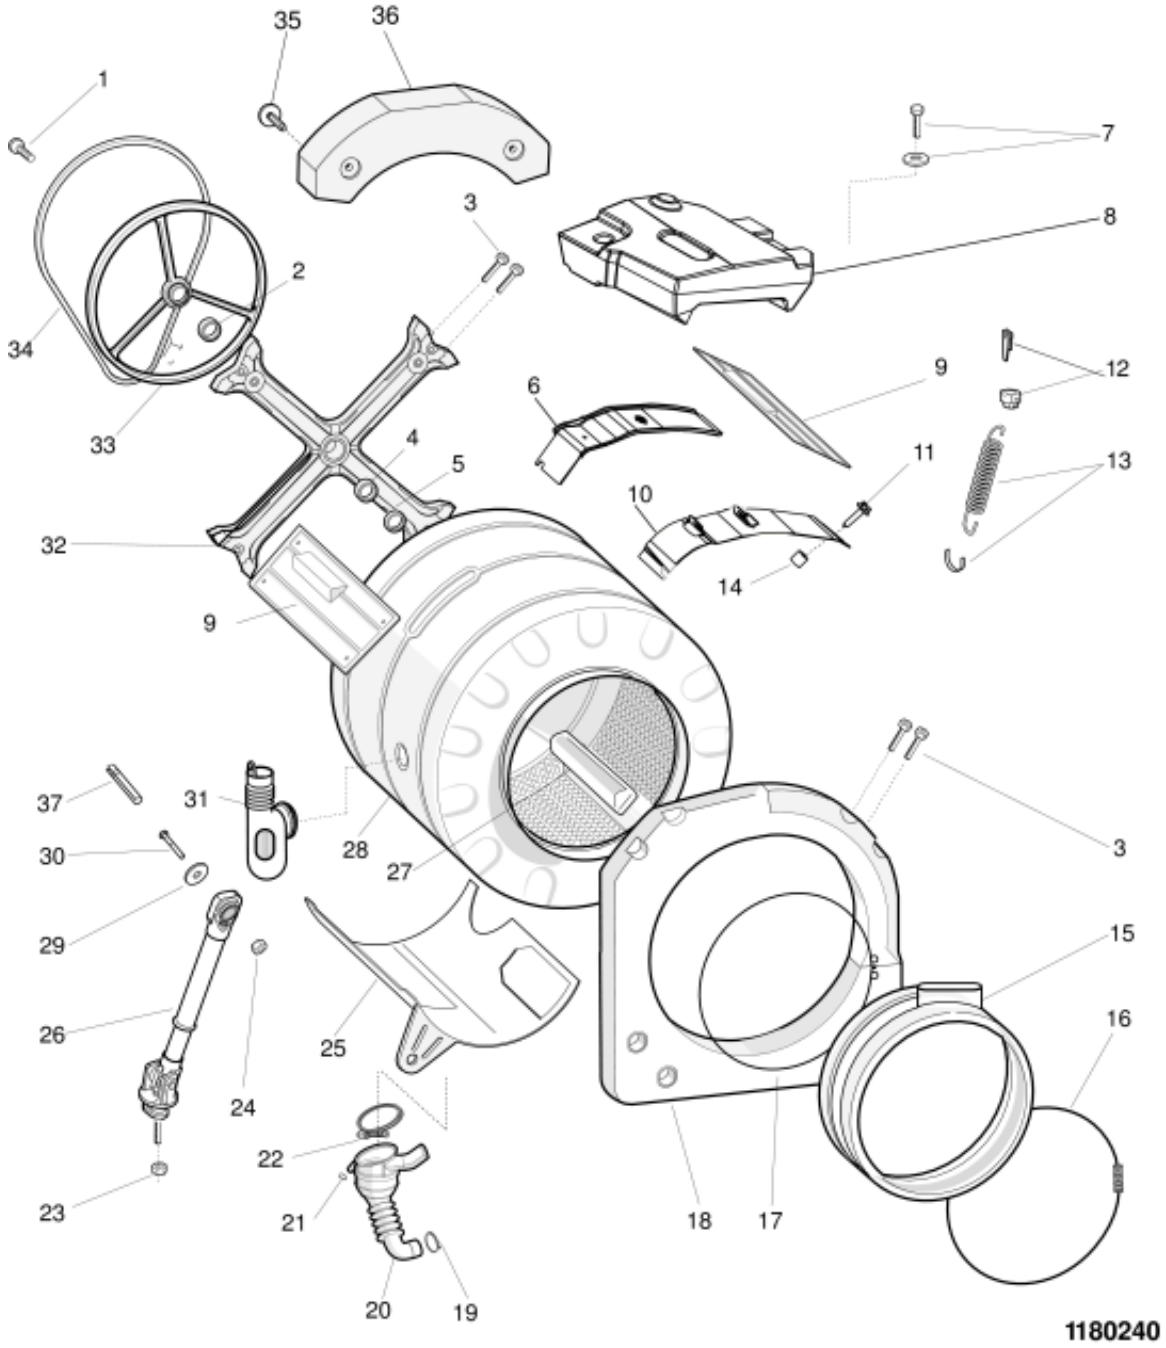


1180240 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00064786			1 x C00143260	bolt m8x23 torx tefl		
002	C00013563				bearing fits light/heavy spider 25		
003	C00064785			1 x C00193879	bolt m8x22 tb6lt		
004	C00002591				bearing 20x47x14		
005	C00096186				standard oil seal	n1040300 n1040326	
006	C00080651			1 x C00032847 1 x C00114387 1 x C00114390 1 x C00145190	rear support		
007	C00088408				bolt + washer		
008	C00087811				upper counterweight 8.2 kg		
009	C00080761			1 x C00064517	tank cradle channel-top dx wd		
010	C00080650				front support		
011	C00080652				bolt m8x36 tefl. zig. p/p		
012	C00064515				anchorage pad - suspension		
013	C00080660				suspension spring - tank		
014	C00080653				spacer		
015	C00080762				door seal		
017	C00064546				clamping ring - door seal front		
017	C00064547				bellows clamp (tank front)		
018	C00092178				front counterweight		
020	C00094312				hose tank to filter oko ws - abs		
022	C00091148			1 x C00094908	clamp d=79 mm		
023	C00065152				nut romob m6x22x1,5		
024	C00030443			1 x C00047136 1 x C00144571	nut romob m8		
025	C00093848				cradle outer- set		
026	C00303583				kit shock absorber 120 n 8,15 mm		
027	C00064789			1 x C00268109	lifter - extractable		
028	C00092263			1 x C00094097 1 x C00094280	outer- set 46 l. cv5-b5 ld	n1040300 n1040371	
031	C00092273				hose dispenser to tank		
032	C00096077				bearing spider assembly	n1040300	
033	C00074211				drum pulley d=210 mm h=20 mm	n1040365	

1180240 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
034	C00074218				belt (1046-1051mm h8)	n1040365	80325700000
							80325700900
034	C00118629				belt l=1046 - 1051 mm h8		80325700900
							80325700905
099	C00001109				loctite 270 10 gr.		
099	C00033026			1 x C00292523	ambljgon grease ta 100 gr.		

1180410 Exploded views

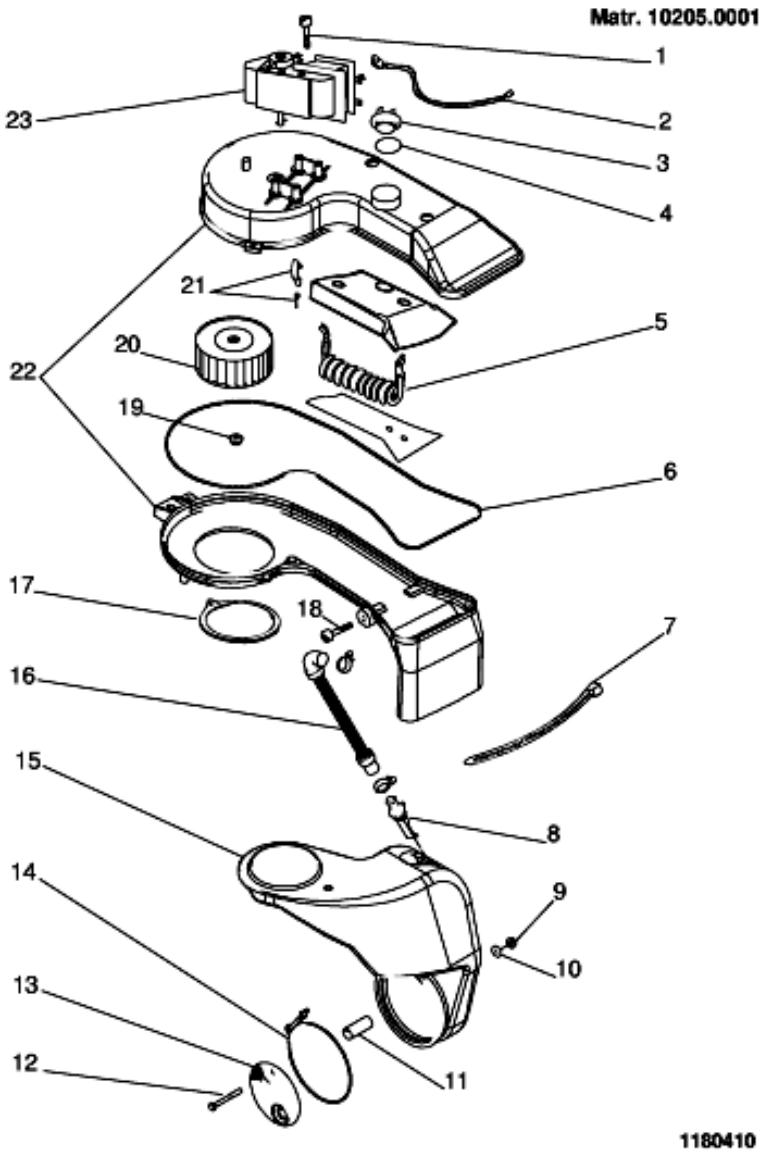

1180410 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00087921				screw amsp m3.5x30t.e.(s/n		
002	C00080775			1 x C00199364	thermal cut-out cable		
003	C00098739				temperature sensor ntc rast 2,5 (hl)		
004	C00080768				o-ring d= 27 x 23,5 x 1,78 wd		
005	C00080765				dryer heating element 1200w) (hl)		
006	C00032847				blower manifold seal		
007	C00033210				hose clamp fastex 350 mm x 7.8		
008	C00032845				restrictor seat		
009	C00080960				self blocking nut m5		
010	C00080959				connection gasket		
010	C00097378				connection gasket		
011	C00080771				clip		
012	C00080773				fixing screw for lint filter		
013	C00080772			1 x C00143947 1 x C00143949	lint filter		
014	C00080774				hose clamp		
015	C00080770			1 x C00143947 1 x C00143949	steam condenser		
016	C00080769				hose electrovalve condenser		
017	C00032844			1 x C00255433	seal - condenser / tank		
018	C00038358				bolt m8x16 (dry loc)		
019	C00032972				blower fixing nut		
020	C00080658				blower fan for motor (087920-		
021	C00054790				screw trilob m5 x 16 tcb t.e. st		
022	C00087919				blower manifold kit		
023	C00087920			1 x C00098711	motor dryer 230v 50hz s/n		

Notices

n1040242: Power card with welded eeprom.

From serial number 20304.0001, IDC power card with welded eeprom is used to ensure the perfect connection of all parts, in the Comunanza, Teverola and Brembate factories.
To replace the module with welded eeprom, it will be necessary to use the eeprom indicated in the SAT document of the model concerned.
To replace the module on a unit with welded eeprom both the SAT module and the eeprom are required, because the latter cannot be reused.

n1040296: List of EVOII FAULTS and troubleshooting.

In case of washing-machine fault in carrying out the self-test function, the machine reproposes the fault previously signalled and the same fault is shown on the display of the new hardware key.
The type of fault can be signalled in different ways:
- on AVD models the fault is shown directly on the machine display.
- on AVL models the fault is signalled by LEDs.

Reading of Faults signalled by LEDs
When the machine has a fault:
1. The window is locked
2. The door lock light flashes fast (> 1 Hz)
3. The control panel LEDs light up, to signal the fault, according to the table (fig. 01).
The example shown in fig. 02 (Example Fault F03) below indicates which LEDs are flashing if the machine has Fault F03

List of faults, malfunctions and Warnings:

F01: Triac Motor short circuit
- Check for water leaks that may affect connector J9 causing the relevant contacts to short
- Check the motor terminal block (possible problems due to chemical effects of work residuals on the contacts which may cause short-circuiting)
- Replace Card

F02: Motor blocked, Tachometrics in Short Circuit/Open
- Check motor if blocked

- Check efficiency of J9 connector on card
- Check the tachometric winding verifying an ohmic resistance reading of 115 - 170 ohm between pins
1 and 2 on wiring connector J9. In case of short circuit/open circuit check the wiring between pins 1 and 2 of J9 relevant to the tachometrics. With three-phase motor, make sure there is ohmic continuity between J9 pins 6 and 7.
- Replace motor
- Replace card

F03: NTC Open or in Short Circuit or washing heater relay stuck (signalled in presence of full load)
- Check efficiency of J8 connector contacts on card
- Check NTC verifying that the ohmic resistance value at room temperature 20°C is approx. 20Kohm on J8 wiring connector pin 11 and 12.
- If the measurement is incorrect check J8/NTC wiring continuity
Check the same parameter directly on NTC
- Replace NTC
- Replace Card

F04: Simultaneous empty and overflow (pressure switch stuck on empty).
If the pressure switch contact is stuck on empty the washing-machine loads water until reaching the overflow. The drain pump is automatically started by the contact on the overflow pressure switch.
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring of connector J3/pressure switch
- Replace pressure switch
- Replace card.

F05: Pump Blocked or pressure switch empty not reached
- Check efficiency of J9 connector on card, verifying a voltage of 220V between pins 8 and 9
- Check that pump if being fed
- Check Pump Filter + wall drain
- Change Pump
- Replace Card

F06: No on AVD and AVL

F07: No Wash Heating Element Absorption (the fault is only signalled with the pressure switch on empty)
- Check efficiency of J3 connector contacts on card
- Check continuity of the wash heating element on J3 connector pins 5 and 6. The 1800W 230V heating element has a resistance of 25 ohm.
- Check connection of pressure switch J3 connector pins 2 and 3: there must not be ohmic continuity (shared with full load).
Check connection of pressure switch J3 connector pins 2 and 4: there must be ohmic continuity
- Replace Heating Element
- Replace Pressure Switch
- Replace Card

F08: Wash Heater Relay Stuck (signalled in presence of empty) or pressure switch stuck on Full (simultaneously empty and full)
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and
pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring J3/pressure switch
- Check connection of heating element J3 connector pins 5 and 6.
- Replace pressure switch
- Replace Card

F09: Machine Setup Error (Eeprom error)

- In case of production card with Eeprom soldered: replace the card and Eeprom
- In case of replacement of Eeprom and card, check correct housing of Eeprom on card socket

F10: No full and empty signal
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and
pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring of connector J3/Pressure switch
- Replace Pressure Switch
- Replace Card

F11: No Pump Feedback (Drain pump disconnected or winding broken)
- Check efficiency of J9 connector on card
- Check continuity of the Pump on J15 connector pins 1 and 2 (in case of washing-machine with Easy Door door lock) or on J9 connector pins 8 and 9 (in case of conventional door lock), checking a resistive value equal to 170 ohm.
- Check wiring of connector J15 (or J9)/Pump
- Replace Pump
- Replace Card

F12: No Communication Display/LED Card-Main Board
- Check efficiency of contacts on card of J11 connector
- Check the continuity of J11 connector-display card 5-pin connector
- Replace Main Board
- Replace Display Card/LED

F13: Drying NTC sensor open / Drying system NTC wiring disconnected
Check efficiency of J10 connector on card
Check NTC on J10 connector pins 7 and 8 verifying that the ohmic value of the sensor at room temperature 20°C is approx. 20Kohm
Check continuity of NTC/J10 connectors wiring
Replace NTC
Replace card

F14: Drying heater open or not connected
Check efficiency of J2 connector contacts on card
Check continuity of drying heater on J2 wiring connector pins 1 and 2, verifying that the ohmic value of the 1300W 230V heating element is approx. 40Kohm
Check wiring of connector J10/drying heater
Replace heating element
Replace card

F15: Drying heater always on (drying relay contact stuck or drying Triac short circuit)
Check efficiency of J2 connector contacts on card of
Check wiring of connector J2/drying heater
Check wiring of connector J3/pressure switch
Replace card

F16: Drum locking (top-loading only)

F17: Door lock unfed/open (with Easy Door)
- Check presence of 230V mains power on J4 wiring connector inserted on card between pins 3 and 4,
(not present with machine on standby) and presence of power from 230V door lock between pins 3 and 5
- Check ohmic continuity of the door microswitch on J4 connector inserted on card between pins 1 and 2 (with door closed/on open/off)
- Check continuity of J4/door lock wiring
- Check door hooking

- Replace door lock
- Replace card

F17: Door lock unfed/open (conventional door lock, not Easy Door)
- Check presence of 230V mains power on J4 wiring connector inserted on card between pins 2 and 3,
(not present with machine on standby) and presence of power from 230V door lock between pins 3 and 1
- Check door hooking
- Replace door lock
- Replace card

F18 --> Communication error microprocessor / DSP (Digital Signal Processor)
- Replace card

COMBINAZIONE LED


SIMBOLOGIA:
= LED ACCESO = LED SPENTO

FAULT	LED Fasi	TASTI FUNZIONI			
F01	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F02	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F03	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F04	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F05	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F06	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F07	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F08	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F09	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F10	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F11	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F12	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F13	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F14	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F15	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F16	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F17	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F18	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4



ARISTON INDESIT


FIG. 01

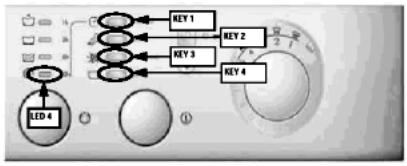

Fault	Key 1	Key 2	Key 3	Key 4	Led 4
01	Off	Off	Off	Flash	Off
02	Off	Off	Flash	Off	Off
03	Off	Off	Flash	Flash	Off
04	Off	Flash	Off	Off	Off
05	Off	Flash	Off	Flash	Off
06	Off	Flash	Flash	Off	Off
07	Off	Flash	Flash	Flash	Off
08	Flash	Off	Off	Off	Off
09	Flash	Off	Off	Flash	Off
10	Flash	Off	Flash	Off	Off
11	Flash	Off	Flash	Flash	Off
12	Flash	Flash	Off	Off	Off
13	Flash	Flash	Off	Flash	Off
14	Flash	Flash	Flash	Off	Off
15	Flash	Flash	Flash	Flash	Off
16	Off	Off	Off	Off	Flash
17	Off	Off	Off	Flash	Flash

Table Fault LED

FIG. 02

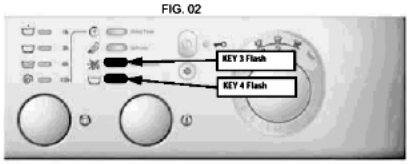

Example Fault F03

Tabla de averías para lavadora EVO II



CO	MBINACIÓN LED				
FAULT	CAU SA	LED Fase	TECLAS FUNCIONES		
F01	Triac control motor en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F02	Motor bloqueado, tacómetro motor abierto / en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F03	Sonda NTC lavado abierta / en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F04	Vacío + sobrenivel presostato simultaneamente	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F05	No se logra vacío presostato bomba desagüe bloqueada	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F06	Error de selector (no encuentra código)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F07	Falta absorción en la resistencia de lavado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F08	Relé resistencia de lavado con el contacto NA/NC pegado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F09	Error umap file (EEPROM no programada o corrocta)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F10	Presostato en Rotor+Vacio o sin salial de vacio ni lleno	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F11	Falta alimentación a la bomba de desague	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F12	Falta comunicación entre módulo display y modulo de control	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F13	Sonda NTC secado abierta/corto. Ventilador secado bloqueado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F14	Falta alimentación a la resistencia de secado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F15	Contacto relé resistencia de secado pegado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F16	Bloqueo de cesto (sobe carga superior)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F17	Bloqueo puerto desalineado /abierto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F18	Error de comunicación Micro/DSP (MODULO)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4


– LED

SIMBOLOGIA:

– led encendido

– led apagado


ABB. 01

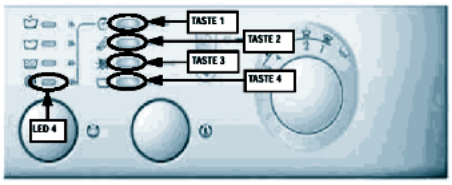

Fault	Taste 1	Taste 2	Taste 3	Taste 4	Led 4
01	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet
02	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet
03	Ausgeschaltet	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet
04	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
05	Ausgeschaltet	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet
06	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet
07	Ausgeschaltet	Blinkt	Blinkt	Blinkt	Ausgeschaltet
08	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
09	Blinkt	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet
10	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet
11	Blinkt	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet
12	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
13	Blinkt	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet
14	Blinkt	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet
15	Blinkt	Blinkt	Blinkt	Blinkt	Ausgeschaltet
16	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt
17	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt	Blinkt


Tab. Störung Led

ABB. 02

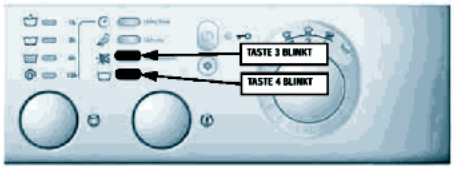

Beispiel Störung F03


FIG. 01

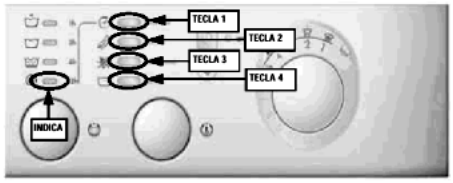

Fault	Tecla 1	Tecla 2	Tecla 3	Tecla 4	Indicador luminoso 4
01	Apagado	Apagado	Apagado	Pisca	Apagado
02	Apagado	Apagado	Pisca	Apagado	Apagado
03	Apagado	Apagado	Pisca	Pisca	Apagado
04	Apagado	Pisca	Apagado	Apagado	Apagado
05	Apagado	Pisca	Apagado	Pisca	Apagado
06	Apagado	Pisca	Pisca	Apagado	Apagado
07	Apagado	Pisca	Pisca	Pisca	Apagado
08	Pisca	Apagado	Apagado	Apagado	Apagado
09	Pisca	Apagado	Apagado	Pisca	Apagado
10	Pisca	Apagado	Pisca	Apagado	Apagado
11	Pisca	Apagado	Pisca	Pisca	Apagado
12	Pisca	Pisca	Apagado	Apagado	Apagado
13	Pisca	Pisca	Apagado	Pisca	Apagado
14	Pisca	Pisca	Pisca	Apagado	Apagado
15	Pisca	Pisca	Pisca	Pisca	Apagado
16	Apagado	Apagado	Apagado	Apagado	Pisca
17	Apagado	Apagado	Apagado	Pisca	Pisca

Tab. Fault indicador luminoso

FIG. 02

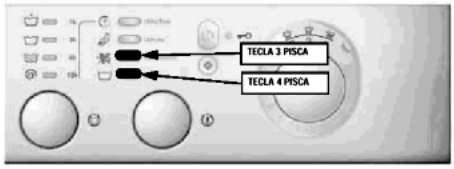

Exemplo Fault F03

n1040338: Masked microprocessor and software 9.0.0.

All Ariston LED models produced in the Comunanza factory (from serial no. 40913.0001) and in the Teverola and Brembate factories (from serial no. 40922.0001) have been equipped with a display module with masked microprocessor and software 9.0.0.



Cruscotto - Tableau de borde - Belde - Control panel
Painel frontal - Quadro Mandos - Kontrol paneli

The new LED module has the same SAT code as the previous item C00109856, and can be used on premodification models except for those listed below, for which, if a LED module needs replacing, it will be necessary to replace also the power card and eeprom.
For these models, the eeproms in stock in the various Warehouses have been reprogrammed with new software and can also be used on premodified appliances.

Models affected:
30580 - AML101AG
30582 - AML105EX
30588 - AML119TK
30591 - AML125AUS
30590 - AML125EX
30598 - AML129EU
30576 - AML85EX
30596 - AML89EU
33968 - AV62EU
30063 - AVL61EX
28480 - AVL85TK
30357 - AVL100PR
29844 - AVL105EX
30206 - AVL105SK
28482 - AVL105TK
29700 - AVL109R
29841 - AVL129EU
28637 - AVL129R
32854 - AVL135FR
33180 - AVL145DETE
30365 - AVL145DE
29850 - AVL145EU
33612 - AVL145EUTE
29455 - AVL149R
32855 - AVL160FR
29849 - AVL169EU
33244 - AVL62EO

30062 - AVL62EX
33685 - AVL62KW
30612 - AVL65PT
30092 - AVL66PIT
28444 - AVL80R
30093 - AVL86PIT
29920 - AVSL105EU
28429 - AVSL109IT
29701 - AVSL109R
30023 - AVSL125EU
31930 - AVSL129IT
29769 - AVSL129R
29116 - AVSL66IT
28427 - AVSL68IT
28638 - AVSL80R
29117 - AVSL89IT
33214 - BWD129ALL
33213 - BWM129UK
32570 - CDE129ALL
32569 - LBE129ALL
32306 - LBE68ALL
29772 - AVXL109R
30081 - AVL62EX
30879 - AVL68ITBG
33191 - AVL66PITBG
30208 - AVL82EU

n1040349: Introduction of 150° Zamac hinge on Ariston 46 models.

From serial no. 50207.0001, all Ariston models produced in the Teverola factory (see table 001 attached) with industrial code (given on the rating plate) starting with 46, have been equipped with a Zamac hinge with 150° opening angle, code C00115666 (see Fig.001).
This modification has involved the introduction of the following items:

Code C00115670 - Complete door EVOII 150° white 27 with standard glass;
Code C00115674 - Complete door EVOII 150° white 27 with long glass;
Code C00115667 - EVOII body for 150° hinge white 27;

The premodified items are not interchangeable separately with the modified ones.

Code C00110133 - Complete door EVOII Standard 180° white 27 standard glass;
Code C00092157 - Complete door EVOII 180° white 27 long glass;
Code C00096193 - EVOII body for 150° hinge white 27;

The hinge code C00064541 continues to be used on the build-under models produced in the Comunanza factory.

		CABINET		DOOR				HINGE	
		180°	150°	180°	150°	180°	150°	180°	150°
Model	Code	C00096193	C00115667	C00092157	C00115670	C00110133	C00115674	C00064541	C00115666
AV 82 (TK)	28479	X	X	X	X			X	X
AVL 85 (TK)	28480	X	X	X	X			X	X
AV 102 (TK)	28481	X	X	X	X			X	X
AVL 105 (TK)	28482	X	X	X	X			X	X
AVD 10 (TK)	28485	X	X	X	X			X	X
AVL 125 (EU)	29774	X	X	X	X			X	X
AVL 62 (EX)	29775	X	X	X	X			X	X
AV 61 (EU)	29890	X	X			X	X	X	X
AVL 6 E (IT)	30055	X	X	X	X			X	X
AVL 62 (EX)60HZ 40-F	30062	X	X	X	X			X	X
AVL 61 (EX)115-60	30063	X	X			X	X	X	X
AV 51 (EX) 50-60	30064	X	X			X	X	X	X
AV 41 (EX) 50-60	30065	X	X			X	X	X	X
AV 41 (AG) 50-60	30066	X	X			X	X	X	X
AV 51 (AG) 50-60	30067	X	X			X	X	X	X
AVL 86 P (IT)	30093	X	X	X	X			X	X
AVL 105 (SK)	30206	X	X	X	X			X	X
AVL 100 P (R)	30357	X	X	X	X			X	X
AVL 95 (AUS)	30361	X	X	X	X			X	X
AV 51 (EO)	30498	X	X			X	X	X	X
AVL 65 (PT)	30612	X	X	X	X			X	X
AV 102 (CSI)	31970	X	X	X	X			X	X
AV 40 (AG) 50-60	32303	X	X			X	X	X	X
AVL 145 (DE) (TE)	33180	X	X	X	X			X	X
AV 42 (EX) 50-60	33217	X	X			X	X	X	X
AV 52 (EX) 50-60	33218	X	X			X	X	X	X
AVL 62 (EO)	33244	X	X	X	X			X	X
AVL 145 (EU) (TE)	33612	X	X	X	X			X	X
AVL 62 (KW)	33685	X	X	X	X			X	X
AV 62 (EU)	33968	X	X	X	X			X	X
AVF 10 (TK)	33979	X	X	X	X			X	X
AVF 8 (TK)	34214	X	X	X	X			X	X
AVF 149 (EU)	34217	X	X	X	X			X	X
AVL 135 (FR) (TE)	34239	X	X	X	X			X	X
AVL 140 (FR) (TE)	34240	X	X	X	X			X	X
AVL 14 (FR)	34479	X	X	X	X			X	X
AV 8 (IT)	35974	X	X	X	X			X	X
AV 10 (IT)	35975	X	X	X	X			X	X

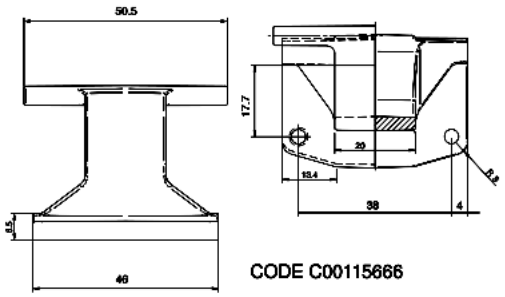


Fig . 001

n1040359: Polar White Factory 80 (Comunanza)

From serial no. 50315.0001, the new "Polar White" colour is used on all washing machines and washer-dryers produced in factory 80 in place of White 27.

The third last number of the Industrial Code given on the rating plate of the modified models is 9 (e.g. 80286390900).
To determine the new Polar White codes, it is necessary to know the industrial code or serial number of the appliance being repaired.
The new items, which bear the initials "PW" in place of "B27", are not aesthetically interchangeable with premodification items as the whites are different. Both colours will be available for some time.
The items affected by this modification are:
Body, rear panel, top, control panel, handles, buttons, knobs, knob disc, door and plinth.

n1040362: Three-phase motors with 40 mm stator for Washer-dryers Factory 80.

From serial no. 50315.0001, CDE129ALL, MLSE129ALL and BWM 129 Washer-dryers
produced in factory 80 have been equipped with the three-phase motor stator 40 code C00116103. The new component is not interchangeable with the premodification item, which will continue to be available.

The last four numbers of the Industrial Code given on the rating plate of the three modified models are 0900 (e.g. 80332130900).

To determine the codes of the motor or eeprom to be used, it is necessary to know the industrial code or serial number of the appliance.
To determine the codes of the motor or eeprom to be used, it is necessary to know the industrial code or serial number of the appliance being repaired and consult the table n1040362TAB001 attached.

STANDARD MODEL						
MODEL	MOTOR (STATOR 50)	EEPROM (STATOR 50)	INDUSTRIAL CODE	MOTOR (STATOR 40)	EEPROM (STATOR 40)	DATE START PRODUCTION
BWD129	C00094023	C00111907	80332140900	C00116103	C00118113	15/03/05
CDE129ALL	C00094023	C00111076	80325700900	C00116103	C00118112	15/03/05
MLSE129ALL	C00094023	C00112843	80332390900	C00116103	C00118114	15/03/05

n1040365: Elimination of dielectric components from all three-phase models

---

From serial no. 50314.0001, dielectric components have been eliminated from all three-phase models produced in the Comunanza factory (80).
The modification involves the following parts: motor, bushing, elastic belt, earth wiring and power supply cables with filter.
The new items are not interchangeable separately with the premodification ones. The new codes are indicated below.

Modified appliances with serial number = o > 50314.0001.
C00118629 - BELT L=1046 - 1051 MM H8 ELASTIC;
C00118675 - MOTOR PIN BUSHING 20 MM;
C00115769 - POWER CABLE 3 x 1.0 1.5MT SHUKO THREE-PHASE (+ enhanced filter);
C00118821 POWER CABLE UK 3X1 L1950MM+THREE-PHASE FILTER (+ enhanced filter);
C00118820 - POWER CABLE L=2.55M AUSTR. THREE-PHASE (+ enhanced filter);
C00093720 THREE-PHASE EARTH WIRING.

Premodified appliances, with serial number < 50314.0001.
C00074218 - BELT L=1046 - 1051 MM H8 ELASTIC DIELECTRIC;
C00019682 - MOTOR PIN BUSHING 20 MM DIELECTRIC
C00094203 - POWER CABLE 3 x 1.0 1.5MT SHUKO THREE-PHASE
C00111940 - POWER CABLE UK 3X1 L1950MM+THREE-PHASE FILTER
C00096465 - POWER CABLE L=2.55M AUSTR. THREE-PHASE
C00093721 THREE-PHASE EARTH WIRING

n1040371: The T4 mechanism type 4.

From serial number 30612.0001, the T4 mechanism has been introduced on some oscillating units.
The new tub units are perfectly interchangeable with the premodification ones and therefore maintain the same SAT codes.
The modification especially concerns the basket cross element and the tub cross element assembly that are specific for the new mechanism.
For servicing the products both the premodification tub cross element assembly (code 074213) and the new assembly (cod. 096077) must be managed; their use is indicated by the serial number of the relevant product.

The relevant Sat codes are:

TUBS (they maintain same SAT code as the premodification parts).
Models “Evizzati “ Serial number > 30312.0001 and < 30616.0001
SAT code 094279 TUB 46L.B5 CV5 EVO II 1200 rpm;
SAT code 094281 TUB 46 L. B5-CV5 LD EVO II 1200 rpm LD;
SAT code 094287 Tub 40 litres b5-cv5 40 litres 1200-1400 rpm;.

Models Serial number <30312.0001 and > 30616.0001.
Cod. SAT 092257 OUTER TANK & INNER DRUM ASSY B5 CV5
Cod, SAT 092263 OUTER- SET 46 L. CV5-B5 LD;
Cod. SAT 092545 OUTER TANK & INNER DRUM ASSY 40 L B5 CV5

CROSS ELEMENT ASSEMBLY AND SINGLE PARTS MANAGED AS REPLACEMENTS.
SAT code 096077 Cross element assembly with seal rings CV4;
SAT code 096186 Seal ring CV4;
SAT code 013563 Bearing 6205-2Z SKF;
SAT Code 002591 - Bearing 6204-2Z SKF;
On 1200 rpm models, which indicate replacement of the drum with spider in aluminium, with a spider in red ghisa (LVA cod. C00094280 and LVB cod. C00094282), the following pocedure will need to be followed:

1) Remove the upper counter-weight;
2) Position the balancing springs inside the support holes found further back than the previous position on the cabinet (see fig.001);
3) Affix the shock absorbers on the support holes positioned on the back part of the cabinet (see fig.002).





n1040378: 3.5 three phase module, factory 80 (Comunanza)

From October 2005, the new 3.5 module has been installed on three phase Comunanza models (80)

New parts:
C00254298 - Three phase module for card LB-WD 3.5;
C00141769 - J10-MV J16-EVA/NT WD cables (see picture attached).

Premodification parts:
C00257406 - MODULO WD>1200 G. +SC FW2.74 (CARD)
C00093717 - Cables J10-EWA MV NT WD.

The new items are not interchangeable with the premodification ones.

New CARDS codes have been introduced for use with modified products; the list of part codes affected is given below along with the industrial code on which the modification was introduced, the relevant serial number, the eeprom code introduced (to be used only on modified products) and the model code.


80288730905 - 51024.0001 - C00141772 - AVD149EX
80298490905 - 51017.0001 - C00141774 - AVL169EU
80319300905 - 51015.0001 - C00141775 - AVSL129IT
80328540905 - 51017.0001 - C00141773 - AVL135FR
80314940905 - 51020.0001 - C00141777 - AVSL9EIT
80325690905 - 51003.0001 - C00141784 - LBE129ALL
80286370905 - 51008.0001 - C00141789 - AVL129R
80332130905 - 51011.0001 - C00141790 - BWM129
80284480905 - 51007.0001 - C00141795 - AVD129EX
80284460905 - 51025.0001 - C00141796 - AVD109EX
80297000905 - 51007.0001 - C00141797 - AVL109R
80340430055 - 51020.0001 - C00141799 - AVF109SEX
80342160905 - 51015.0001 - C00141800 - AVF109EX
80344100905 - 51020.0001 - C00141801 - AVF120FR
80297010905 - 51013.0001 - C00141803 - AVSL109R
80291170905 - 51012.0001 - C00141805 - AVSL89IT
80284291005 - 51015.0001 - C00141806 - AVSL109IT
80340440905 - 51025.0001 - C00141809 - AVF129EX
80319780905 - 51013.0001 - C00141770 - AML135FR
80305920905 - 51024.0001 - C00141781 - AMD109EU
80332140905 - 51011.0001 - C00141779 - BWD129
80305890905 - 51025.0001 - C00141782 - AMD129EU
80325700905 - 51011.0001 - C00141784 - CDE129ALL
80305960905 - 51005.0001 - C00141785 - AML89EU
80305980905 - 51013.0001 - C00141787 - AML129EU
80300070905 - 51013.0001 - C00141788 - AML125FR
80332390905 - 51014.0001 - C00141798 - MLSE129ALL
80284470255 – 51027.0001- C00142008 - AVD109SEX
80296280905 – 50928.0001 - C00142009 - AVSD109EU
80297690905 – 51027.0001 - C00142010 - AVLS129R
80299930055 - 51102.0001 - C00142011 - AVSD109SEX
80300080905 – 51027.0001 - C00142012 - AMD145FR
80297760905 - 51031.0001 - C00254537 - AVSG12EU
80340451005 - 51104.0001 - C00142013 – AVF149EX
80340460905 - 51028.0001 - C00142014 - AVSF109EU
80340470905 - 51029.0001 - C00142015 - AVSF129EU
80331370055 – 51027.0001 - C00142017 - AVF109SIT
80288710905 - 60215.0001 - C00141808 - AVG12EU.
80303630905 - 51031.0001 - C00098467 -AVD149DE
80284340905 - 60131.0001 - C00142007 - AVG1600EU
80284890905 - 60131.0001 - C00143734- AVG16TK
80339800105 - 60208.0001 - C00254277 - AVF169SK.

n4008c01: Smart Card - LVB/DRYERS

Beginning April 2008 spare parts warehouse started to manage the EVOII modules with eeprom fixed, these can only be programmed with smart card/palmare/pc.

Attention!! The premodification with eeprom socket can be programmed with smart card/palmare/pc using a blank eeprom or with pre programmed eeprom.

Spare parts of modules with eeprom fixed/eeprom socket:

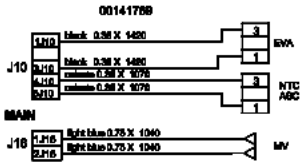


C00265676 with eeprom fixed - C00143068 with eeprom socket - for models with conducibility sensor
C00254298 with eeprom fixed - C00143068 with eeprom socket - for models without conducibility sensor
C00254297 with eeprom fixed - C00259941 with eeprom socket
C00254531 with eeprom fixed - C00143058 with eeprom socket
C00254297 with eeprom fixed - C00143057 with eeprom socket - for models without blocking drum
C00265697 with eeprom fixed - C00143057 with eeprom socket - for models with blocking drum
C00254297 with eeprom fixed - C00143056 with eeprom socket
C00254530 with eeprom fixed - C00259738 with eeprom socket
C00254533 with eeprom fixed - C00143060 with eeprom socket
C00254535 with eeprom fixed - C00145013 with eeprom socket
C00254530 with eeprom fixed - C00145551 with eeprom socket
C00254529 with eeprom fixed - C00142293 with eeprom socket
C00257406 with eeprom fixed - C00143989 with eeprom socket
C00257409 with eeprom fixed - C00144151 with eeprom fixed
C00254530 with eeprom fixed - C00143069 with eeprom fixed

DRYERS
C00255835 with eeprom fixed - C00258789 with eeprom socket
C00255835 with eeprom fixed - C00194077 with eeprom socket


This notice has a "reference list" specific for each product where you can find the link between smart card and the eeprom code with the same software.

Electric schemes and links


Cod. 16001817900

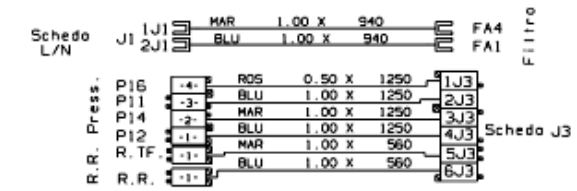


36 NASTRATURE COMPLESSIVO A

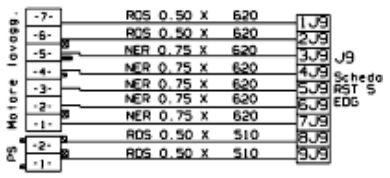


COMPLESSIVO L = Motore+pompo




COMPLESSIVO B1 = COMUNICAZIONE DISPLAY




COMPLESSIVO Y = TERRA MACC.TRIFAESE

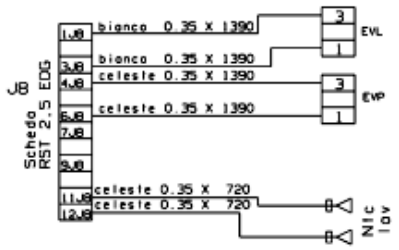


COMPLESSIVO C3 = EVL+EVP



COMPLESSIVO D1 = Microrit



COMPLESSIVO H = RES.ASCIUGATURA

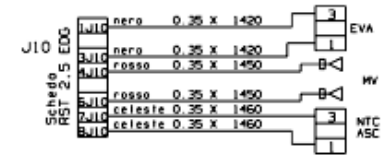

COMPLESSIVO F = EVA+MV+NTCAS

16001817900


Legend

Legend: 16001817900

Electric schemes and links

Cod. 21500759700

Valid plan for the following Industrial codes 80325700000,80325700900

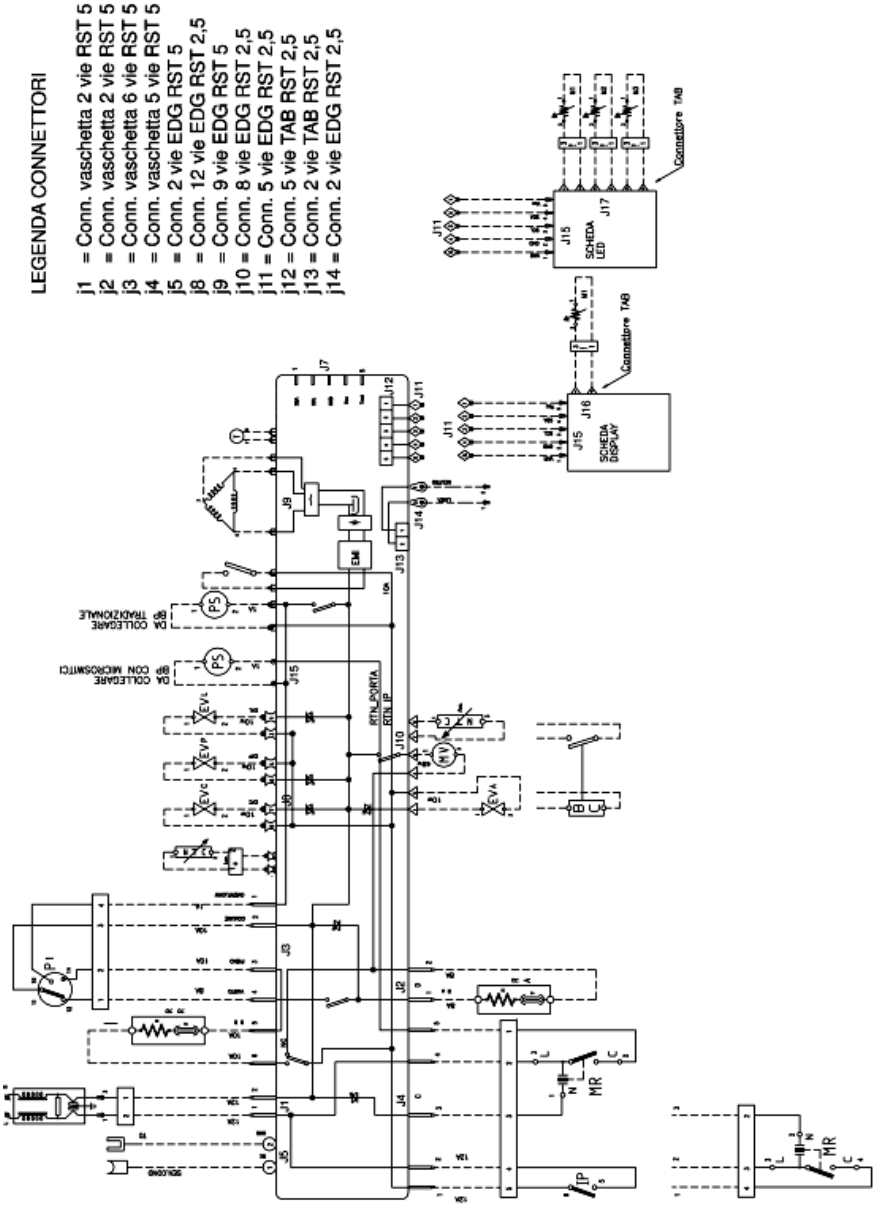

MODULO EVO II TRIFASE 215007597.00


Legend

Legend: 21500759700

Electric schemes and links

Cod. 21500901000

Valid plan for the following Industrial codes 80325700905

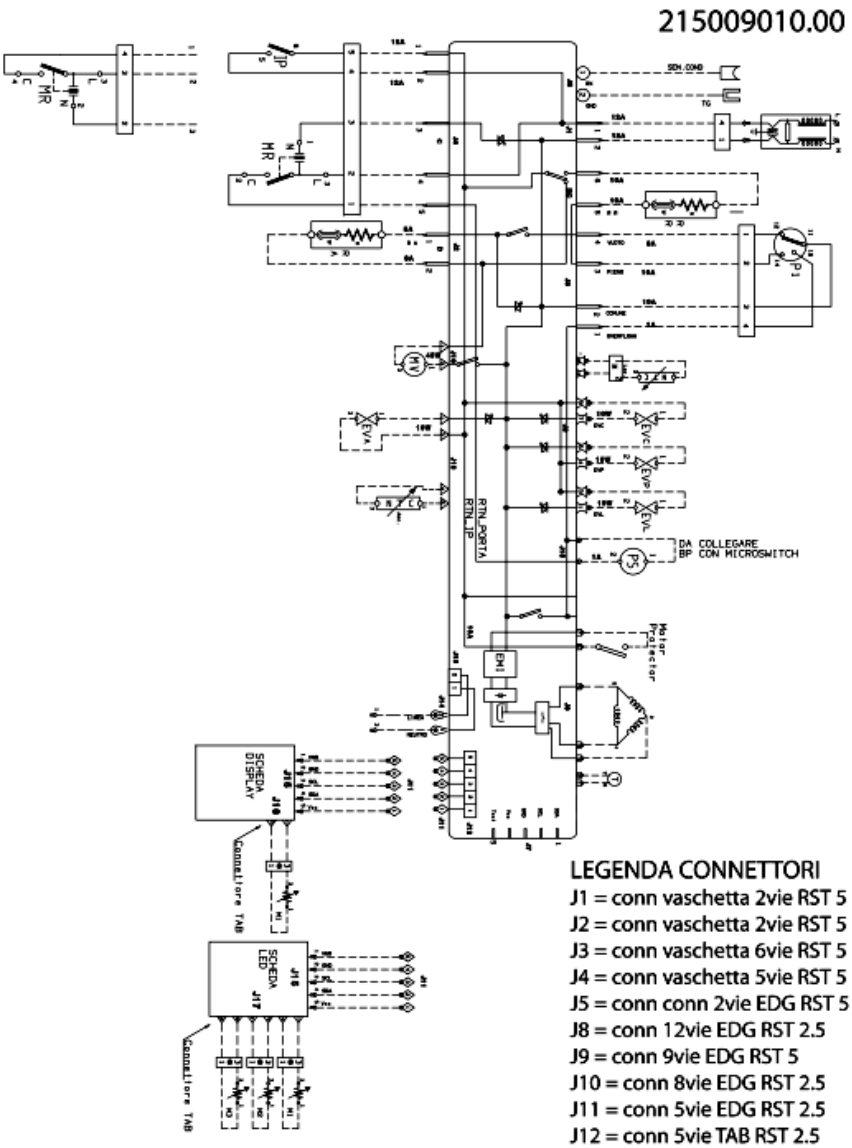

MODULO EVOII TRIFASE 3.5

Legend

Legend: 21500901000

AQS	Aquastop electrovalve	Mzbn/MTA	zbn timer motor
B	Buzzer	N	Neutral or Terminal Board
BC	Blocco Cesto	NC	Spin cycle exclusion
BF	Terminal board contact, motor fan and dryer	P	Pressure switch
BP	Buzzer	P1	1st level pressure cut-off switch
C	Condensator	P2	2nd level pressure cut-off switch
CA	Condensator	PA	High speed potentiometer
DV	Switching device	PB	Low speed potentiometer
EF/CL	Electro-Valve Cold Water / Bleach	PL	Pure Wool
EF/L	Electro-Valve Cold Water / Wash	PM	Motor Thermoprotector
EF/P	Electro-Valve Cold Water / Prewash	PR	Timer programmer or Pressure switch
ER	Exclude Heating Element	PS	Drain pump
ET	Thermostat disactivation	R	Heating element
EV	Electrovalve	RE	Relay
EVA	Dryer electrovalve	RR	Heating element
EVC	Hot water electrovalve	RV	Speed regulator
EVF	Elettrovalvola acqua fredda	Ras/RA	Dryer heating element
EVL	Wash electrovalve	S	LED
EVP	Pre Wash electrovalve	SL	Line LED
FA	Antijamming filter	SO	Door LED
FD	Delicate drying cycle thermostat	SR	Heating LED
FE	Strong drying cycle thermostat	ST	Temperature selector
FRT	Thermofusible Heating Element	SV	Speed Selector for Spin
I	Inverter	T	Timer contacts
I1..2..3..	Switches/switching devices	TA	Drying timer contacts
IA	Switch On/Off	TB	Low Temperature Thermostat
IC	Switch N.C. - 1/2 Load	TC	Spider wheel earth
ID	Switch display	TFL	Flange earth
IE	Water Saving Device	TG	Main earth
IF	Switch - Spin Reduction	TH	Thermostat
IP	Door switch	TH1	1st temperature thermostat
IR	Line switch	TH2	2nd temperature thermostat
IS	Water-stop	TH3	3rd temperature thermostat

L	Line or Lamp	THF	Operating thermostat
LB	Low Level	THR	Adjustable thermostat
LN	Normal Level	TM	Motor earth
LS	Pilot lamp	TMB	Main cabinet earth
M	Earth-symbol	TMP	Motor thermal protector
MC	Spin cycle motor	TMS	Thermostop
MI	MOTOR WITH PULLEY	TP	Thermal protector
ML	Wash cycle motor	TPS	Drain pump earth
MO	Terminal Board	TR	Heating element earth
MP	Door dip-switch	TS	Safety thermostat
MR	Thermal Lock	TT	Timer earthing connection
MT	Timer motor	TTH	Earthing Thermostat
MV	Motor fan	TV	Tank earth
MV -Ras	Dryer heating element	ZBN	Timer