
INDESIT company

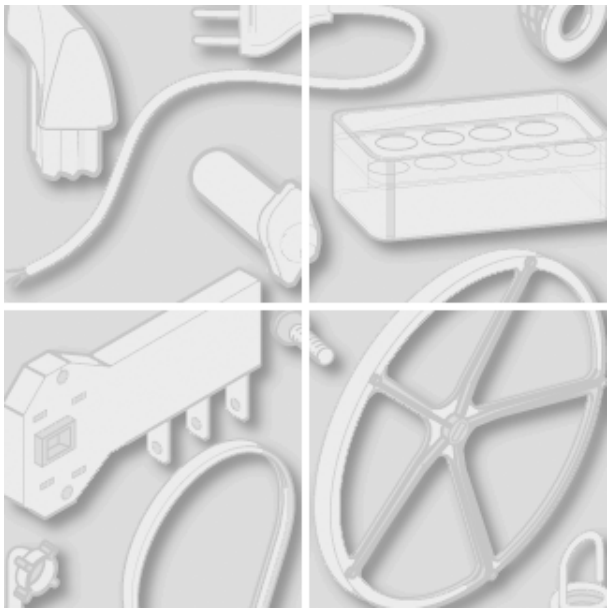

Model type:

P640A(BK)

Commercial code:

F030711

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

4270130 Exploded views

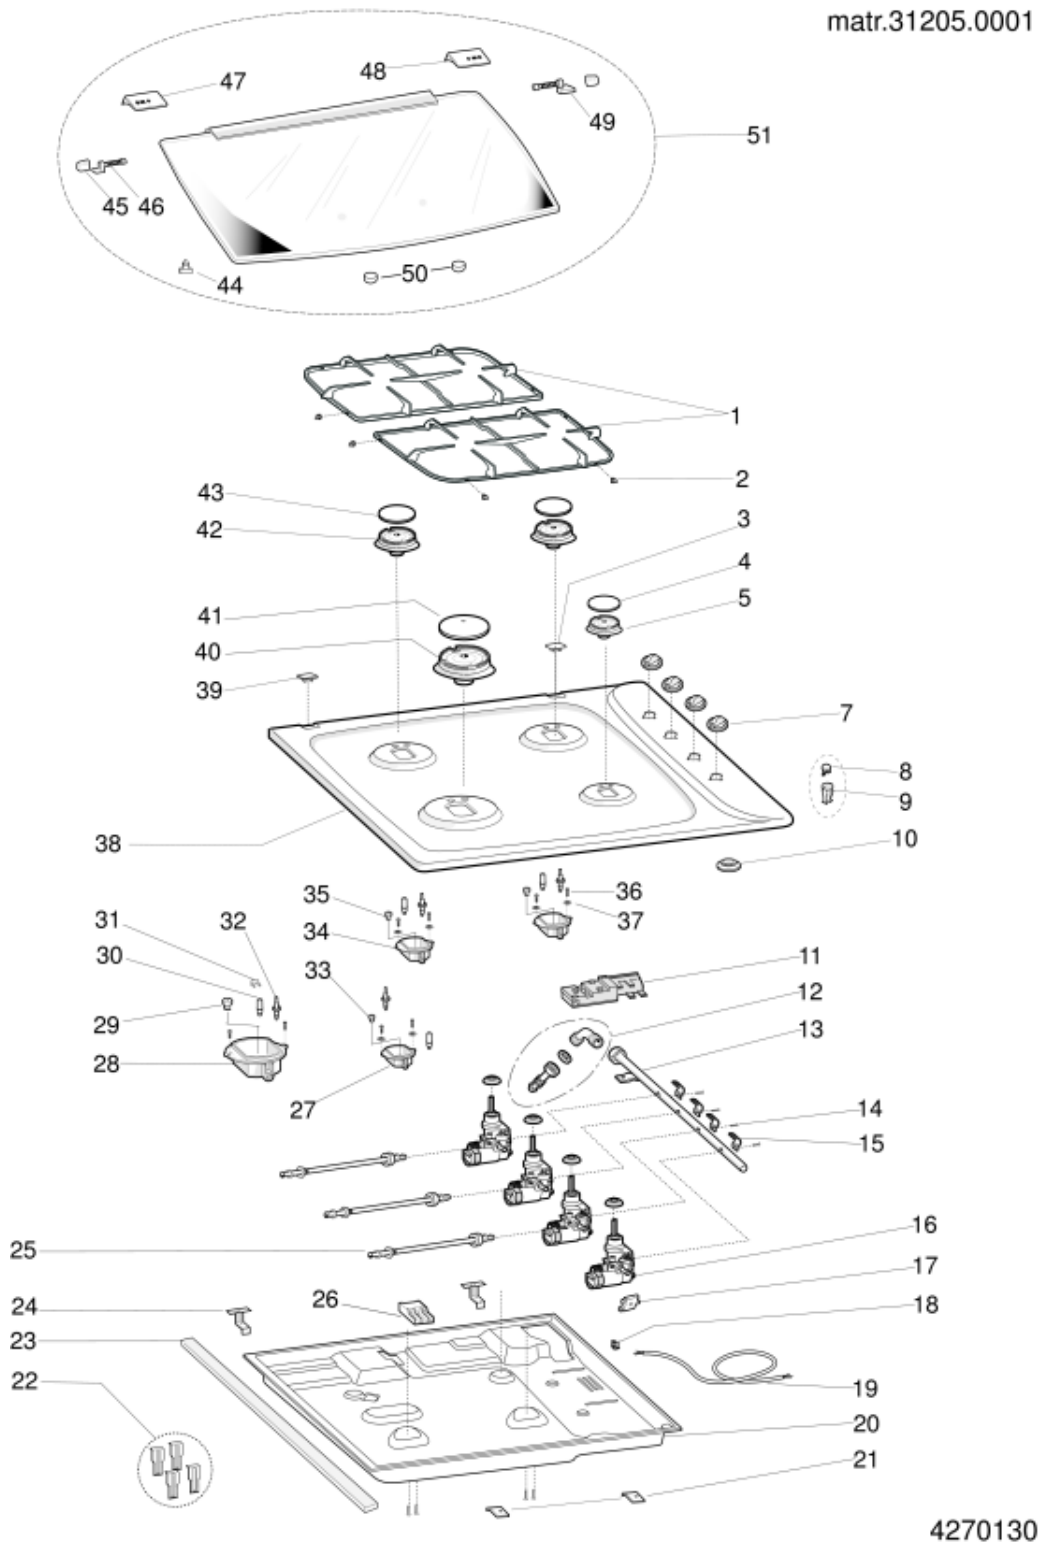

4270130 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00048389				user instruction book for built-in		
001	C00075065				pan stand - 2 burners indesit		
002	C00039148				rubber buffer for pan support		
003	C00075071				lid hinge hole blanking plug right		
004	C00052933				burner cap auxiliary (small) black		
005	C00052930				burner base/flame splitter - small		
007	C00075064				control knob 6mm black		
008	C00053212				ignition switch button - black		
009	C00053215				ignition switch support black		
010	C00042460			1 x C00115049	microswitch knob disc - black		
011	C00095359				ignition transformer		
012	C00010506				sealing washer - gas elbow/pipe		
012	C00024370				elbow connection (1/2 male x 2)-		
013	C00075067				gas distribution manifold		
014	C00064912				screw m4x18 tsp nikelata		
015	C00044592				tap fixing plate		
016	C00075068				gas tap - large burner		
016	C00075069				gas tap -a/medium burner		
017	C00091349				microswitch		
018	C00280173				junction clamp richco		
019	C00035727			1 x C00276836	mains supply cable 3x2,5		
020	C00075074				base cover p6		
021	C00052968				tap bracket		
022	C00052952				clamp kit - hob/worktop		
023	C00018723			1 x C00018819	sealing gasket - hob/worktop		
024	C00052918			1 x C00143845	support bracket - glass cover		
025	C00093653				gas pipe		
025	C00093654				gas pipe		
025	C00093655				gas pipe		
025	C00093656				gas pipe		
026	C00297837				terminal block 5 f.+cavo 6a		
027	C00052927				burner cup - small burner		
028	C00052925				burner cup - large burner		
029	C00052937				gas jet 86 lpg - large burner		
029	C00052940				gas jet 116 ng large burner		


4270130 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
030	C00052951				ignition electrode (l=700)		
031	C00052934				electrode clip		
033	C00052939				gas jet 50 lpg - small burner		
033	C00066166				nat gas aux. burner nozzle rapido		
034	C00052926				burner cup - medium burner		
035	C00033835				gas jet 70 - lpg/ng medium burner		
035	C00057740				gas jet ng 106 - small burner		
036	C00052960				burner fixing screw (stainless		
037	C00063709				washer		
038	C00078801				top drip tray -p640a(bk)		
039	C00075072				lid hinge blanking plug left hand		
040	C00052928				burner ring/flame splitter - large		
041	C00052931				burner cap rapide (large) black		
042	C00052929				burner ring - medium		
043	C00052932				burner cap semi rapide		
044	C00076665				gum for front glass cover black		
045	C00024414			1 x C00118351	cover (glass lid hinge) - white		
045	C00025355				cover (glass lid hinge) - black		
046	C00024299				hinge lh - glass lid		
047	C00090990			1 x C00116561 1 x C00116562	plug left black		
047	C00090994				plug left white		
048	C00090989			1 x C00116561 1 x C00116562	plug rh black kit		
048	C00090991				plug rh white		
049	C00024297				hinge right - glass lid		
050	C00053196				rubber buffer - glass lid front		
051	C00076662				kit glass cover 60 indesit		
051	C00082125			1 x C00116548	glass cover white 60 indesit		
099	C00001670				screw 4max20 t1/2t		
099	C00002478			1 x C00016138	washer 4,1x12x1		
099	C00093652				reducer spacer blade		

Electric schemes and links

Cod. se043900

SE043900

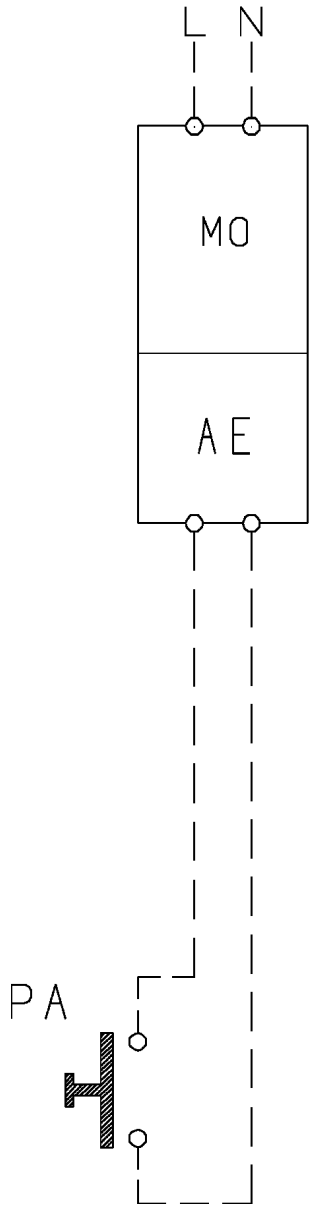

Legend

Legend: se043900

AE	Ignition transformer	PE	Plate electric (Normal and Rapid)
AT	Ignition transformer	PEL	Wall socket
CF	Oven commutator	PIF	Cooking programmer
CP	Plate commutator(Normal end Rapid)	POT	Thermostated potentiometer
CT	Plate commutator(Automatic)	PT	Termoprotector
DC DR	Double Knob double crown burner control card	PTC	Thermostated sensor
EV	Electro-Valve	RCE	Grill heating element ex- ternal
FC	End of cooking programmer	RCI	Grill heating element internal
FRONT	Daschboard	RE	Energy regulator
I/LF	OVEN LIGHT SWITCH	RF	Oven lower heating element
I/LF-MG	OVEN LIGHT SWITCH + ROTISSERIE	RG	Grill heating element
I/MG	TURNSPIT SWITCH	RG COM	Grill heating element un- ion
IL	Knobs' Lighting	RV	Heating element ventilated oven
ILG	Lamp switch turnspit	SA	Boiler operating led
IT	Thermostated switch	SB	Thermostated burner led
L	Line (Feed)	SF	Warning light working
LF	Oven light	SO	Probe temperature
LI	Oven light	SP	Operating Indicator Light for the Plate
M	Suction motor handle	ST	Warning light thermostat
MG	Turnspit motor	TH	Thermostat fixed
MO	Terminal board	TH2	Thermostated burner cooling
MUFF	Oven	THR	Adjustable thermostat
MV	Fan motor	TP	Termoprotector
N	Neutral (Feed)	TRAV	Support terminal board
PA	Ignition push-button	TRM	Thermostated burner control card
AE	Ignition transformer	PE	Plate electric (Normal and Rapid)
AT	Ignition transformer	PEL	Wall socket
CF	Oven commutator	PIF	Cooking programmer
CP	Plate commutator(Normal end Rapid)	POT	Thermostated potentiometer
CT	Plate commutator(Automatic)	PT	Termoprotector
DC DR	Double Knob double crown burner control card	PTC	Thermostated sensor
EV	Electro-Valve	RCE	Grill heating element ex- ternal
FC	End of cooking programmer	RCI	Grill heating element internal

FRONT	Daschboard	RE	Energy regulator
I/LF	OVEN LIGHT SWITCH	RF	Oven lower heating element
I/LF-MG	OVEN LIGHT SWITCH + ROTISSERIE	RG	Grill heating element
I/MG	TURNSPIT SWITCH	RG COM	Grill heating element un- ion
IL	Knobs' Lighting	RV	Heating element ventilated oven
ILG	Lamp switch turnspit	SA	Boiler operating led
IT	Thermostated switch	SB	Thermostated burner led
L	Line (Feed)	SF	Warning light working
LF	Oven light	SO	Probe temperature
LI	Oven light	SP	Operating Indicator Light for the Plate
M	Suction motor handle	ST	Warning light thermostat
MG	Turnspit motor	TH	Thermostat fixed
MO	Terminal board	TH2	Thermostated burner cooling
MUFF	Oven	THR	Adjustable thermostat
MV	Fan motor	TP	Termoprotector
N	Neutral (Feed)	TRAV	Support terminal board
PA	Ignition push-button	TRM	Thermostated burner control card