
INDESIT company

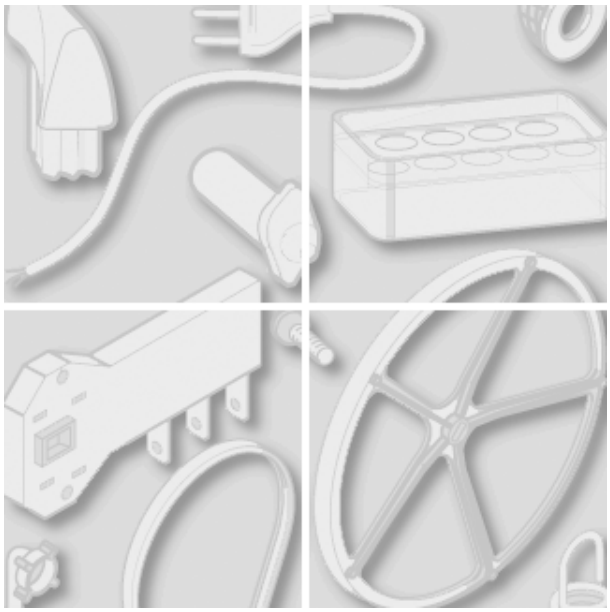

Model type:
AVD169EU

Commercial code:
F029848

General notes

Technical Documentation guidelines

You can find herewith some generic information to simplify cunsulting of technical documentation:

1. Models of same range share the same exploded views, which report the richest set of spare parts:generally, a model does not necessarly have a related spare part for each particular shown on exploded views.

2. Some spare parts can not be represented directly on the exploded views (instruction booklets, specific kit, etc...). You can find those codes in the spare parts list with the same reference of particular where spares are installed or with references 099, 999. Instruction booklets, once managed, appear with 000 reference.

3. On the higher right site of each exploded view there is a serial number which indicates the beginning of the production of certain range:some models might have more than an exploded view for a given category, each distinguished by a different serial no.and linked to another spare parts list, In this case, serial no. is required to supply the right spare part code. Exploded view to be considered is the one with a more recent serial no. but previous than the one of the model that needs assistance.

4.Exploded views might require further updates even after publishing. Addition of new spares will go on following the already existing numeration references. Revision number of an exploded view is shown into last four digits of serial number into upper right hand corner.

5.The spare parts list associated to an exploded view shows related codes of spares managed for a certain model; for each spare part other informations are available:


REF: reference no of spare into a table; SUBSTITUTE: list of spare(s) which can replace a code but that keeps same functional characteristics

INDUSTRIAL CODE: list of variables of a model (shown into model label) where such spare is used; NOTICE: code of information(s) to refer to complete technical intervention, track for changes or to find correct spare part code.

6. Some notices, into a same section are generic therefore cannot be directly linked to a spare part. In order to assist a model in the best way as possible, it is helpful to pay attention to all notices and constantly verify documentation updates

7.Technical documentation cover shows model name and its commercial codes

1140150 Exploded views

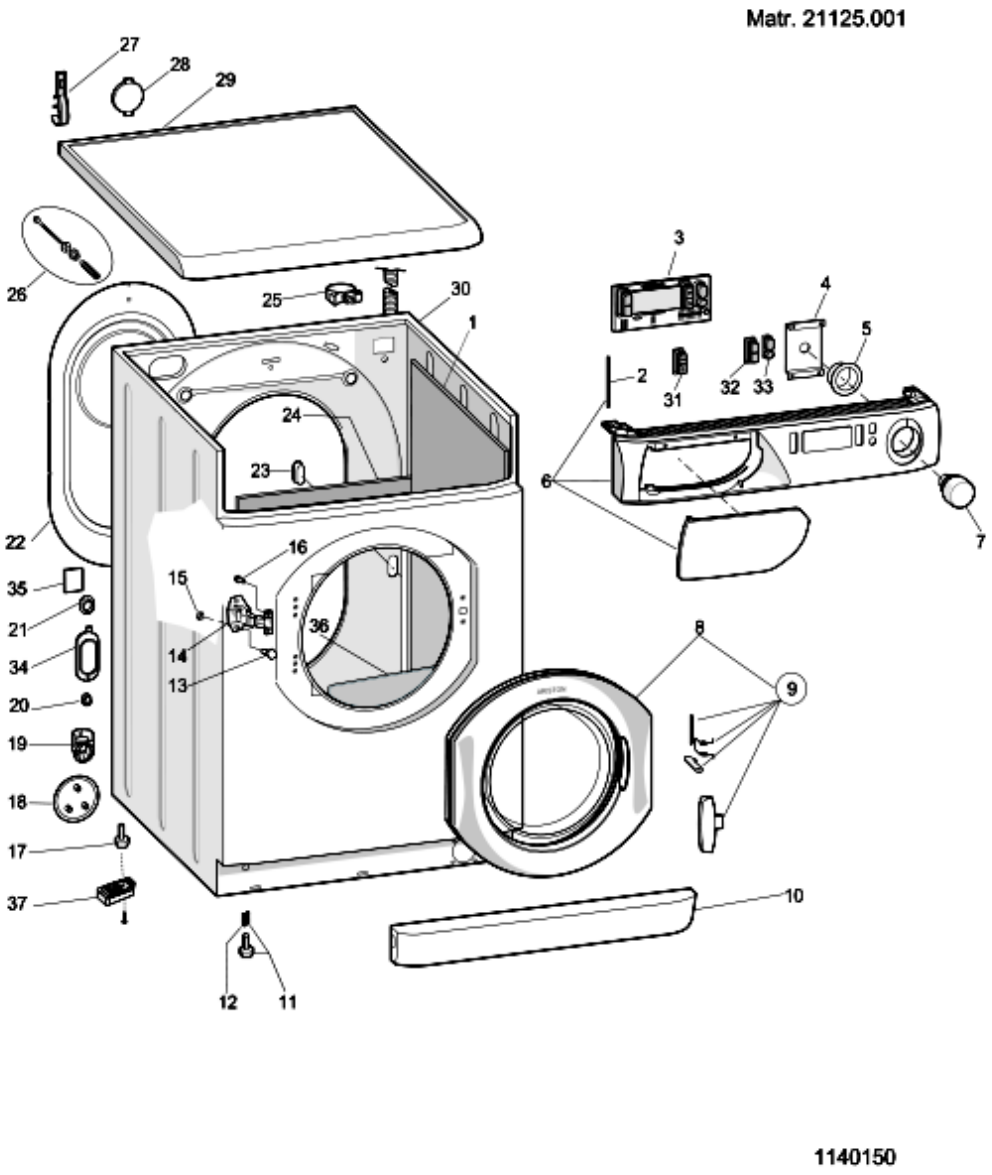


1140150 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
000	C00094844				quick-reference evo ii avd		
000	C00096616				user instructions booklet gb-f-d-nl		
001	C00084517			2 x C00194044	insulation mat - right - left		
002	C00091882				pivot pin drawer front 106.5x5		
003	C00091889			1 x C00098713	control avd		80298480000
003	C00098713			1 x C00116554	control lcd evoii amd	n1040359	
003	C00116554			1 x C00143339	control lcd evoii amd pw		80298480900
004	C00091890				potentiometer support avd		
005	C00094065			1 x C00118964	knob timer disc 28 pr b27	n1040359	80298480000
005	C00116381			1 x C00203083	knob timer disc pw		80298480900
006	C00096617			1 x C00116688	control panel + handle avd169eu	n1040359	80298480000
006	C00116688				control panel + handle pw		80298480900
007	C00091873			1 x C00115953	wash timer knob white 27 avd	n1040359	80298480000
007	C00115953				wash timer knob white pw avd		80298480900
008	C00092157			1 x C00115670 1 x C00115678	door frame and glass assy		80298480000
008	C00115670			1 x C00116553	door frame+glass assy evoii b27	n1040359	80298480000
008	C00116240				door frame+glass assy evoii pw		80298480900
009	C00092158			1 x C00116576	door handle kit b27 ariston	n1040359	80298480000
009	C00116576				door handle assy white pw		80298480900
010	C00064505			1 x C00116552	plinth white		80298480000
010	C00110325			1 x C00116552	plinth white	n1040359	80298480000
010	C00116552				plinth white pw		80298480900
011	C00087084				foot		
012	C00083828				foot spring (11x8.5mm)		
013	C00019846				civata t 1/2 t m4x12		
014	C00064541				outer door hinge assembly	n1040349 n1040359	80298480000
014	C00115666				zama hinge 150°		80298480900
015	C00002497				nut m4x3,2x7		
016	C00012687				self-tapping screw hi-lo 3,5x13		
018	C00089803				blanking plug d = 53 mm		
019	C00046666				collar for drain hose		
020	C00089419				blanking plug 6.5 mm		
021	C00065871				blanking plug		

1140150 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
022	C00099313			1 x C00116923	rear cover - white	n1040359	80298480000
022	C00116923				rear cover - white pw		80298480900
023	C00084817				blanking plate-rear(test plug)		
024	C00084519			1 x C00143376	front unsound matress		
025	C00091904				cable clamp hose		
026	C00077411				transit bolts kit (1 screw + 1		
027	C00046667				wiring stop		
027	C00064550				drain hose holder		
029	C00091867			1 x C00116550	worktop - white 595 x 522 mm	n1040359	80298480000
029	C00116550				worktop - white(pw) 595 x 522		80298480900
030	C00091836			1 x C00115662 2 x C00115666 1 x C00115676	cabinet white standard		80298480000
030	C00115662			1 x C00116539	cabinet white standard	n1040359	80298480000
030	C00116539				cabinet white standard pw evoii		80298480900
031	C00091886				pushbutton display grey left avd		
032	C00091884				pushbutton display grey right avd		
033	C00094356				push buttons on-off white 27 evo2	n1040331 n1040359	80298480000
033	C00116387				push buttons on-off pw evo2		80298480900


1140230 Exploded views

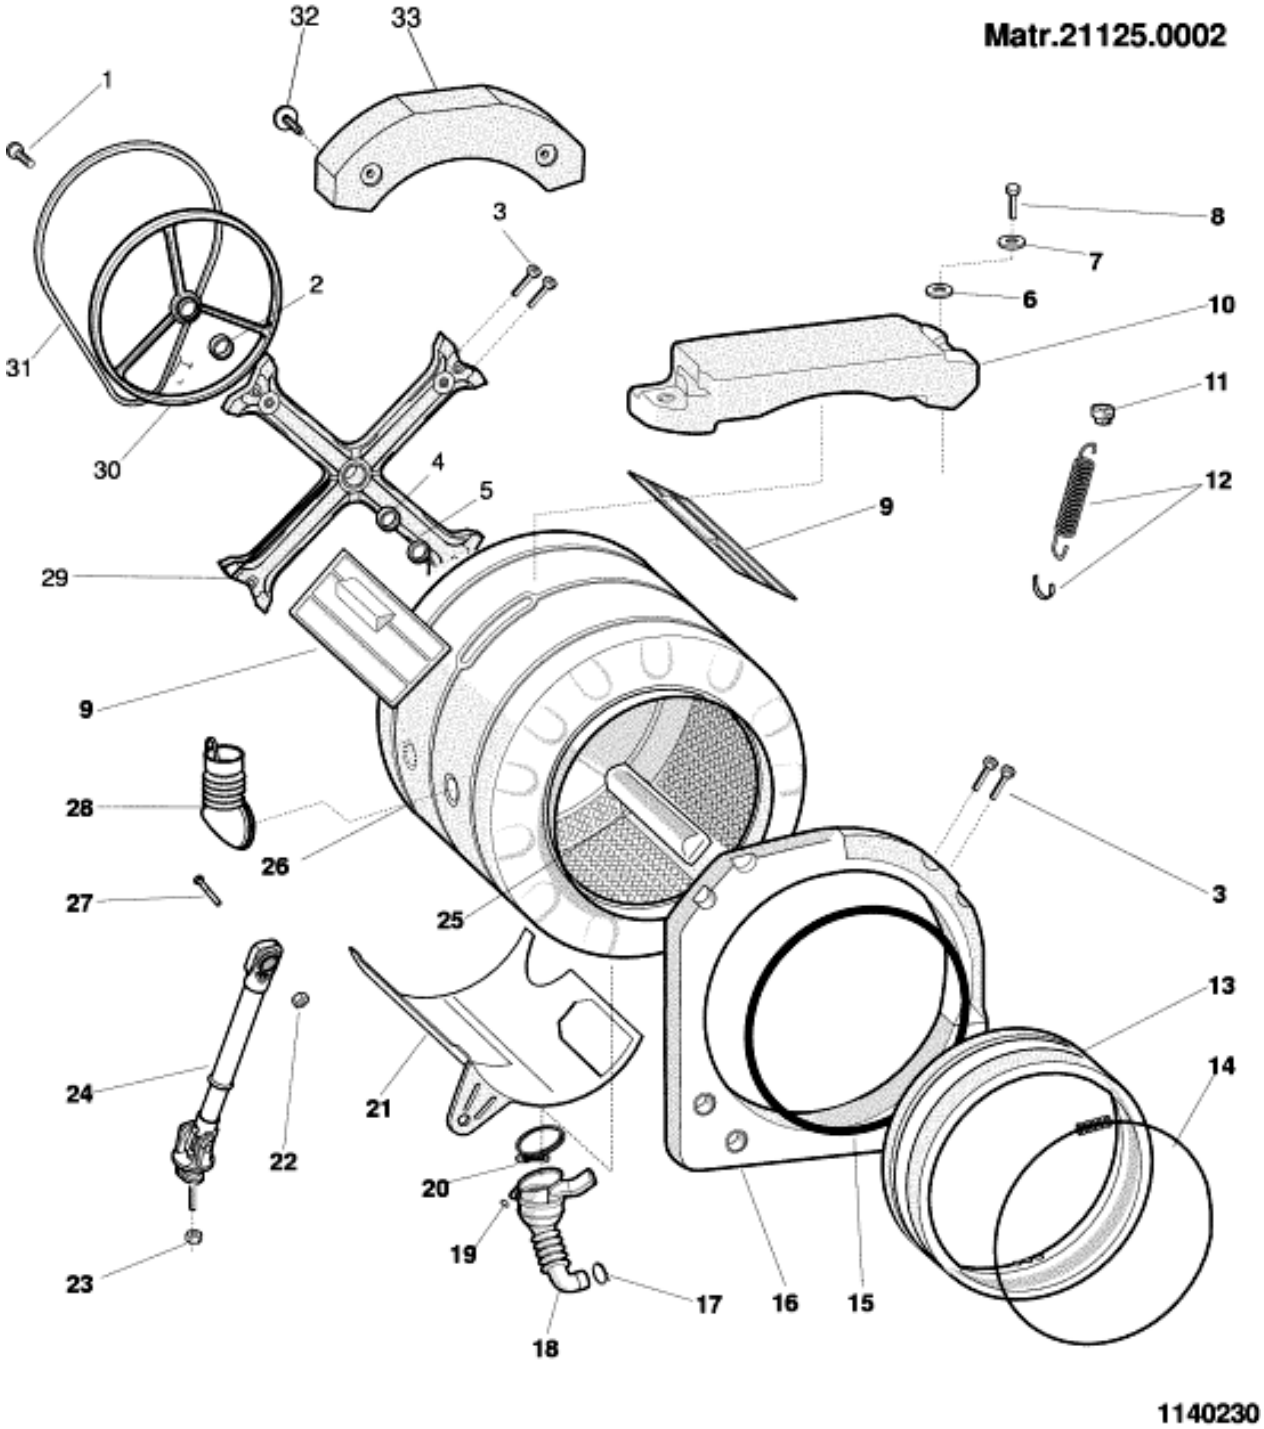

1140230 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00064786			1 x C00143260	bolt m8x23 torx tefl		
002	C00013563				bearing fits light/heavy spider 25		
003	C00064785			1 x C00193879	bolt m8x22 tb6lt		
004	C00044765				bearing		
005	C00082696				standard bearing oil seal		
009	C00064517				tank cradle channel-top left right		
011	C00064515				anchorage pad - suspension		
012	C00077182				suspension spring		
013	C00092154		40613...		door seal		
013	C00110326	40614...			door seal		
014	C00092156				door seal retainer front		
015	C00092155				door seal- rear retainer		
016	C00092178				front counterweight		
017	C00092411			1 x C00094908	hose clamp		
018	C00092174				hose tank to filter with oko ball		
019	C00092412				hose clamp		
020	C00091148			1 x C00094908	clamp d=79 mm		
021	C00093848				cradle outer- set	n1040325	
022	C00030443			1 x C00047136 1 x C00144571	nut romob m8		
023	C00065152				nut romob m6x22x1,5		
024	C00303582				kit shock absorber 80 n 8.15 mm		
025	C00064789			1 x C00268109	lifter - extractable		
026	C00094283			1 x C00094275 1 x C00094282	outer- set 46 l. evo ii	n1040300	
027	C00093750				bolt zink m8x40		
028	C00092161				hose dispenser to tank		
029	C00074648				bearing spider assembly		
030	C00074211				drum pulley d=210 mm h=20 mm		
031	C00074218				belt (1046-1051mm h8)	n1040365	80298480000 80298480900
031	C00118629				belt l=1046 - 1051 mm h8		80298480900
099	C00001109				loctite 270 10 gr.		

1140330 Exploded views

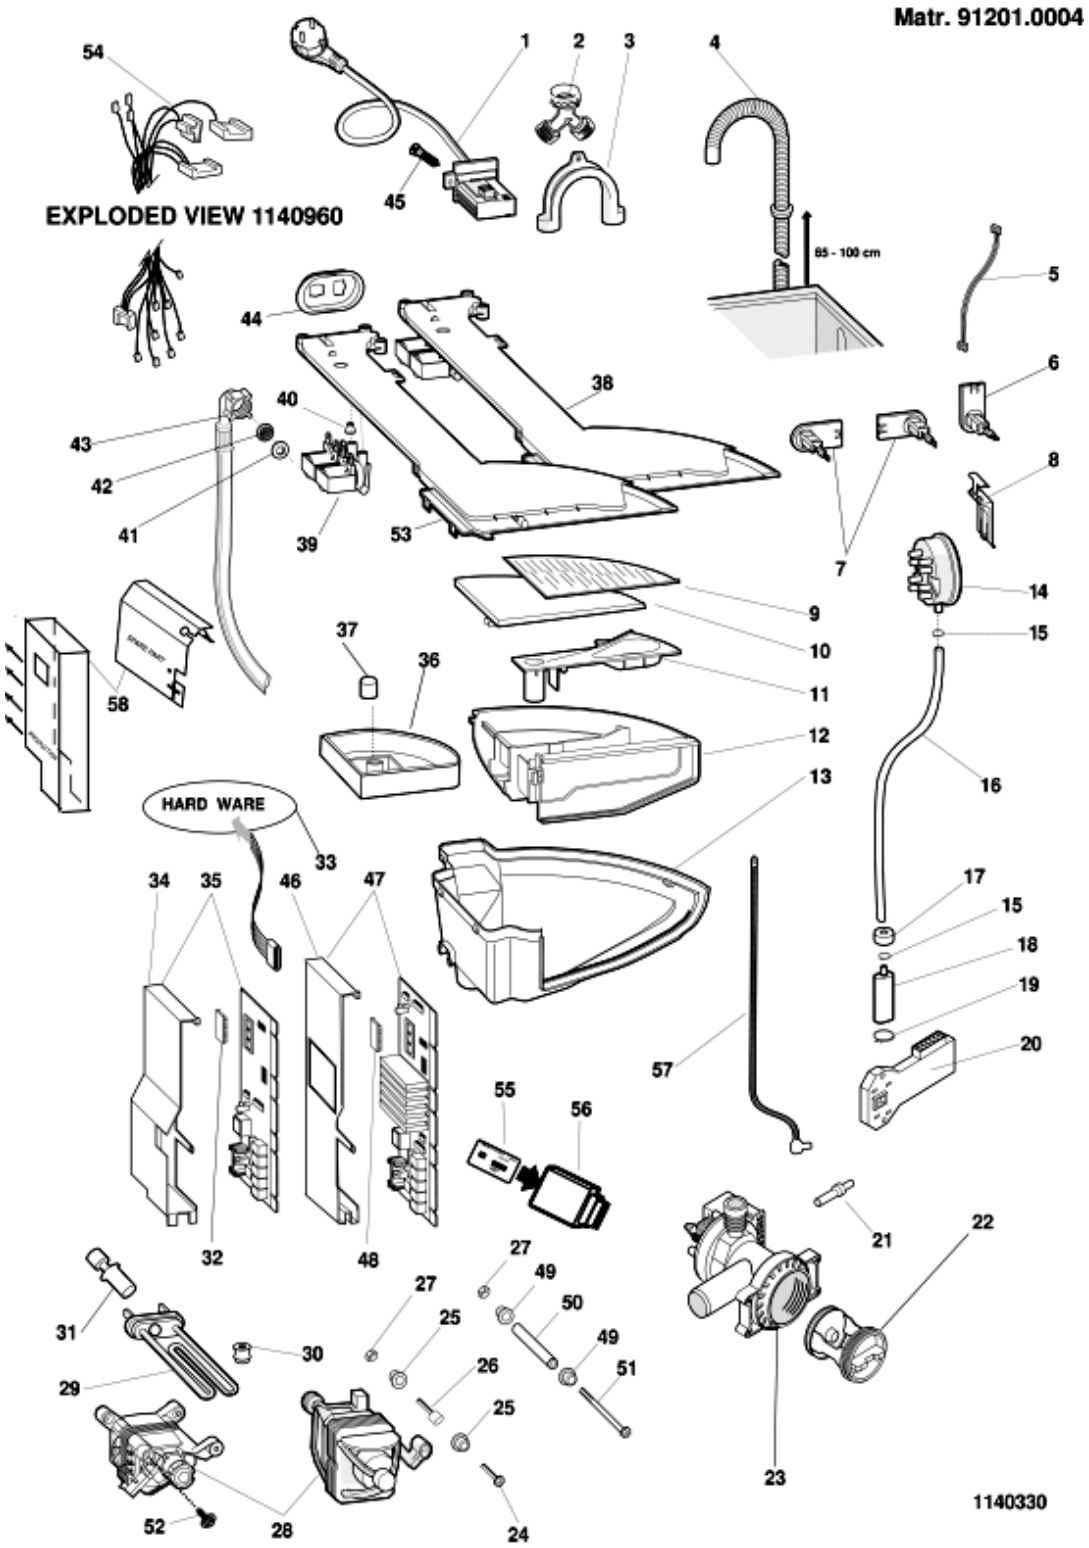

1140330 Spare parts list


Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00094203			1 x C00115769	supply cable 3 x 1.0 1,5mt shuko	n1040365	80298480000
							80298480900
001	C00115769				supply cable 3 x 1.0 1,5mt shuko		80298480900
003	C00019902				plastic -u- to make drain hose		
004	C00027466				drain hose - to sink l=1860mm		
005	C00091885				wiring dashboard avd avsd evoii		
006	C00087067			1 x C00143095	programme select bitron 16		
008	C00064537			1 x C00263210	support - pressure switch		
009	C00095412				reading desk symbols		
009	C00096042				reading desk pr28 nl		
009	C00096044				reading desk pr28 fr		
010	C00093813				support - programme guide evo ii		
012	C00046148			1 x C00281253	soap dispenser drawer (rotary)		
013	C00092176				dispenser body		
014	C00092151			1 x C00110332	pressure switch 1 l.78-50	n1040299	
015	C00092412				hose clamp		
016	C00092170			1 x C00041785	pipe pressostat l= 470mm. evo ii		
017	C00019755				anti-vibration bush (foam)		
018	C00092173				air trap x oko		
020	C00065185				bolt m4,5 x 8		
020	C00091911				door interlock avd		
022	C00045023				filter handle		
022	C00045025				filter seal		
022	C00045027				pump filter kit		
023	C00076510			1 x C00092264	self cleaning pump 240v./50hz.		
024	C00084029				bolt motor m6x34		
027	C00040932				self locking nut m6		
028	C00094023				motor three phase cim2-55	n1040351	
028	C00097258				tacho generator for motor ceset		
029	C00087188				heat element + sensor hole	n1040300	
030	C00058523				pillar retainer-heating element		
031	C00083915				thermistor ntc		
033	C00066292				insulated tweezers		
033	C00084943			1 x C00099862	serial cable lb2000 - pc	n1040317	
033	C00095669			1 x C00145046	hardware key mk1	n1040317	

1140330 Spare parts list


Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
036	C00046152			1 x C00287239	additive container		
037	C00046157				stopper detergent container		
038	C00092177			2 x C00064534	hopper cover 1e 2u ev		
				1 x C00110333			
				1 x C00115914			
039	C00110333				fill valve 2 way (7lt rst 2.5)		
040	C00064534				seal - dispenser to valve		
041	C00005572				sealing washer-mains inlet hose		
042	C00005781				inlet hose filter		
043	C00003070				mains inlet hose cold 25c 10bar		
044	C00064946				electrovalve support 1 ev		
045	C00092348				self-scraping screw 3,5x8		
046	C00094047				support cover 3 f		
046	C00094049				bracket for module 3 f		
047	C00257406				module wd>1200 rpm+sc fw2.74	n4008c01	
049	C00019682				rubber bush 20 mm - motor	n1040365	80298480900
049	C00118675				rubber bush 20 mm - motor		80298480900
050	C00074153				spacer motor support l= 187 mm		
051	C00074152				bolt m6x30		
055	C00273514				card avd169eu evo ii s/w	n4008c01	
056	C00272306				smart reader for card 8kb 32kb +	n4008c01	

1140960 Exploded views

The new wiring when fitted, must be securely attacched to the machine wiring with insulating tape. **Matr. 61116.0001**




WIRING P = DRUM BLOCK COD. C00141995

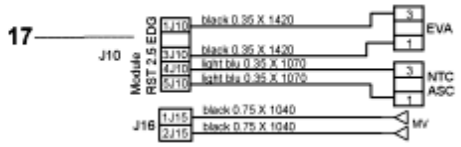


WIRING F = EVA+NTCAS / WIRING G = MTV COD. C00141769




WIRING P = DRUM BLOCK COD. C00112822




WIRING B2 = DISPLAY CONNECTION COD. C00111227

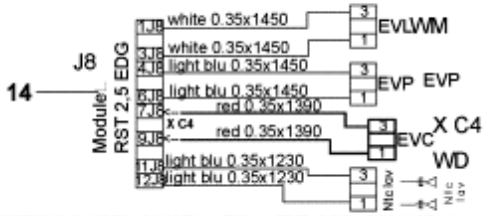


WIRING C1(WM) C3(WD) = EVL + EVP COD. C00093713
WIRING C4 (WD) = EVL + EVP + EVC COD. C00109960




WIRING D = INTERLOCK. + MICRO SWITCH COD. C00093714




WIRING D1 = INTERLOCK. COD. C00093715




WIRING H = DRYING ELEMENT COD. C00093716

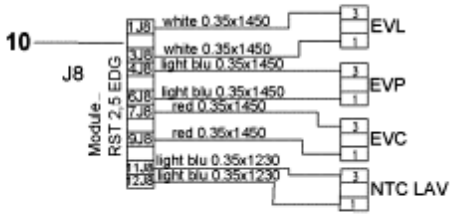


WIRING C = EVL + EVP + EVC COD. C00093724

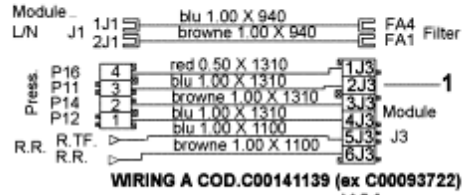


WIRING A COD.C00141139 (ex C00093722)

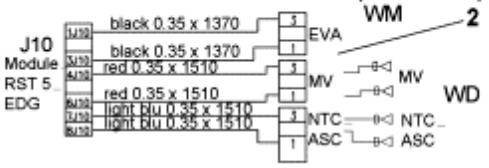


WIRING F = EVA + MV + NTCAS COD.C00093717

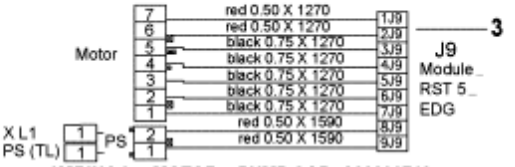


WIRING L = MOTOR + PUMP COD. C00093718
WIRING L1 (TL) = MOTOR + PUMP COD. C00195340




WIRING I = CONDUCTIVITI SENSOR COD. C00093725

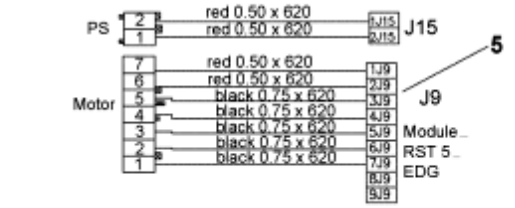


WIRING N = MOTOR + PUMP COD. C00093719




WIRING X = EART STD MACCHINE COD. C00093720



WIRING Y = EART TRI-PHASE MACCHINE COD. C00093721



WIRING B1 = MAIN-DISPLAY CONNECTION COD. C00093726

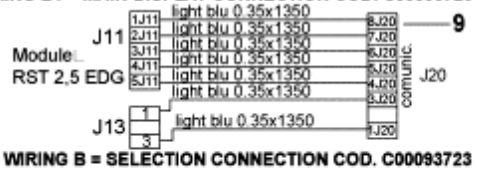

WIRING B = SELECTION CONNECTION COD. C00093723

1140960

1140960 Spare parts list

Ref.	Code	From	To S/N	Substitute	Description	Notice	Industrial
001	C00141139				wiring		
005	C00093719				wiring pump-motor-module		
006	C00093720				wiring standard earth		80298480900
007	C00093721				wiring earth triphase	n1040365	80298480000
							80298480900
008	C00093726				wiring display		
013	C00093714				wiring door lock-module j4		
014	C00093713				wiring ntc-evl+evp-module j8		

Notices

n1040242: Power card with welded eeprom.

From serial number 20304.0001, IDC power card with welded eeprom is used to ensure the perfect connection of all parts, in the Comunanza, Teverola and Brembate factories.
To replace the module with welded eeprom, it will be necessary to use the eeprom indicated in the SAT document of the model concerned.
To replace the module on a unit with welded eeprom both the SAT module and the eeprom are required, because the latter cannot be reused.

n1040296: List of EVOII FAULTS and troubleshooting.

In case of washing-machine fault in carrying out the self-test function, the machine reproposes the fault previously signalled and the same fault is shown on the display of the new hardware key.
The type of fault can be signalled in different ways:
- on AVD models the fault is shown directly on the machine display.
- on AVL models the fault is signalled by LEDs.

Reading of Faults signalled by LEDs
When the machine has a fault:
1. The window is locked
2. The door lock light flashes fast (> 1 Hz)
3. The control panel LEDs light up, to signal the fault, according to the table (fig. 01).
The example shown in fig. 02 (Example Fault F03) below indicates which LEDs are flashing if the machine has Fault F03

List of faults, malfunctions and Warnings:

F01: Triac Motor short circuit
- Check for water leaks that may affect connector J9 causing the relevant contacts to short
- Check the motor terminal block (possible problems due to chemical effects of work residuals on the contacts which may cause short-circuiting)
- Replace Card

F02: Motor blocked, Tachometrics in Short Circuit/Open
- Check motor if blocked

- Check efficiency of J9 connector on card
- Check the tachometric winding verifying an ohmic resistance reading of 115 - 170 ohm between pins
1 and 2 on wiring connector J9. In case of short circuit/open circuit check the wiring between pins 1 and 2 of J9 relevant to the tachometrics. With three-phase motor, make sure there is ohmic continuity between J9 pins 6 and 7.
- Replace motor
- Replace card

F03: NTC Open or in Short Circuit or washing heater relay stuck (signalled in presence of full load)
- Check efficiency of J8 connector contacts on card
- Check NTC verifying that the ohmic resistance value at room temperature 20°C is approx. 20Kohm on J8 wiring connector pin 11 and 12.
- If the measurement is incorrect check J8/NTC wiring continuity
Check the same parameter directly on NTC
- Replace NTC
- Replace Card

F04: Simultaneous empty and overflow (pressure switch stuck on empty).
If the pressure switch contact is stuck on empty the washing-machine loads water until reaching the overflow. The drain pump is automatically started by the contact on the overflow pressure switch.
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring of connector J3/pressure switch
- Replace pressure switch
- Replace card.

F05: Pump Blocked or pressure switch empty not reached
- Check efficiency of J9 connector on card, verifying a voltage of 220V between pins 8 and 9
- Check that pump if being fed
- Check Pump Filter + wall drain
- Change Pump
- Replace Card

F06: No on AVD and AVL

F07: No Wash Heating Element Absorption (the fault is only signalled with the pressure switch on empty)
- Check efficiency of J3 connector contacts on card
- Check continuity of the wash heating element on J3 connector pins 5 and 6. The 1800W 230V heating element has a resistance of 25 ohm.
- Check connection of pressure switch J3 connector pins 2 and 3: there must not be ohmic continuity (shared with full load).
Check connection of pressure switch J3 connector pins 2 and 4: there must be ohmic continuity
- Replace Heating Element
- Replace Pressure Switch
- Replace Card

F08: Wash Heater Relay Stuck (signalled in presence of empty) or pressure switch stuck on Full (simultaneously empty and full)
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and
pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring J3/pressure switch
- Check connection of heating element J3 connector pins 5 and 6.
- Replace pressure switch
- Replace Card

F09: Machine Setup Error (Eeprom error)

- In case of production card with Eeprom soldered: replace the card and Eeprom
- In case of replacement of Eeprom and card, check correct housing of Eeprom on card socket

F10: No full and empty signal
- Check efficiency of J3 connector contacts on card
- Check pressure switch status by checking ohmic continuity on wiring connector J3 pins 2 and 4 (it must only be present with tub empty), pins 2 and 3 (it must only be present with water in the drum) and
pins 2 and 1 (it must only be present with water in the tub above normal level, more than halfway up door glass).
- Check wiring of connector J3/Pressure switch
- Replace Pressure Switch
- Replace Card

F11: No Pump Feedback (Drain pump disconnected or winding broken)
- Check efficiency of J9 connector on card
- Check continuity of the Pump on J15 connector pins 1 and 2 (in case of washing-machine with Easy Door door lock) or on J9 connector pins 8 and 9 (in case of conventional door lock), checking a resistive value equal to 170 ohm.
- Check wiring of connector J15 (or J9)/Pump
- Replace Pump
- Replace Card

F12: No Communication Display/LED Card-Main Board
- Check efficiency of contacts on card of J11 connector
- Check the continuity of J11 connector-display card 5-pin connector
- Replace Main Board
- Replace Display Card/LED

F13: Drying NTC sensor open / Drying system NTC wiring disconnected
Check efficiency of J10 connector on card
Check NTC on J10 connector pins 7 and 8 verifying that the ohmic value of the sensor at room temperature 20°C is approx. 20Kohm
Check continuity of NTC/J10 connectors wiring
Replace NTC
Replace card

F14: Drying heater open or not connected
Check efficiency of J2 connector contacts on card
Check continuity of drying heater on J2 wiring connector pins 1 and 2, verifying that the ohmic value of the 1300W 230V heating element is approx. 40Kohm
Check wiring of connector J10/drying heater
Replace heating element
Replace card

F15: Drying heater always on (drying relay contact stuck or drying Triac short circuit)
Check efficiency of J2 connector contacts on card of
Check wiring of connector J2/drying heater
Check wiring of connector J3/pressure switch
Replace card

F16: Drum locking (top-loading only)

F17: Door lock unfed/open (with Easy Door)
- Check presence of 230V mains power on J4 wiring connector inserted on card between pins 3 and 4,
(not present with machine on standby) and presence of power from 230V door lock between pins 3 and 5
- Check ohmic continuity of the door microswitch on J4 connector inserted on card between pins 1 and 2 (with door closed/on open/off)
- Check continuity of J4/door lock wiring
- Check door hooking

- Replace door lock
- Replace card

F17: Door lock unfed/open (conventional door lock, not Easy Door)
- Check presence of 230V mains power on J4 wiring connector inserted on card between pins 2 and 3,
(not present with machine on standby) and presence of power from 230V door lock between pins 3 and 1
- Check door hooking
- Replace door lock
- Replace card

F18 --> Communication error microprocessor / DSP (Digital Signal Processor)
- Replace card

COMBINAZIONE LED

SIMBOLOGIA:
= LED ACCESO = LED SPENTO

FAULT	LED Fasi	TASTI FUNZIONI			
F01	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F02	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F03	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F04	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F05	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F06	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F07	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F08	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F09	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F10	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F11	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F12	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F13	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F14	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F15	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F16	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F17	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4
F18	LED 4	Tasto 1	Tasto 2	Tasto 3	Tasto 4




ARISTON



INDESIT


FIG. 01

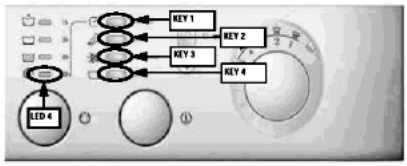

Fault	Key 1	Key 2	Key 3	Key 4	Led 4
01	Off	Off	Off	Flash	Off
02	Off	Off	Flash	Off	Off
03	Off	Off	Flash	Flash	Off
04	Off	Flash	Off	Off	Off
05	Off	Flash	Off	Flash	Off
06	Off	Flash	Flash	Off	Off
07	Off	Flash	Flash	Flash	Off
08	Flash	Off	Off	Off	Off
09	Flash	Off	Off	Flash	Off
10	Flash	Off	Flash	Off	Off
11	Flash	Off	Flash	Flash	Off
12	Flash	Flash	Off	Off	Off
13	Flash	Flash	Off	Flash	Off
14	Flash	Flash	Flash	Off	Off
15	Flash	Flash	Flash	Flash	Off
16	Off	Off	Off	Off	Flash
17	Off	Off	Off	Flash	Flash

Table Fault LED

FIG. 02

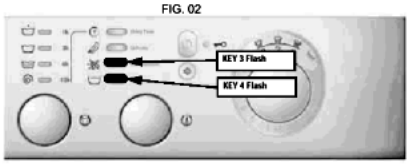

Example Fault F03

Tabla de averías para lavadora EVO II



	CO	MBINACIÓN LED				
FAULT	CAU SA	LED Fase	TECLAS FUNCIONES			
F01	Triac control motor en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F02	Motor bloqueado, taquimetro motor abierto / en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F03	Sonda NTC lavado abierta / en corto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F04	Vacio + sobrenivel presostato simultaneamente	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F05	No se logra vacio presostato bomba desagua bloqueada	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F06	Error de selector (no encuentra código)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F07	Falta absorción en la resistencia de lavado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F08	Relé resistencia de lavado con el contacto NA/NC pegado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F09	Error umap file (EEPROM no programada o correcta)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F10	Presostato en Rem+Vacio o sin salial de vacio ni lleno	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F11	Falta alimentación a la bomba de desague	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F12	Falta comunicación entre módulo display y modulo de control	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F13	Sonda NTC secado abierta/corto. Ventilador secado bloqueado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F14	Falta alimentación a la resistencia de secado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F15	Contacto relé resistencia de secado pegado	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F16	Bloqueo de cesto (sole carga superior)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F17	Bloqueo puerto desalineado /abierto	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4
F18	Error de comunicación Micro/DSP (MODULO)	LED 4	Tecla 1	Tecla 2	Tecla 3	Tecla 4


– LED

SIMBOLOGIA:

– led encendido

– led apagado


ABB. 01

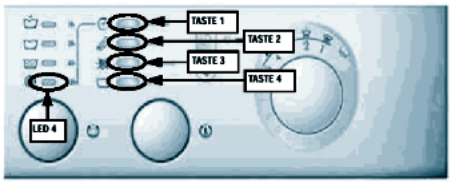

Fault	Taste 1	Taste 2	Taste 3	Taste 4	Led 4
01	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet
02	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet
03	Ausgeschaltet	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet
04	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
05	Ausgeschaltet	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet
06	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet
07	Ausgeschaltet	Blinkt	Blinkt	Blinkt	Ausgeschaltet
08	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
09	Blinkt	Ausgeschaltet	Ausgeschaltet	Blinkt	Ausgeschaltet
10	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet	Ausgeschaltet
11	Blinkt	Ausgeschaltet	Blinkt	Blinkt	Ausgeschaltet
12	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet
13	Blinkt	Blinkt	Ausgeschaltet	Blinkt	Ausgeschaltet
14	Blinkt	Blinkt	Blinkt	Ausgeschaltet	Ausgeschaltet
15	Blinkt	Blinkt	Blinkt	Blinkt	Ausgeschaltet
16	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt
17	Ausgeschaltet	Ausgeschaltet	Ausgeschaltet	Blinkt	Blinkt


Tab. Störung Led

ABB. 02

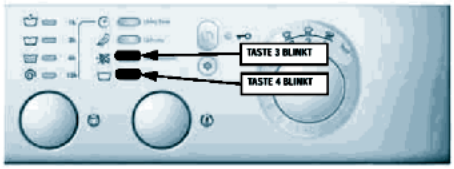

Beispiel Störung F03


FIG. 01

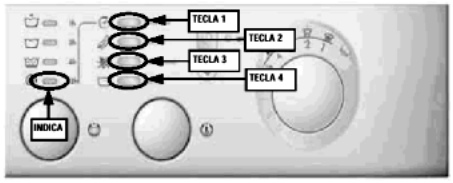

Fault	Tecla 1	Tecla 2	Tecla 3	Tecla 4	Indicador luminoso 4
01	Apagado	Apagado	Apagado	Pisca	Apagado
02	Apagado	Apagado	Pisca	Apagado	Apagado
03	Apagado	Apagado	Pisca	Pisca	Apagado
04	Apagado	Pisca	Apagado	Apagado	Apagado
05	Apagado	Pisca	Apagado	Pisca	Apagado
06	Apagado	Pisca	Pisca	Apagado	Apagado
07	Apagado	Pisca	Pisca	Pisca	Apagado
08	Pisca	Apagado	Apagado	Apagado	Apagado
09	Pisca	Apagado	Apagado	Pisca	Apagado
10	Pisca	Apagado	Pisca	Apagado	Apagado
11	Pisca	Apagado	Pisca	Pisca	Apagado
12	Pisca	Pisca	Apagado	Apagado	Apagado
13	Pisca	Pisca	Apagado	Pisca	Apagado
14	Pisca	Pisca	Pisca	Apagado	Apagado
15	Pisca	Pisca	Pisca	Pisca	Apagado
16	Apagado	Apagado	Apagado	Apagado	Pisca
17	Apagado	Apagado	Apagado	Pisca	Pisca

Tab. Fault indicador luminoso

FIG. 02

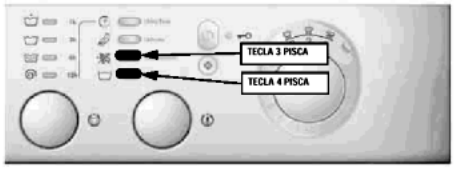

Exemplo Fault F03

n1040300: Short heating element for 46 l.

From serial number 30606.0001, all washing machines with 46 litre tubs, codes 094283, 094273 and 094279, have been equipped with shorter heating elements, which required the heater retaining bracket hole to be moved back (see fig. 01).



Cruscotto - Tableau de borde - Belde - Control panel
Painel frontal - Quadro Mandos - Kontrol paneli

As the tub replacement mainly concerns premodification appliances, it was decided that with those supplied as replacements the retaining bracket will remain in the old position. Therefore, if the tub needs replacing, it will not be necessary to also replace the heating element or make the hole and position the retaining bracket.

When replacing the heating element pay particular attention to the serial number of the appliance and therefore the choice of the SAT code.

Codes of short heating elements:
Washing machine
Code 087188 - HEATING ELEMENT+ F. PROBE 1700W/230V 169.5IDC
Washer-dryer
Code 066086 - HEATING ELEMENT WITH THERMOFUSE 1700W / 230V+T

Codes of premodification long heating elements:
Washing machine
Code 086661 - IDC HEATING ELEMENT + PROBE1700W 230V L212.5MM;
Washer-dryer
Code 064556 - WASHER-DRYER HEATING ELEMENT WITH THERMOFUSE 1700W / 230V+TE

The new heating elements have been included in the documentation of all models affected by this modification.
If the heating element retaining bracket needs to be shifted, it must be removed and then the new hole must be made in the tub using a 4.2 mm bit, taking into account that the distance between the two holes must in any case be 43 mm.
To plug the old hole use the s/steel TMT M4 X 12 screw (screw kit code 037132) with vellumoid washer and the self-locking flanged nut code 037135, bearing in mind that the head of the screw must protrude and that its tightening must not cause the vellumoid gasket supplied with the screw to break.




FIG. 01

n1040325: New shock absorber fixing system with pin

From serial no. 40427.0001, shock absorbers have been fixed to the tank unit cradle with two 11 mm pins code C00110163 (see fig. 01 and 02 enclosed) in place of the 8 mm screws code 093750 and relevant locking nuts code 030443, on all washing machines and dryers produced in the Comunanza factory.
The items affected by this modification are:
1) The cradles have the same Service code, as they can be used in place of the new ones after widening the shock absorber fixing holes to a diameter of 10 mm.
Code 093848 - Tank unit cradle 46 lt
Code 093878 - Tank unit cradle 40 lt.
2) The new shock absorbers, with fixing bushing having no s/steel spacer, are not managed as they are interchangeable with the premodified items (make sure they are CIMA type, as the managed items), fixed with M8 screws code 093750 and related locking nut code 030443 (see figs. 05 and 06).
Code 093884 - Shock absorber 80 N
Code 093885 - Shock absorber 100 N

To remove the shock absorber from the tank, first extract the pin with a few hammer taps (see fig.03) until it is aligned with the tank bracket and then pull it out with a pair of pliers (see fig. 04).
(To refit the shock absorber use a new pin. Insert the pin until the toroidal edge is aligned with the bracket.)











n1040349: Introduction of 150° Zamac hinge on Ariston 46 models.

From serial no. 50207.0001, all Ariston models produced in the Teverola factory (see table 001 attached) with industrial code (given on the rating plate) starting with 46, have been equipped with a Zamac hinge with 150° opening angle, code C00115666



(see Fig.001).
This modification has involved the introduction of the following items:

Code C00115670 - Complete door EVOII 150° white 27 with standard glass;
Code C00115674 - Complete door EVOII 150° white 27 with long glass;
Code C00115667 - EVOII body for 150° hinge white 27;

The premodified items are not interchangeable separately with the modified ones.

Code C00110133 - Complete door EVOII Standard 180° white 27 standard glass;
Code C00092157 - Complete door EVOII 180° white 27 long glass;
Code C00096193 - EVOII body for 150° hinge white 27;

The hinge code C00064541 continues to be used on the build-under models produced in the Comunanza factory.

Model	Code	CABINET 180° C00096193	CABINET 150° C00115667	DOOR 180° C00092157	DOOR 150° C00115670	DOOR 180° C00110133	DOOR 150° C00115674	HINGE 180° C00064541	HINGE 150° C00115666
AV 82 (TK)	28479	X	X	X	X			X	X
AVL 85 (TK)	28480	X	X	X	X			X	X
AV 102 (TK)	28481	X	X	X	X			X	X
AVL 105 (TK)	28482	X	X	X	X			X	X
AVD 10 (TK)	28485	X	X	X	X			X	X
AVL 125 (EU)	29774	X	X	X	X			X	X
AVL 62 (EX)	29775	X	X	X	X			X	X
AV 61 (EU)	29890	X	X			X	X	X	X
AVL 6 E (IT)	30055	X	X	X	X			X	X
AVL 62 (EX)60HZ 40-F	30062	X	X	X	X			X	X
AVL 61 (EX)115-60	30063	X	X			X	X	X	X
AV 51 (EX) 50-60	30064	X	X			X	X	X	X
AV 41 (EX) 50-60	30065	X	X			X	X	X	X
AV 41 (AG) 50-60	30066	X	X			X	X	X	X
AV 51 (AG) 50-60	30067	X	X			X	X	X	X
AVL 86 P (IT)	30093	X	X	X	X			X	X
AVL 105 (SK)	30206	X	X	X	X			X	X
AVL 100 P (R)	30357	X	X	X	X			X	X
AVL 95 (AUS)	30361	X	X	X	X			X	X
AV 51 (EO)	30498	X	X			X	X	X	X
AVL 65 (PT)	30612	X	X	X	X			X	X
AV 102 (CSI)	31970	X	X	X	X			X	X
AV 40 (AG) 50-60	32303	X	X			X	X	X	X
AVL 145 (DE) (TE)	33180	X	X	X	X			X	X
AV 42 (EX) 50-60	33217	X	X			X	X	X	X
AV 52 (EX) 50-60	33218	X	X			X	X	X	X
AVL 62 (EO)	33244	X	X	X	X			X	X
AVL 145 (EU) (TE)	33612	X	X	X	X			X	X
AVL 62 (KW)	33685	X	X	X	X			X	X
AV 62 (EU)	33968	X	X	X	X			X	X
AVF 10 (TK)	33979	X	X	X	X			X	X
AVF 8 (TK)	34214	X	X	X	X			X	X
AVF 149 (EU)	34217	X	X	X	X			X	X
AVL 135 (FR) (TE)	34239	X	X	X	X			X	X
AVL 140 (FR) (TE)	34240	X	X	X	X			X	X
AVL 14 (FR)	34479	X	X	X	X			X	X
AV 8 (IT)	35974	X	X	X	X			X	X
AV 10 (IT)	35975	X	X	X	X			X	X

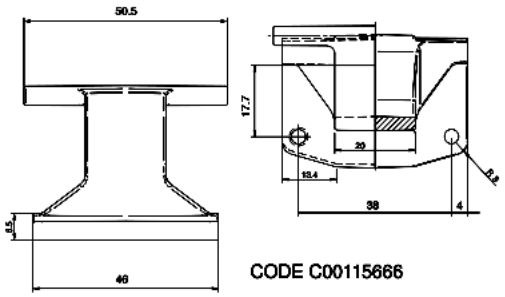


Fig . 001

n1040359: Polar White Factory 80 (Comunanza)

From serial no. 50315.0001, the new "Polar White" colour is used on all washing machines and washer-dryers produced in factory 80 in place of White 27.

The third last number of the Industrial Code given on the rating plate of the modified models is 9 (e.g. 80286390900).
To determine the new Polar White codes, it is necessary to know the industrial code or serial number of the appliance being repaired.
The new items, which bear the initials "PW" in place of "B27", are not aesthetically interchangeable with premodification items as the whites are different. Both colours will be available for some time.
The items affected by this modification are:
Body, rear panel, top, control panel, handles, buttons, knobs, knob disc, door and plinth.

n1040365: Elimination of dielectric components from all three-phase models

---

From serial no. 50314.0001, dielectric components have been eliminated from all three-phase models produced in the Comunanza factory (80).
The modification involves the following parts: motor, bushing, elastic belt, earth wiring and power supply cables with filter.
The new items are not interchangeable separately with the premodification ones. The new codes are indicated below.

Modified appliances with serial number = o > 50314.0001.
C00118629 - BELT L=1046 - 1051 MM H8 ELASTIC;
C00118675 - MOTOR PIN BUSHING 20 MM;
C00115769 - POWER CABLE 3 x 1.0 1.5MT SHUKO THREE-PHASE (+ enhanced filter);
C00118821 POWER CABLE UK 3X1 L1950MM+THREE-PHASE FILTER (+ enhanced filter);
C00118820 - POWER CABLE L=2.55M AUSTR. THREE-PHASE (+ enhanced filter);
C00093720 THREE-PHASE EARTH WIRING.

Premodified appliances, with serial number < 50314.0001.
C00074218 - BELT L=1046 - 1051 MM H8 ELASTIC DIELECTRIC;
C00019682 - MOTOR PIN BUSHING 20 MM DIELECTRIC
C00094203 - POWER CABLE 3 x 1.0 1.5MT SHUKO THREE-PHASE
C00111940 - POWER CABLE UK 3X1 L1950MM+THREE-PHASE FILTER
C00096465 - POWER CABLE L=2.55M AUSTR. THREE-PHASE
C00093721 THREE-PHASE EARTH WIRING

n4008c01: Smart Card - LVB/DRYERS

Beginning April 2008 spare parts warehouse started to manage the EVOII modules with eeprom fixed, these can only be programmed with smart card/palmare/pc.

Attention!! The premodification with eeprom socket can be programmed with smart card/palmare/pc using a blank eeprom or with pre programmed eeprom.

Spare parts of modules with eeprom fixed/eeprom socket:

C00265676 with eeprom fixed - C00143068 with eeprom socket - for models with conducibility sensor
C00254298 with eeprom fixed - C00143068 with eeprom socket - for models without conducibility sensor
C00254297 with eeprom fixed - C00259941 with eeprom socket
C00254531 with eeprom fixed - C00143058 with eeprom socket


C00254297 with eeprom fixed - C00143057 with eeprom socket - for models without blocking drum
C00265697 with eeprom fixed - C00143057 with eeprom socket - for models with blocking drum
C00254297 with eeprom fixed - C00143056 with eeprom socket
C00254530 with eeprom fixed - C00259738 with eeprom socket
C00254533 with eeprom fixed - C00143060 with eeprom socket
C00254535 with eeprom fixed - C00145013 with eeprom socket
C00254530 with eeprom fixed - C00145551 with eeprom socket
C00254529 with eeprom fixed - C00142293 with eeprom socket
C00257406 with eeprom fixed - C00143989 with eeprom socket
C00257409 with eeprom fixed - C00144151 with eeprom fixed
C00254530 with eeprom fixed - C00143069 with eeprom fixed

DRYERS
C00255835 with eeprom fixed - C00258789 with eeprom socket
C00255835 with eeprom fixed - C00194077 with eeprom socket

This notice has a "reference list" specific for each product where you can find the link between smart card and the eeprom code with the same software.

Electric schemes and links


Cod. 16001645400

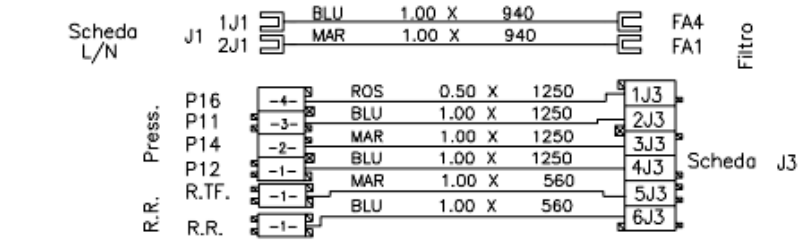


COMPLESSIVO A




COMPLESSIVO N

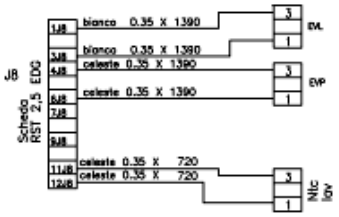


COMPLESSIVO C1

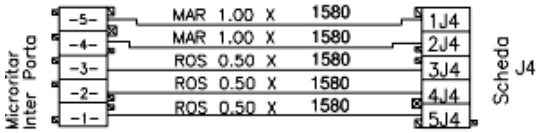

COMPLESSIVO D

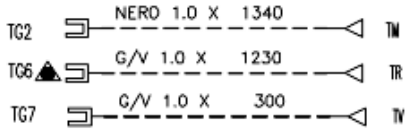

COMPLESSIVO Y

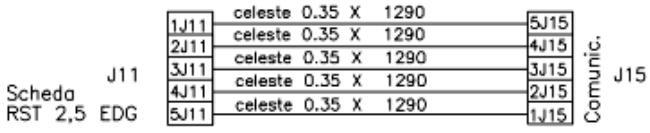

COMPLESSIVO B1


16001645400

Legend

Legend: 16001645400

Electric schemes and links

Cod. 21500759700

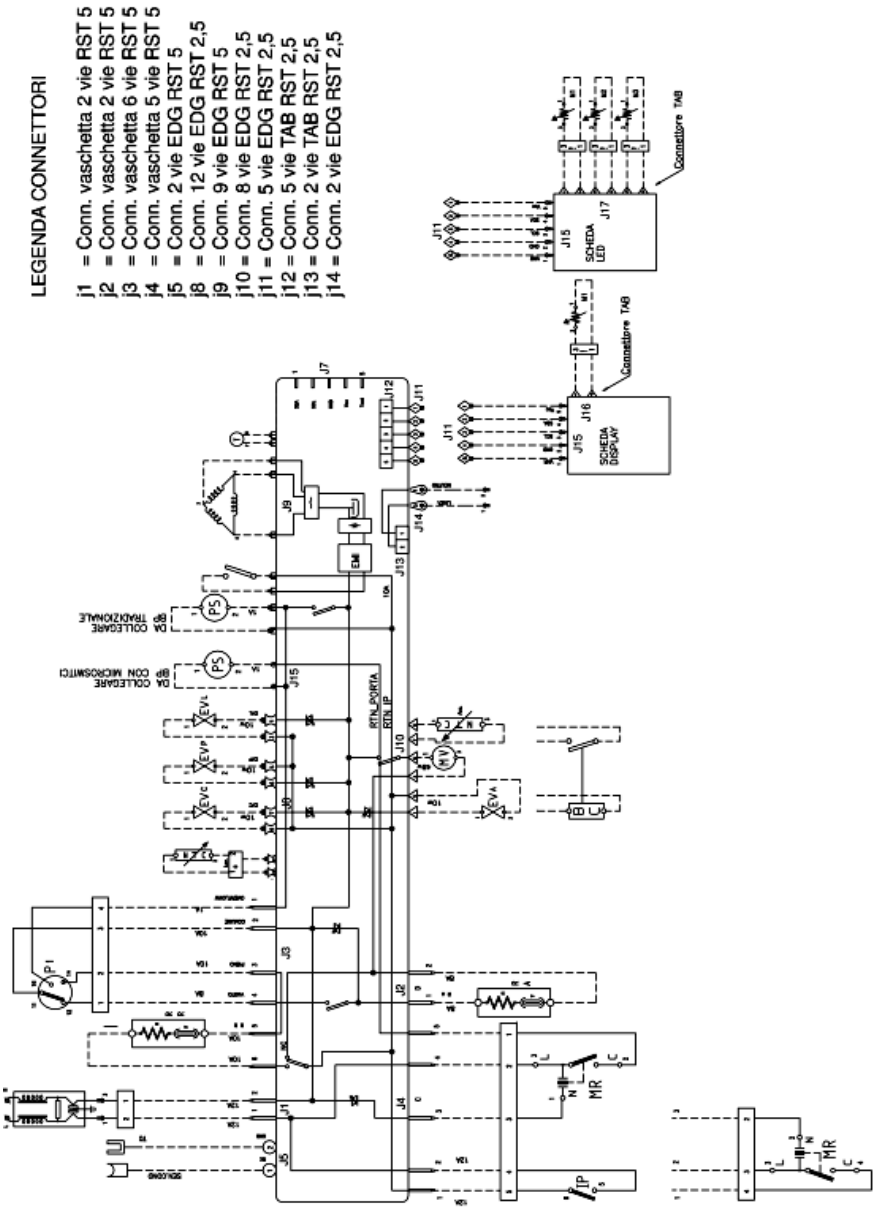

MODULO EVO II TRIFASE 215007597.00

Legend

Legend: 21500759700